
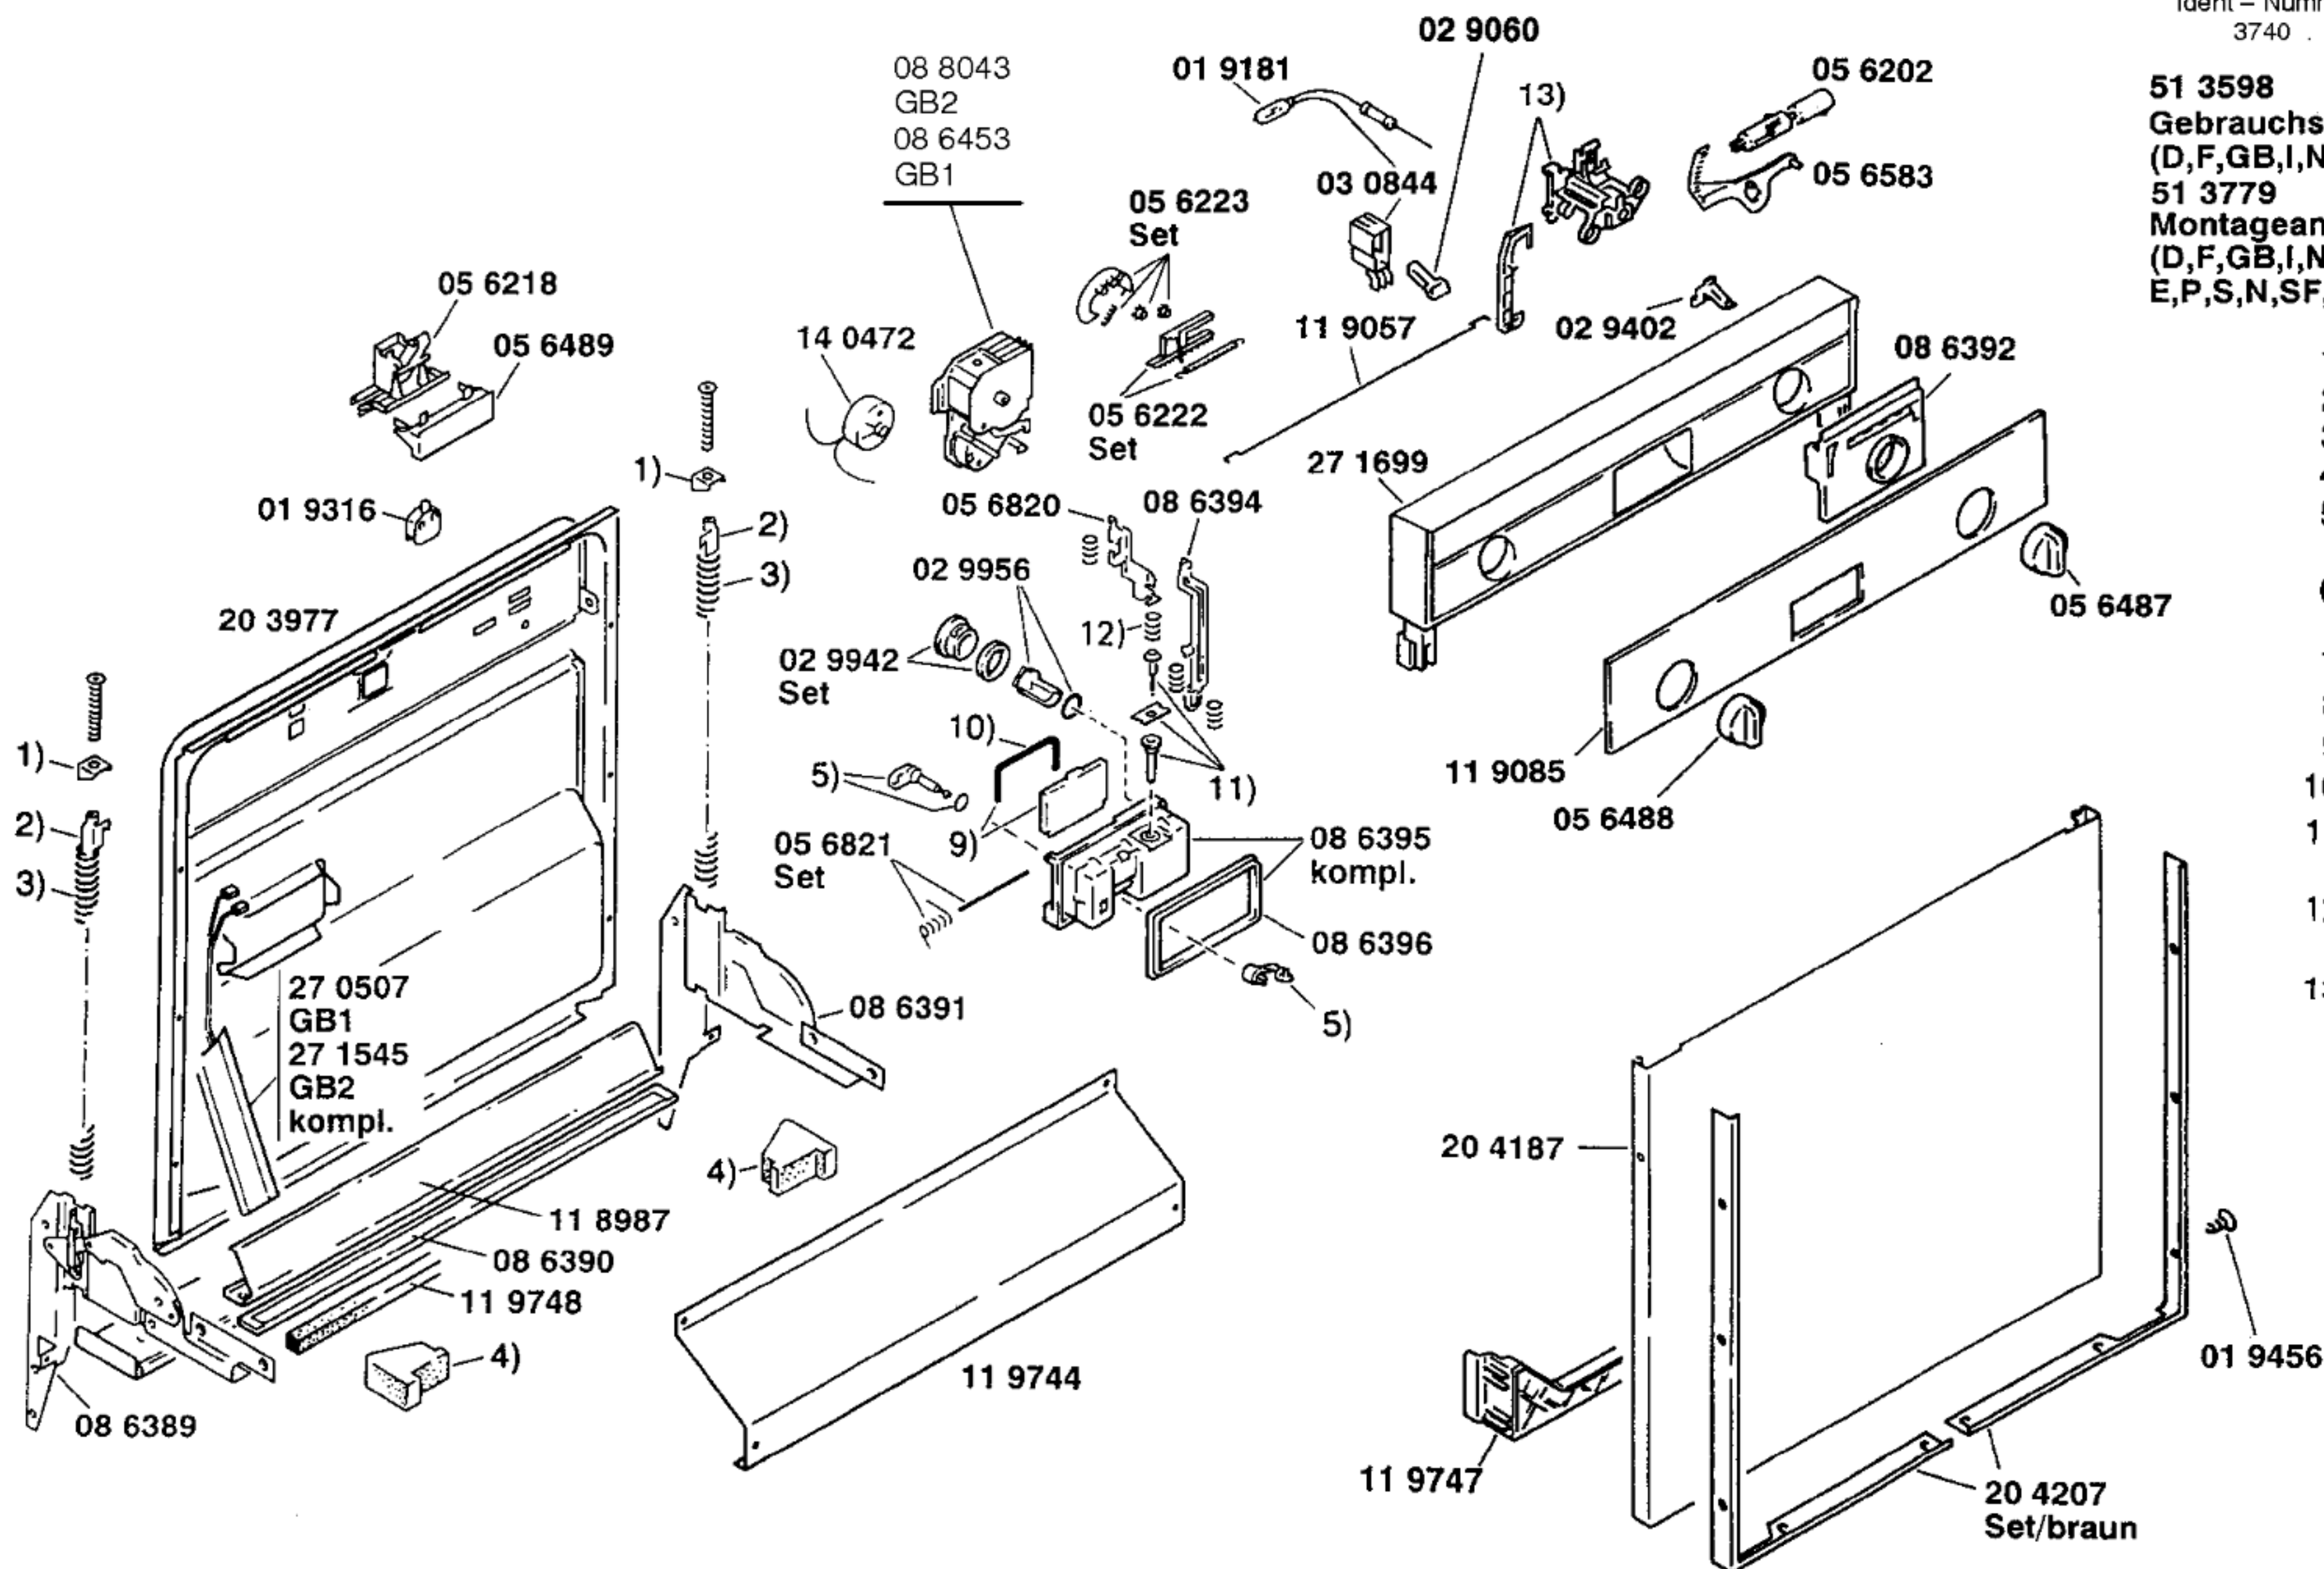



**BOSCH**SMS5018GB/01-GB1  
SMS5018GB/03-GB2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent - Nummern - Konstante  
3740 . . . . .

**51 3598**  
Gebrauchsanweisung  
(D,F,GB,I,NL)  
**51 3779**  
Montageanweisung  
(D,F,GB,I,NL,DK,  
E,P,S,N,SF,GR,TR)

- 1) 02 9941
- 2) 02 9029
- 3) 11 9795
- 4) 05 6860
- 5) 02 9944  
Set
- 6) —
- 7) —
- 8) —
- 9) 05 6822
- 10) 02 9943
- 11) 02 9945  
Set
- 12) 02 9002  
Set
- 13) 05 6864  
GB1  
05 7860  
GB2


**BOSCH**SMS5018GB/01-GB1  
SMS5018GB/03-GB2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent - Nummern - Konstante  
3740 . . . . .

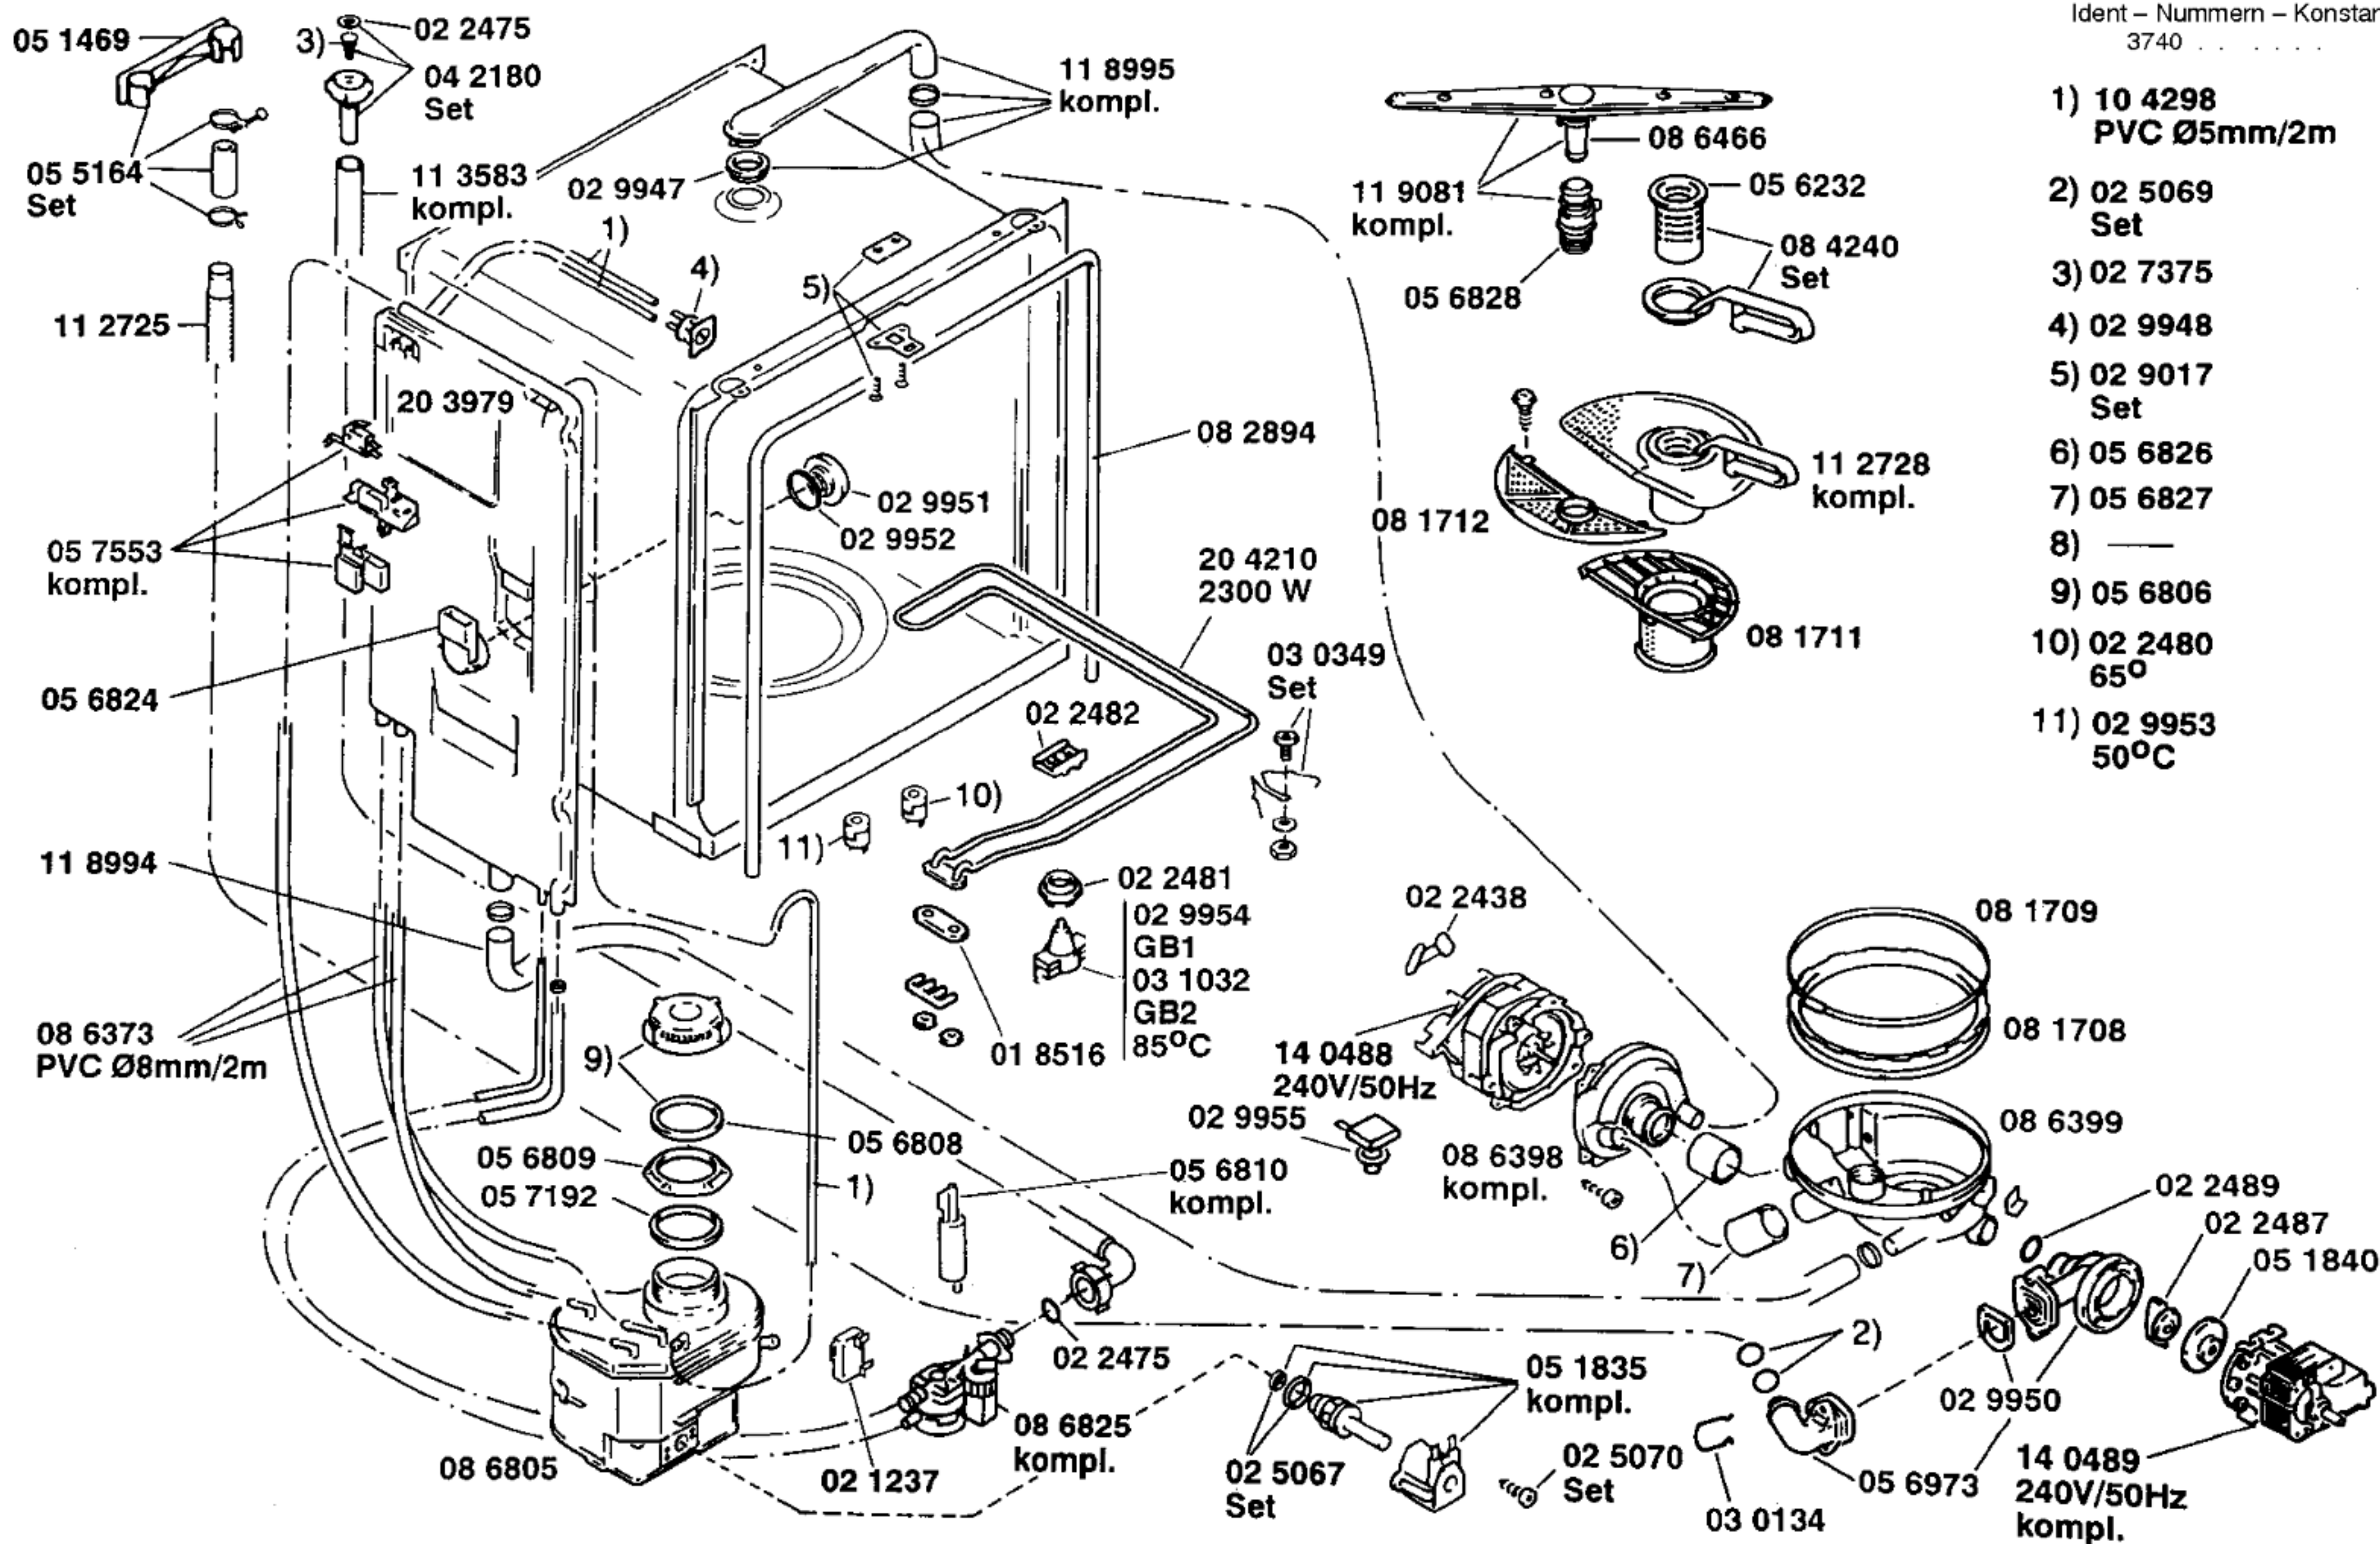

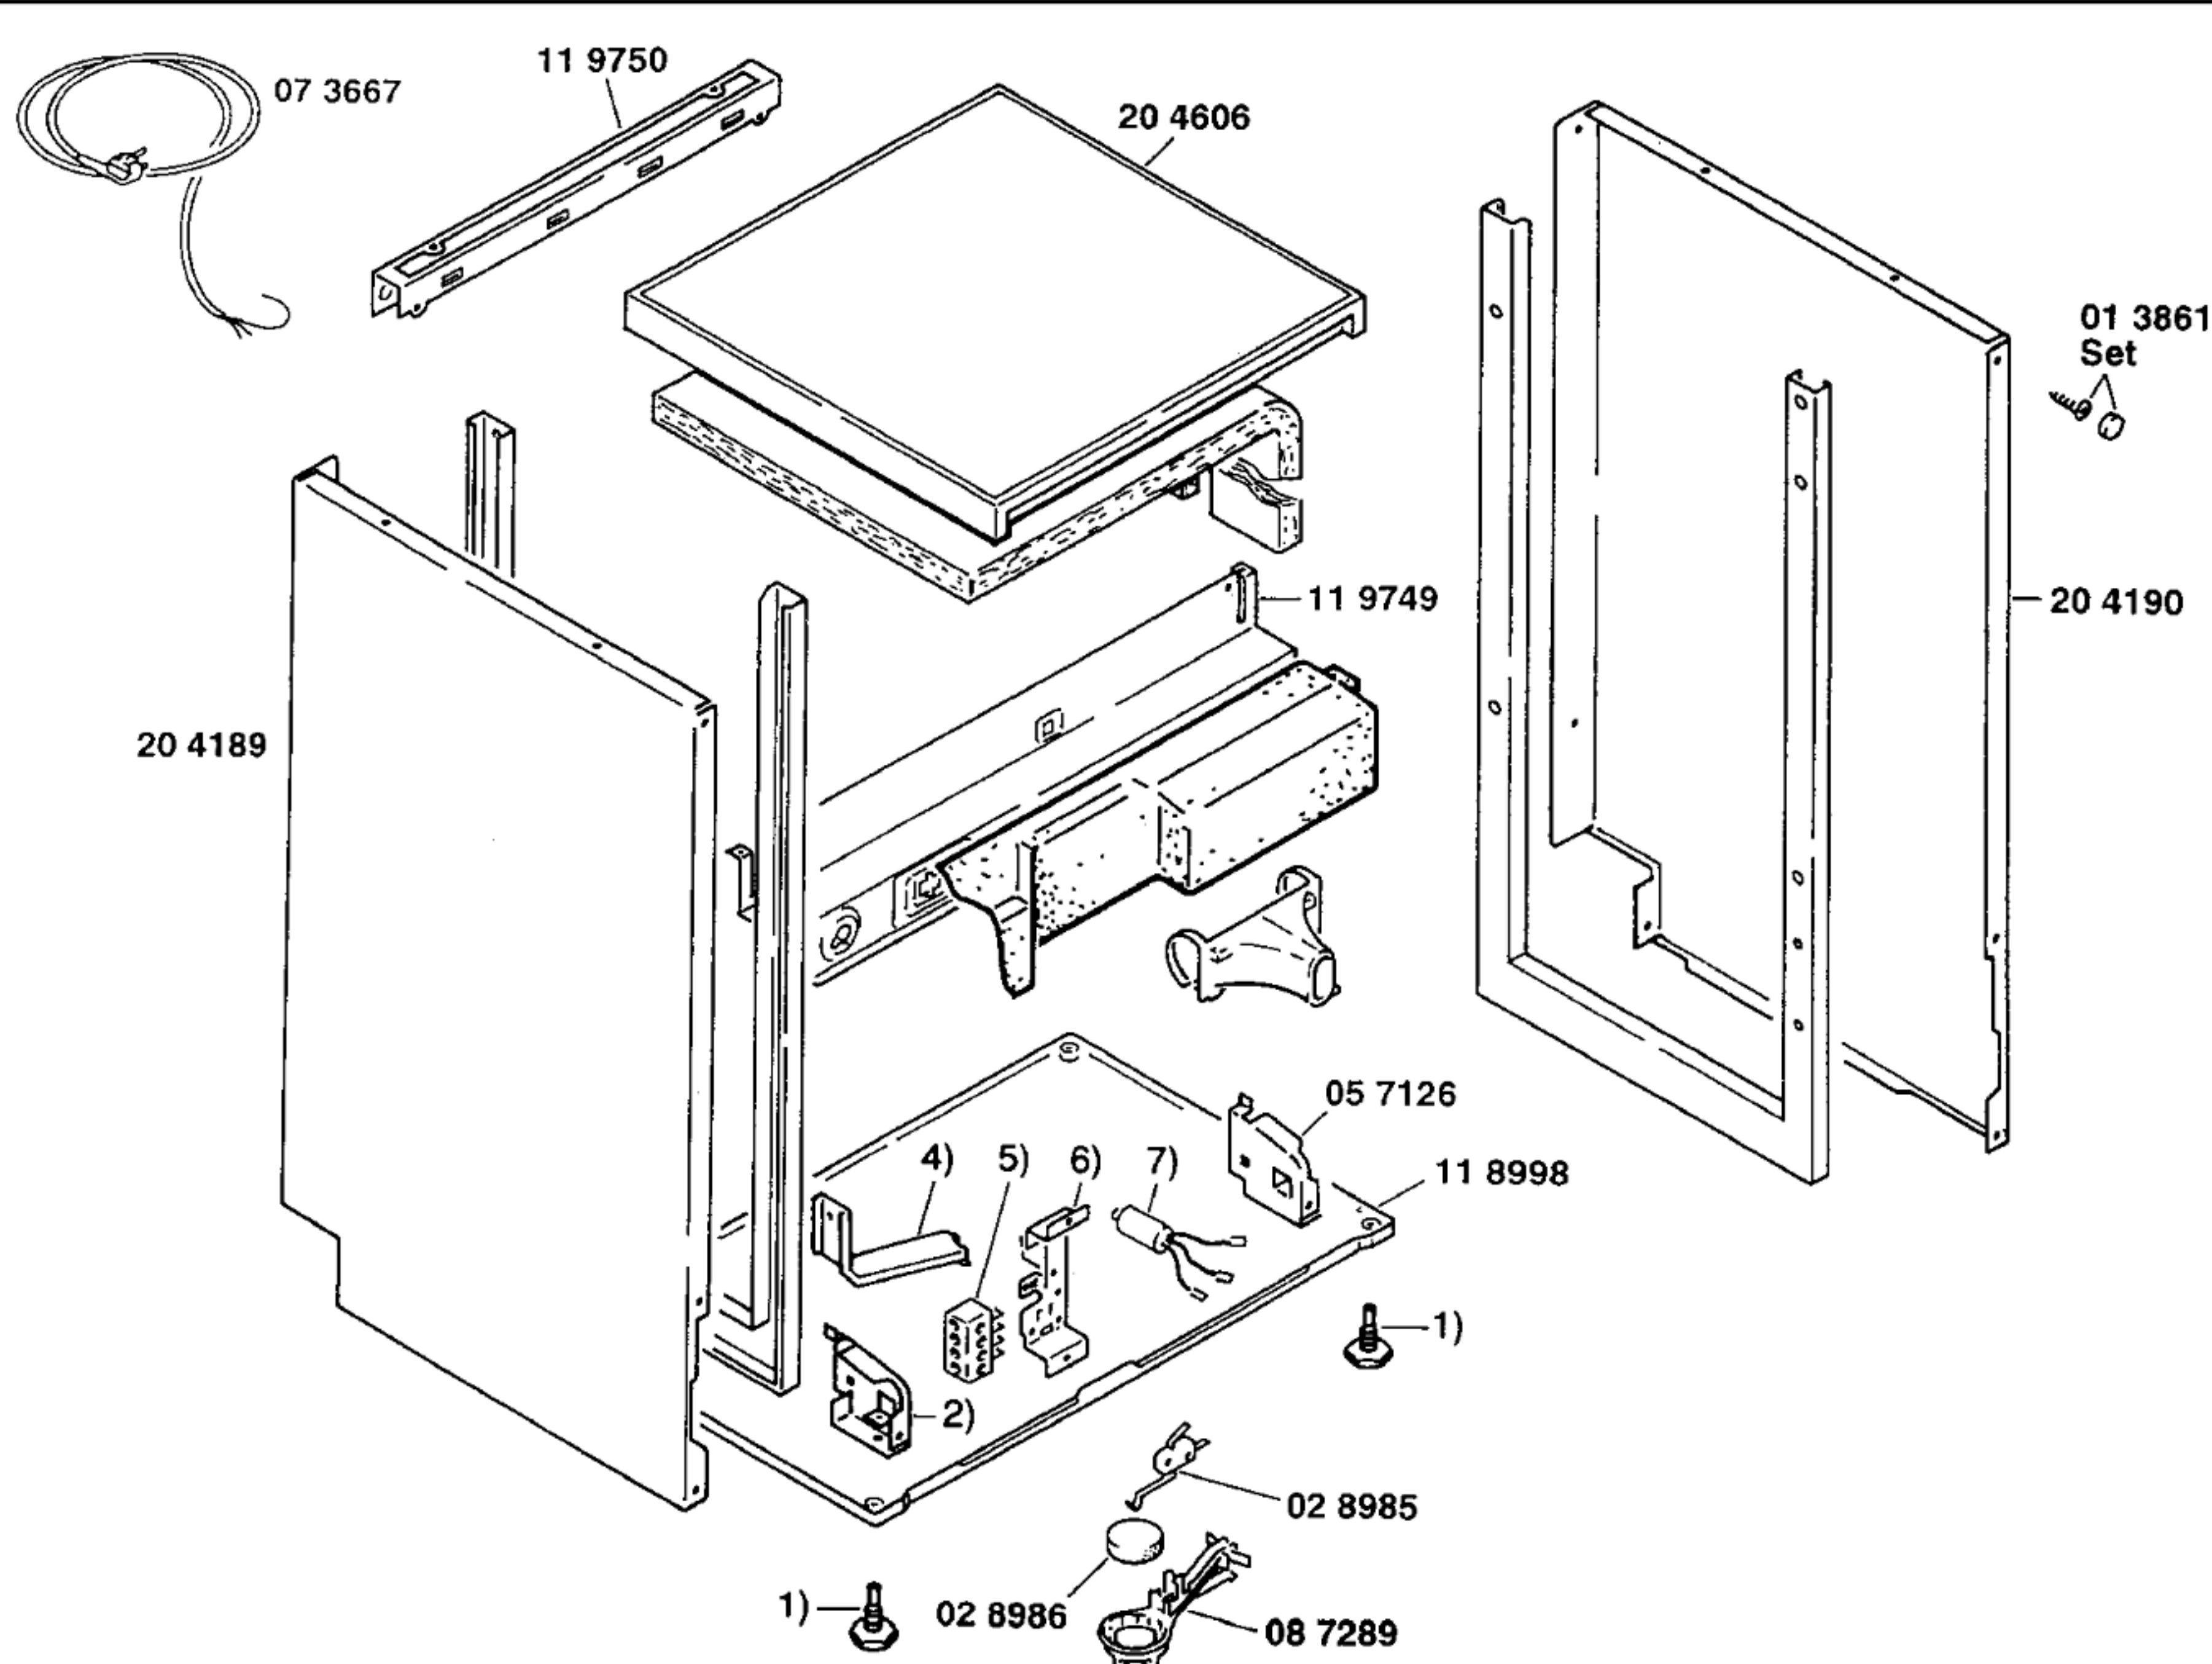**BOSCH**SMS5018GB/01-GB1  
SMS5018GB/03-GB2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent – Nummern – Konstante  
3740 . . . . .

- 1) 02 9020
- 2) 05 7127
- 3) —
- 4) 08 6400
- 5) 02 7385
- 6) 08 6401
- 7) 04 3889

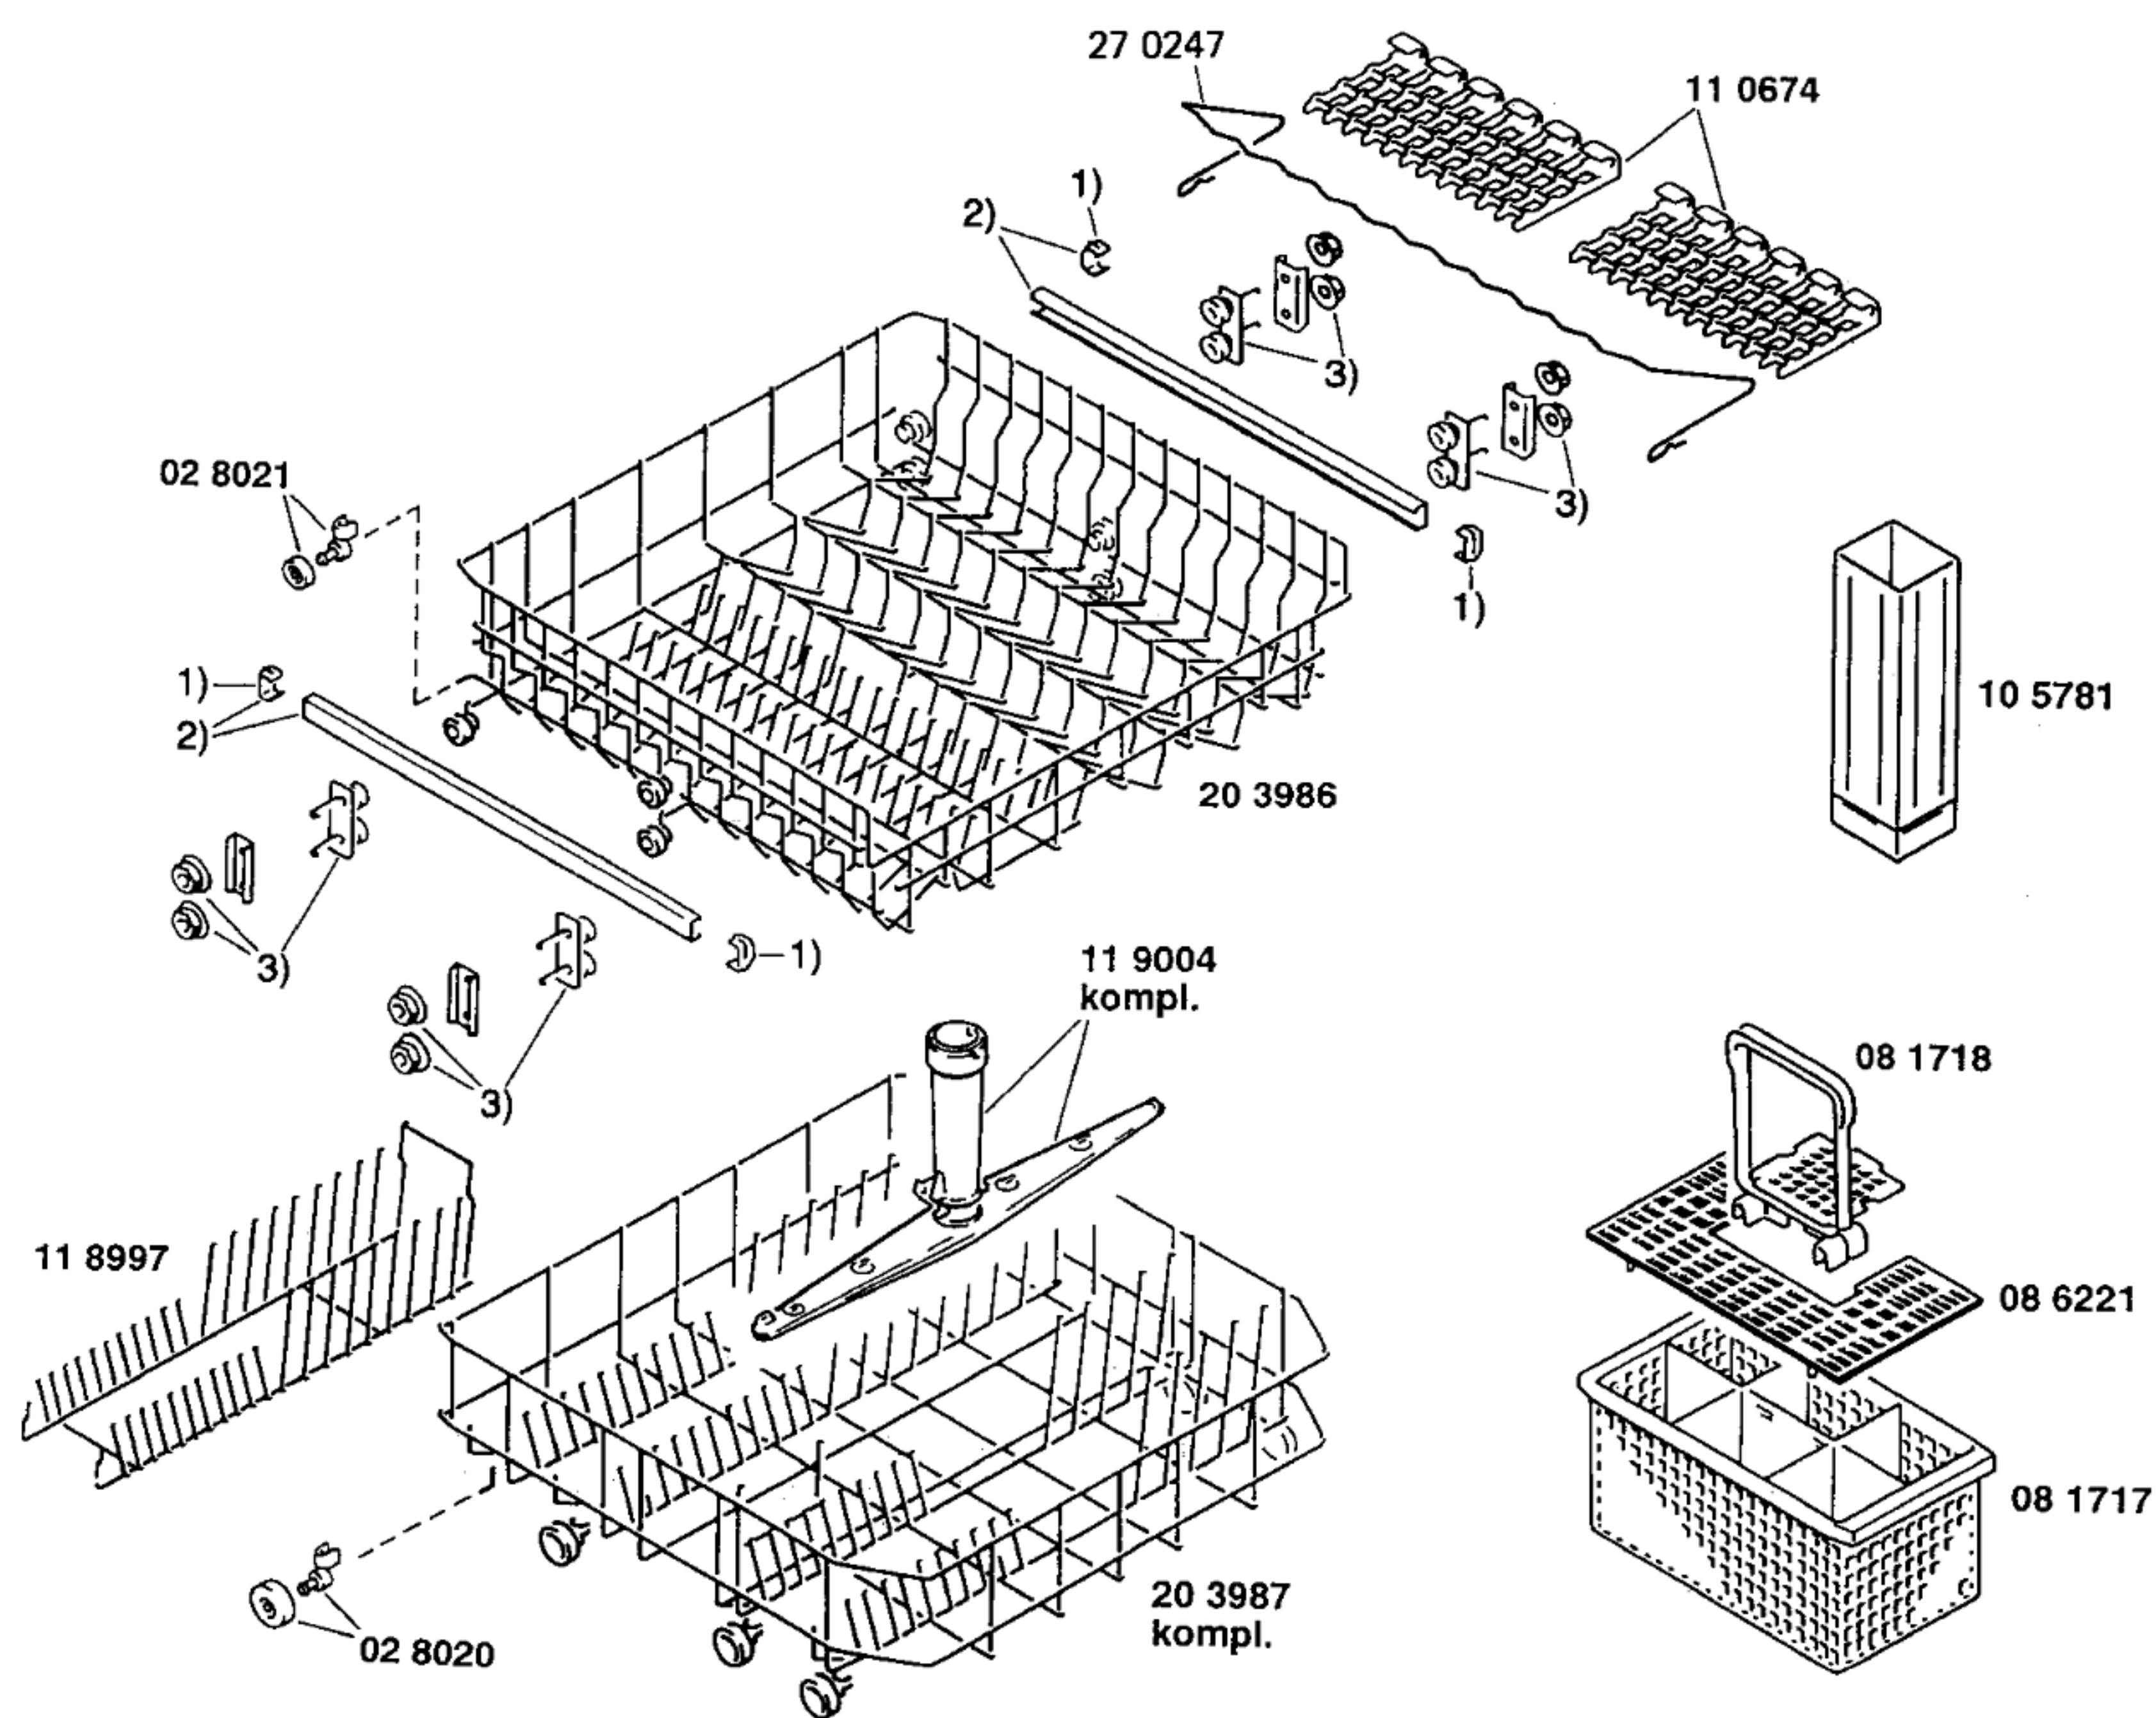

**BOSCH**SMS5018GB/01-GB1  
SMS5018GB/03-GB2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent - Nummern - Konstante  
3740 . . . . .

- 1) 01 9202
- 2) 11 0668
- 3) 05 6247