


**BOSCH**

WFM3010-WFM3010/01-D1
 WFM3010-WFM3010FG/01-FG1
 WFM3010-WFM3010II/01-II
 WFM3010-WFM3010DS/01-DS1

WFM3010-WFM3010CH/01-CH1
 WFM3010-WFM3010SN/01-SN1

WASCHGERÄTE
 Waschvollautomaten

 Ident - Nummern - Konstante
 3740

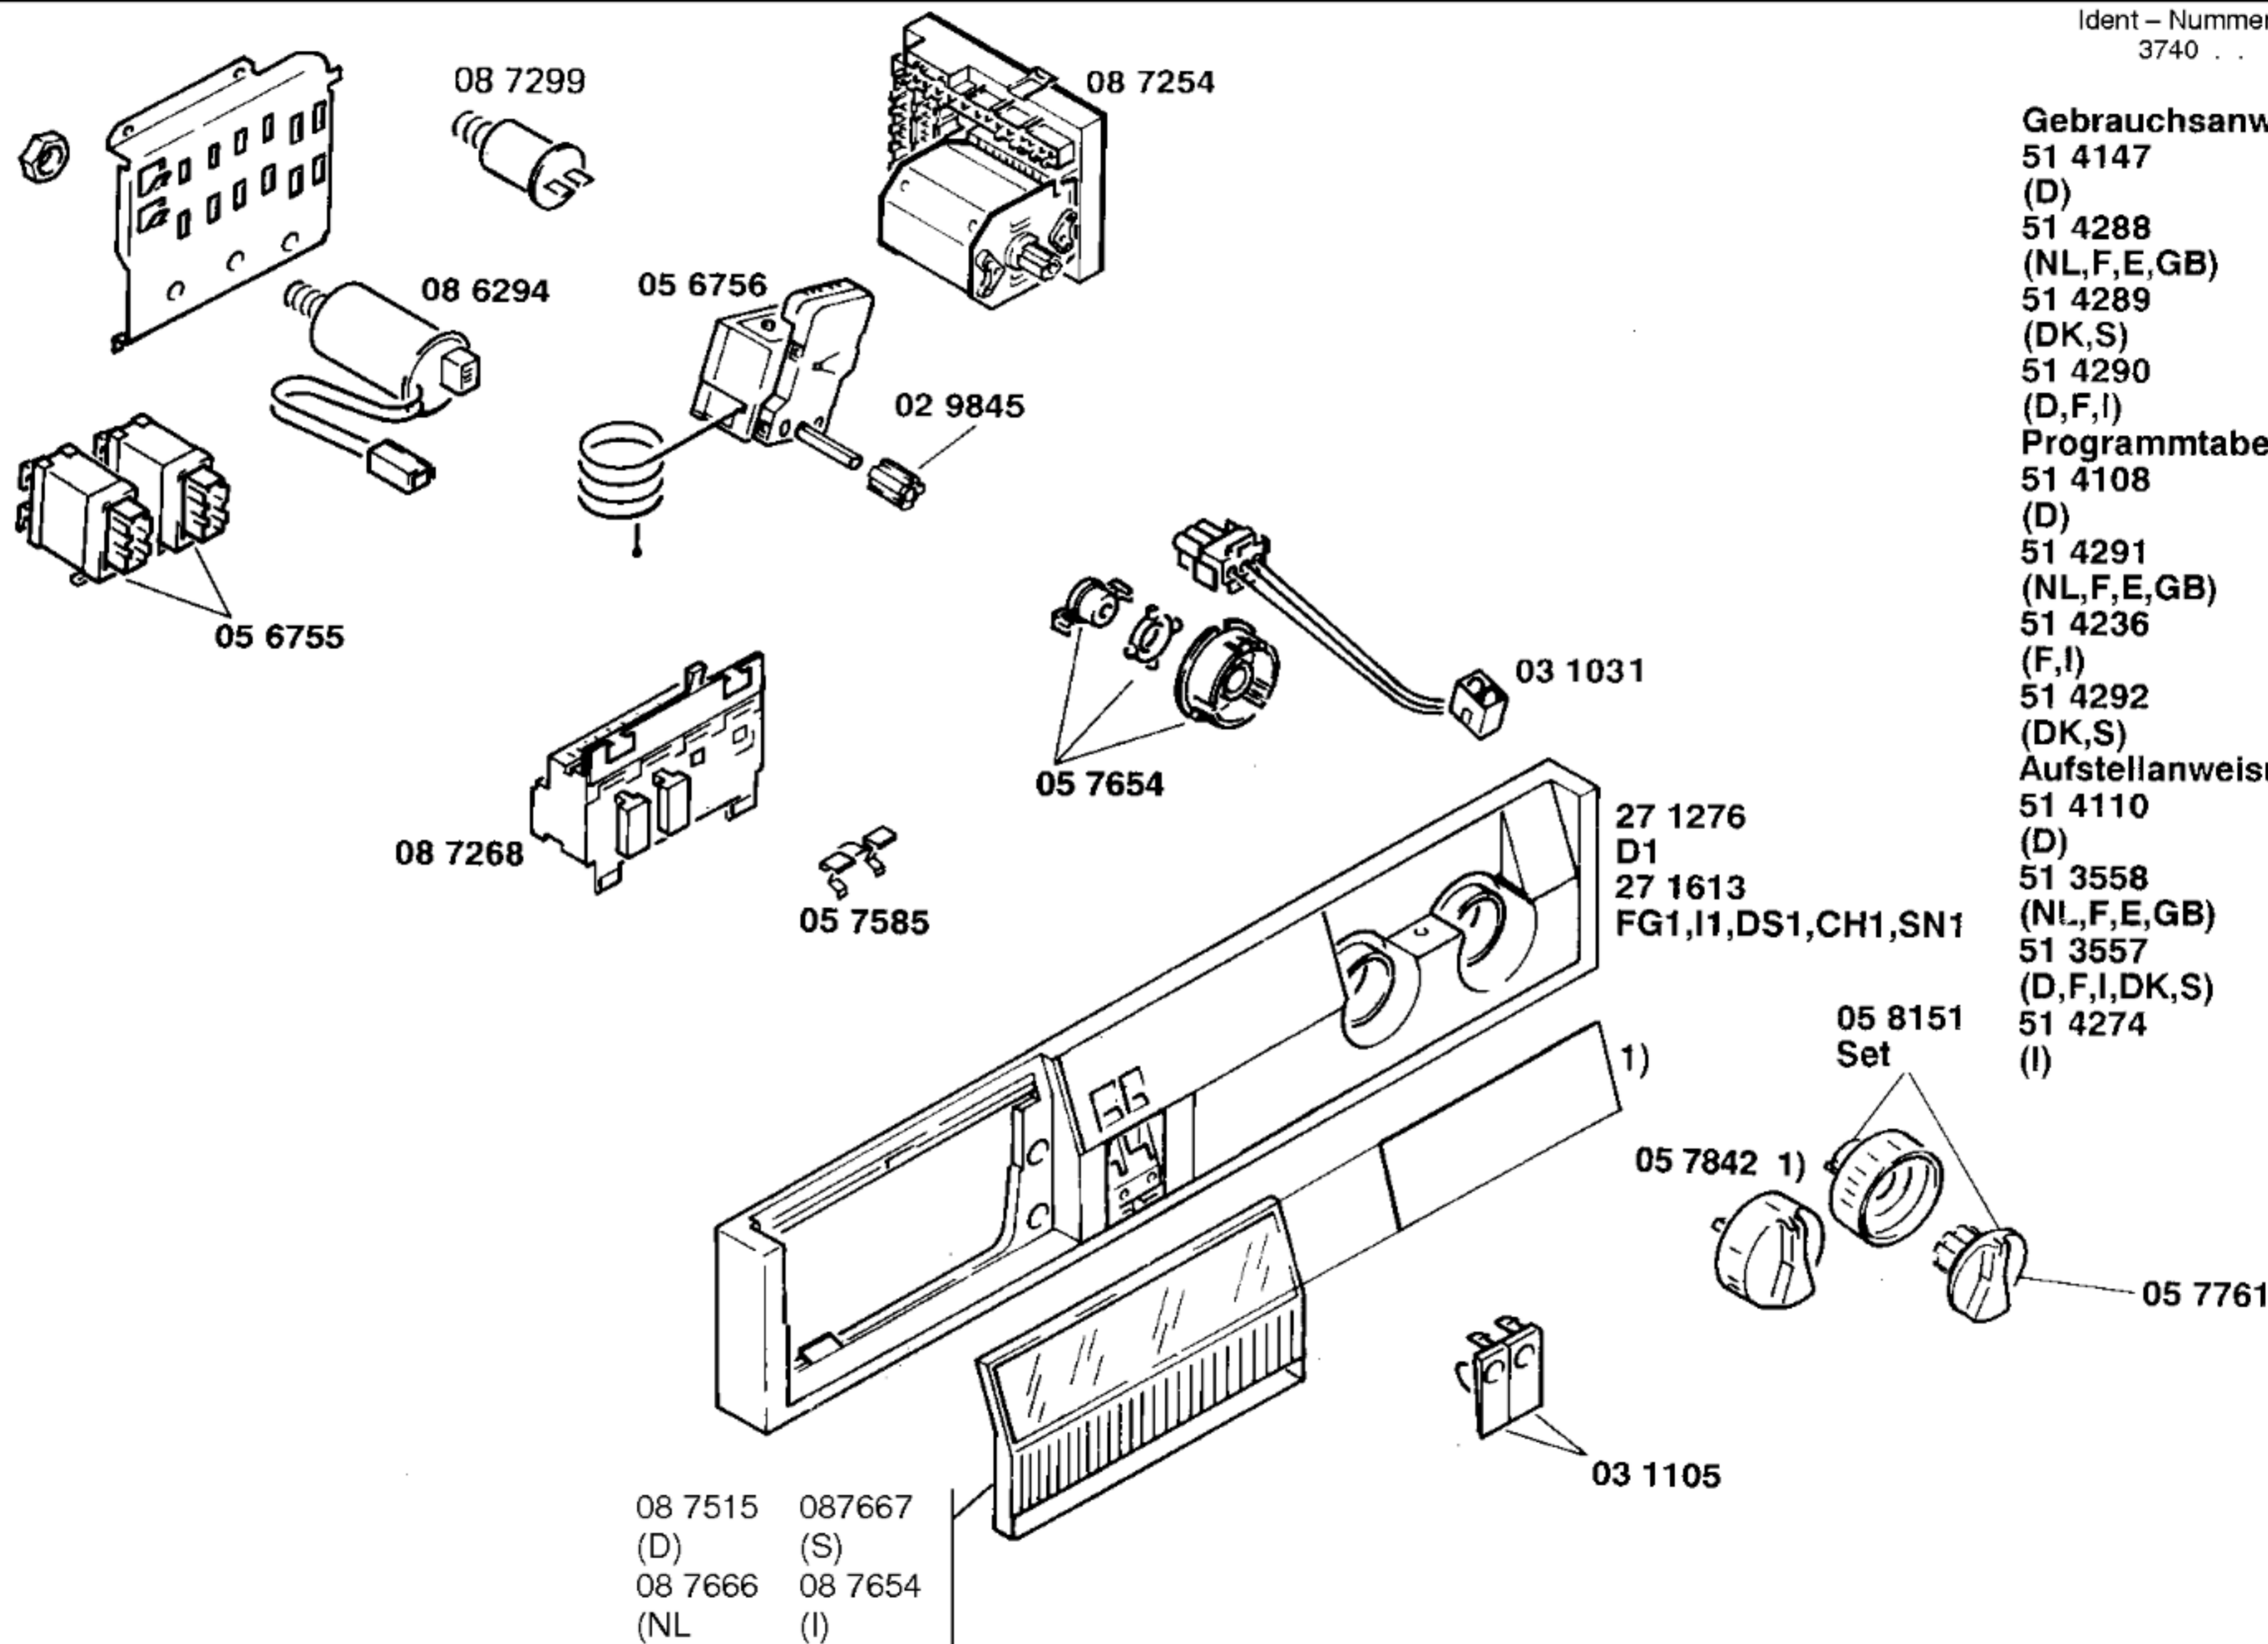


- 1) 08 7653 (D)
- 08 7659 (F)
- 08 7660 (GB)
- 08 7661 (E)
- 08 7655 (I)
- 08 7662 (SF)
- 08 7663 (N)
- 08 7664 (S)
- 08 7665 (DK)

- 08 7515 (D)
- 08 7666 (NL)
- 08 7667 (S)
- 08 7654 (I)

- Gebrauchsanweisungen:**
- 51 4147 (D)
 - 51 4288 (NL, F, E, GB)
 - 51 4289 (DK, S)
 - 51 4290 (D, F, I)
- Programmtabellen:**
- 51 4108 (D)
 - 51 4291 (NL, F, E, GB)
 - 51 4236 (F, I)
 - 51 4292 (DK, S)
- Aufstellanweisungen:**
- 51 4110 (D)
 - 51 3558 (NL, F, E, GB)
 - 51 3557 (D, F, I, DK, S)
 - 51 4274 (I)

 20 4245
Unterbauabdeckung

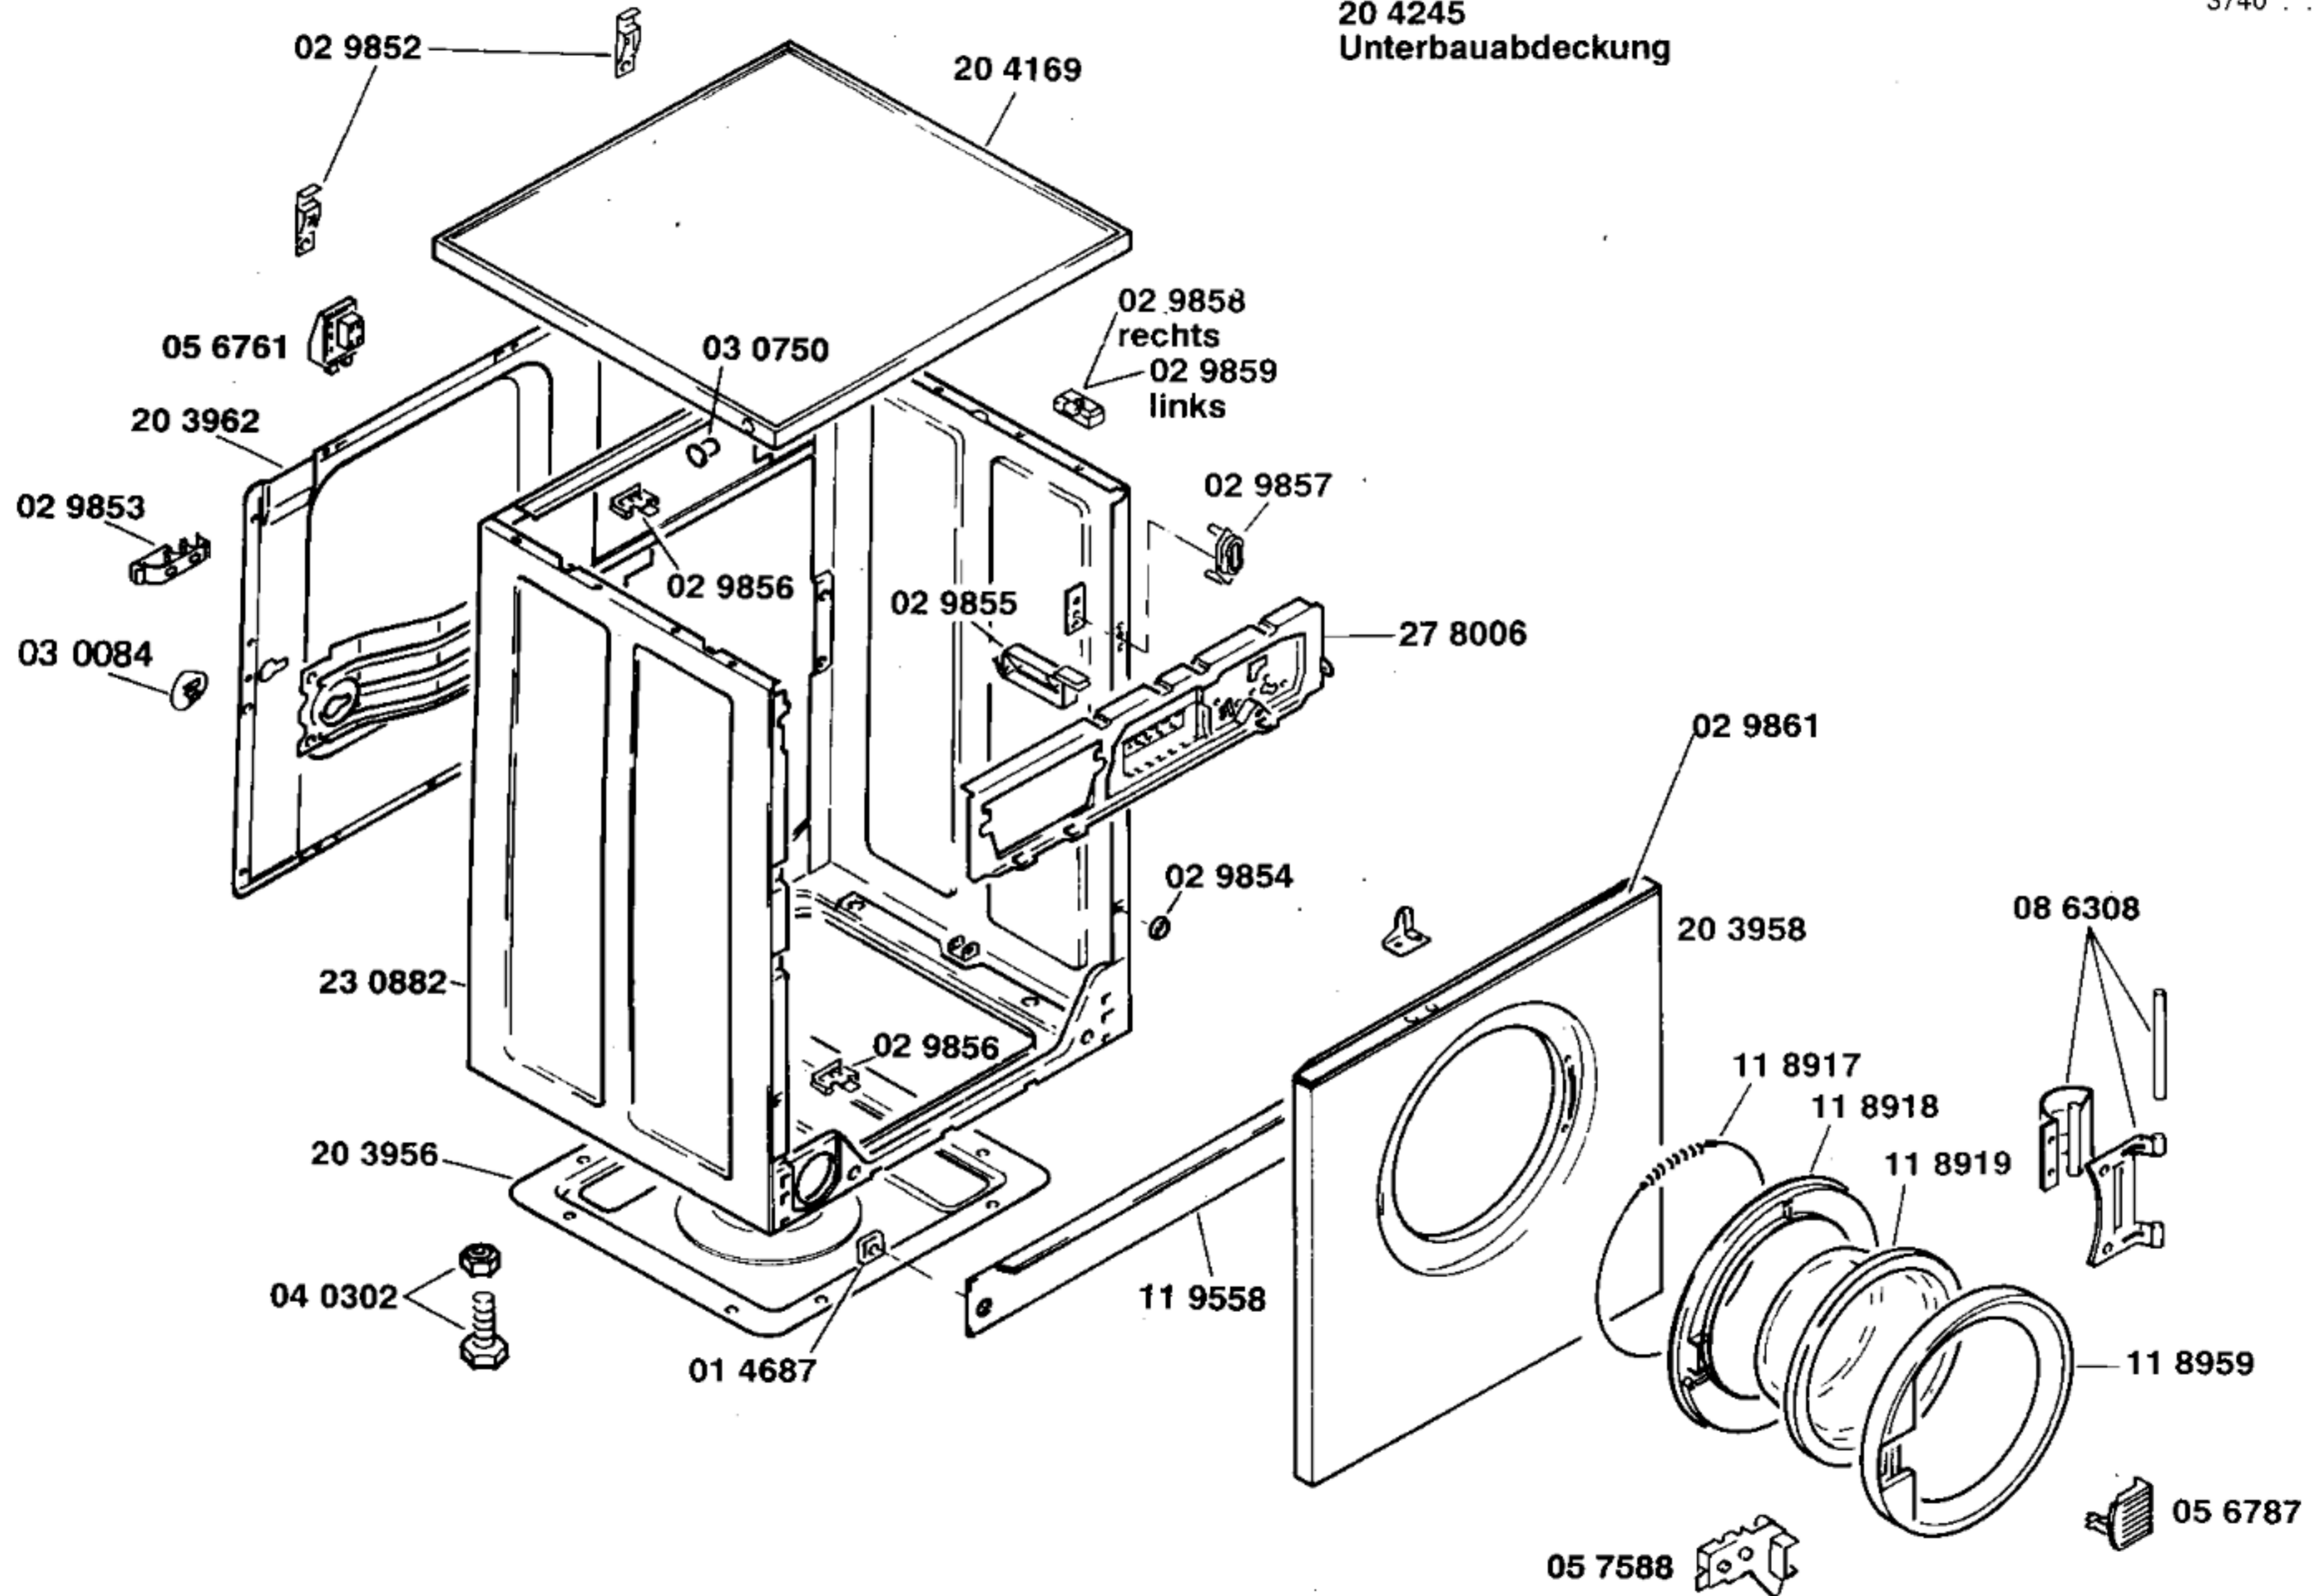



BOSCH

WFM3010-WFM3010/01-D1
WFM3010-WFM3010FG/01-FG1
WFM3010-WFM3010II/01-II
WFM3010-WFM3010DS/01-DS1

WFM3010-WFM3010CH/01-CH1
WFM3010-WFM3010SN/01-SN1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

