

**BOSCH**WFS7010-WFS7010FG/01-FG1
WFS7010-WFS7010FG/02-FG2WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

Gebrauchsanweisungen:

51 4027

(D)

51 4028

(NL,F,E,GB)

51 4029

(D,F,I)

51 4030

(S,DK)

Programmtabellen:

51 4031

(D)

51 4032

(NL)

51 4033

(F)

51 4034

(E)

51 4035

(GB)

51 4036

(I)

51 4037

(S)

Aufstellanweisungen:

51 3556

(D,I,S,N,SF)

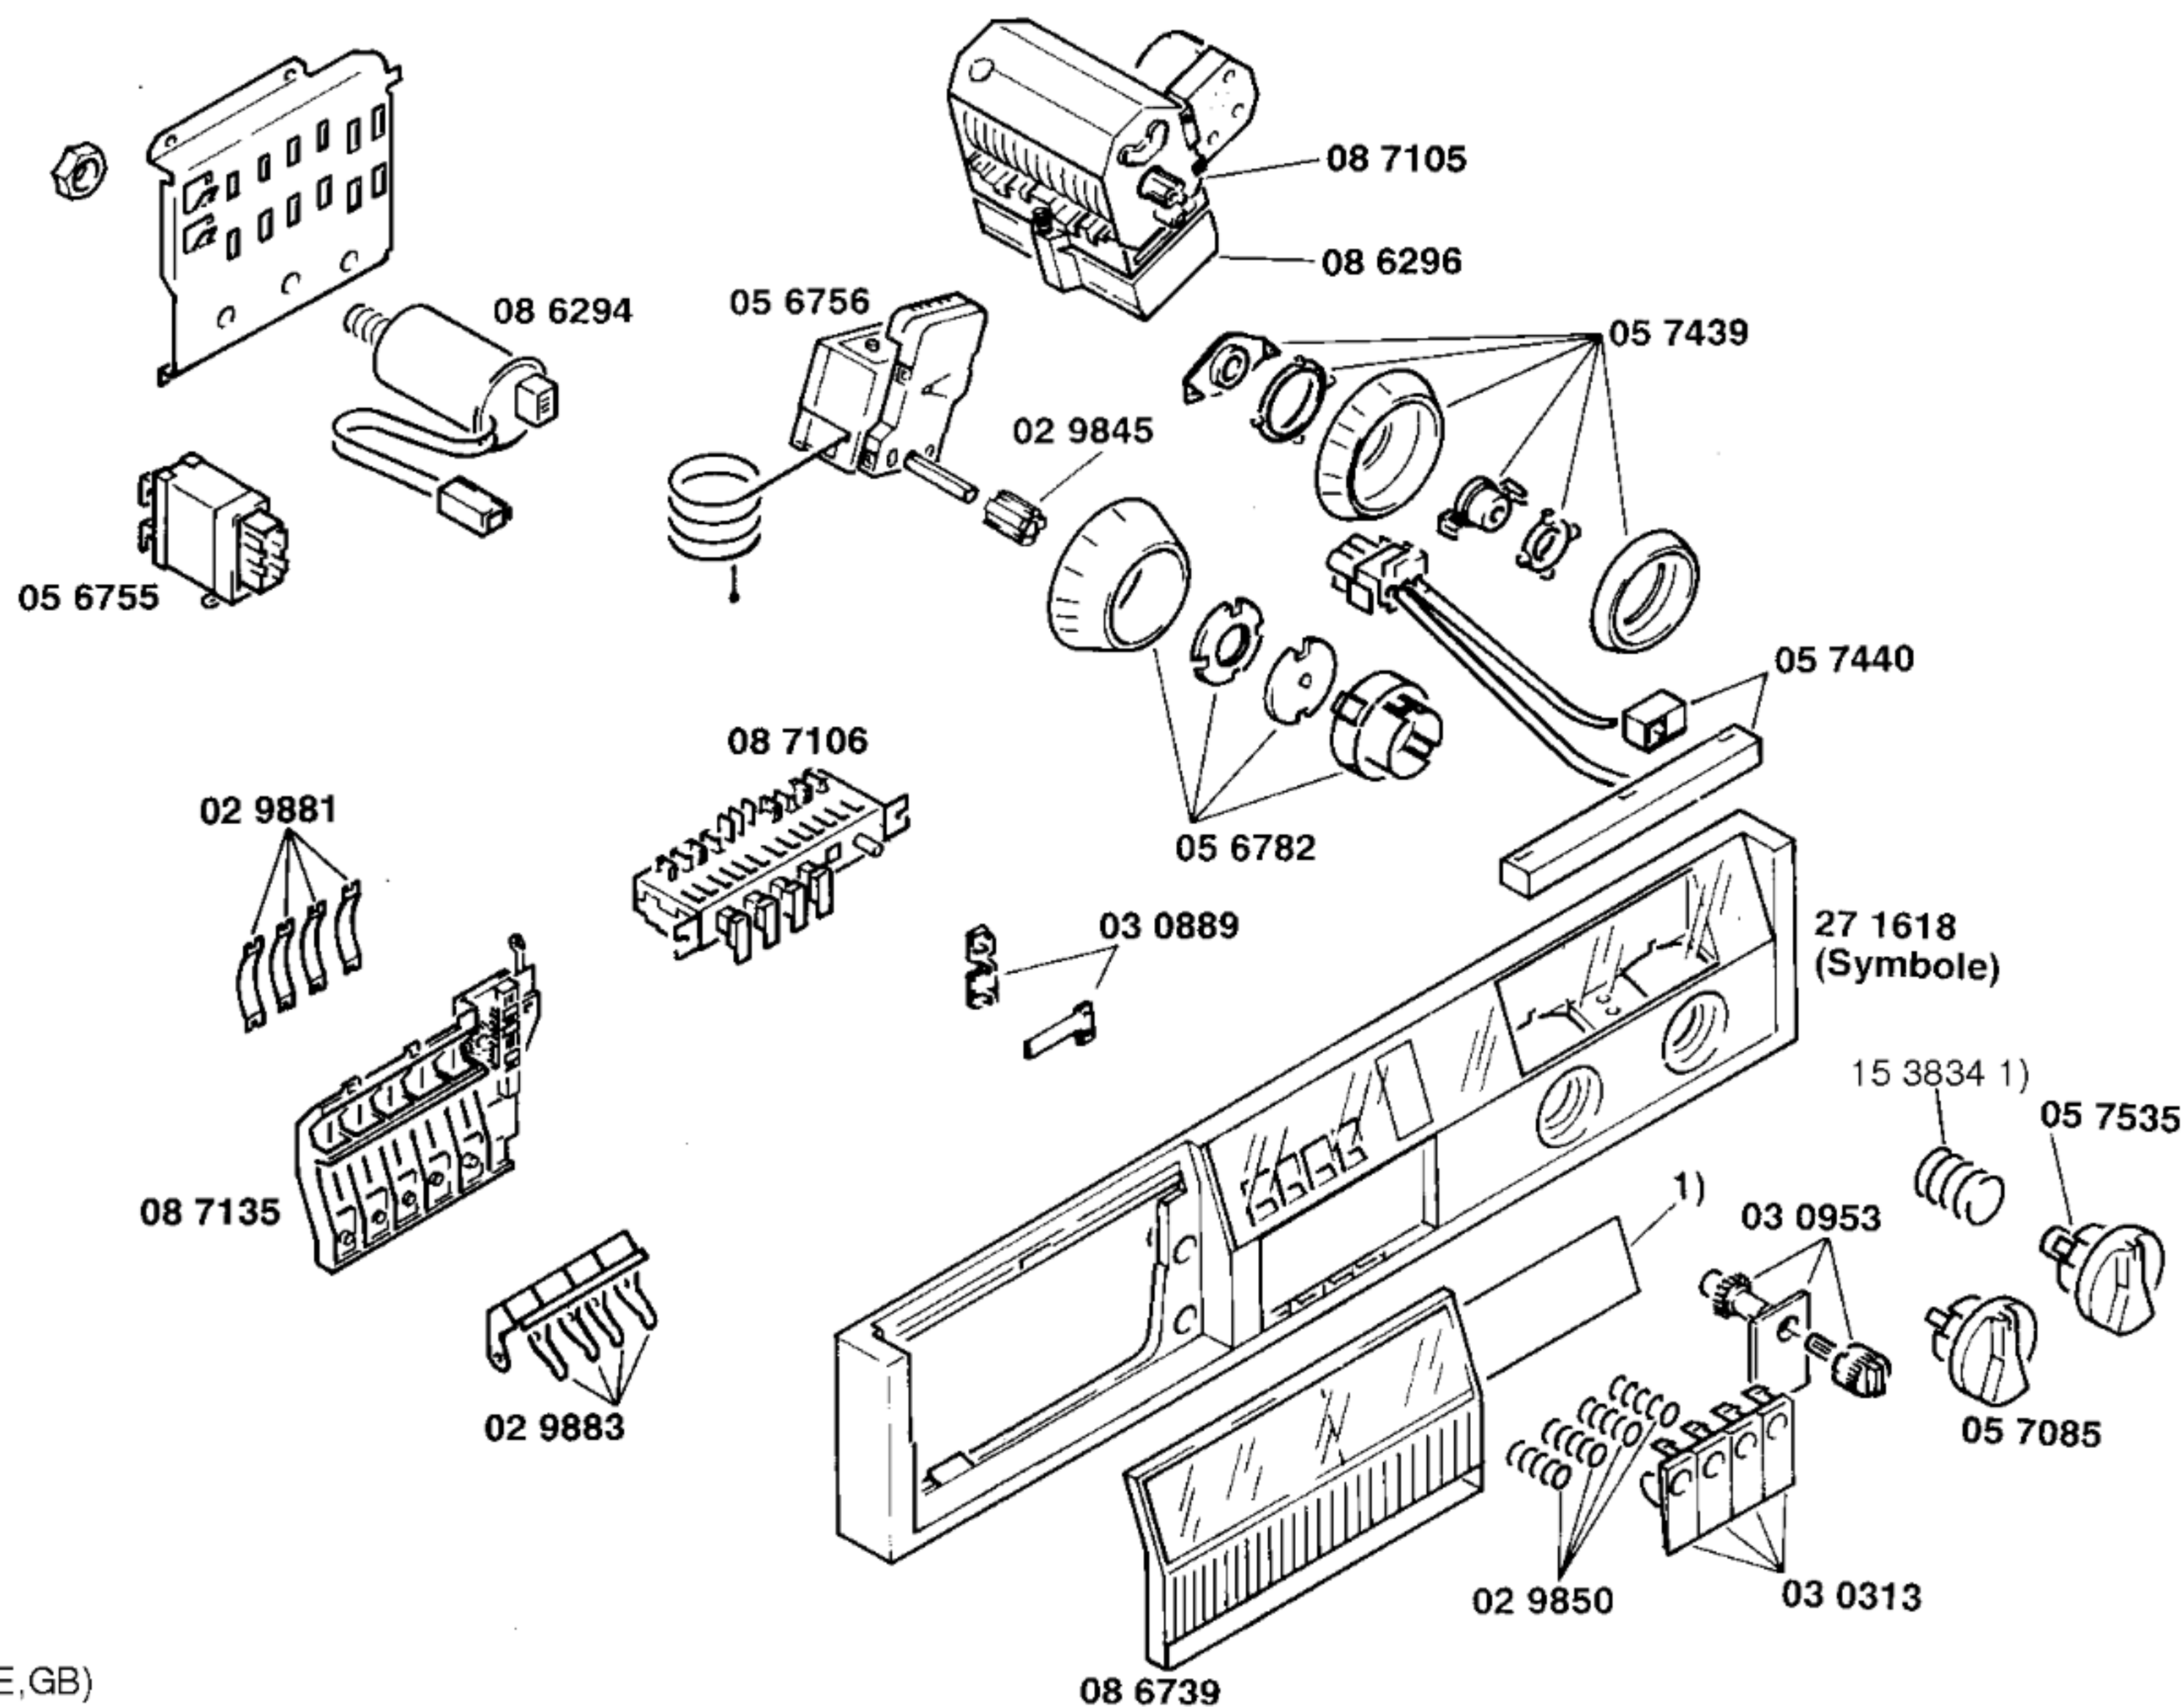 
51 3557

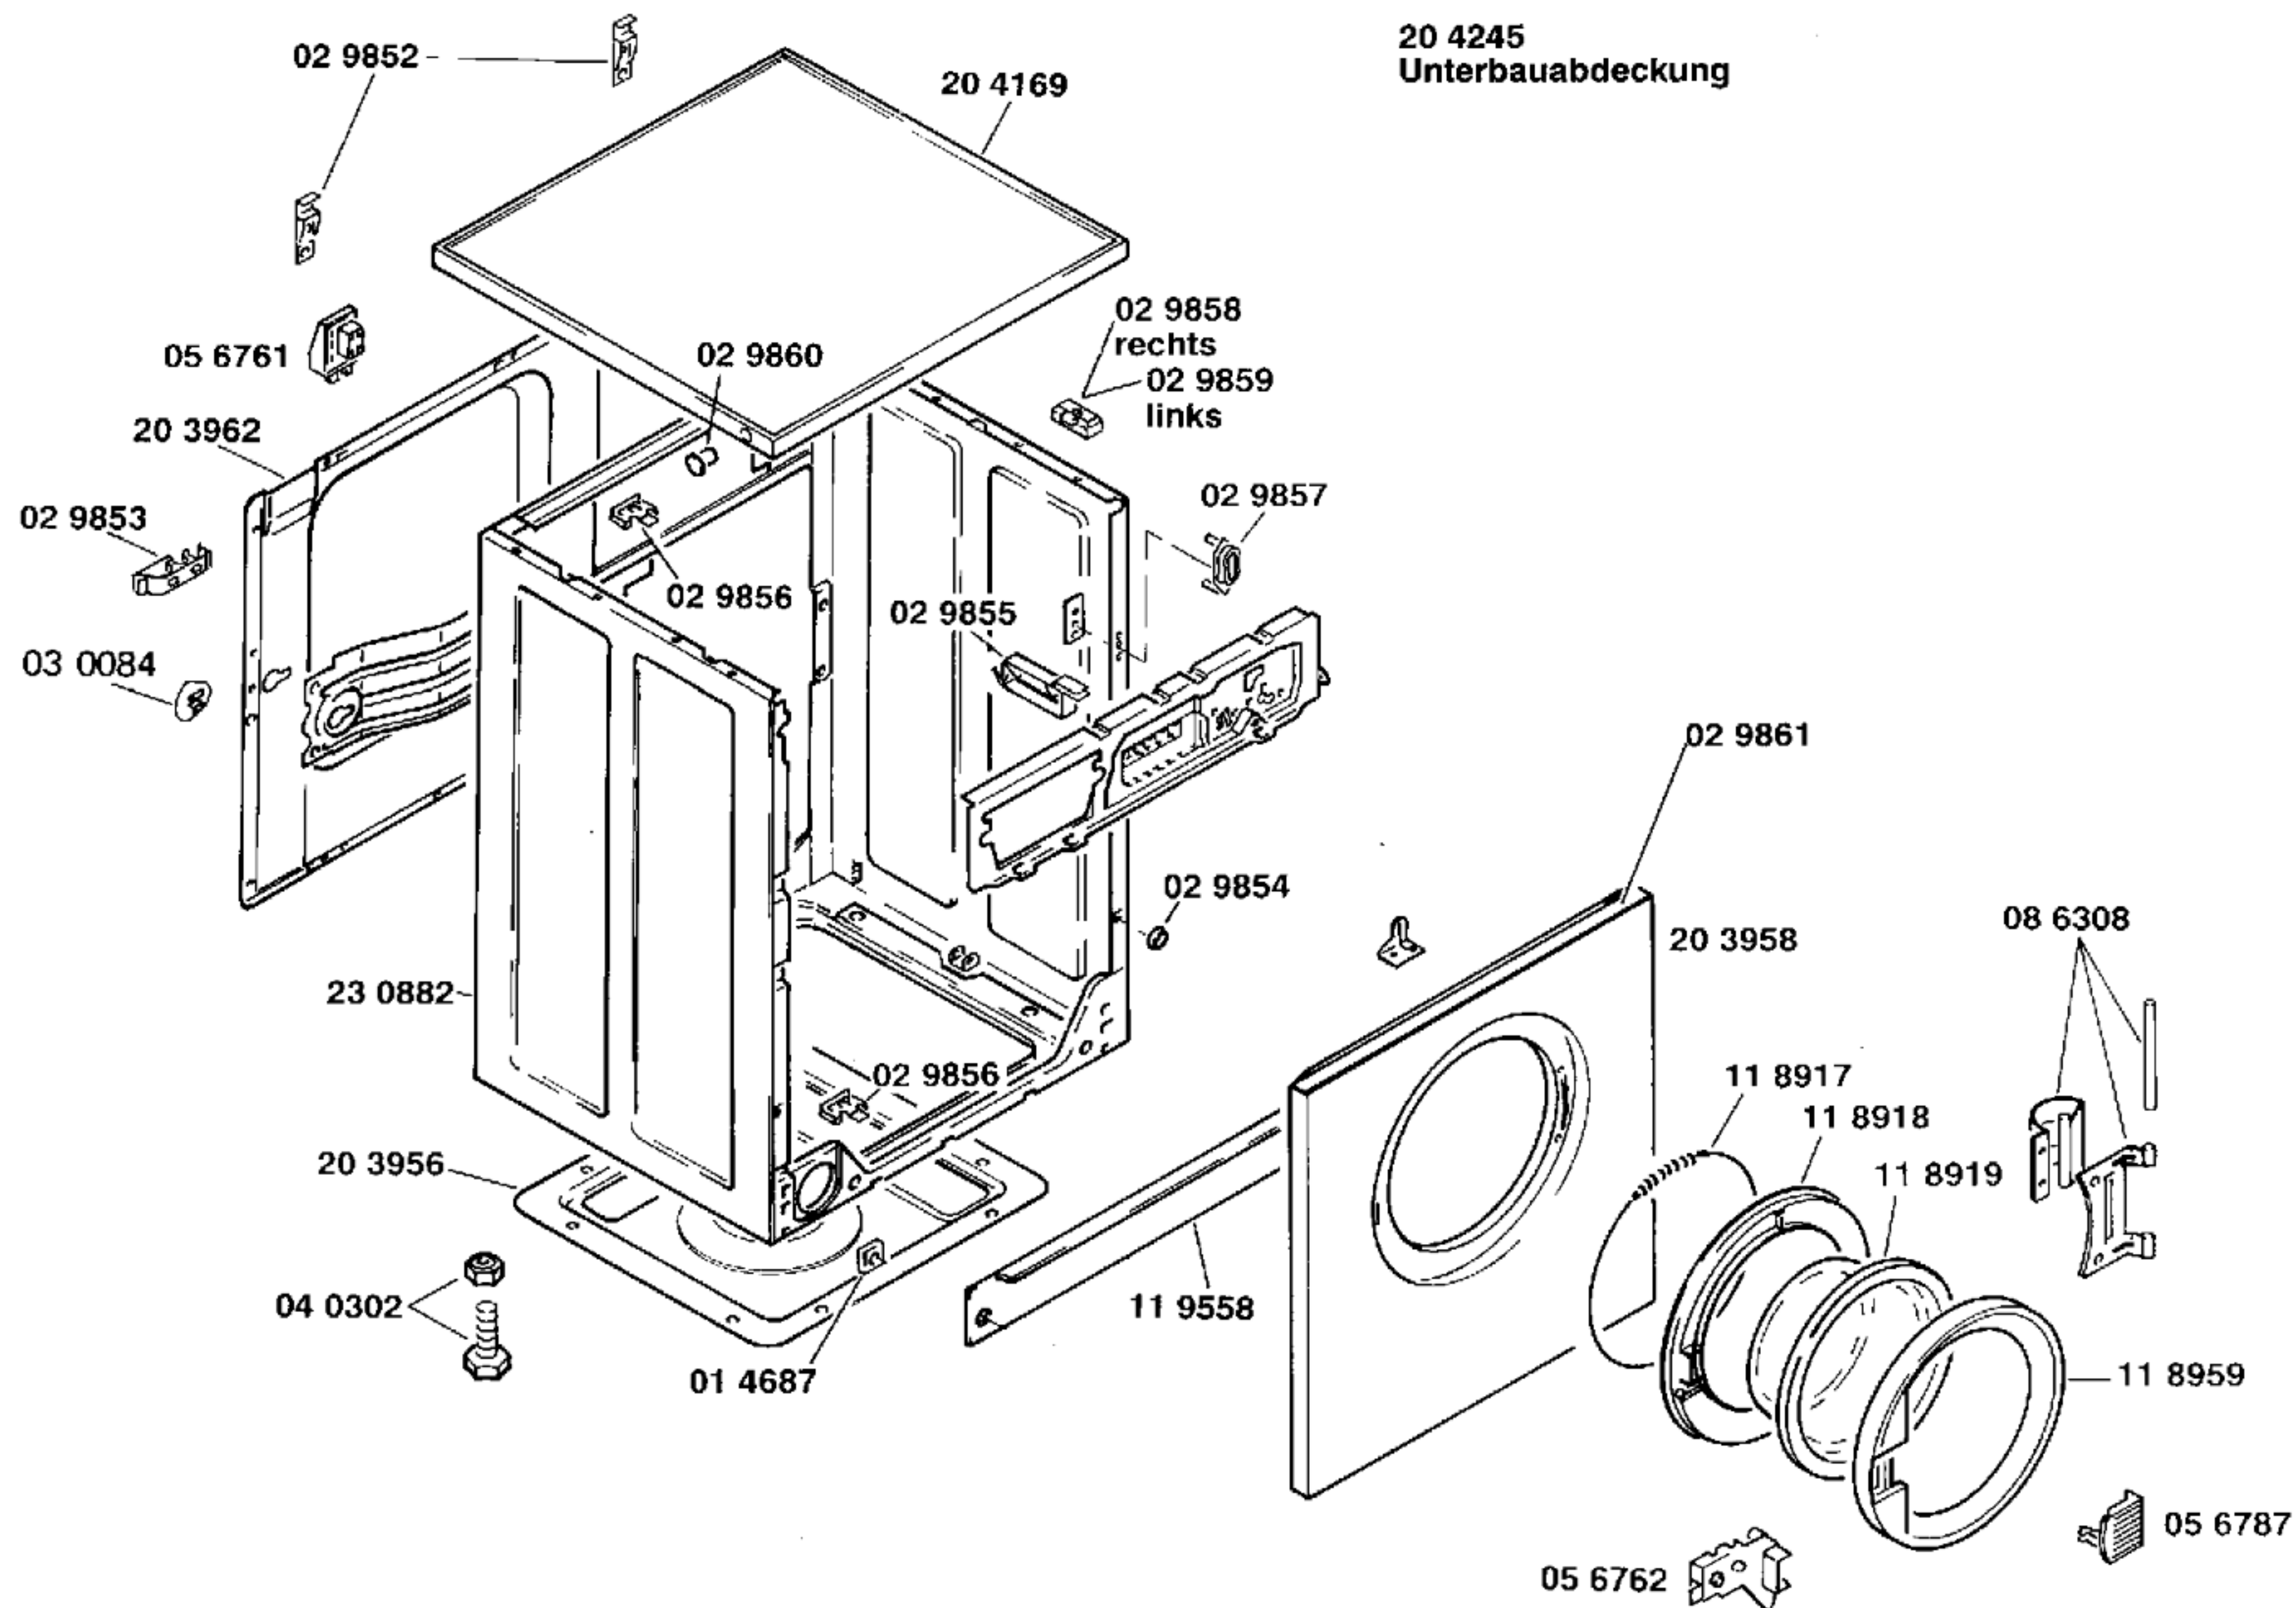 
(S,DK)

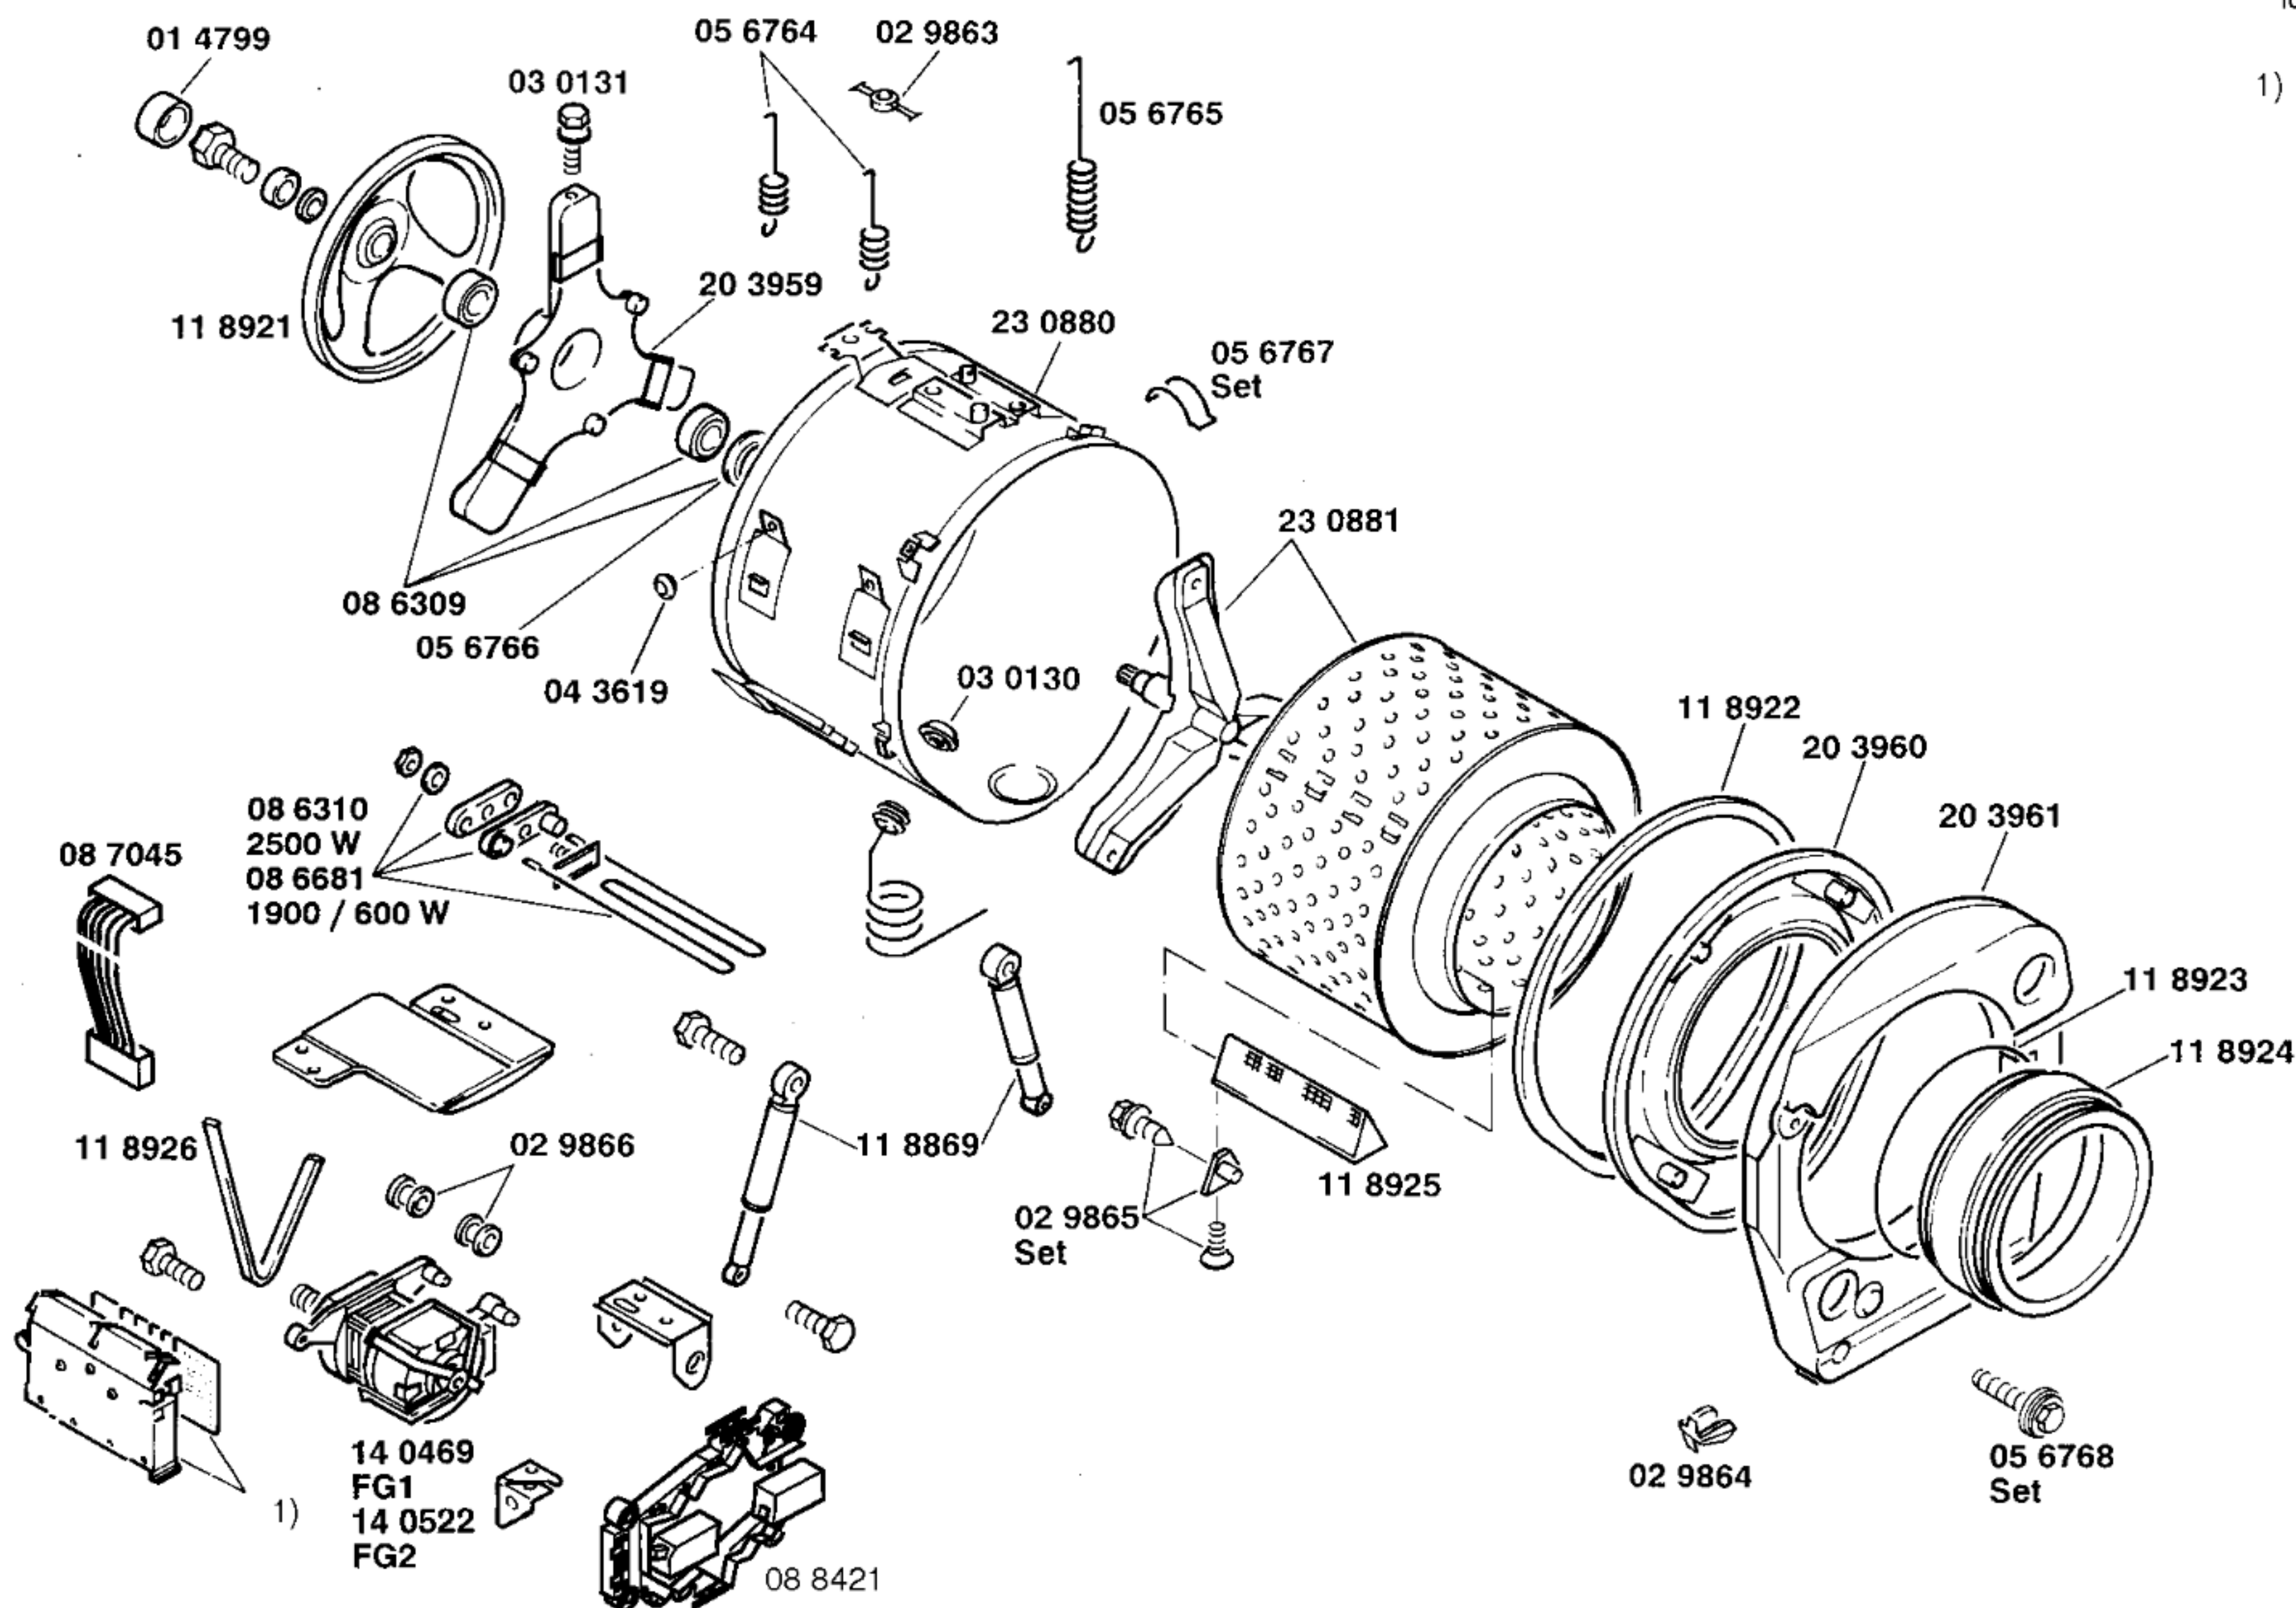 
51 3558

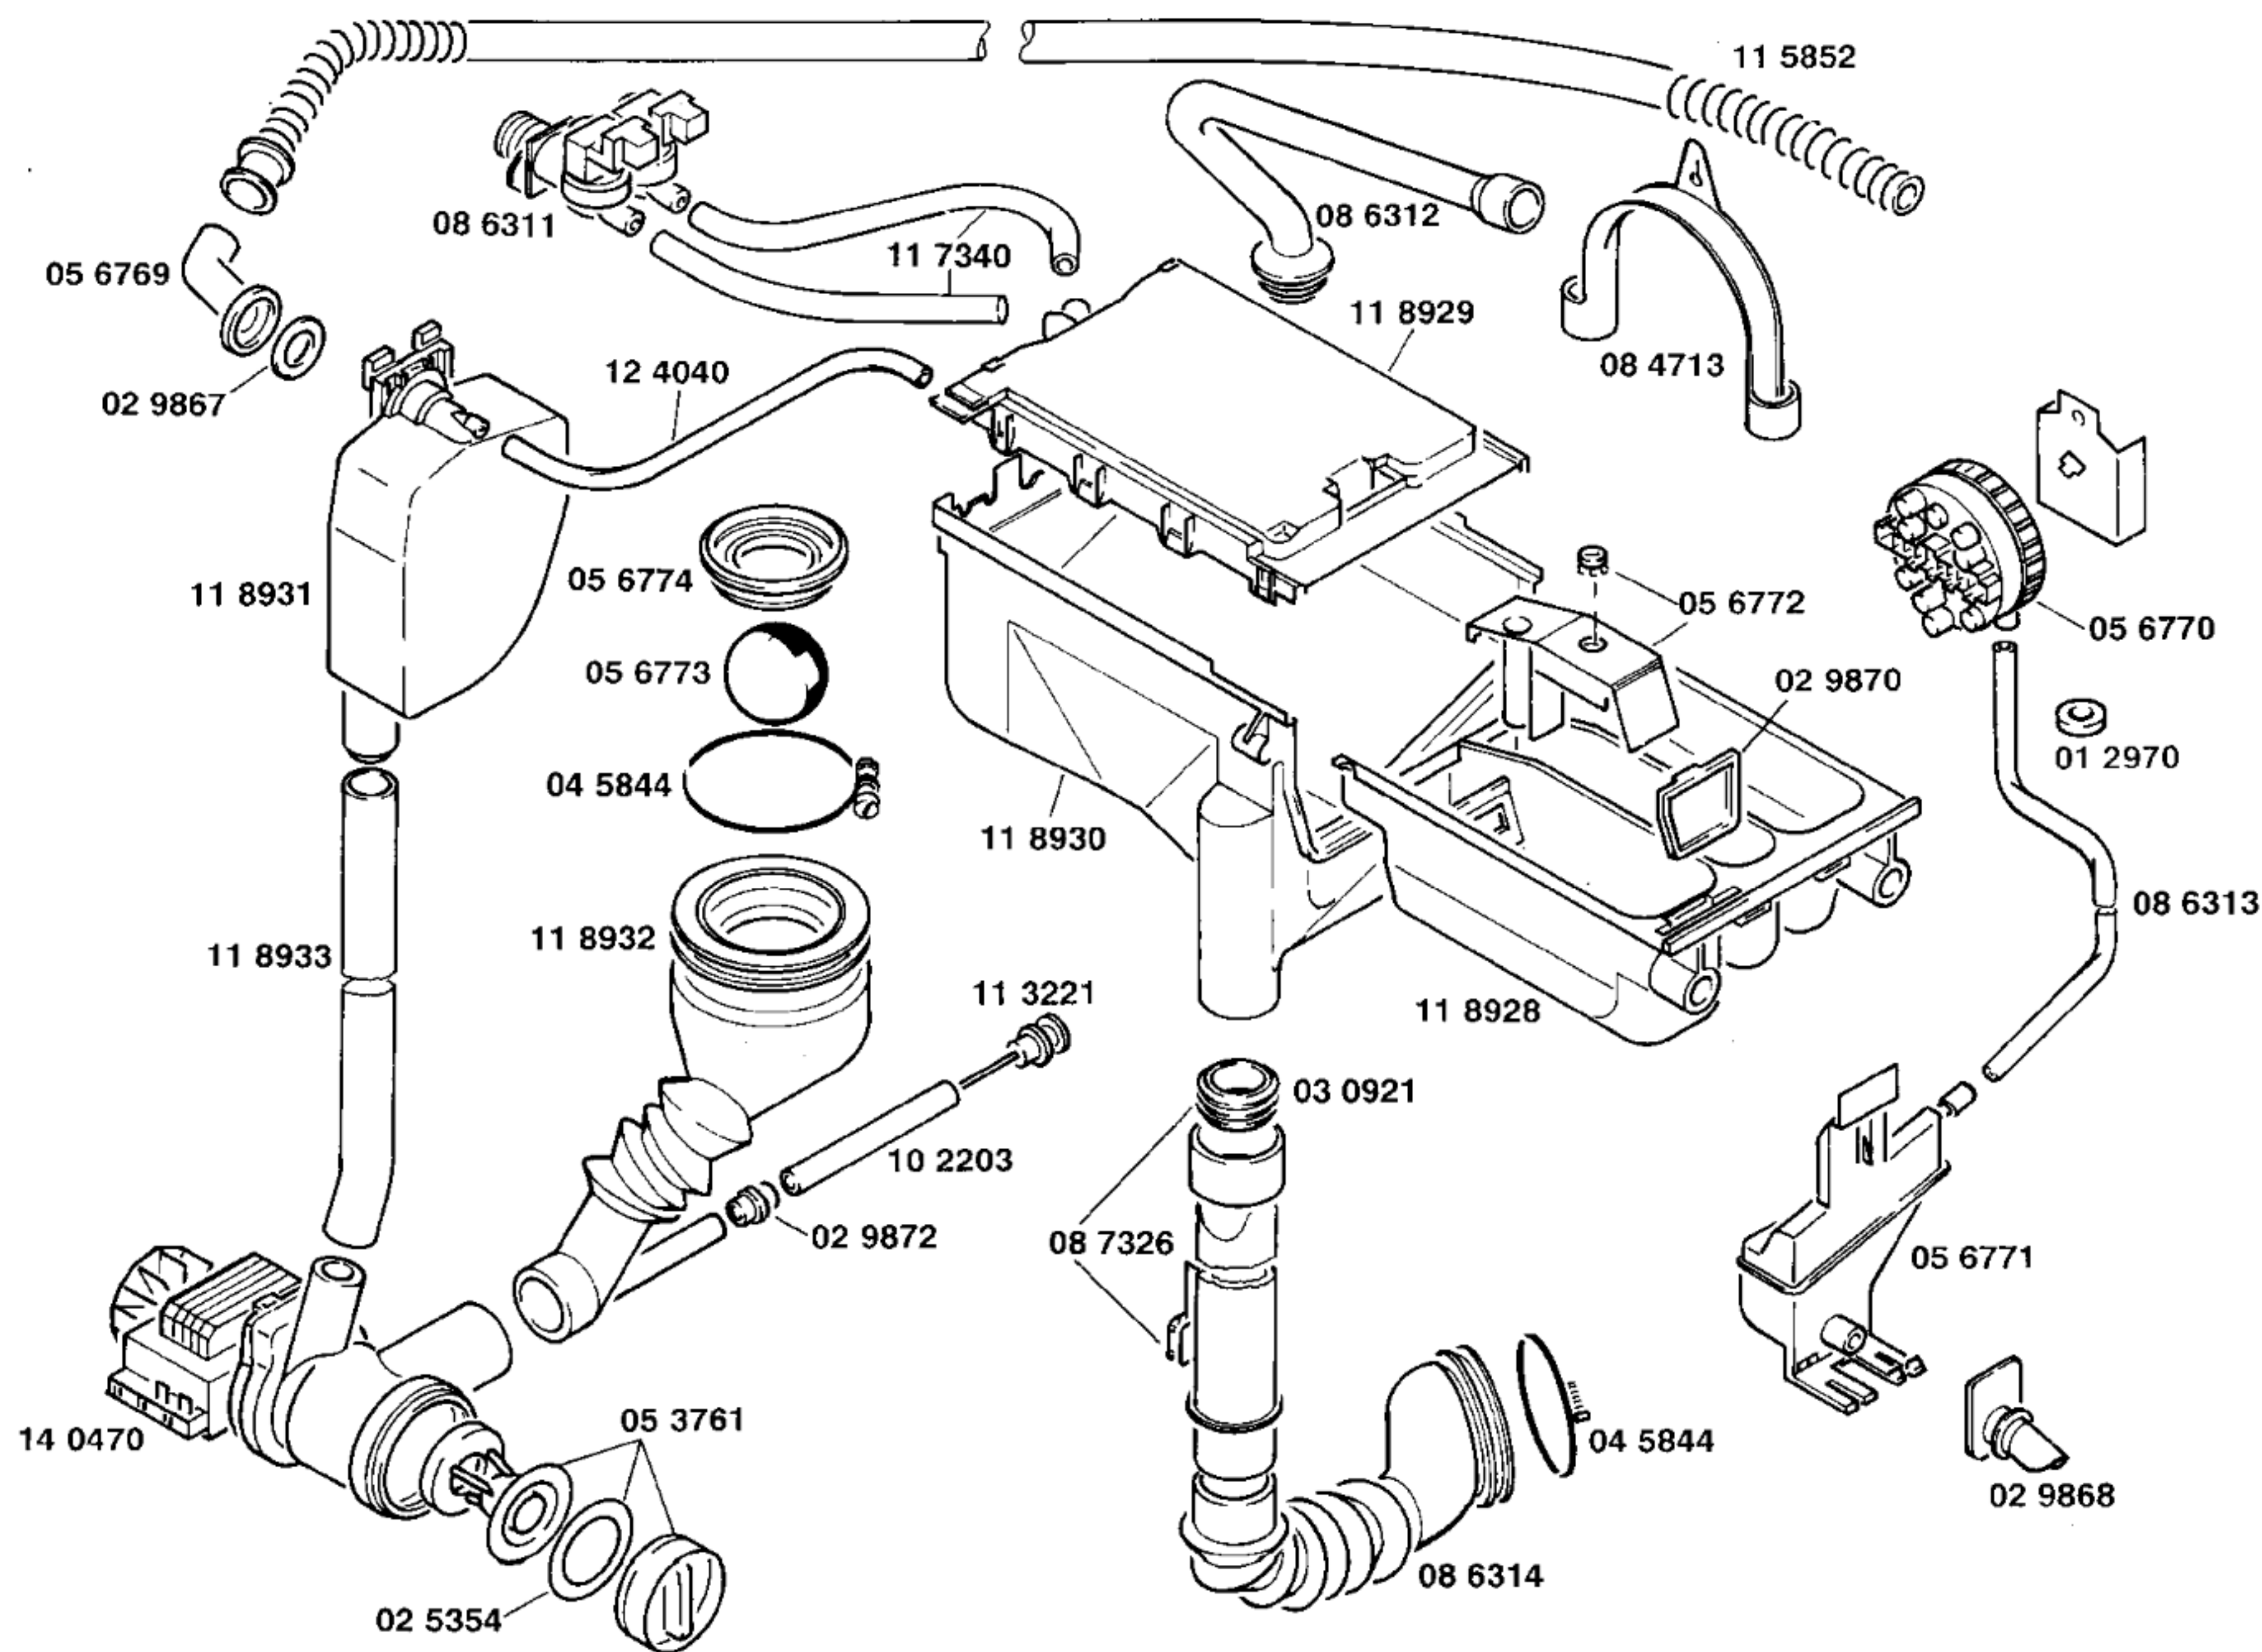 
(NL,F,E,GB)

- 1) 08 6336
(D)
08 6337
(NL)
08 6338
(N)
08 6339
(SF)
08 6340
(S)
08 6341
(E)
08 6342
(F)
08 6343
(DK)
08 6344
(I)
08 6686
(TR,YU,E,GB)
08 6690
(GB)



**BOSCH**WFS7010-WFS7010FG/01-FG1
WFS7010-WFS7010FG/02-FG2WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
I 3740

**BOSCH**WFS7010-WFS7010FG/01-FG1
WFS7010-WFS7010FG/02-FG2WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
37401) 27 0443
15 5272
Triac-Motorleistung

**BOSCH**WFS7010-WFS7010FG/01-FG1
WFS7010-WFS7010FG/02-FG2WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740