


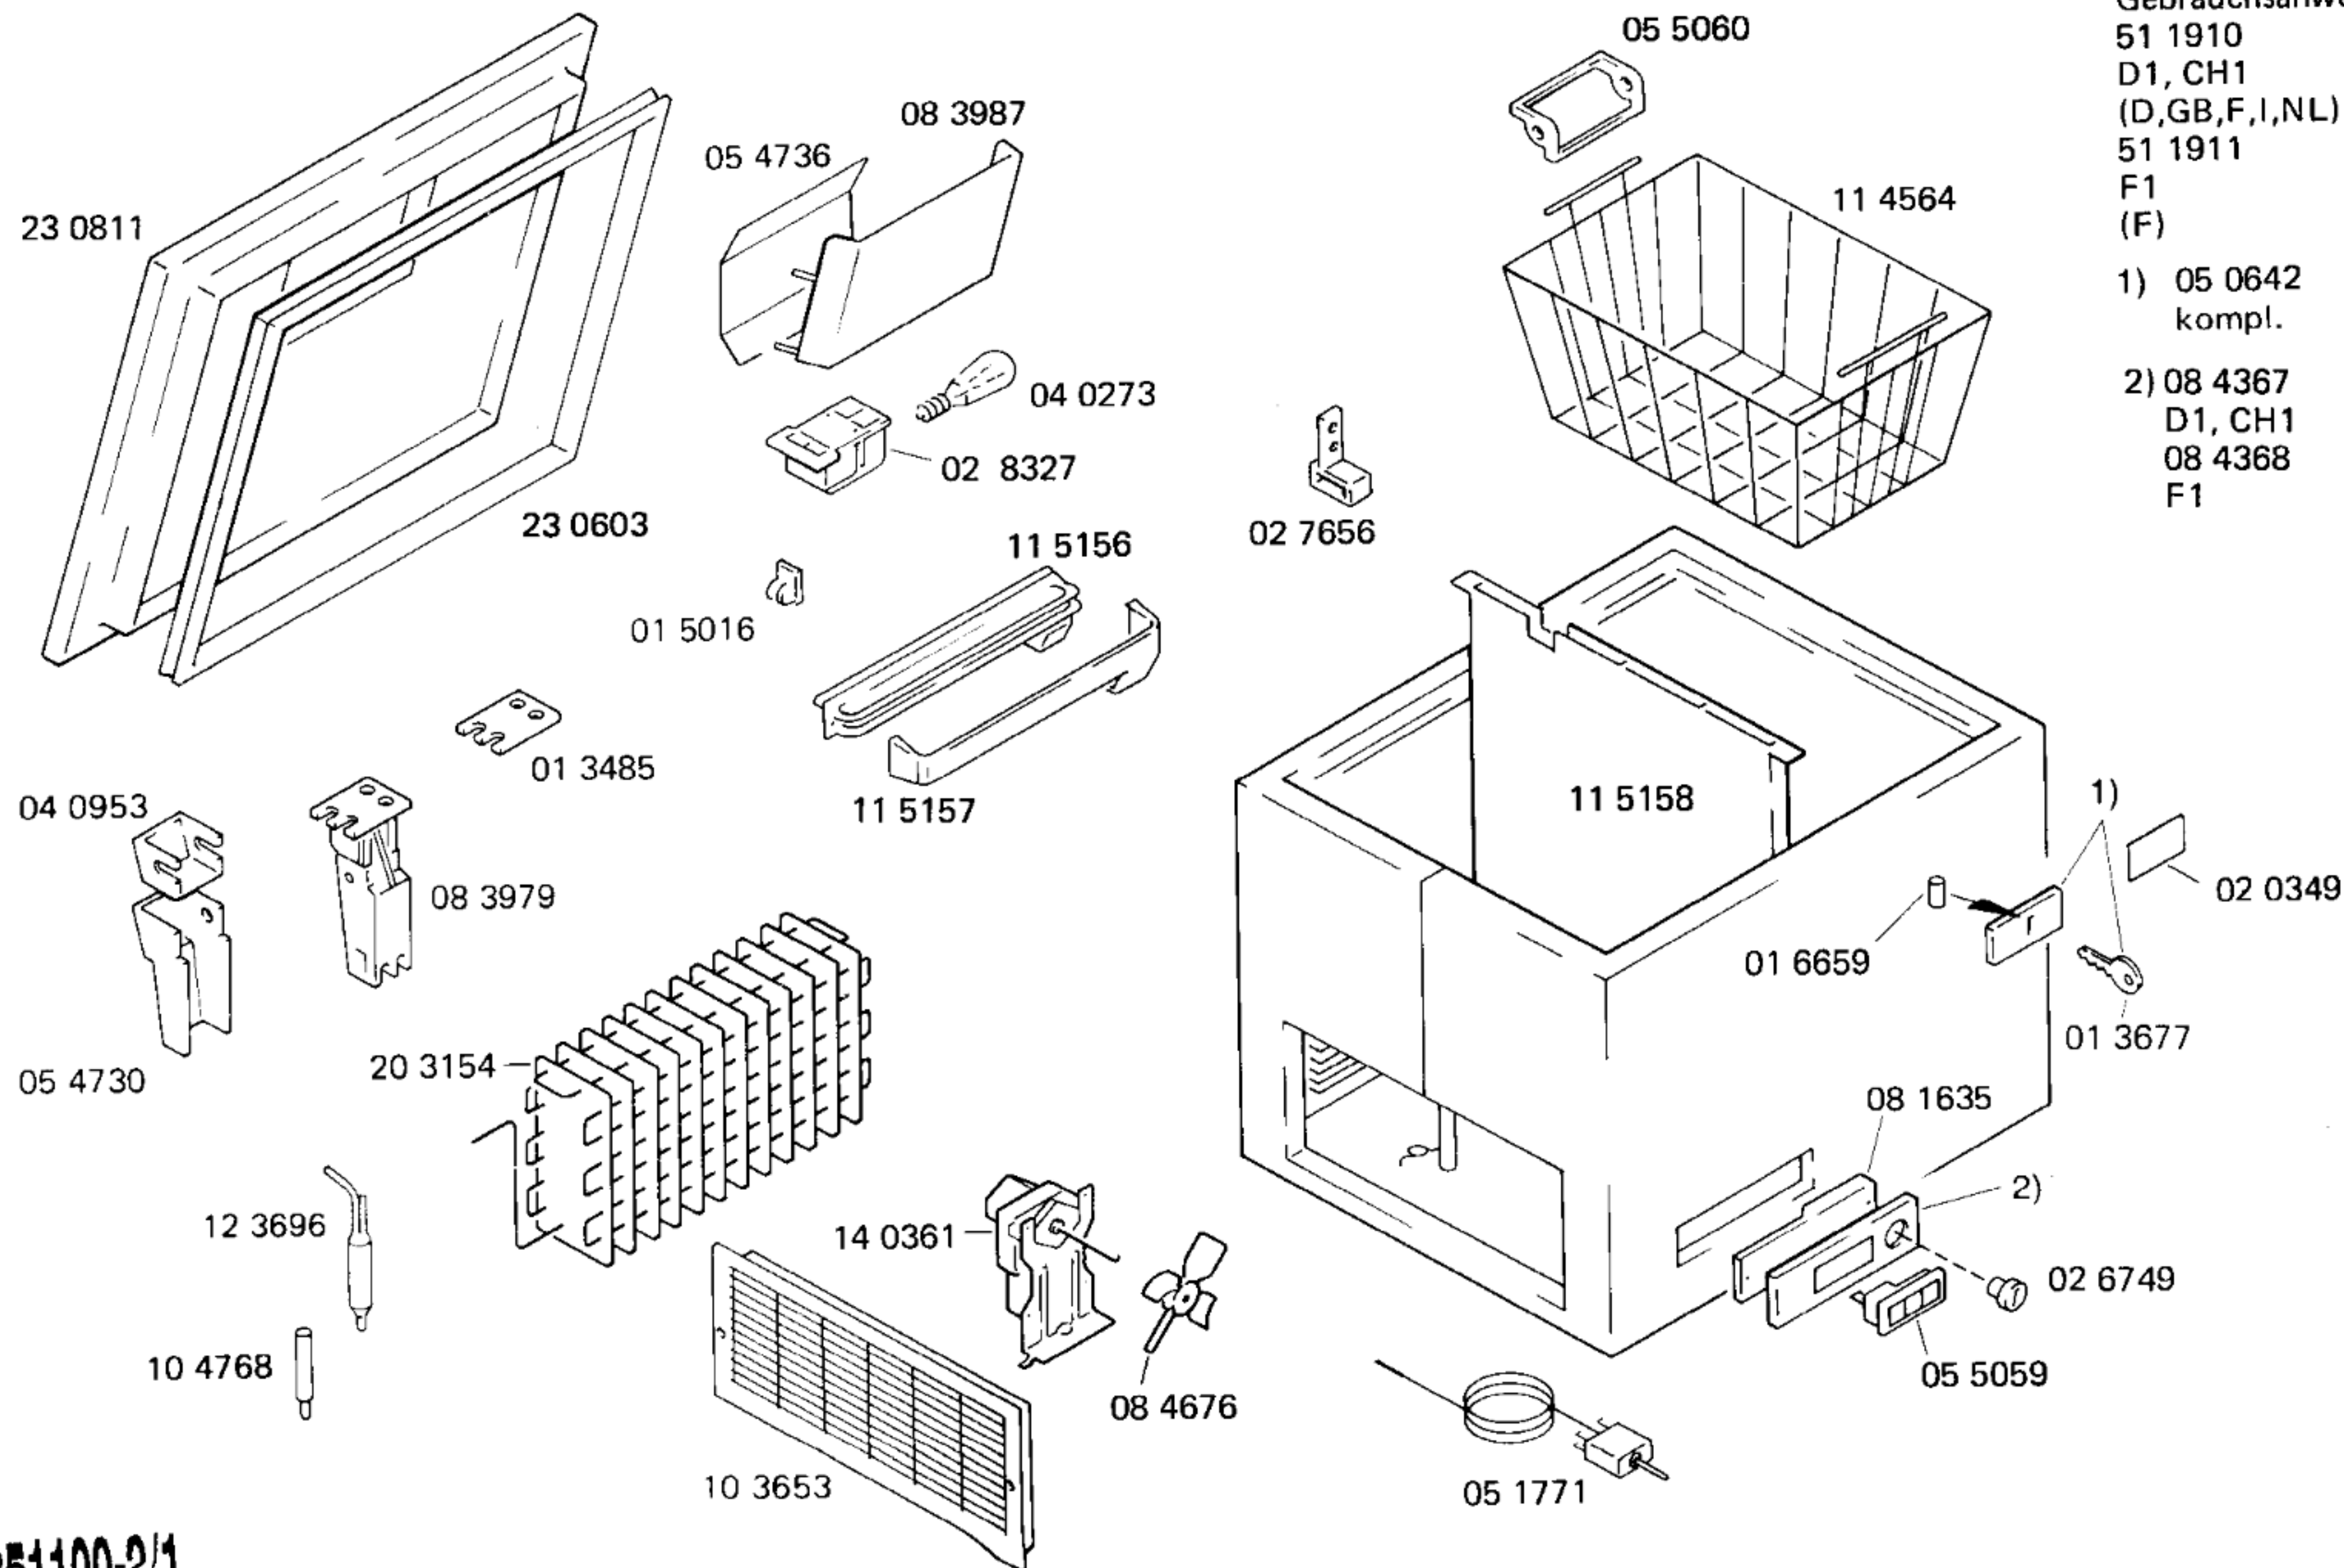


Gebrauchsanweisungen

51 1910
D1, CH1
(D,GB,F,I,NL)
51 1911
F1
(F)

1) 05 0642
kompl.

2) 08 4367
D1, CH1
08 4368
F1

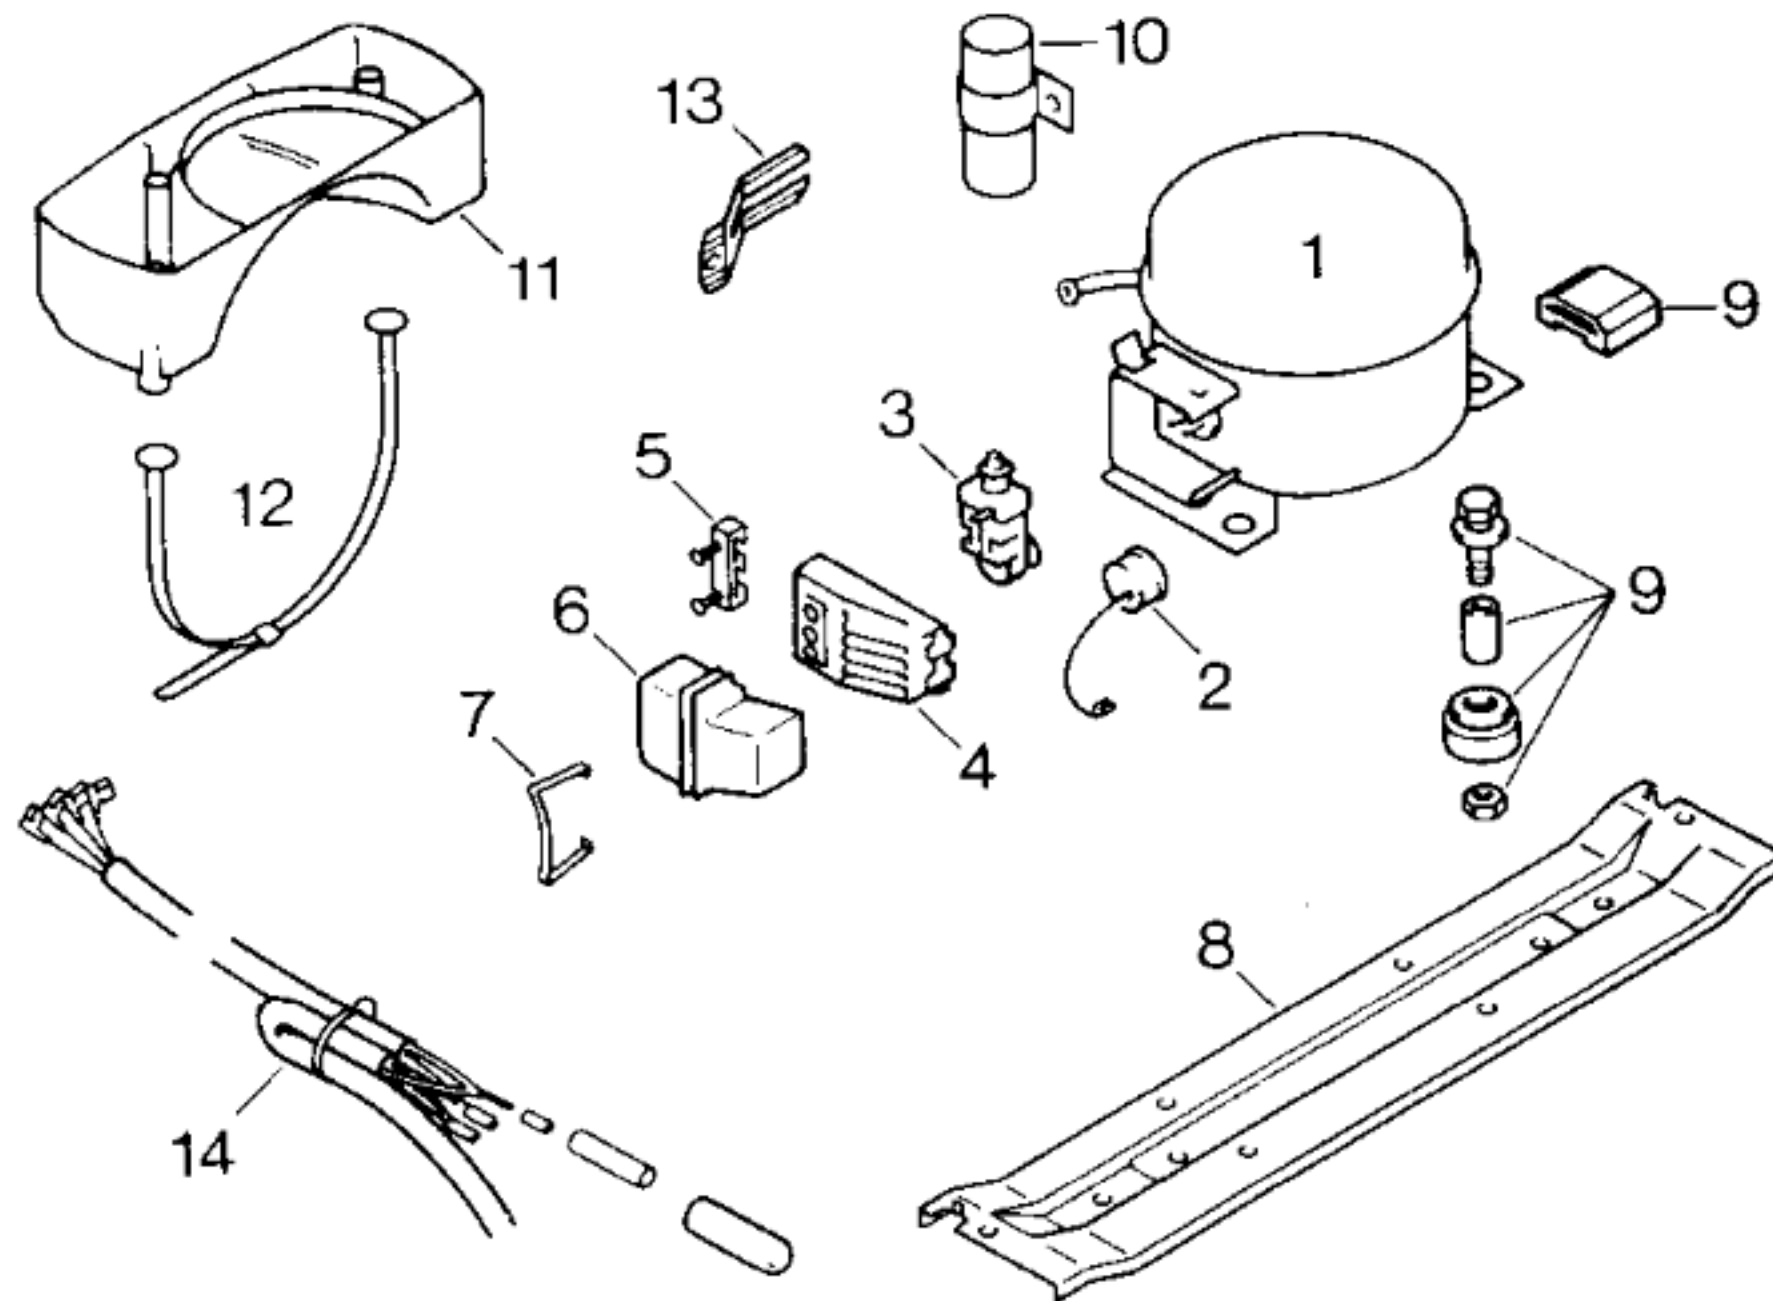

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita	Matsushita		
Typ/Type		FN 91 Q 17 G	FN 110 Q 22 G		
Förderleistung/Delivery/Débit	l/h	V 1633	V 1955		
Anlaufstrom/Starting current/Cour. de démarrage	A	11,7	12,3		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	8,6	7,2		
	Hi/aux Ω	30,5	11,7		
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K 54			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	- 24	- 18		
Valeurs de commutation	„aus“	- 31	- 24		
(„abtauen“ od.)	„alarm“	- 19	- 14		
Füllmenge/Fill.quantity/Charge	R12	g	200		
Anschlußwert/Conn.load/Puiss. connectée		W	190		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
Leistung/Power/Puissance	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω	155			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				

Pos.	D1, CH1	F1		
	Matsushita	Matsushita		
1	14 0359	14 0360		
2				
3	02 6742	02 6746		
4				
5				
6	05 4733			
7	02 6731			
8				
9	05 0166			
10				
11				
12				
13				
14				