


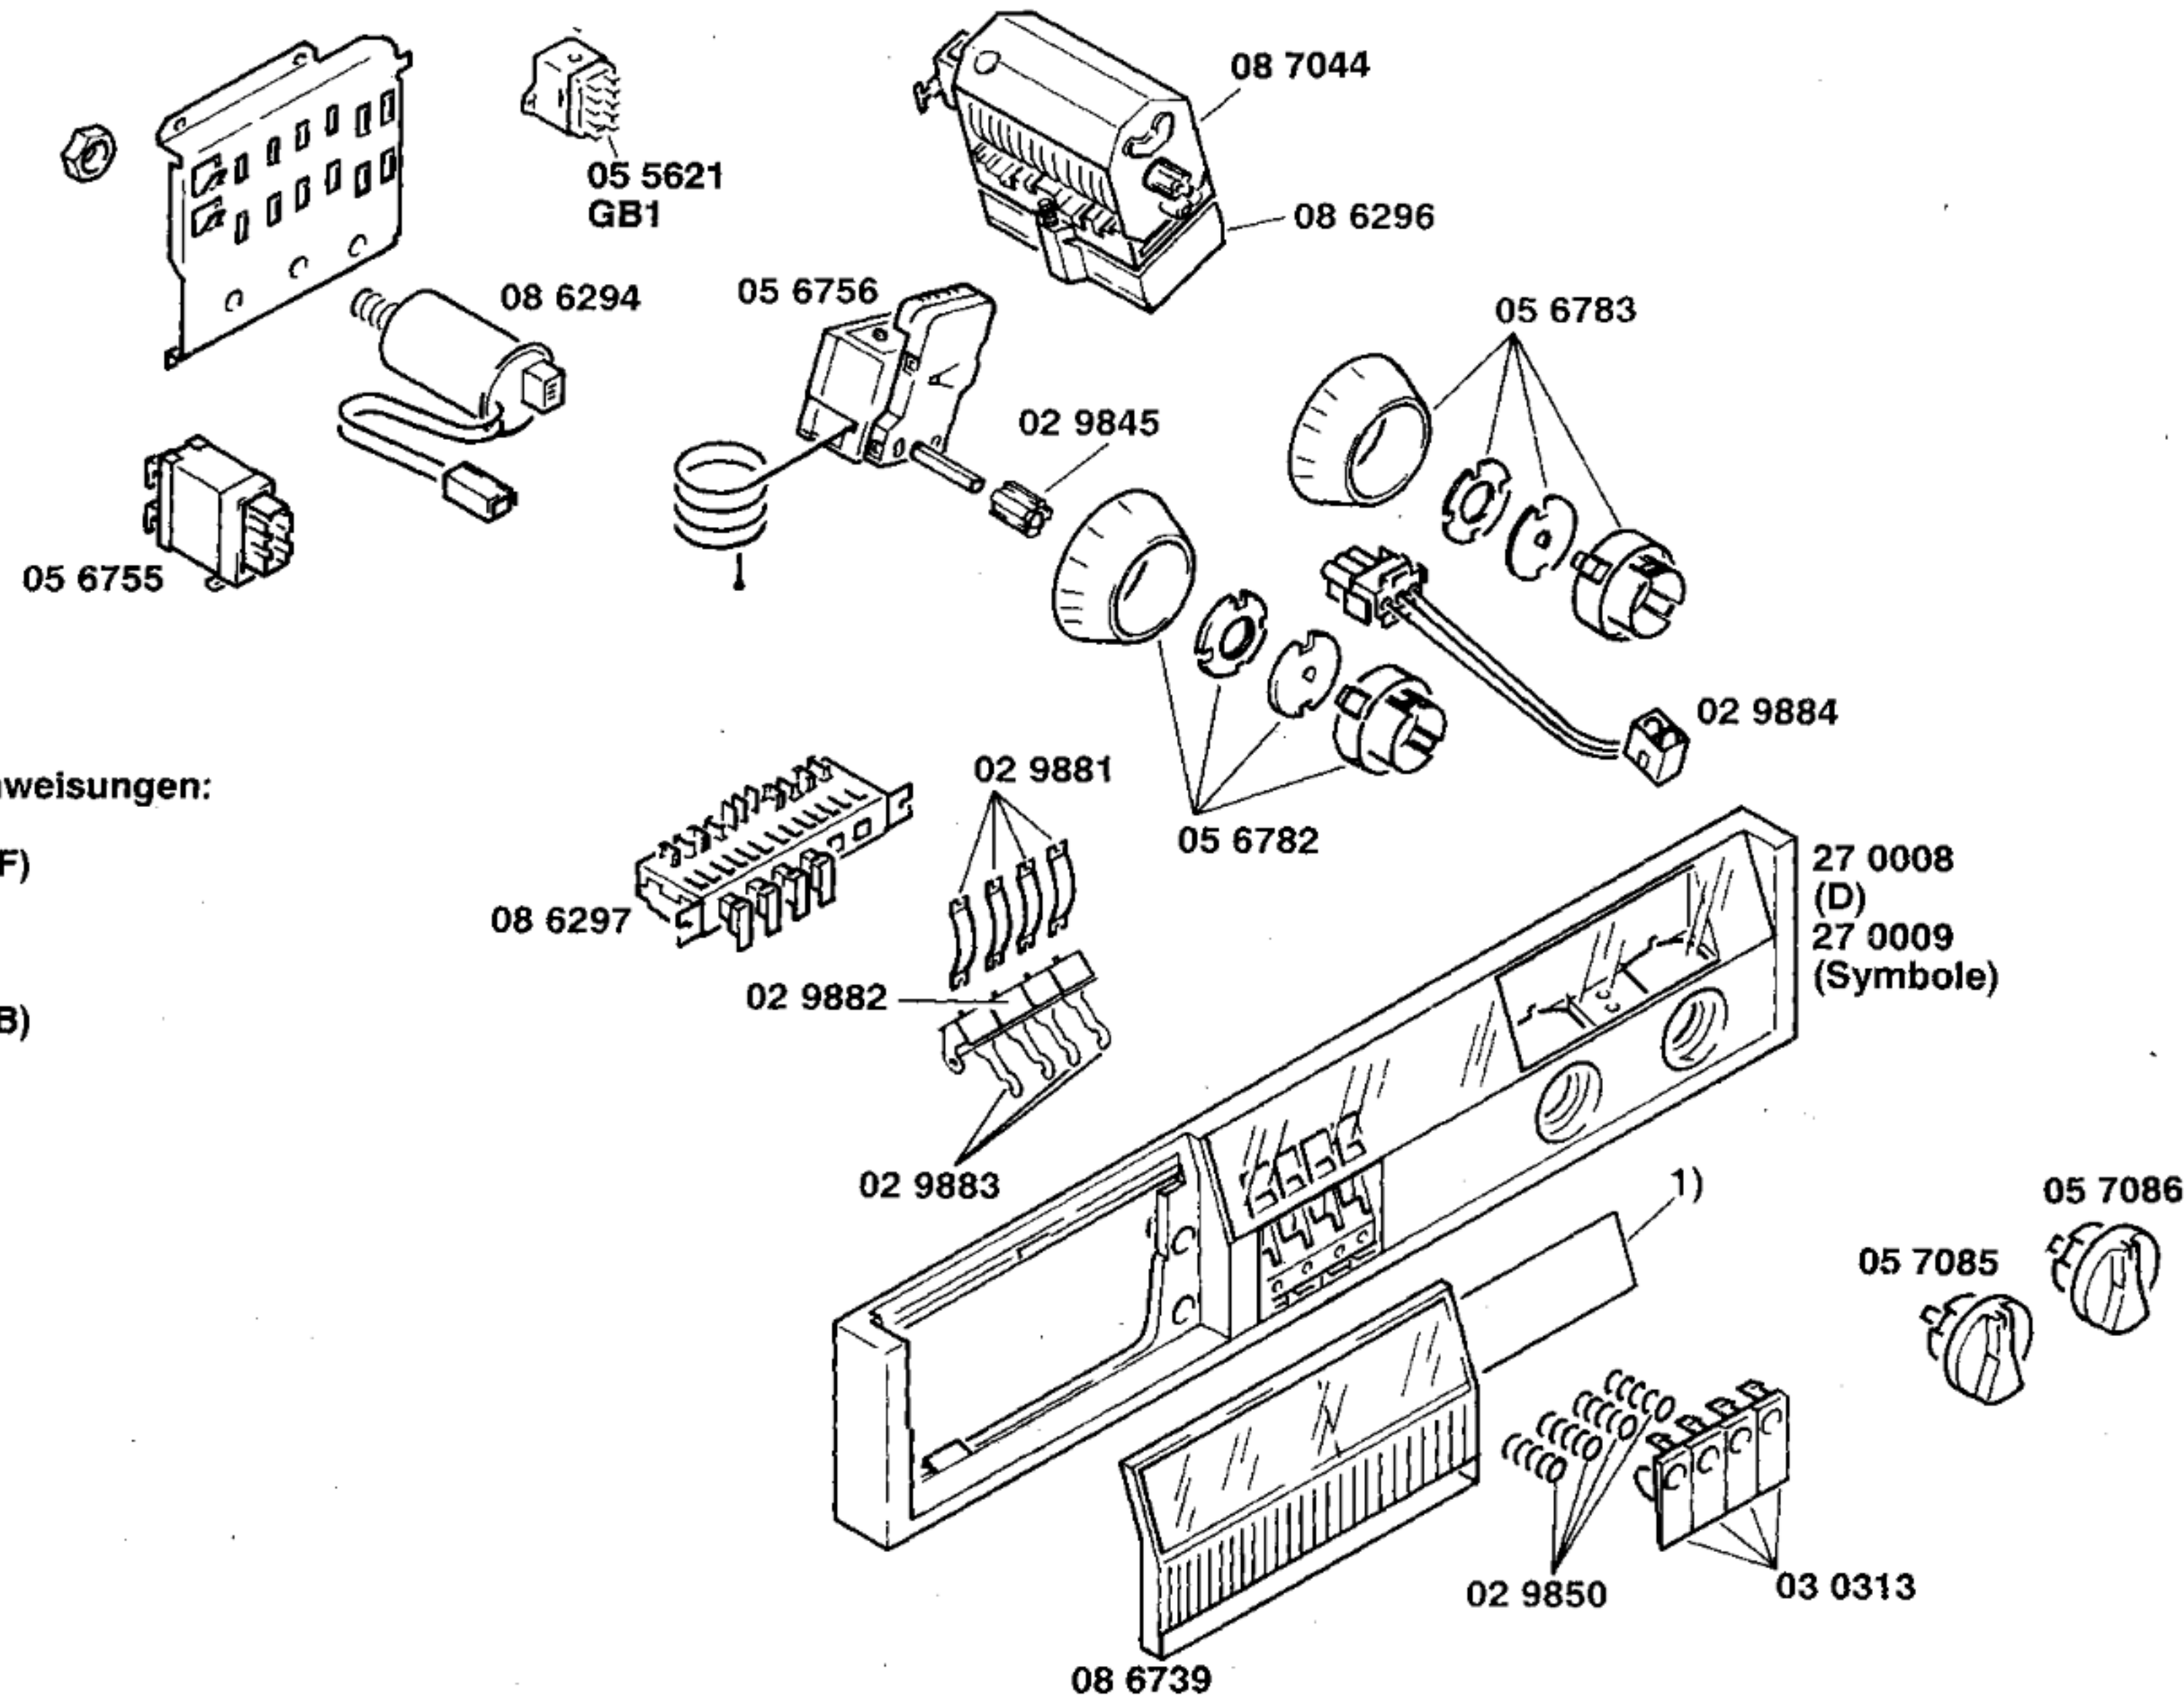

Aufstellanweisungen:

51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

- 1) 08 6336
(D)
08 6337
(NL)
08 6338
(N)
08 6339
(SF)
08 6340
(S)
08 6341
(E)
08 6342
(F)
08 6343
(DK)
08 6344
(I)
08 6686
(TR,YU,E,GR)
08 6690
(GB)

Gebrauchsanweisungen

51 3566
(D,I,S,N,SF)
51 3567
(S,DK)
51 3568
(NL,F,E,GB)
Programmtabellen:
51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)


**BOSCH**

WFK6010-WFK6010/02-D1
WFK6010-WFK6010FG/02-FG1
WFK6010-WFK6010CH/02-CH1

WFK6010-WFK6010DS/02-DS1
WFK6010-WFK6010GB/02-GB1
WFK6010-WFK6010DK/01-DK1

WASCHGERÄTE
Waschvollautomaten

Mat. - Nr. - Konstante
3740

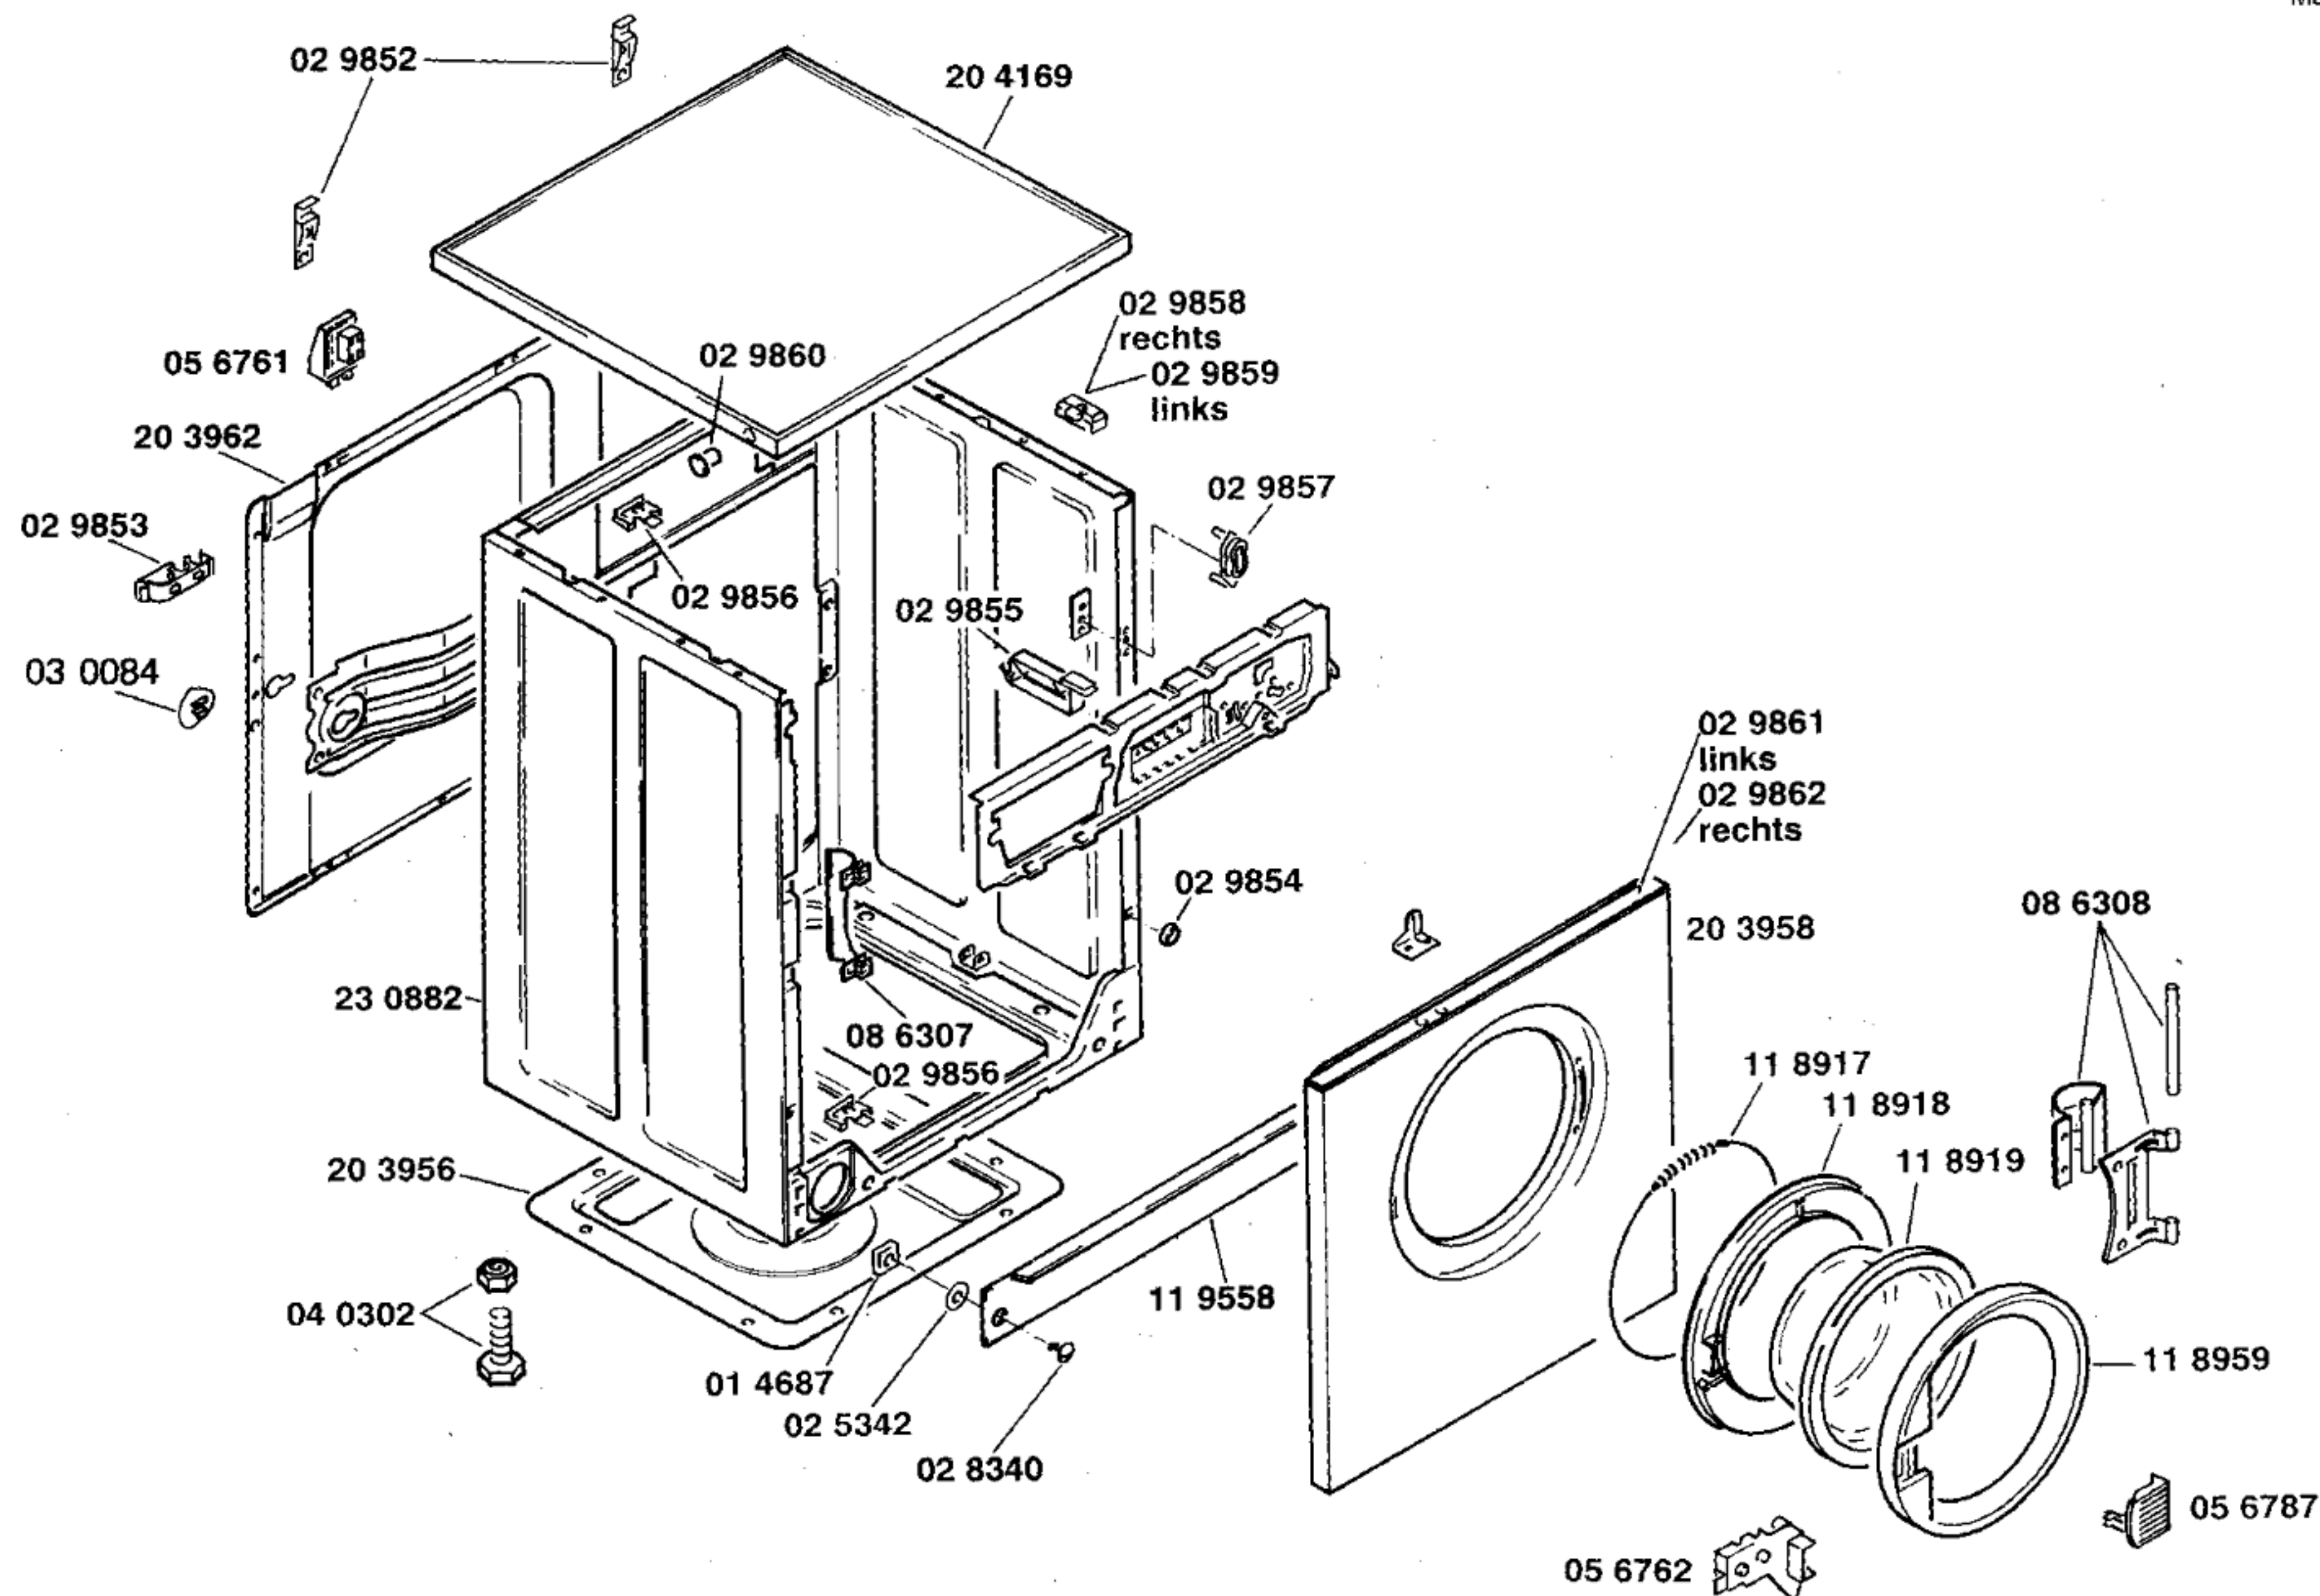

**BOSCH**

WFK6010-WFK6010/02-D1
 WFK6010-WFK6010FG/02-FG1
 WFK6010-WFK6010CH/02-CH1

WFK6010-WFK6010DS/02-DS1
 WFK6010-WFK6010GB/02-GB1
 WFK6010-WFK6010DK/01-DK1

WASCHGERÄTE
 Waschvollautomaten

Mat. - Nr. - Konstante
 3740

- 1) 27 0443
 D1, FG1, CH1, DS1,
 DK1
 27 0740
 GB1
 15 5272
 Triac-Motorleistung
- 2) 14 0469
 D1, FG1, CH1, DS1,
 DK1
 14 0498
 GB1

