


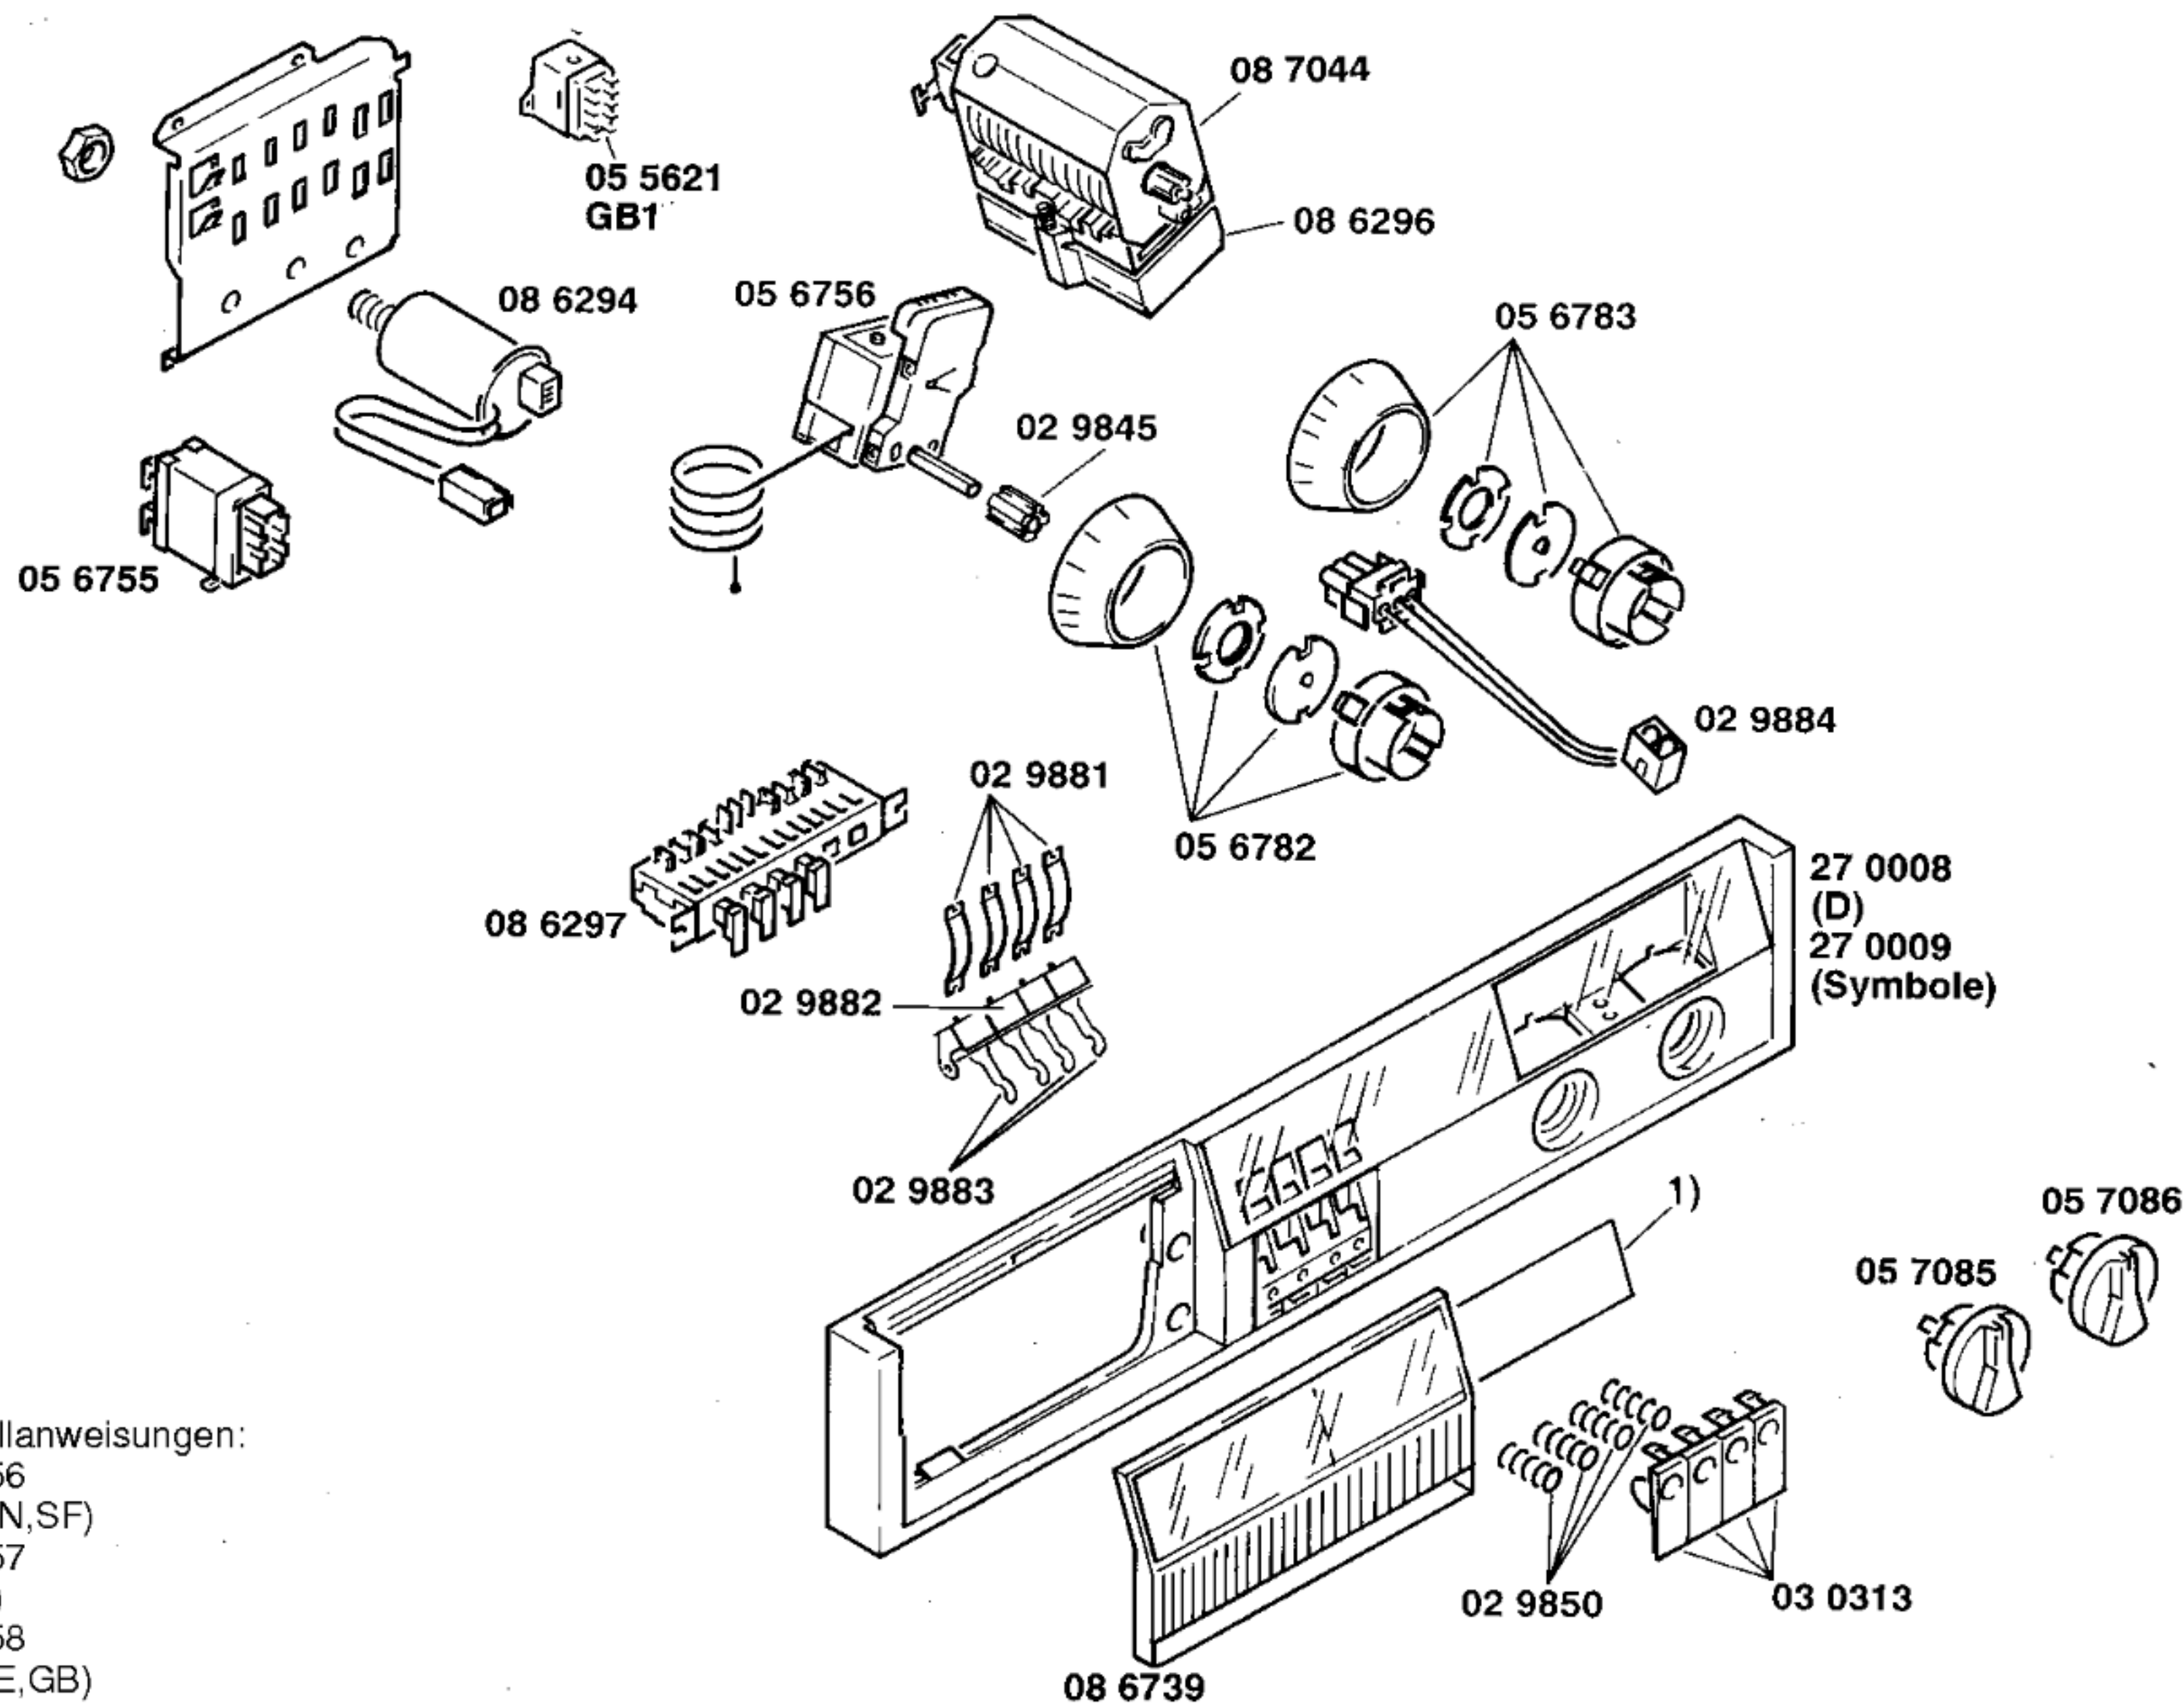

Aufstellanweisungen:

51 3556  
(D,I,S,N,SF)  
51 3557  
(S,DK)  
51 3558  
(NL,F,E,GB)

Ident – Nummern – Konstante  
3740 . . . . .

1) 08 6336  
(D)  
08 6337  
(NL)  
08 6338  
(N)  
08 6339  
(SF)  
08 6340  
(S)  
08 6341  
(E)  
08 6342  
(F)  
08 6343  
(DK)  
08 6344  
(I)  
08 6686  
(TR,YU,E,GB)  
08 6690  
(GB)

Gebrauchsanweisungen:


51 3566  
(D,I,S,N,SF)  
51 3567  
(S,DK)  
51 3568  
(NL,F,E,GB)  
Programmtabellen:  
51 3552  
(D)  
51 3553  
(I,S,N,SF)  
51 3554  
(S,DK)  
51 3555  
(NL,F,E,GB)

**BOSCH**

WFK6010-WFK6010/03-D1  
WFK6010-WFK6010FG/03-FG1  
WFK6010-WFK6010CH/03-CH1  
WFK6010-WFK6010DS/03-DS1

WFK6010-WFK6010GB/03-GB1  
WFK6010-WFK6010DK/02-DK1

WASCHGERÄTE  
Waschvollautomaten

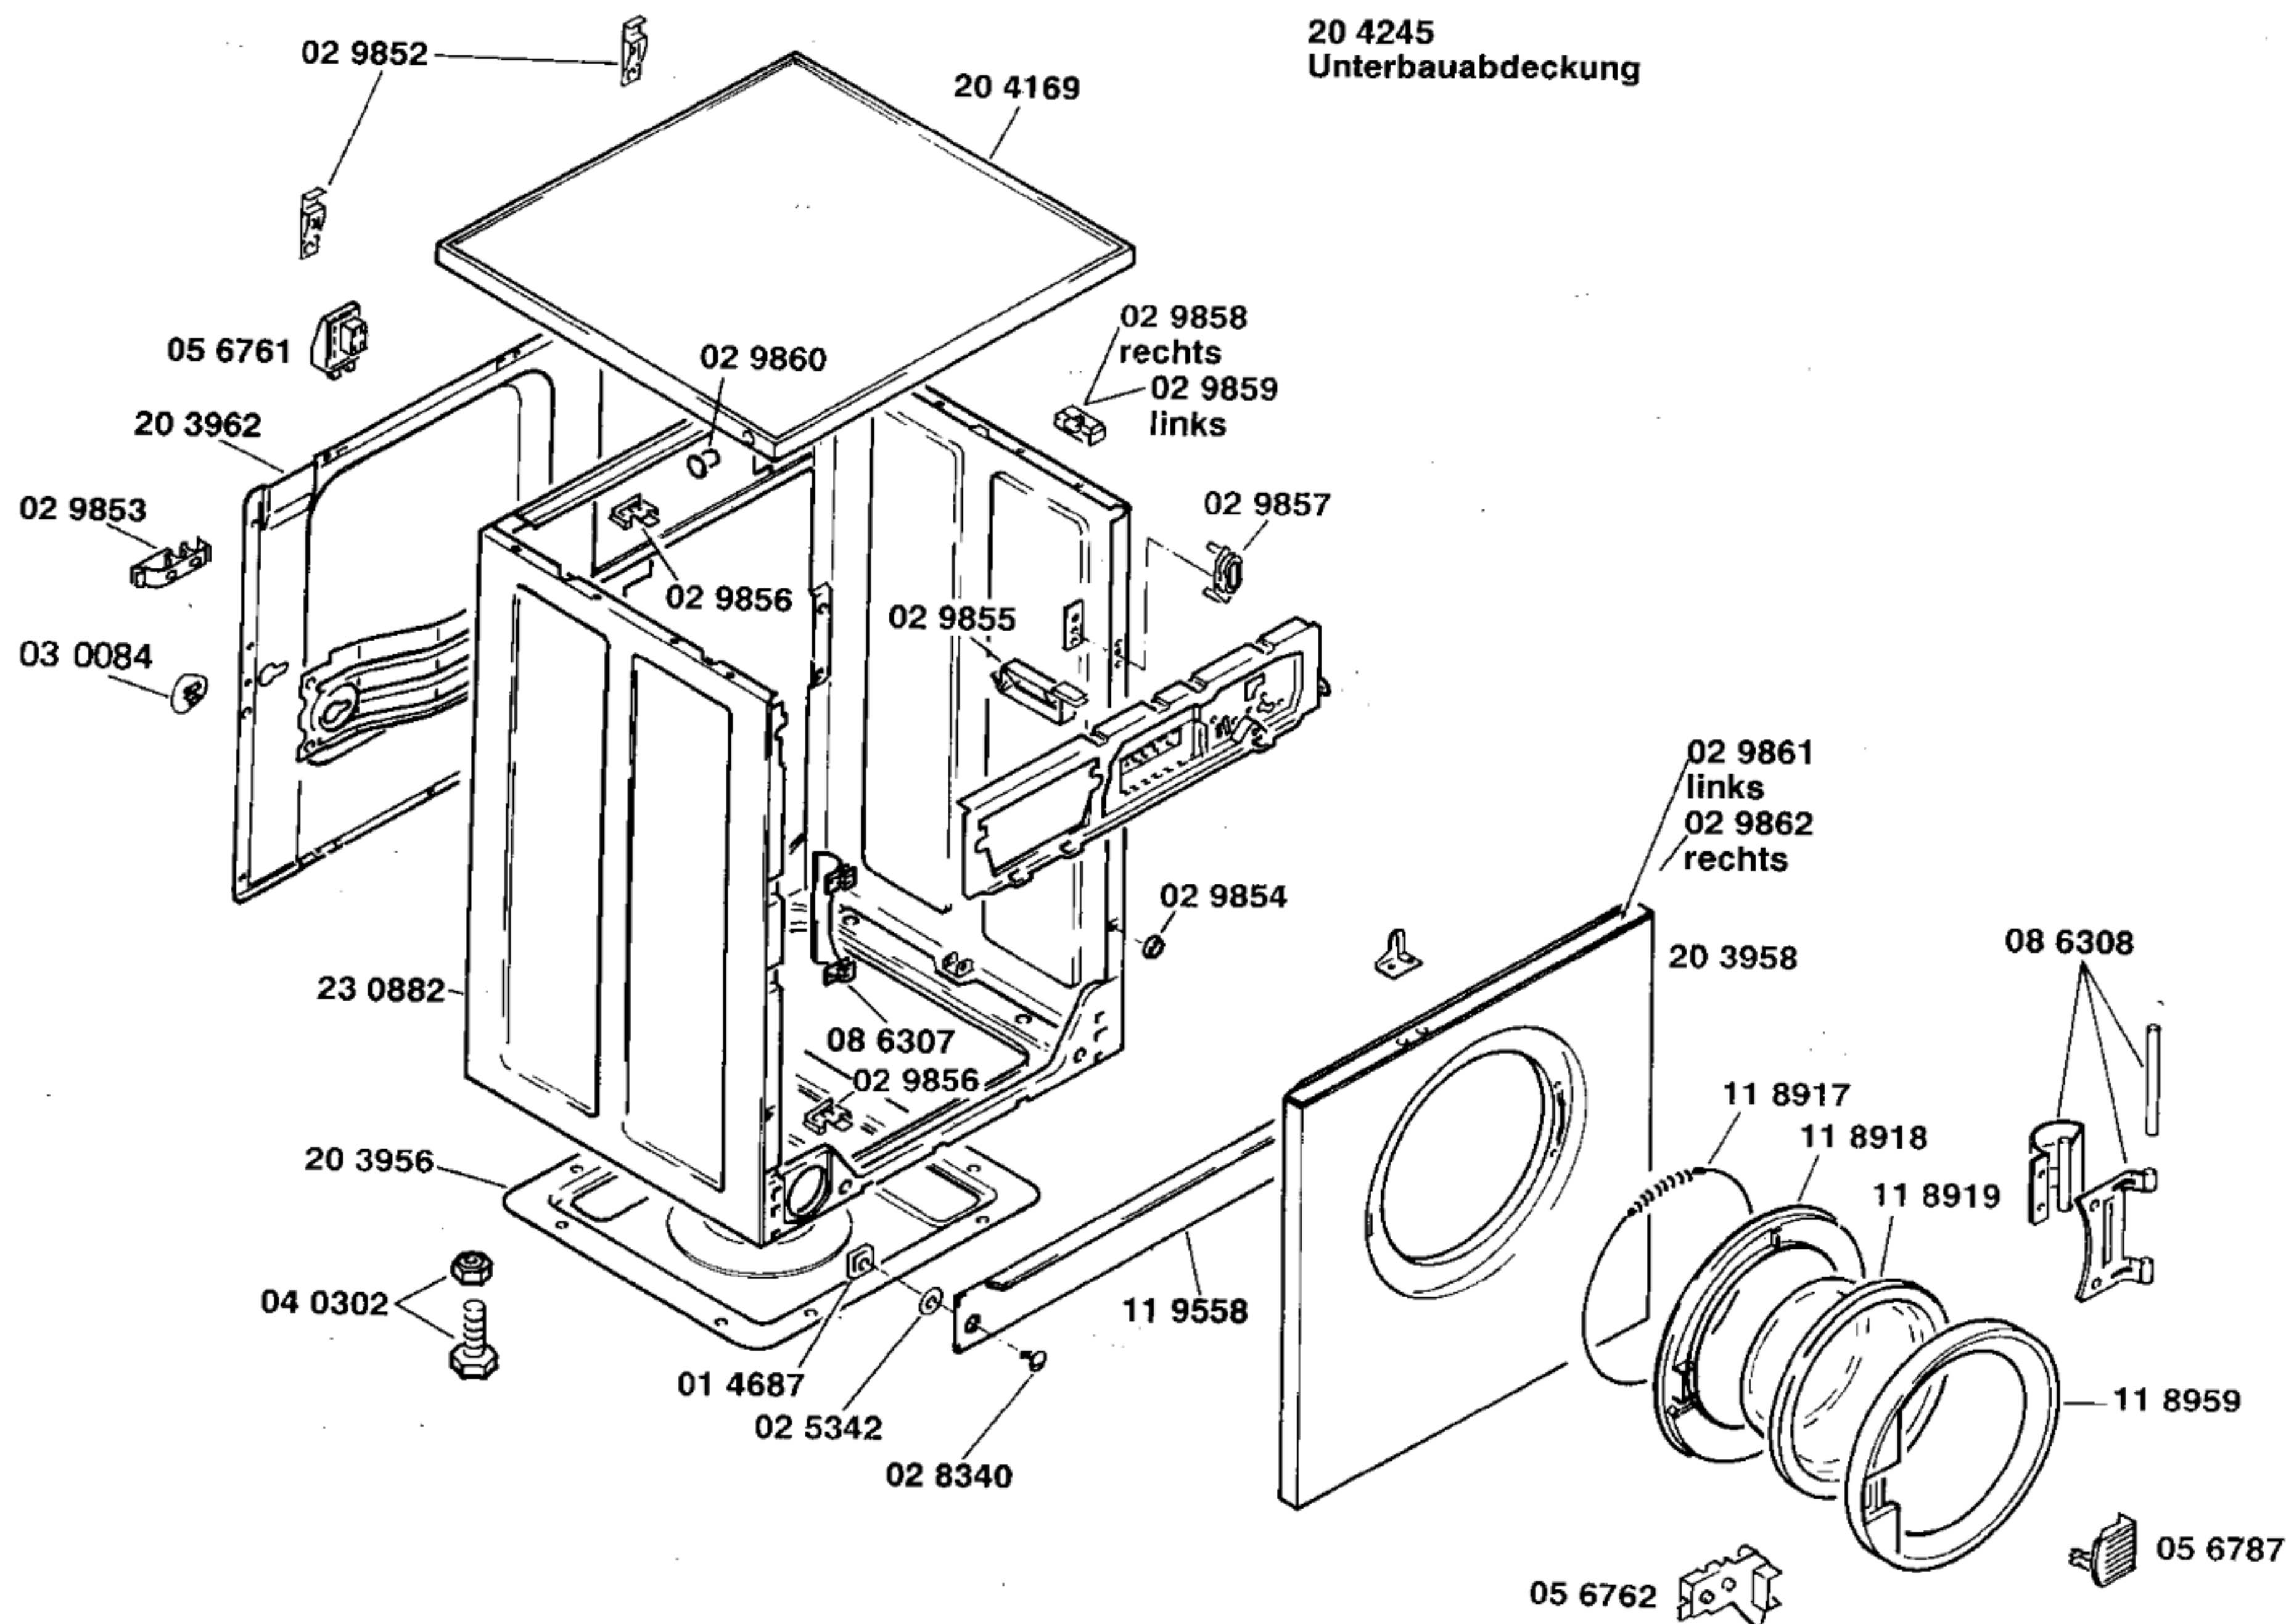

Ident - Nummern - Konstante  
3740 . . . . .

**BOSCH**

WFK6010-WFK6010/03-D1  
 WFK6010-WFK6010FG/03-FG1  
 WFK6010-WFK6010CH/03-CH1  
 WFK6010-WFK6010DS/03-DS1


WFK6010-WFK6010GB/03-GB1  
 WFK6010-WFK6010DK/02-DK1

WASCHGERÄTE  
 Waschvollautomaten

Ident - Nummern - Konstante  
 3740 . . . . .

1) 27 0443  
 D1,FG1,CH1,DS1,DK1  
 27 0740  
 GB1  
 15 5272  
 Triac-Motorleistung

2) 14 0522  
 D1,FG1,CH1,DK1,DS1  
 14 0523  
 GB1

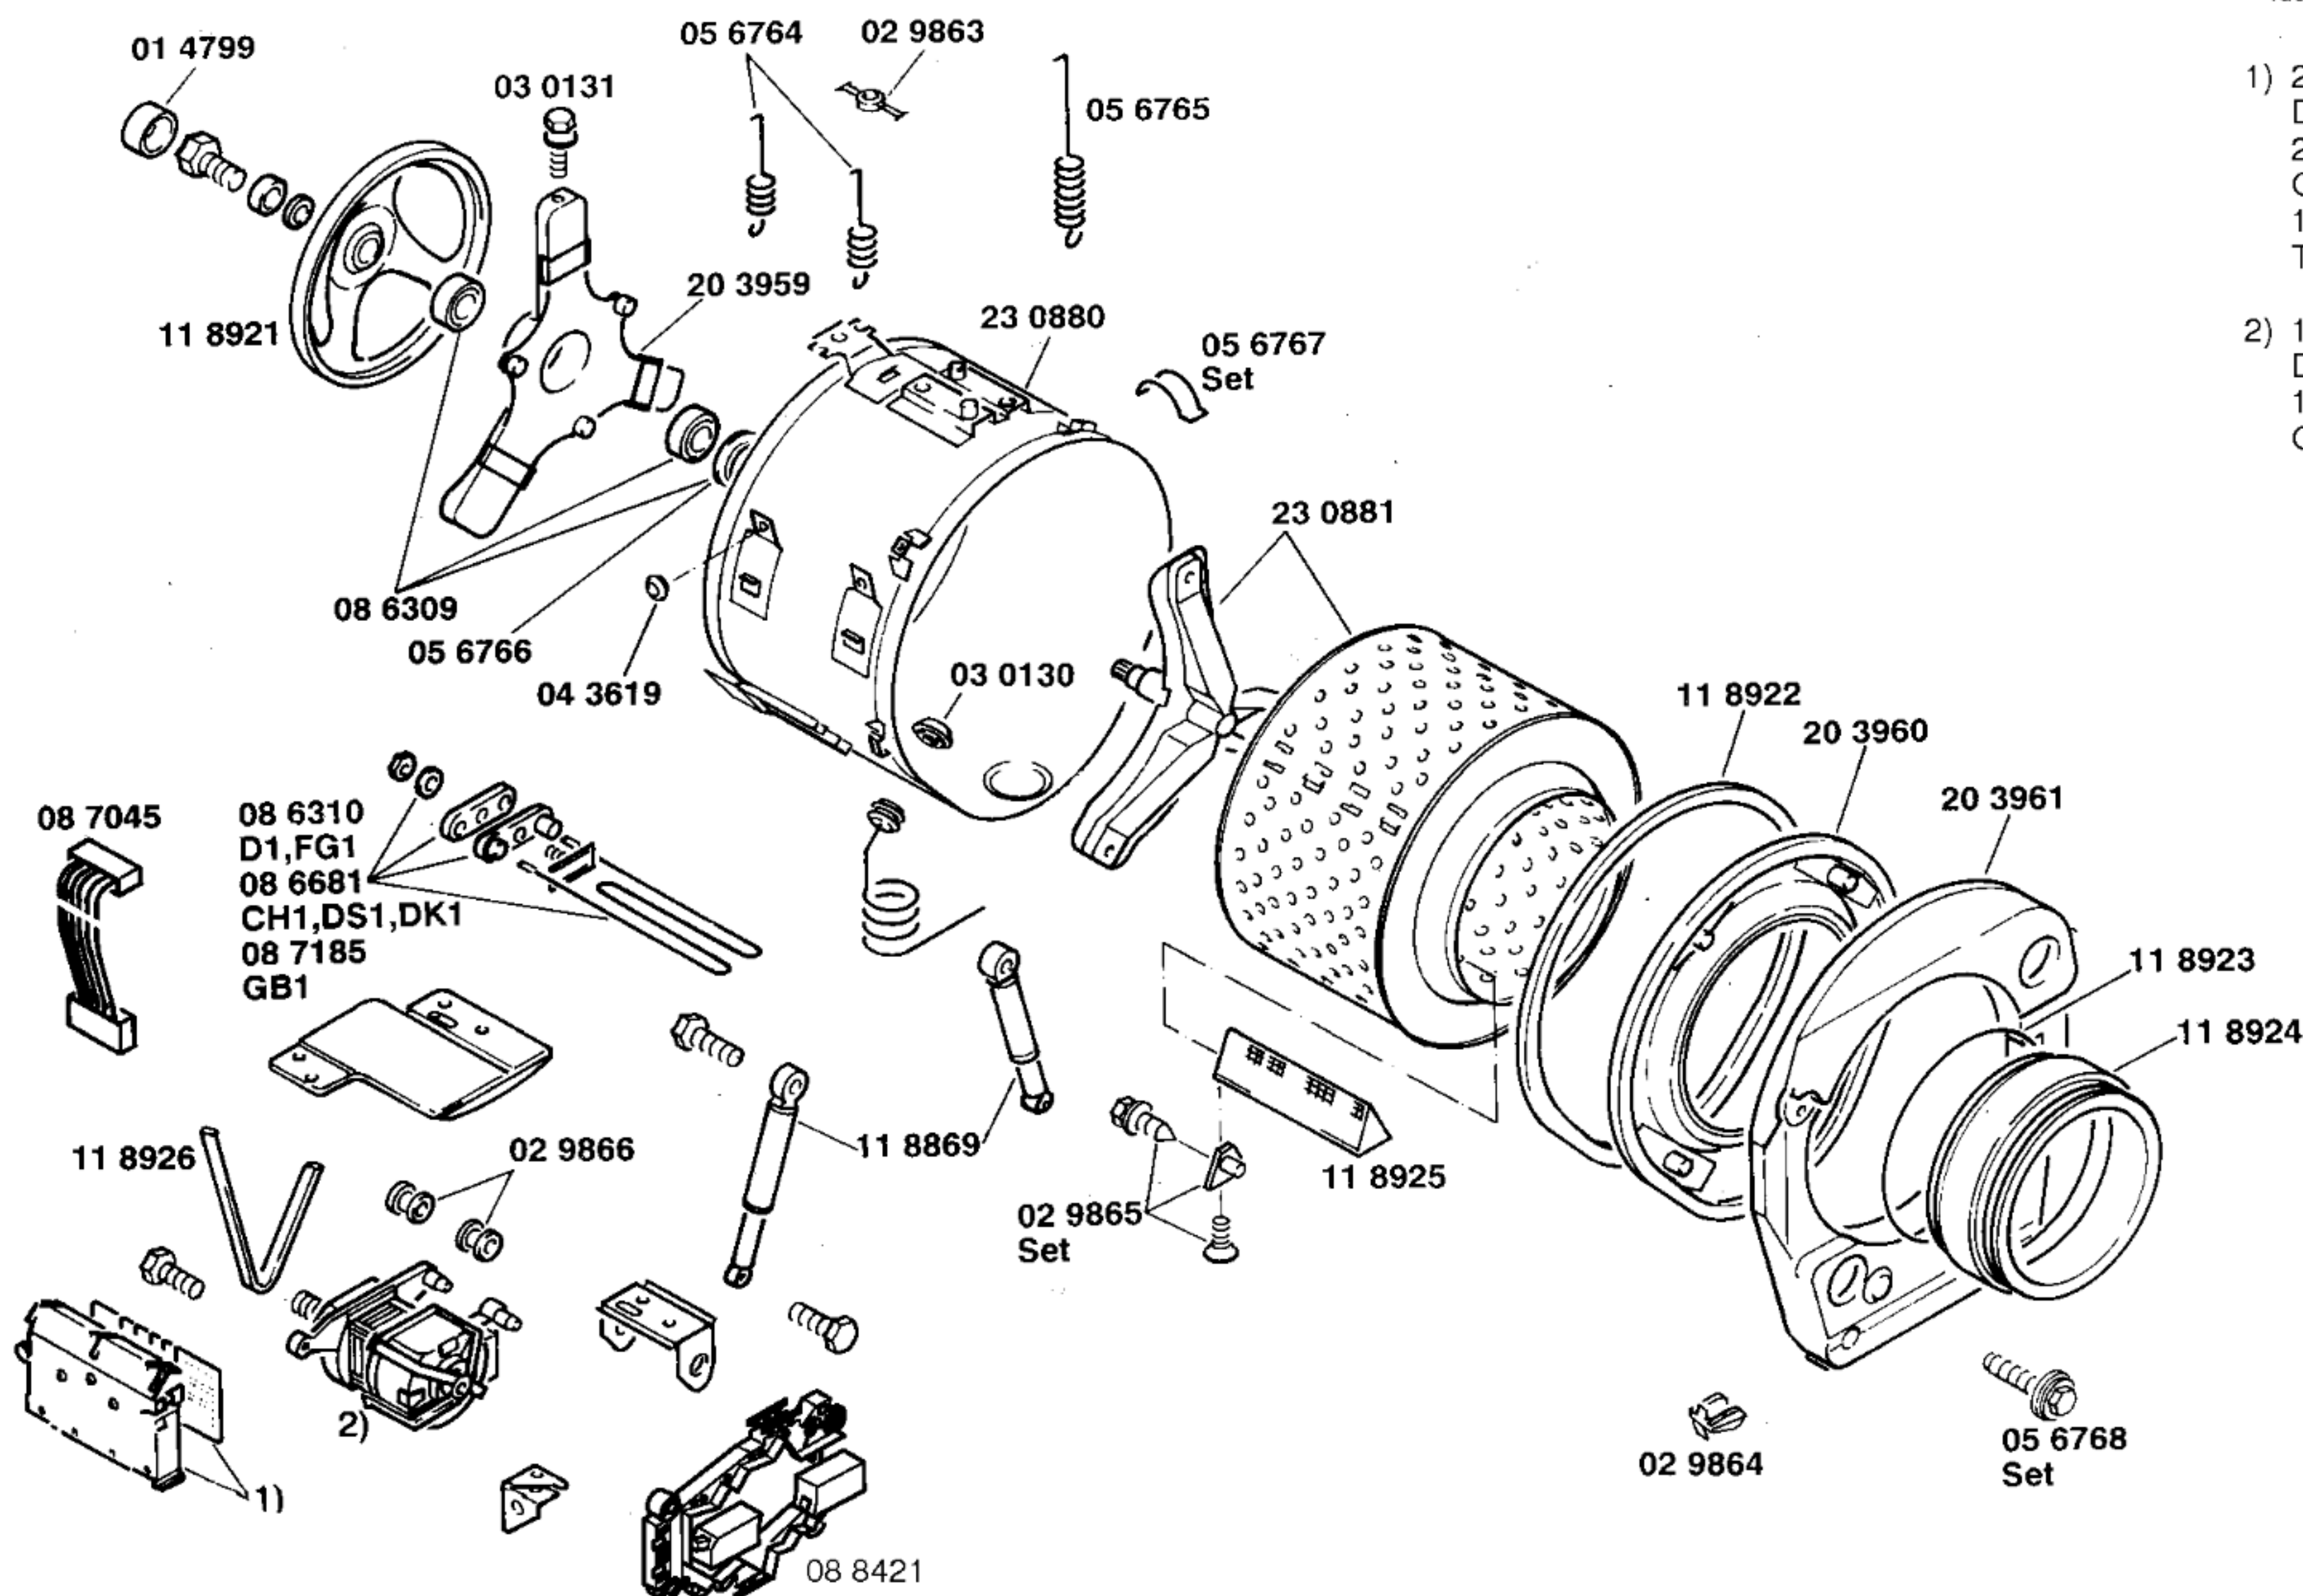

**BOSCH**

WFK6010-WFK6010/03-D1  
 WFK6010-WFK6010FG/03-FG1  
 WFK6010-WFK6010CH/03-CH1  
 WFK6010-WFK6010DS/03-DS1

WFK6010-WFK6010GB/03-GB1  
 WFK6010-WFK6010DK/02-DK1

WASCHGERÄTE  
 Waschvollautomaten

Ident - Nummern - Konstante  
 3740 . . . . .

