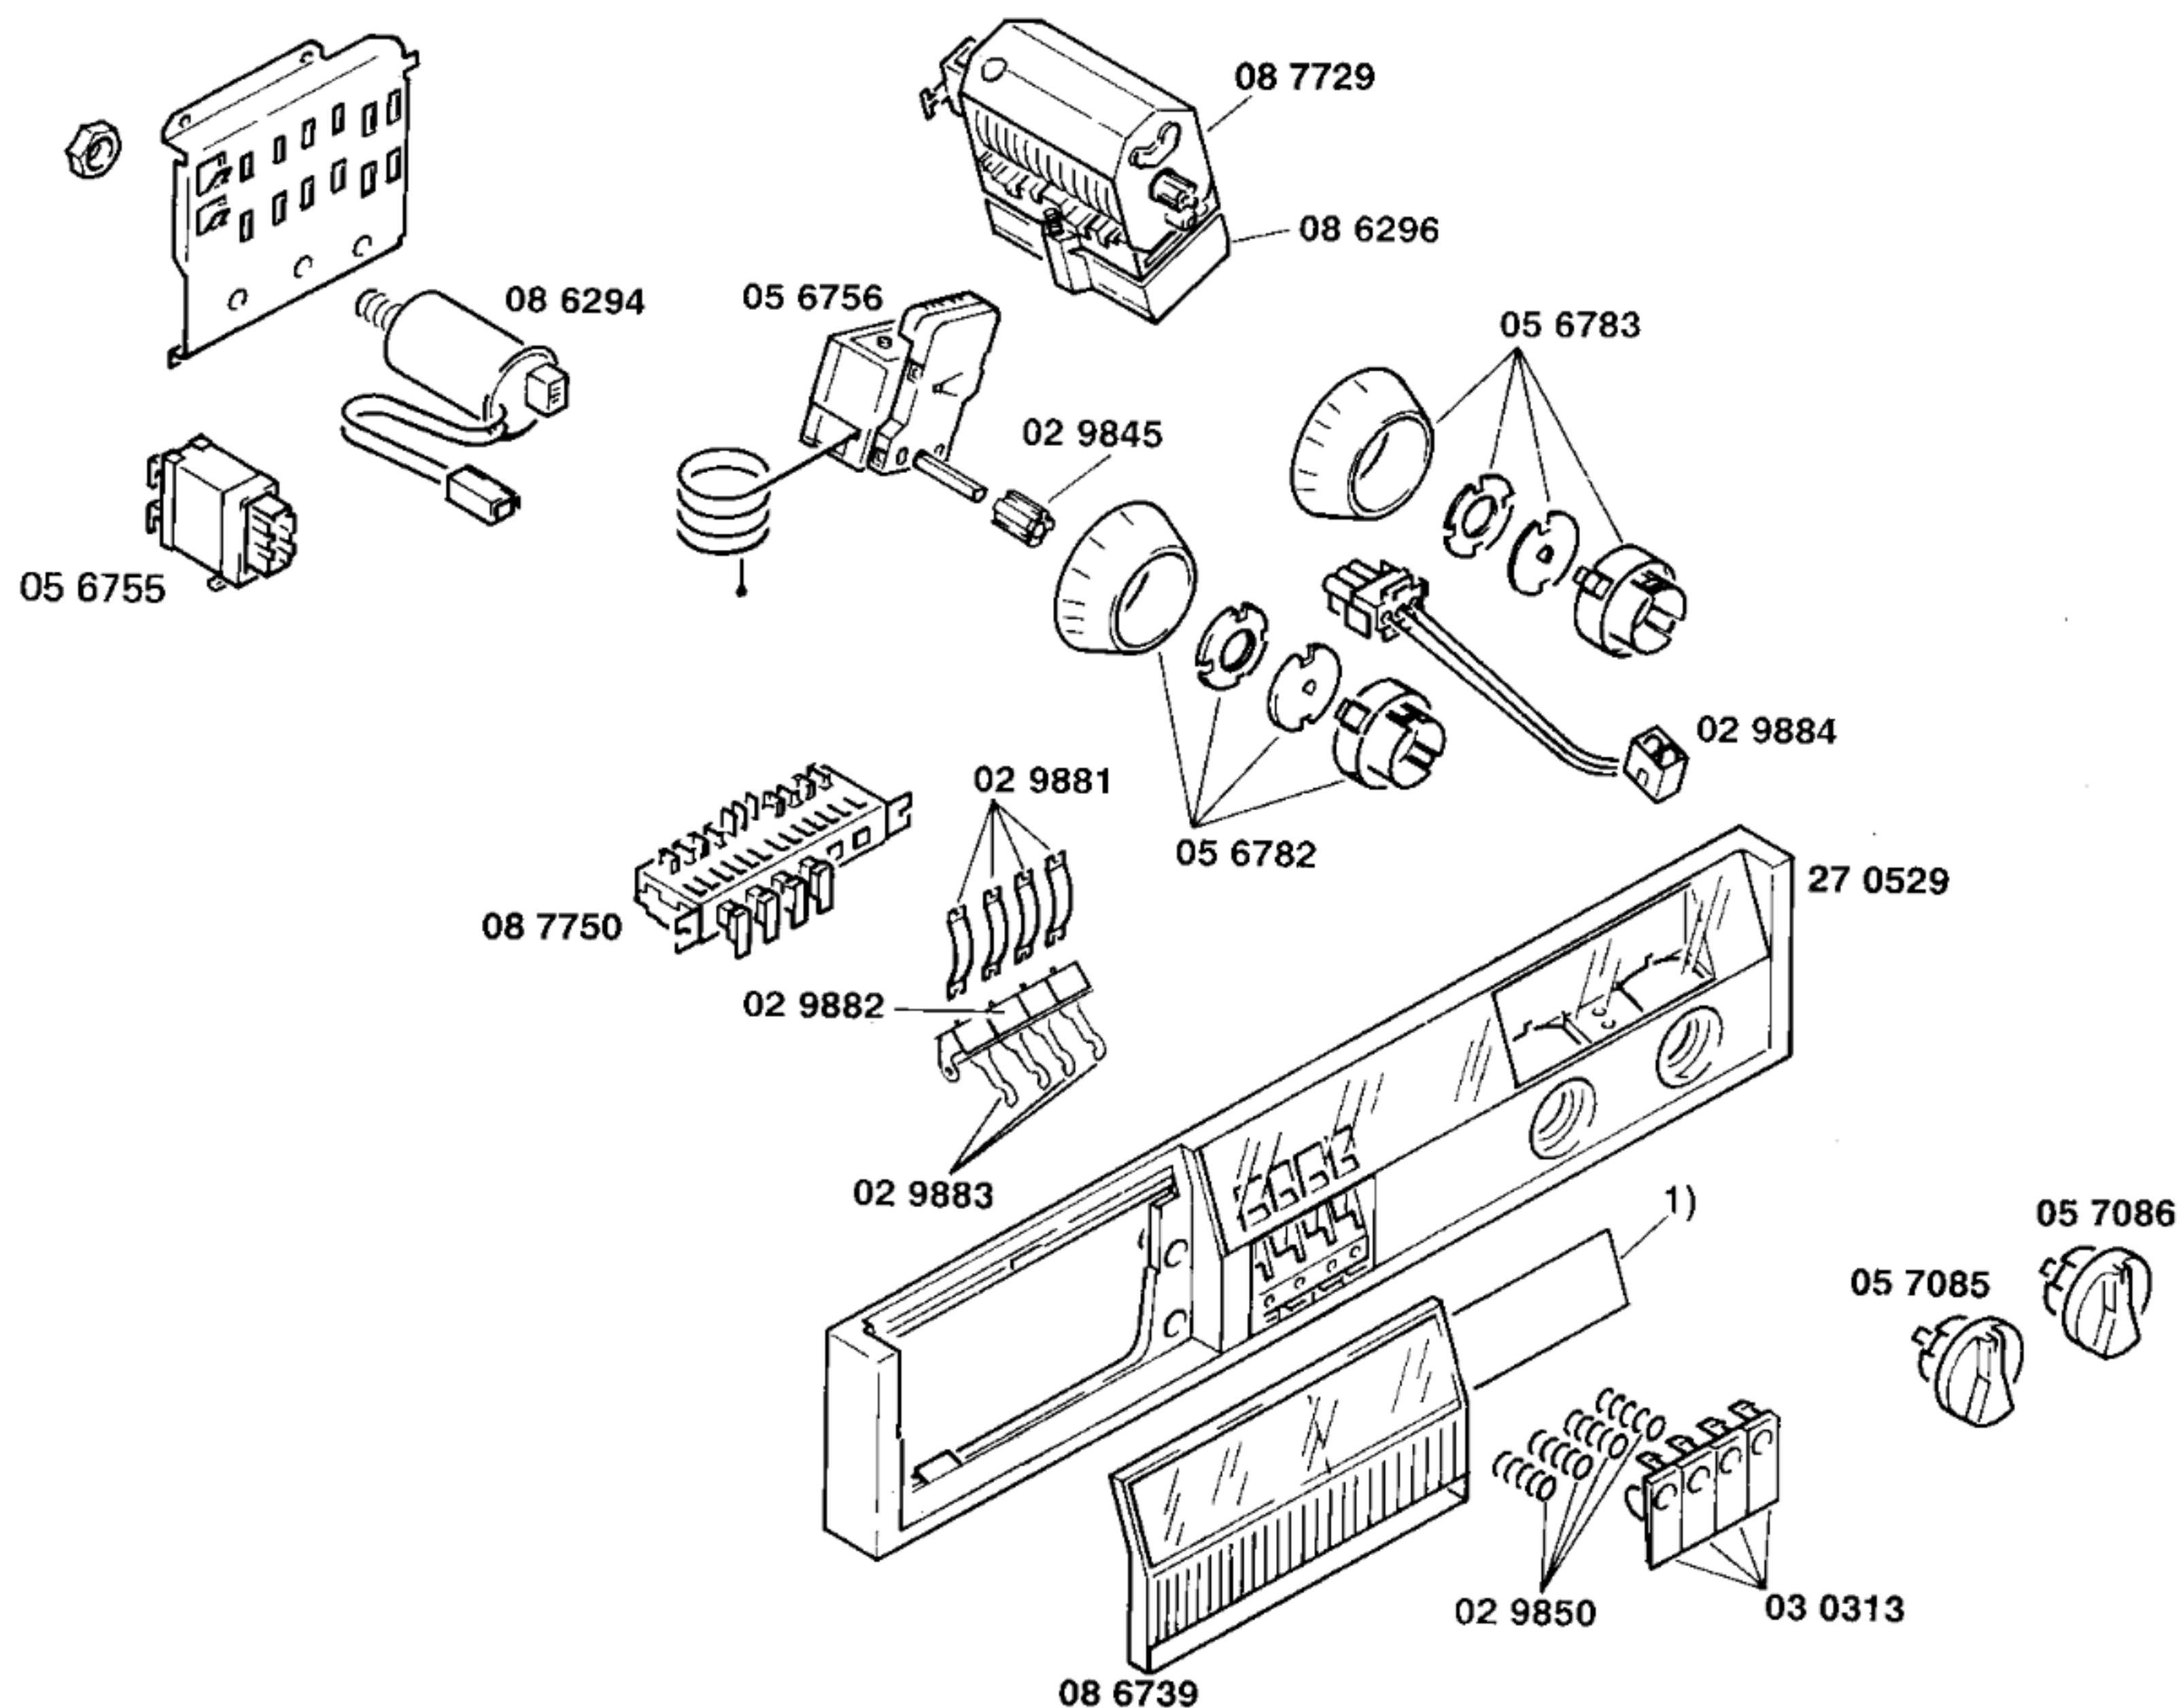


**BOSCH**WFK6310–WFK6310FG/04–FG1
WFK6310–WFK6310SI/04–SI1WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

- 1) 08 6336
(D)
08 6337
(NL)
08 6338
(N)
08 6339
(SF)
08 6340
(S)
08 6341
(E)
08 6342
(F)
08 6343
(DK)
08 6344
(I)
08 6686
(TR,YU,E,GB)
08 6690
(GB)

Gebrauchsanweisungen:

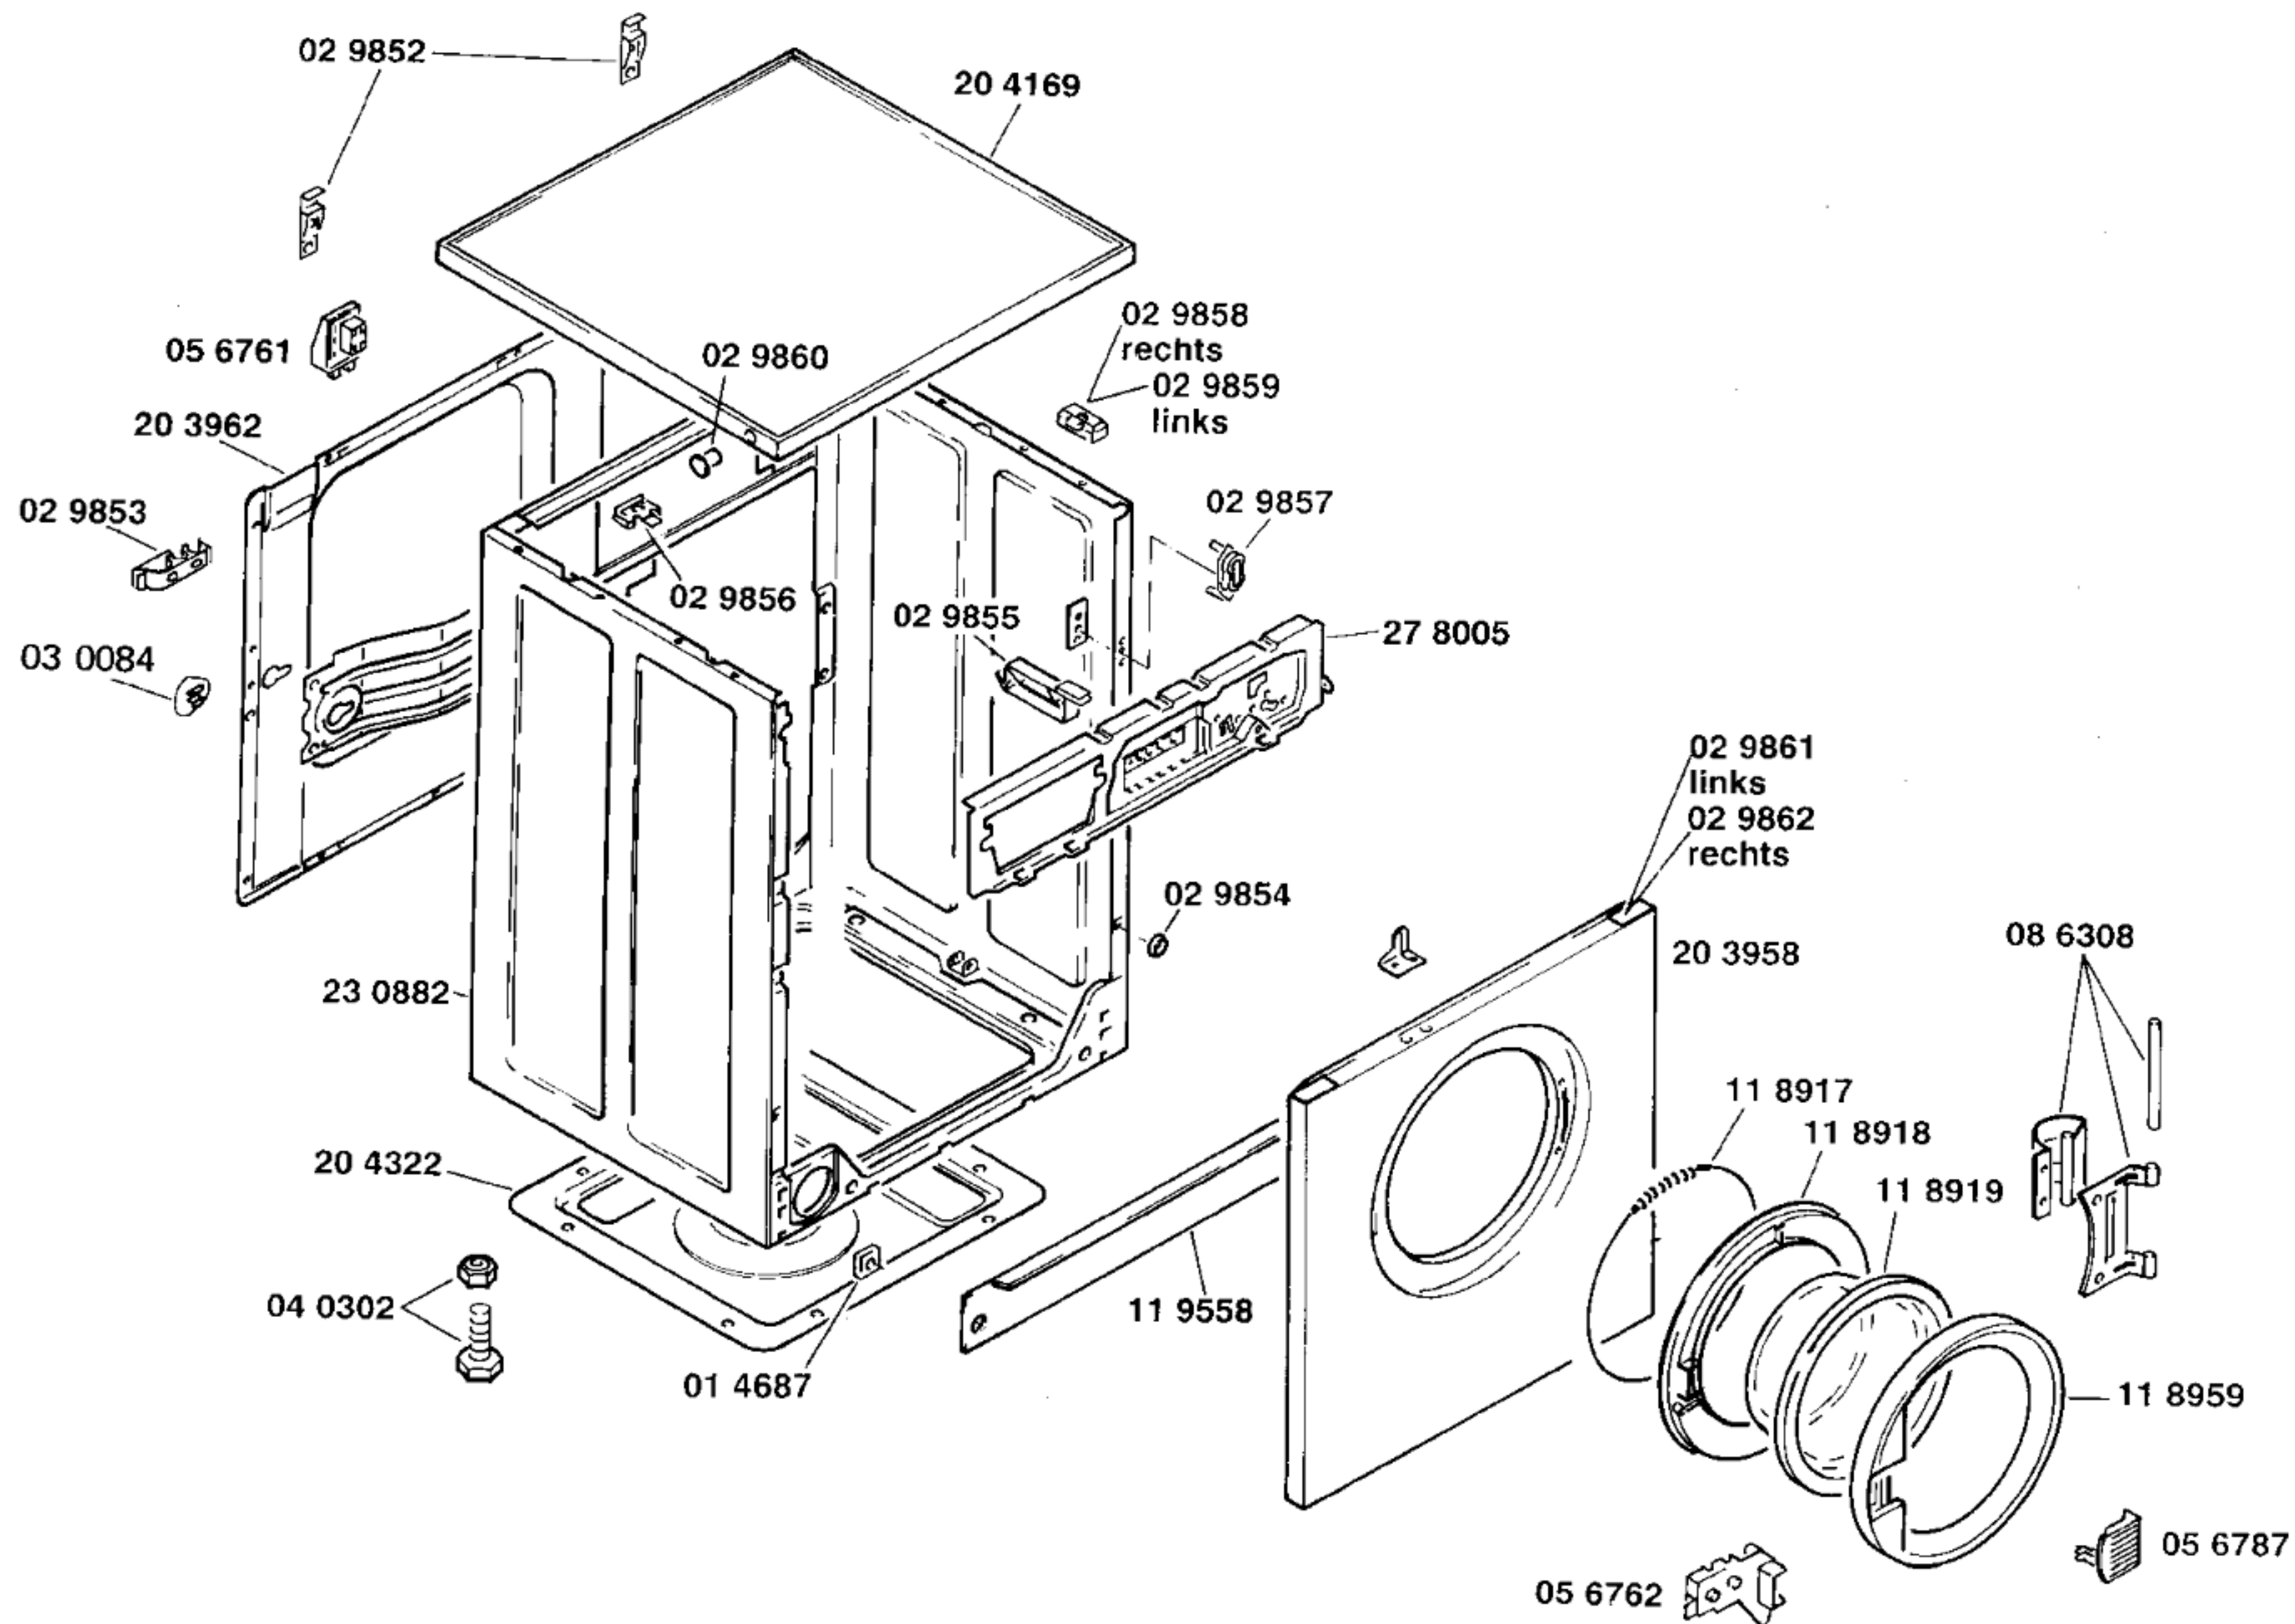
- 51 3566
(D,I,S,N,SF)
51 3568
(NL,F,E,GB)

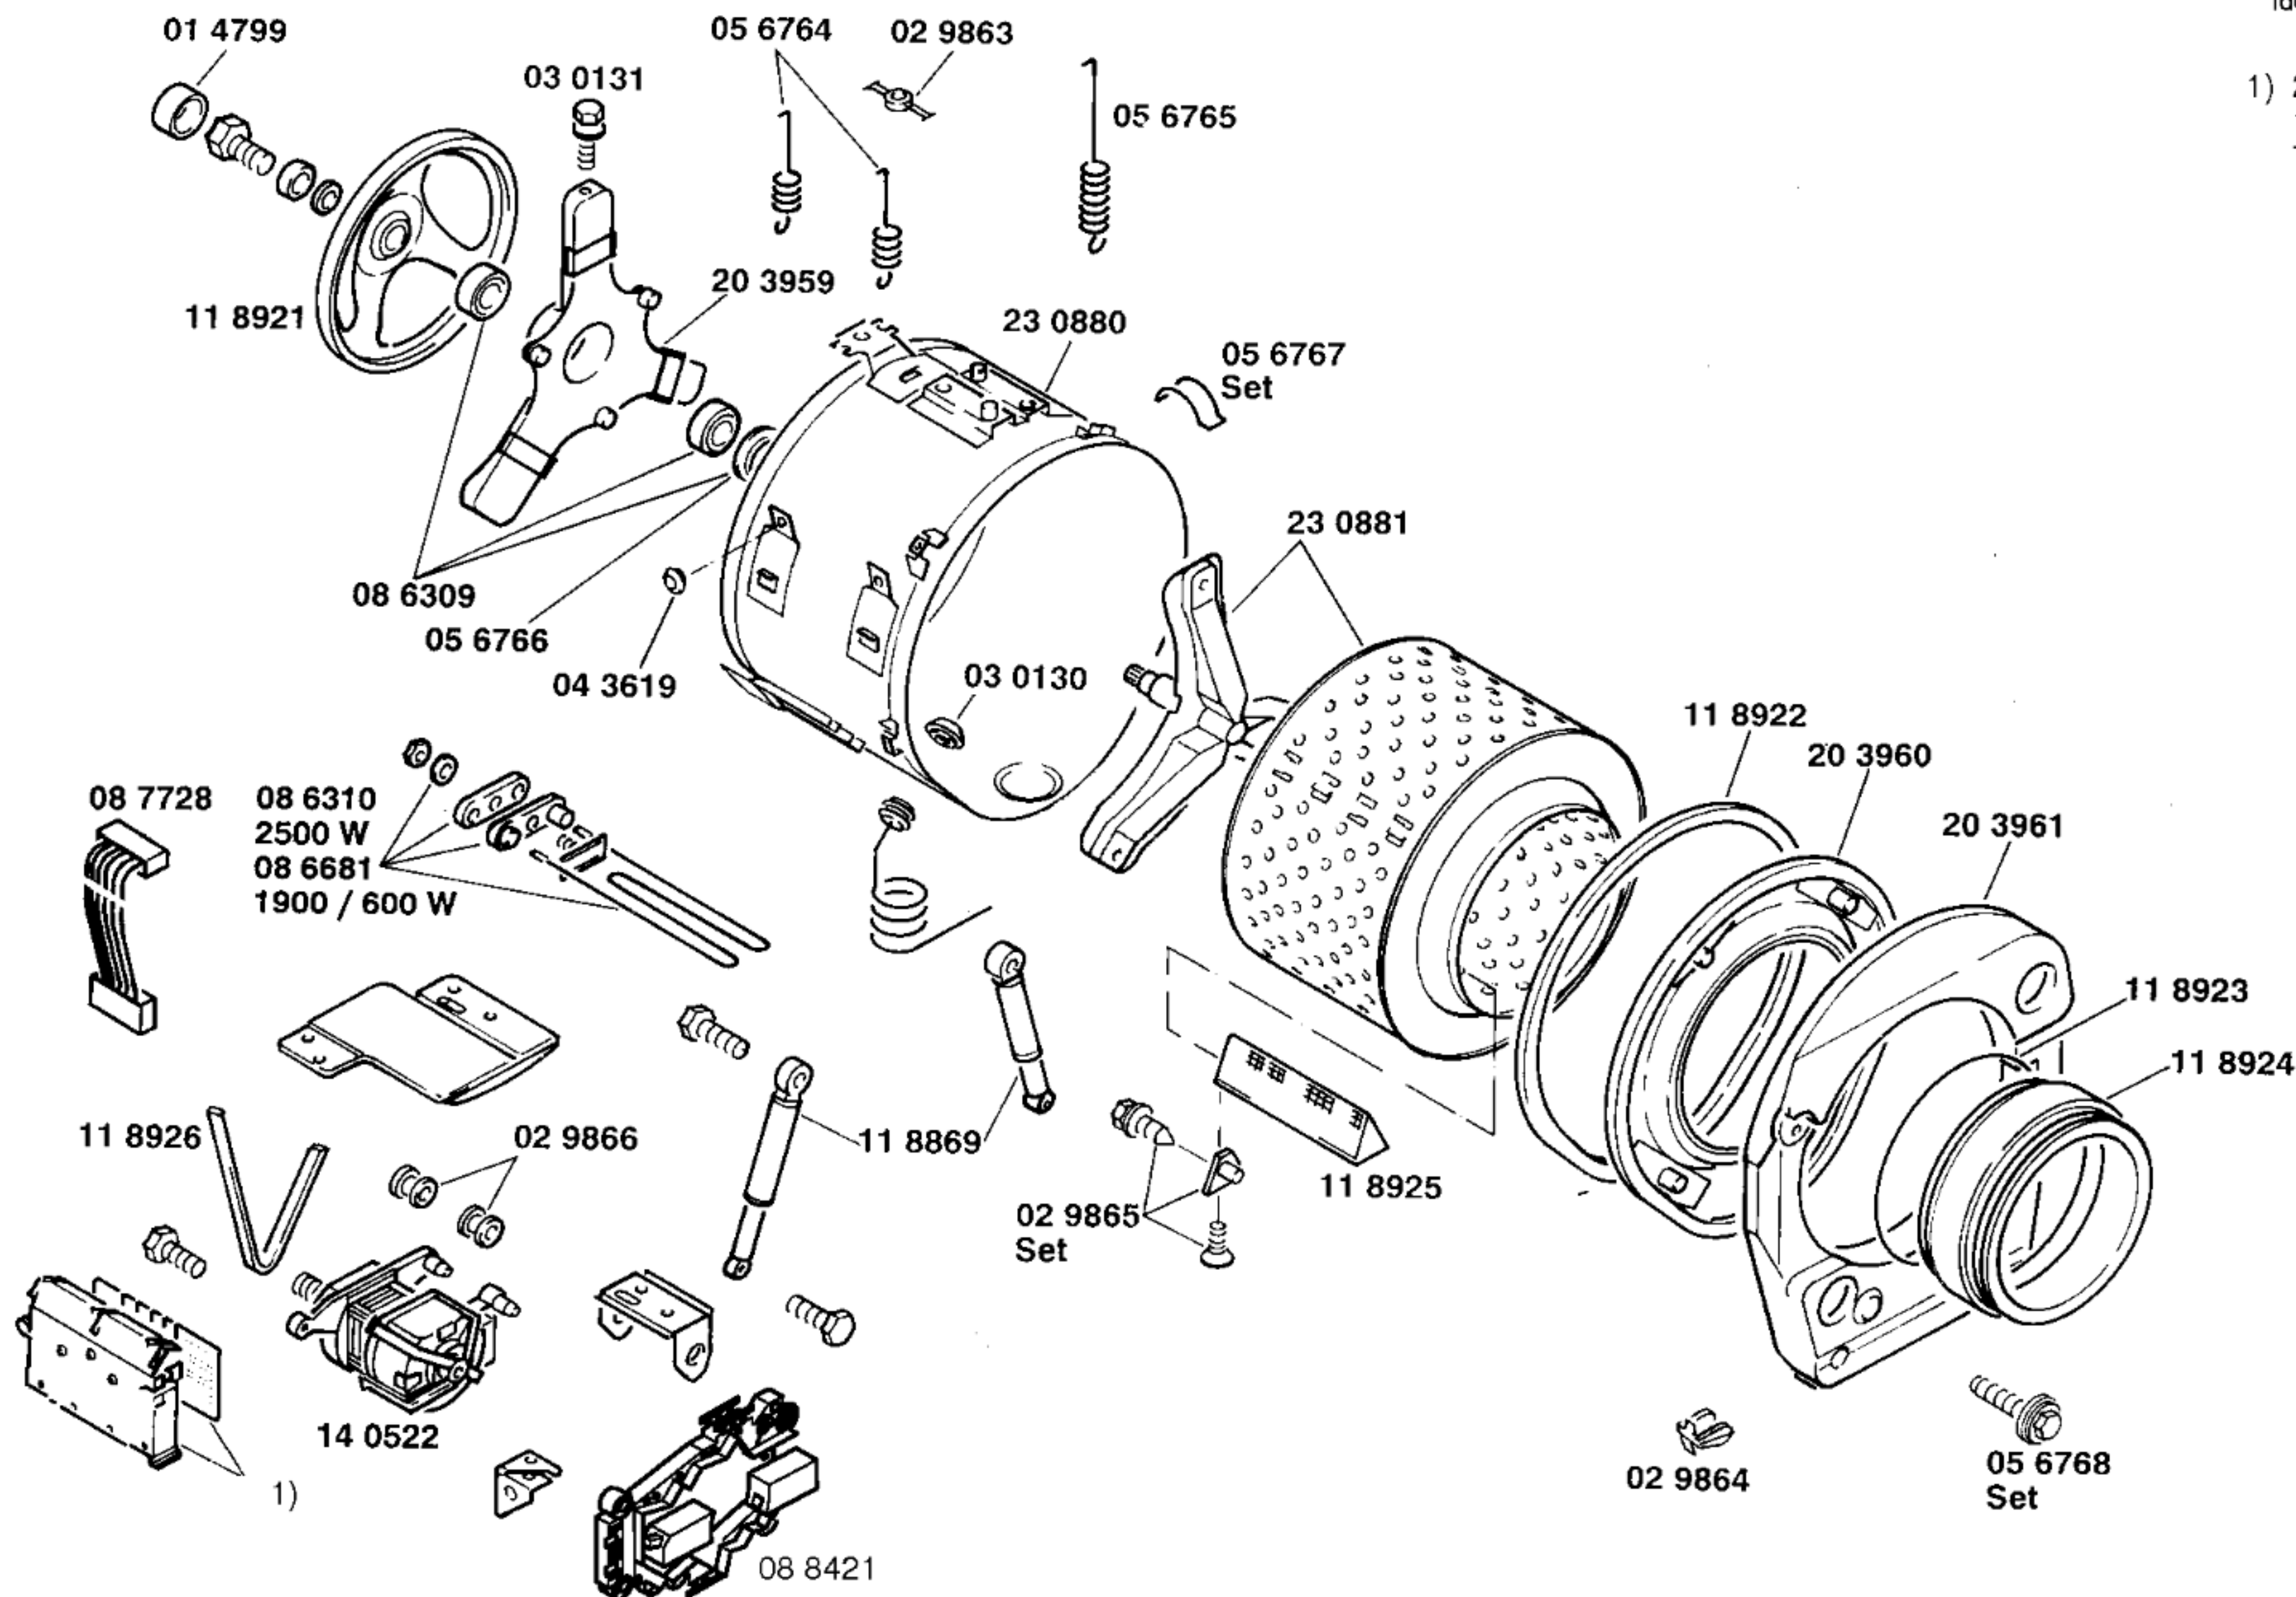
Programmtabellen:

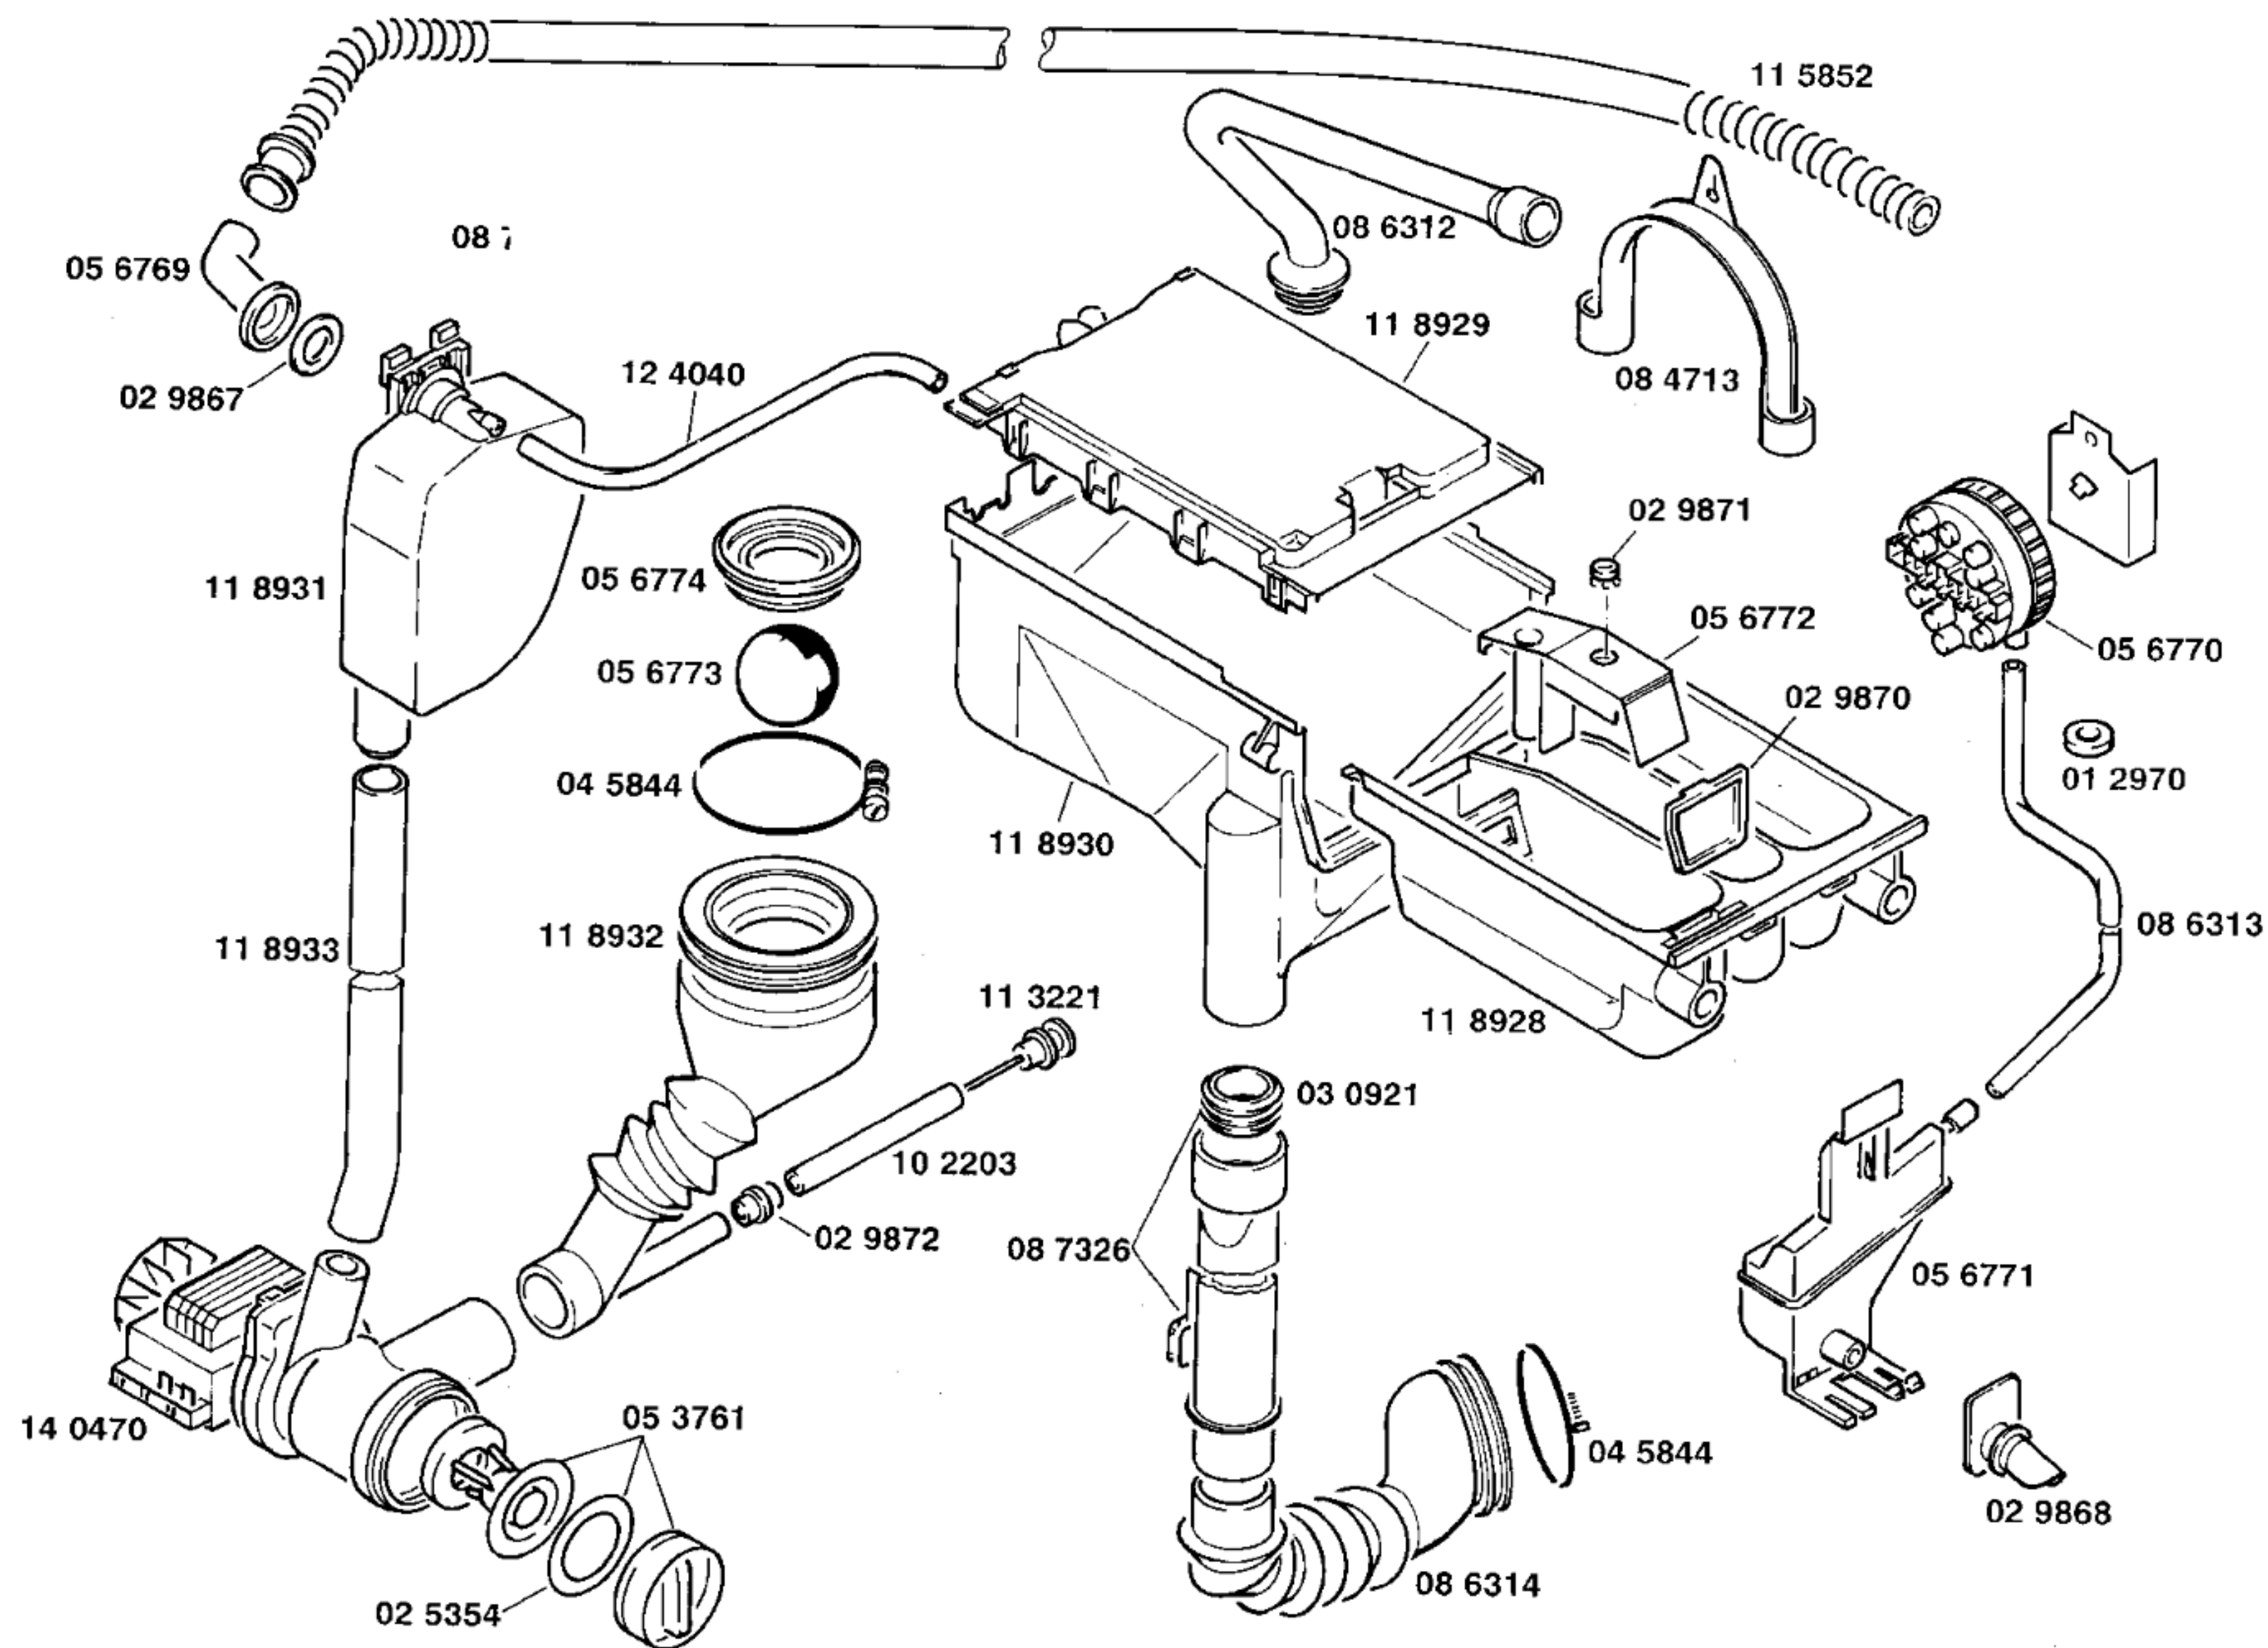
- 51 3552
(D)
51 3967
(D,I,S,N,SF)
51 3555
(NL,F,E,GB)

Aufstellanweisungen:

- 51 3968
(D,I,S,N,SF)
51 3969
(NL,F,E,GB)

**BOSCH**WFK6310-WFK6310FG/04-FG1
WFK6310-WFK6310SI/04-SI1WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

**BOSCH**WFK6310-WFK6310FG/04-FG1
WFK6310-WFK6310SI/04-SI1WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
37401) 27 1716
15 5272
Triac-Motorleistung

Ident – Nummern – Konstante
3740



BOSCH

WFK6310-WFK6310FG/04-FG1
WFK6310-WFK6310SI/04-SI1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

