




BOSCH

WFK6410-WFK6410GB/01-GB1
WFK6410-WFK6410GB/02-GB2

WASCHGERÄTE
Waschvollautomaten

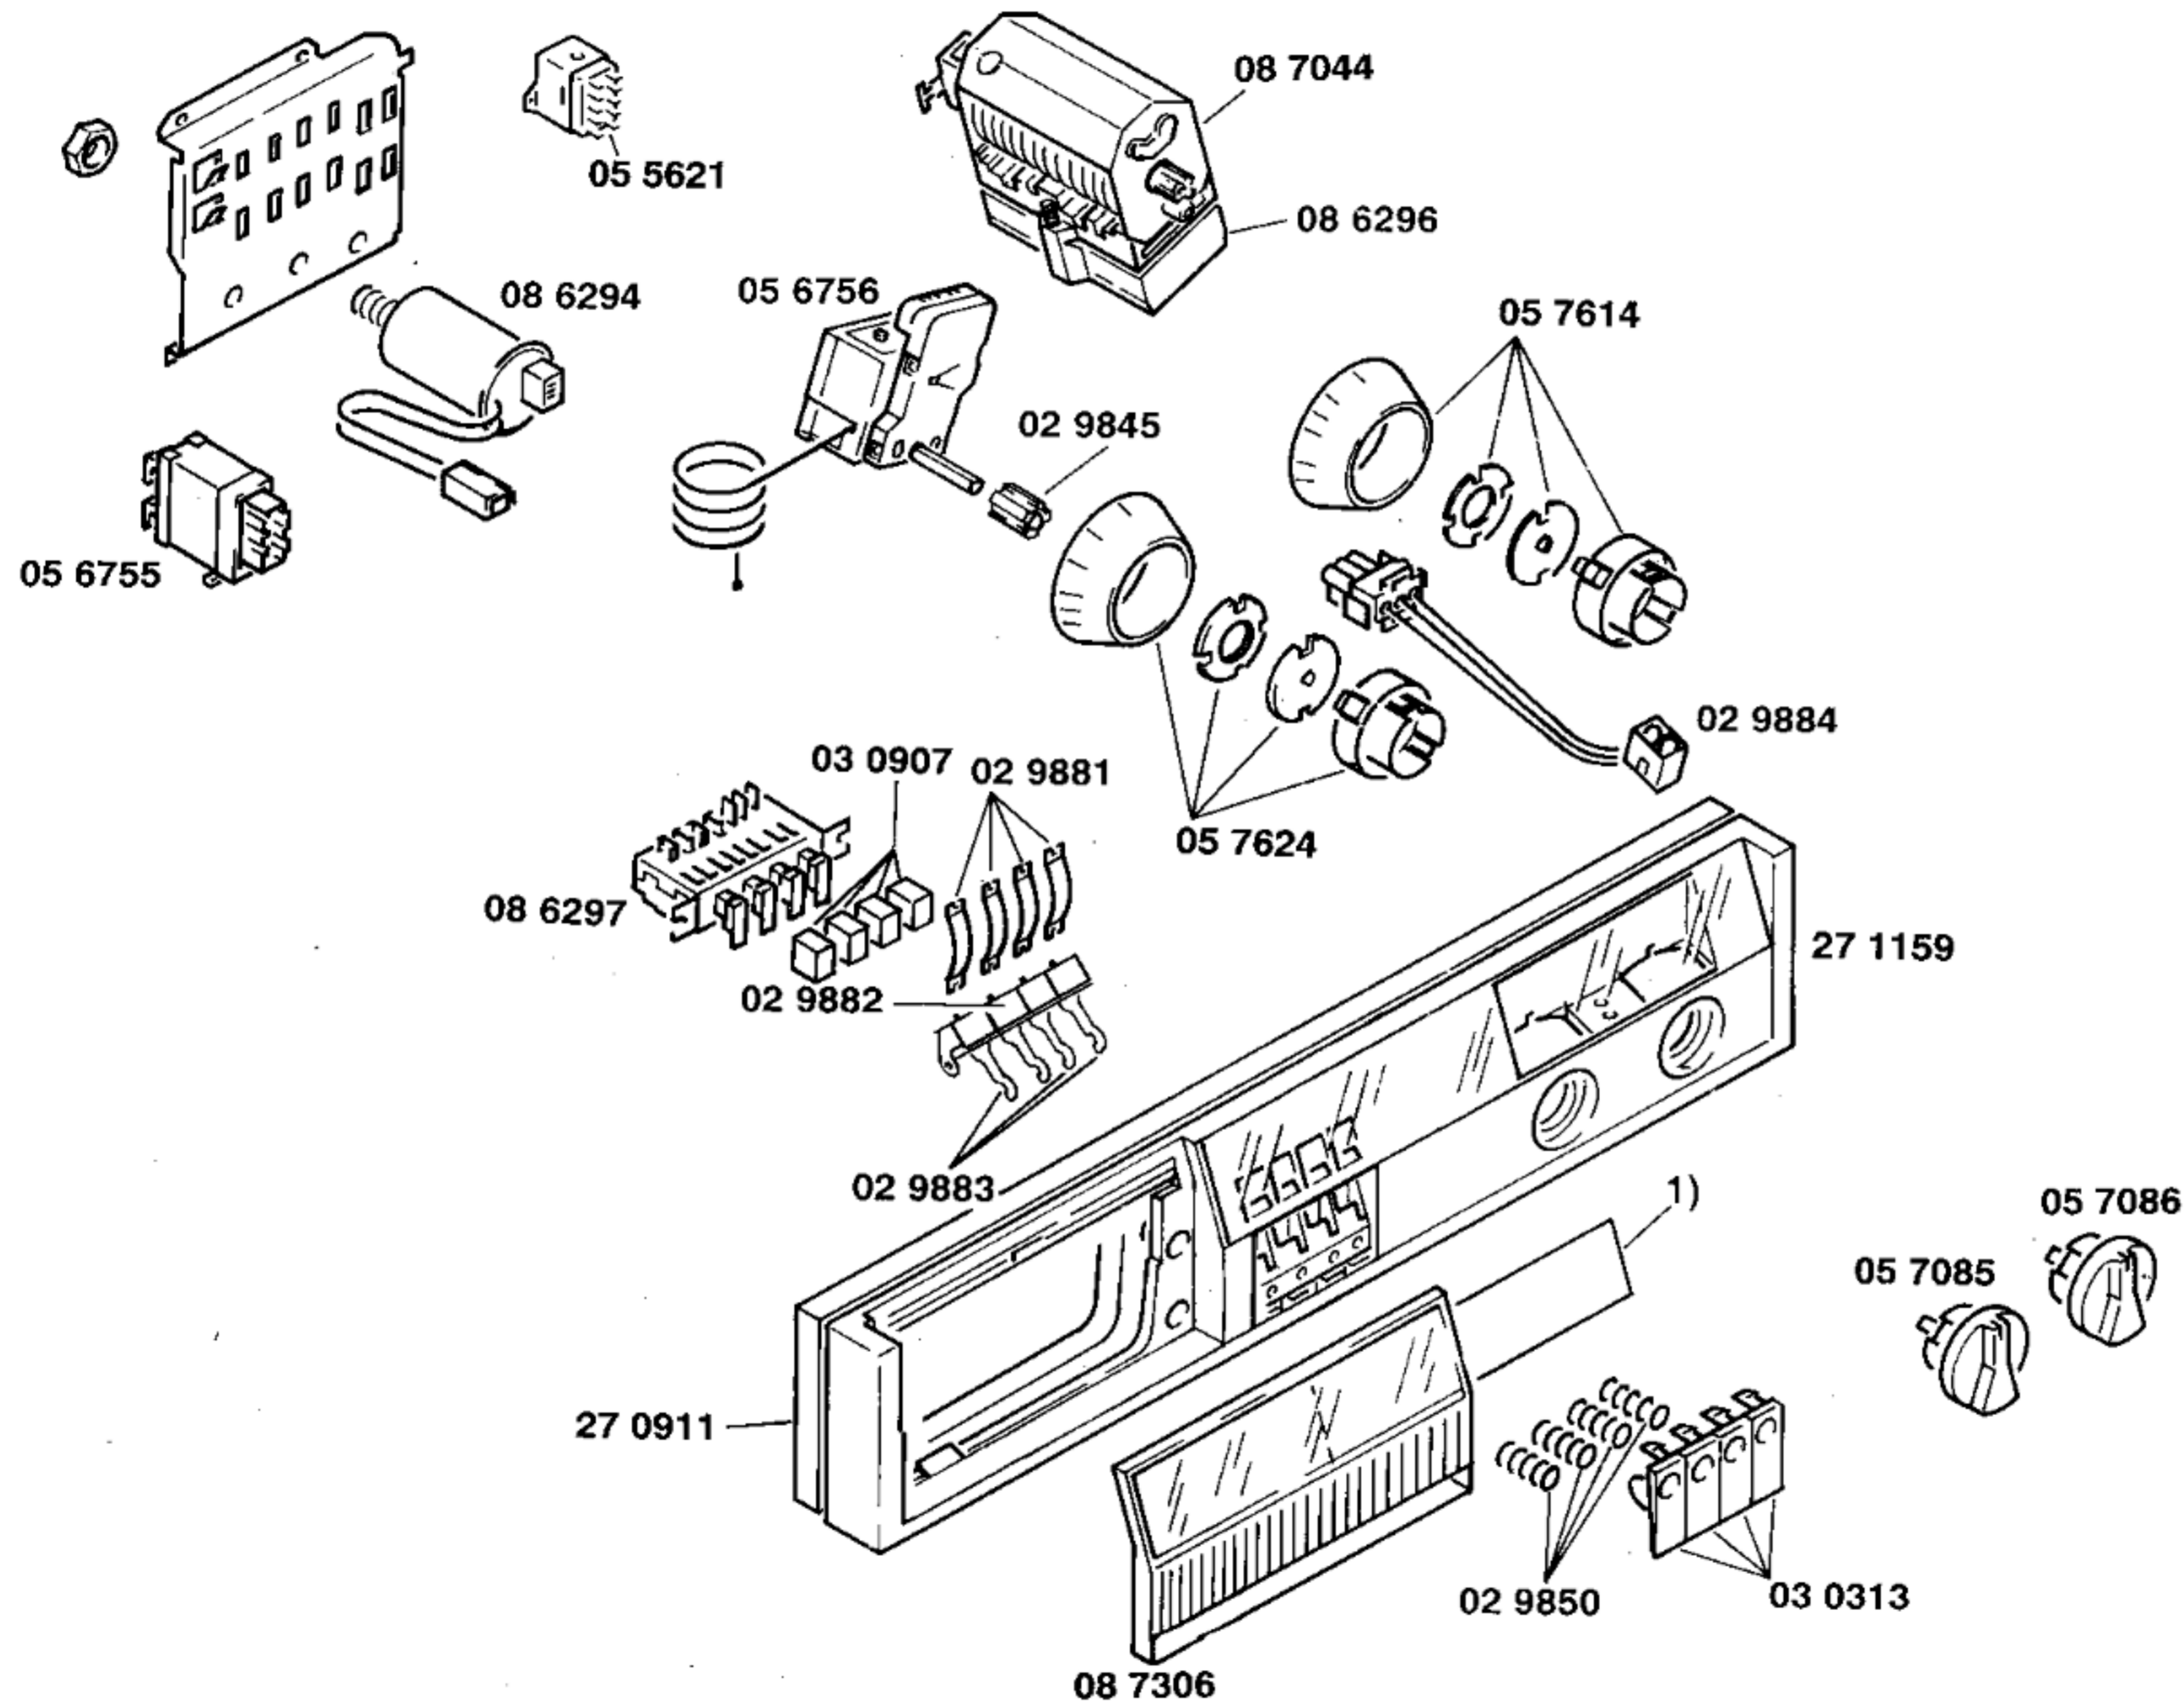


Ident - Nummern - Konstante
3740


- 1) 08 6336 (D)
- 08 6337 (NL)
- 08 6338 (N)
- 08 6339 (SF)
- 08 6340 (S)
- 08 6341 (E)
- 08 6342 (F)
- 08 6343 (DK)
- 08 6344 (I)
- 08 6686 (TR, YU, E, GB)
- 08 6690 (GB)

- Gebrauchsanweisung: 51 4180 (GB)
- Programmtabelle: 51 4180 (GB)
- Aufstellanweisungen: 51 4181 (GB)



Ident - Nummern - Konstante
3740

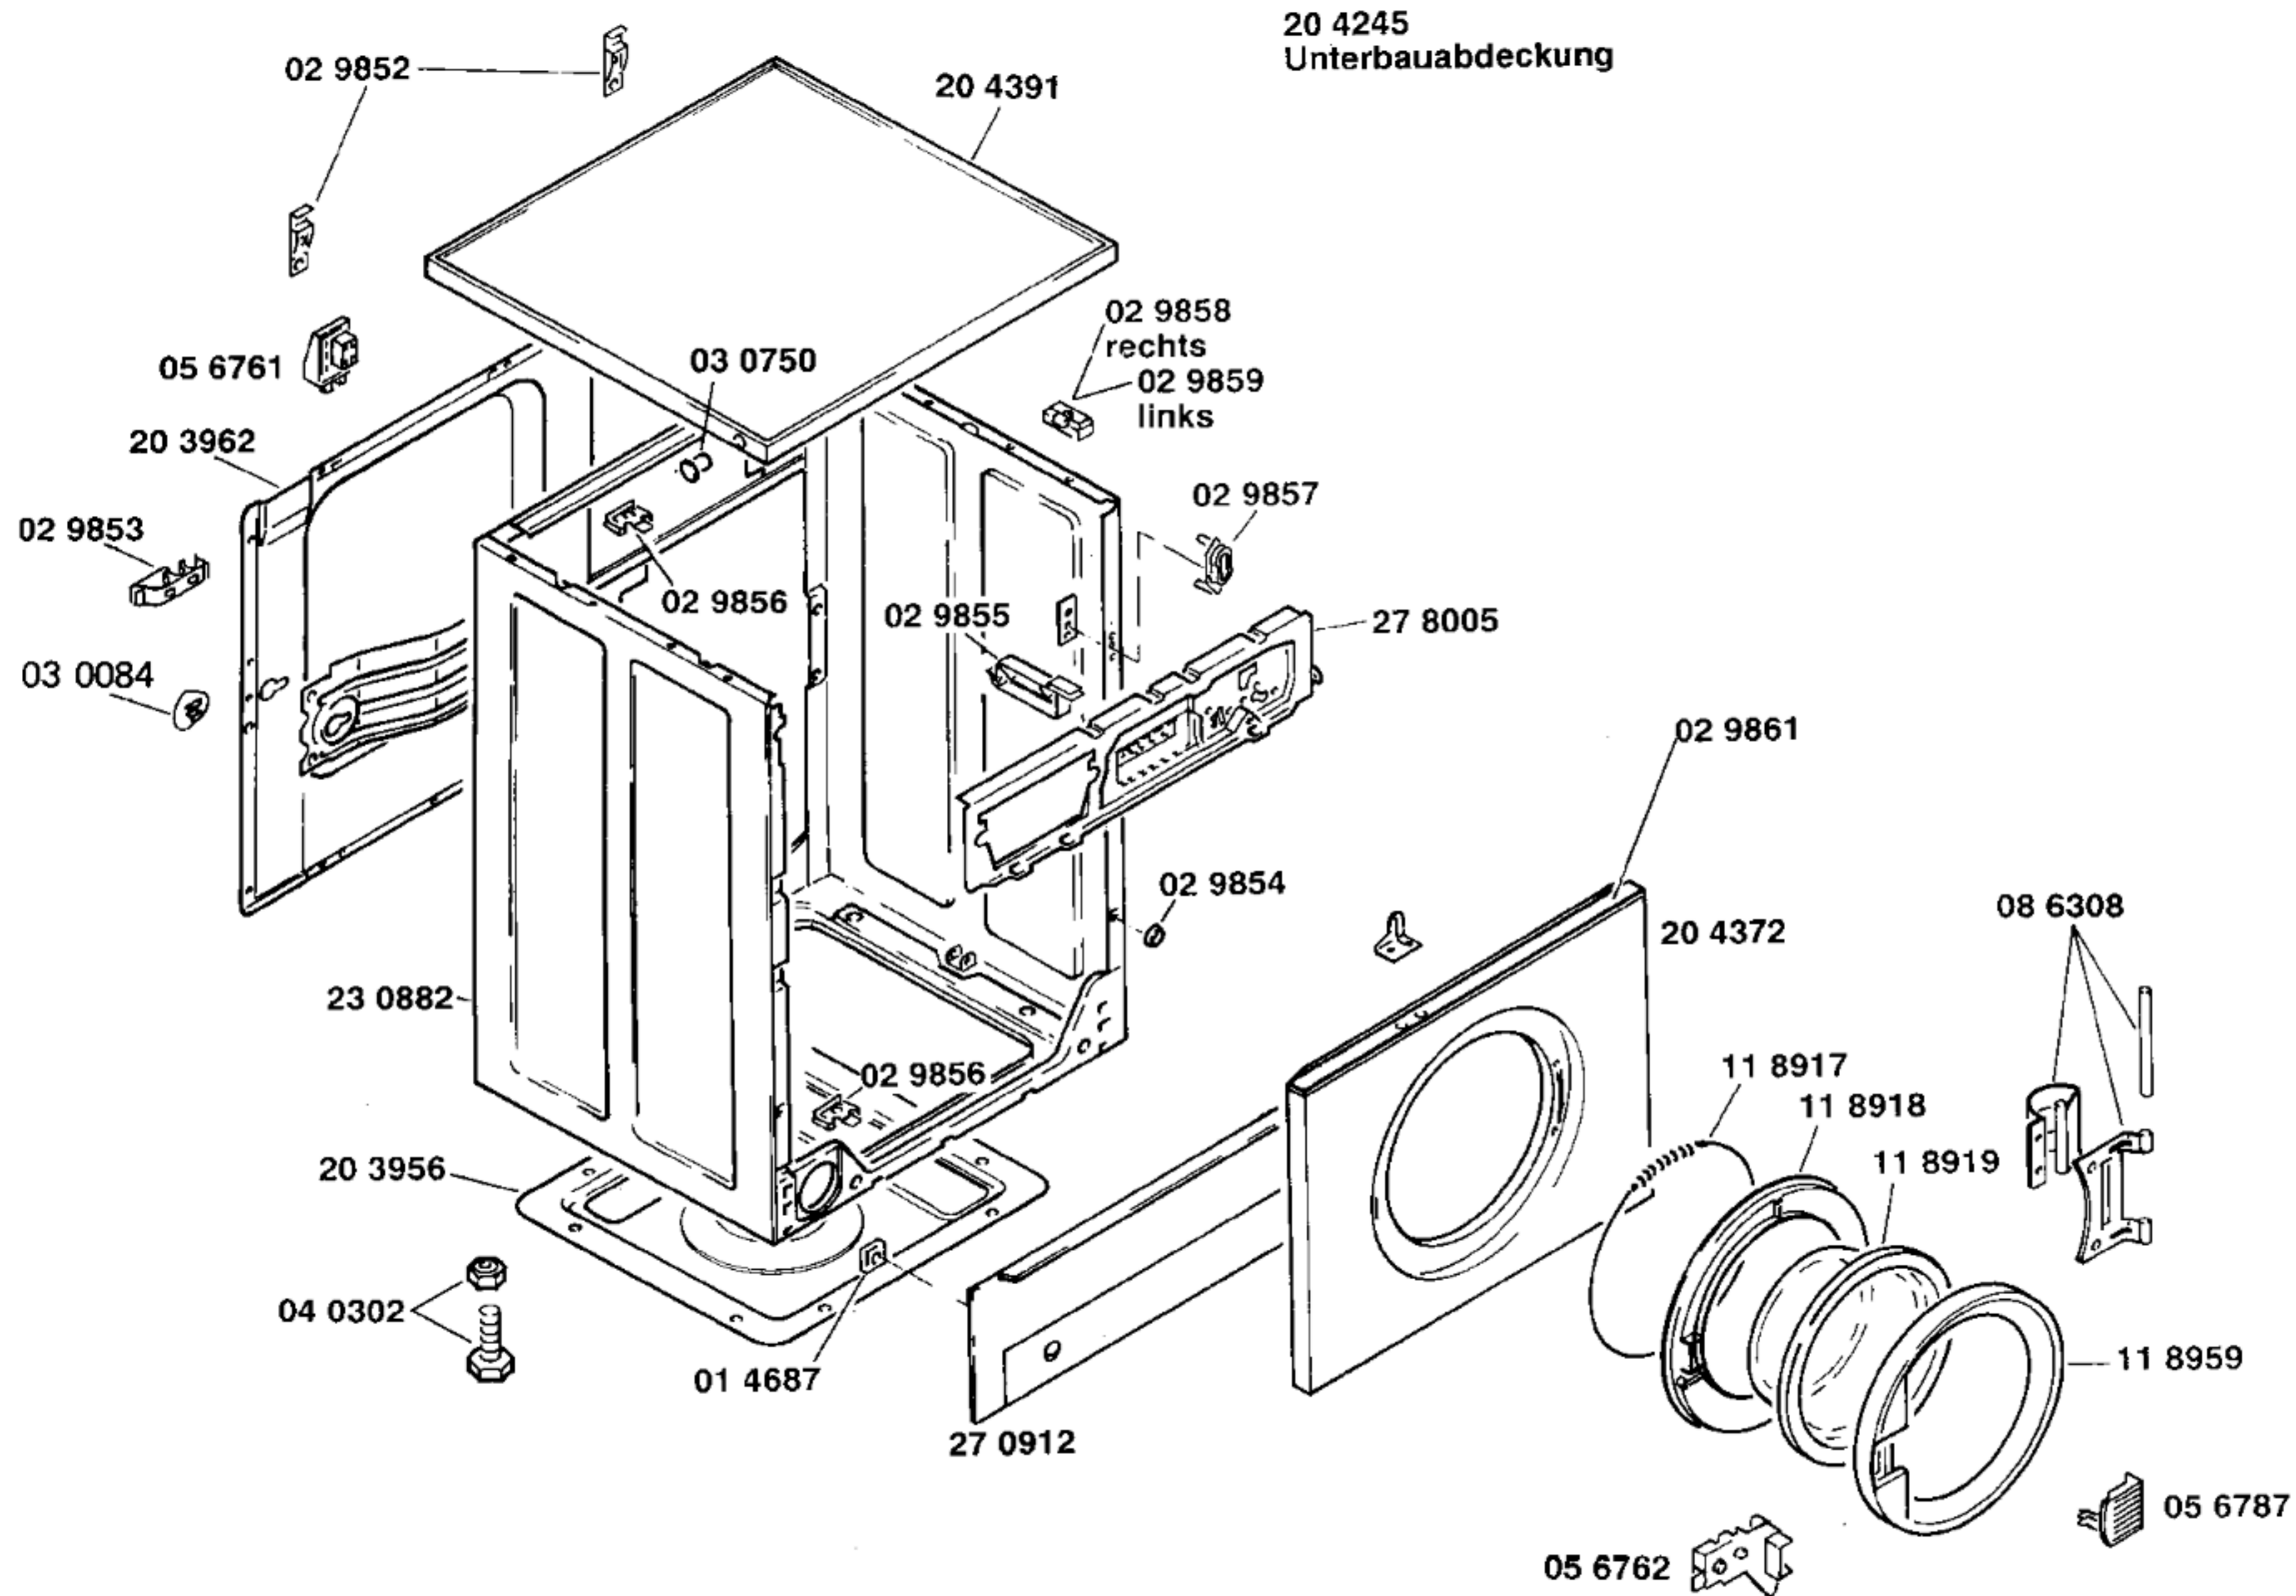

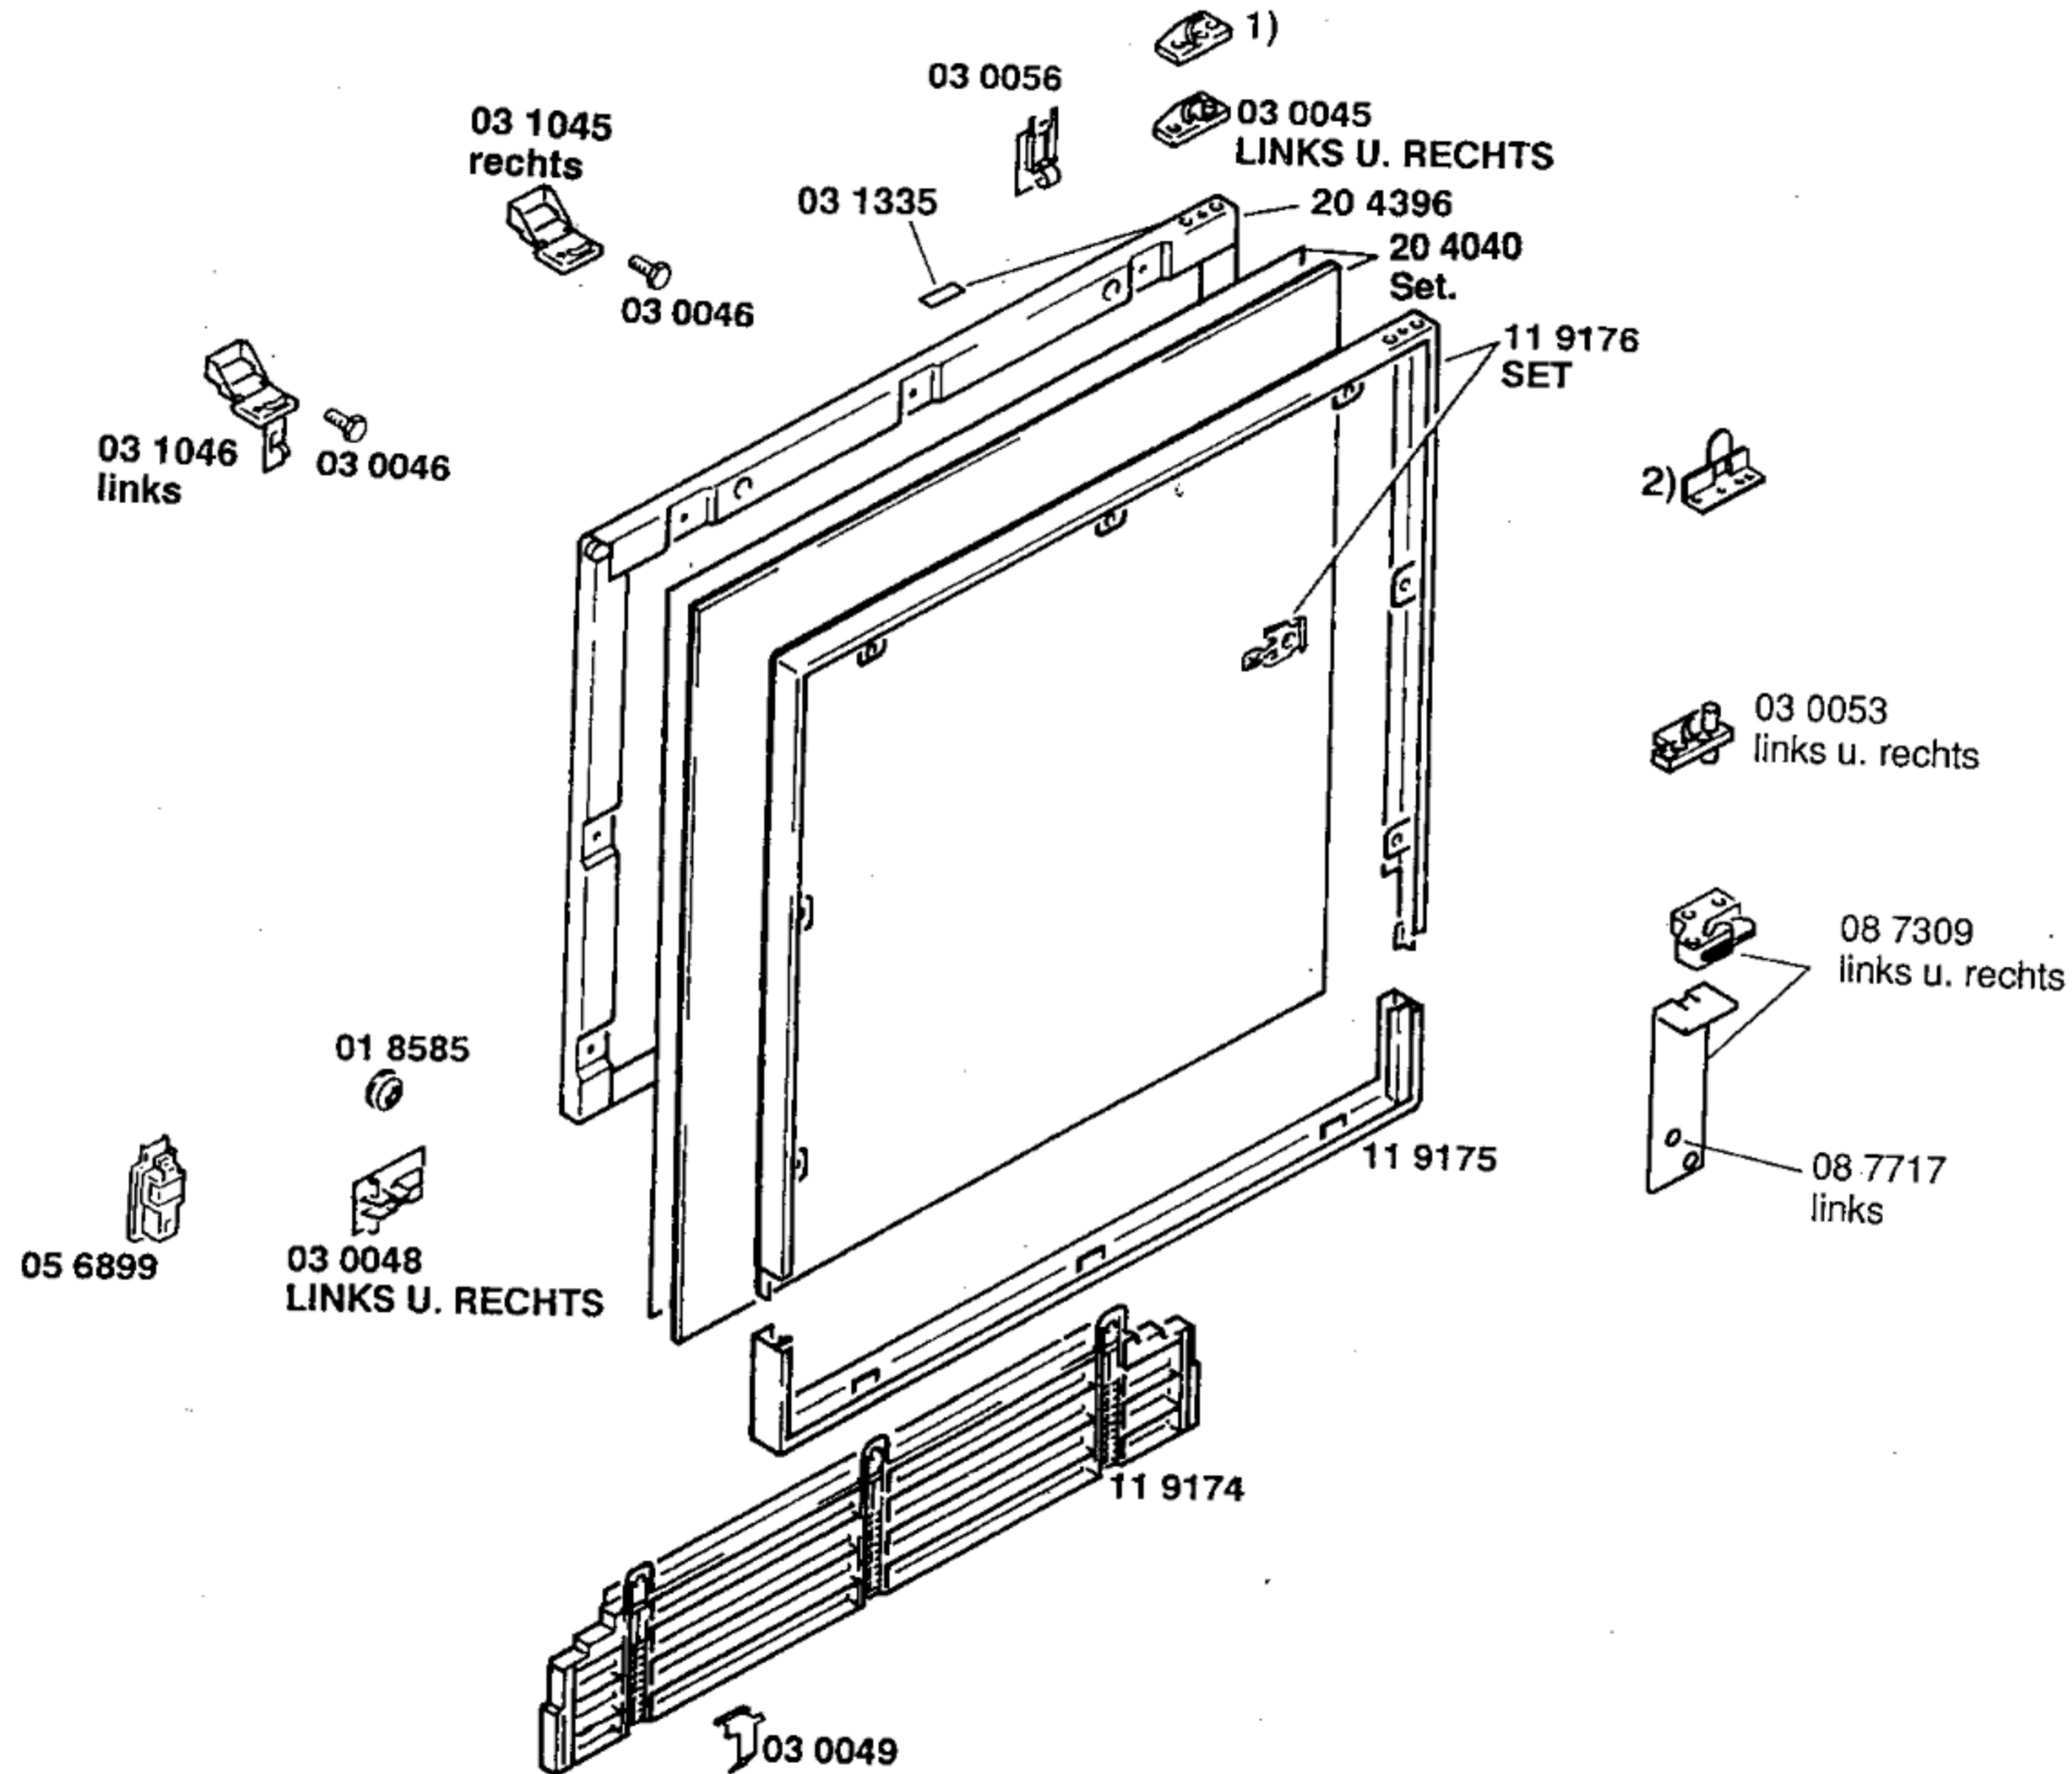

Ident - Nummern - Konstante
3740

- 1) 03 0055
LINKS
03 0054
RECHTS
- 2) 03 0052
RECHTS
03 0051
LINKS



BOSCH

WFK6410-WFK6410GB/01-GB1
WFK6410-WFK6410GB/02-GB2

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

