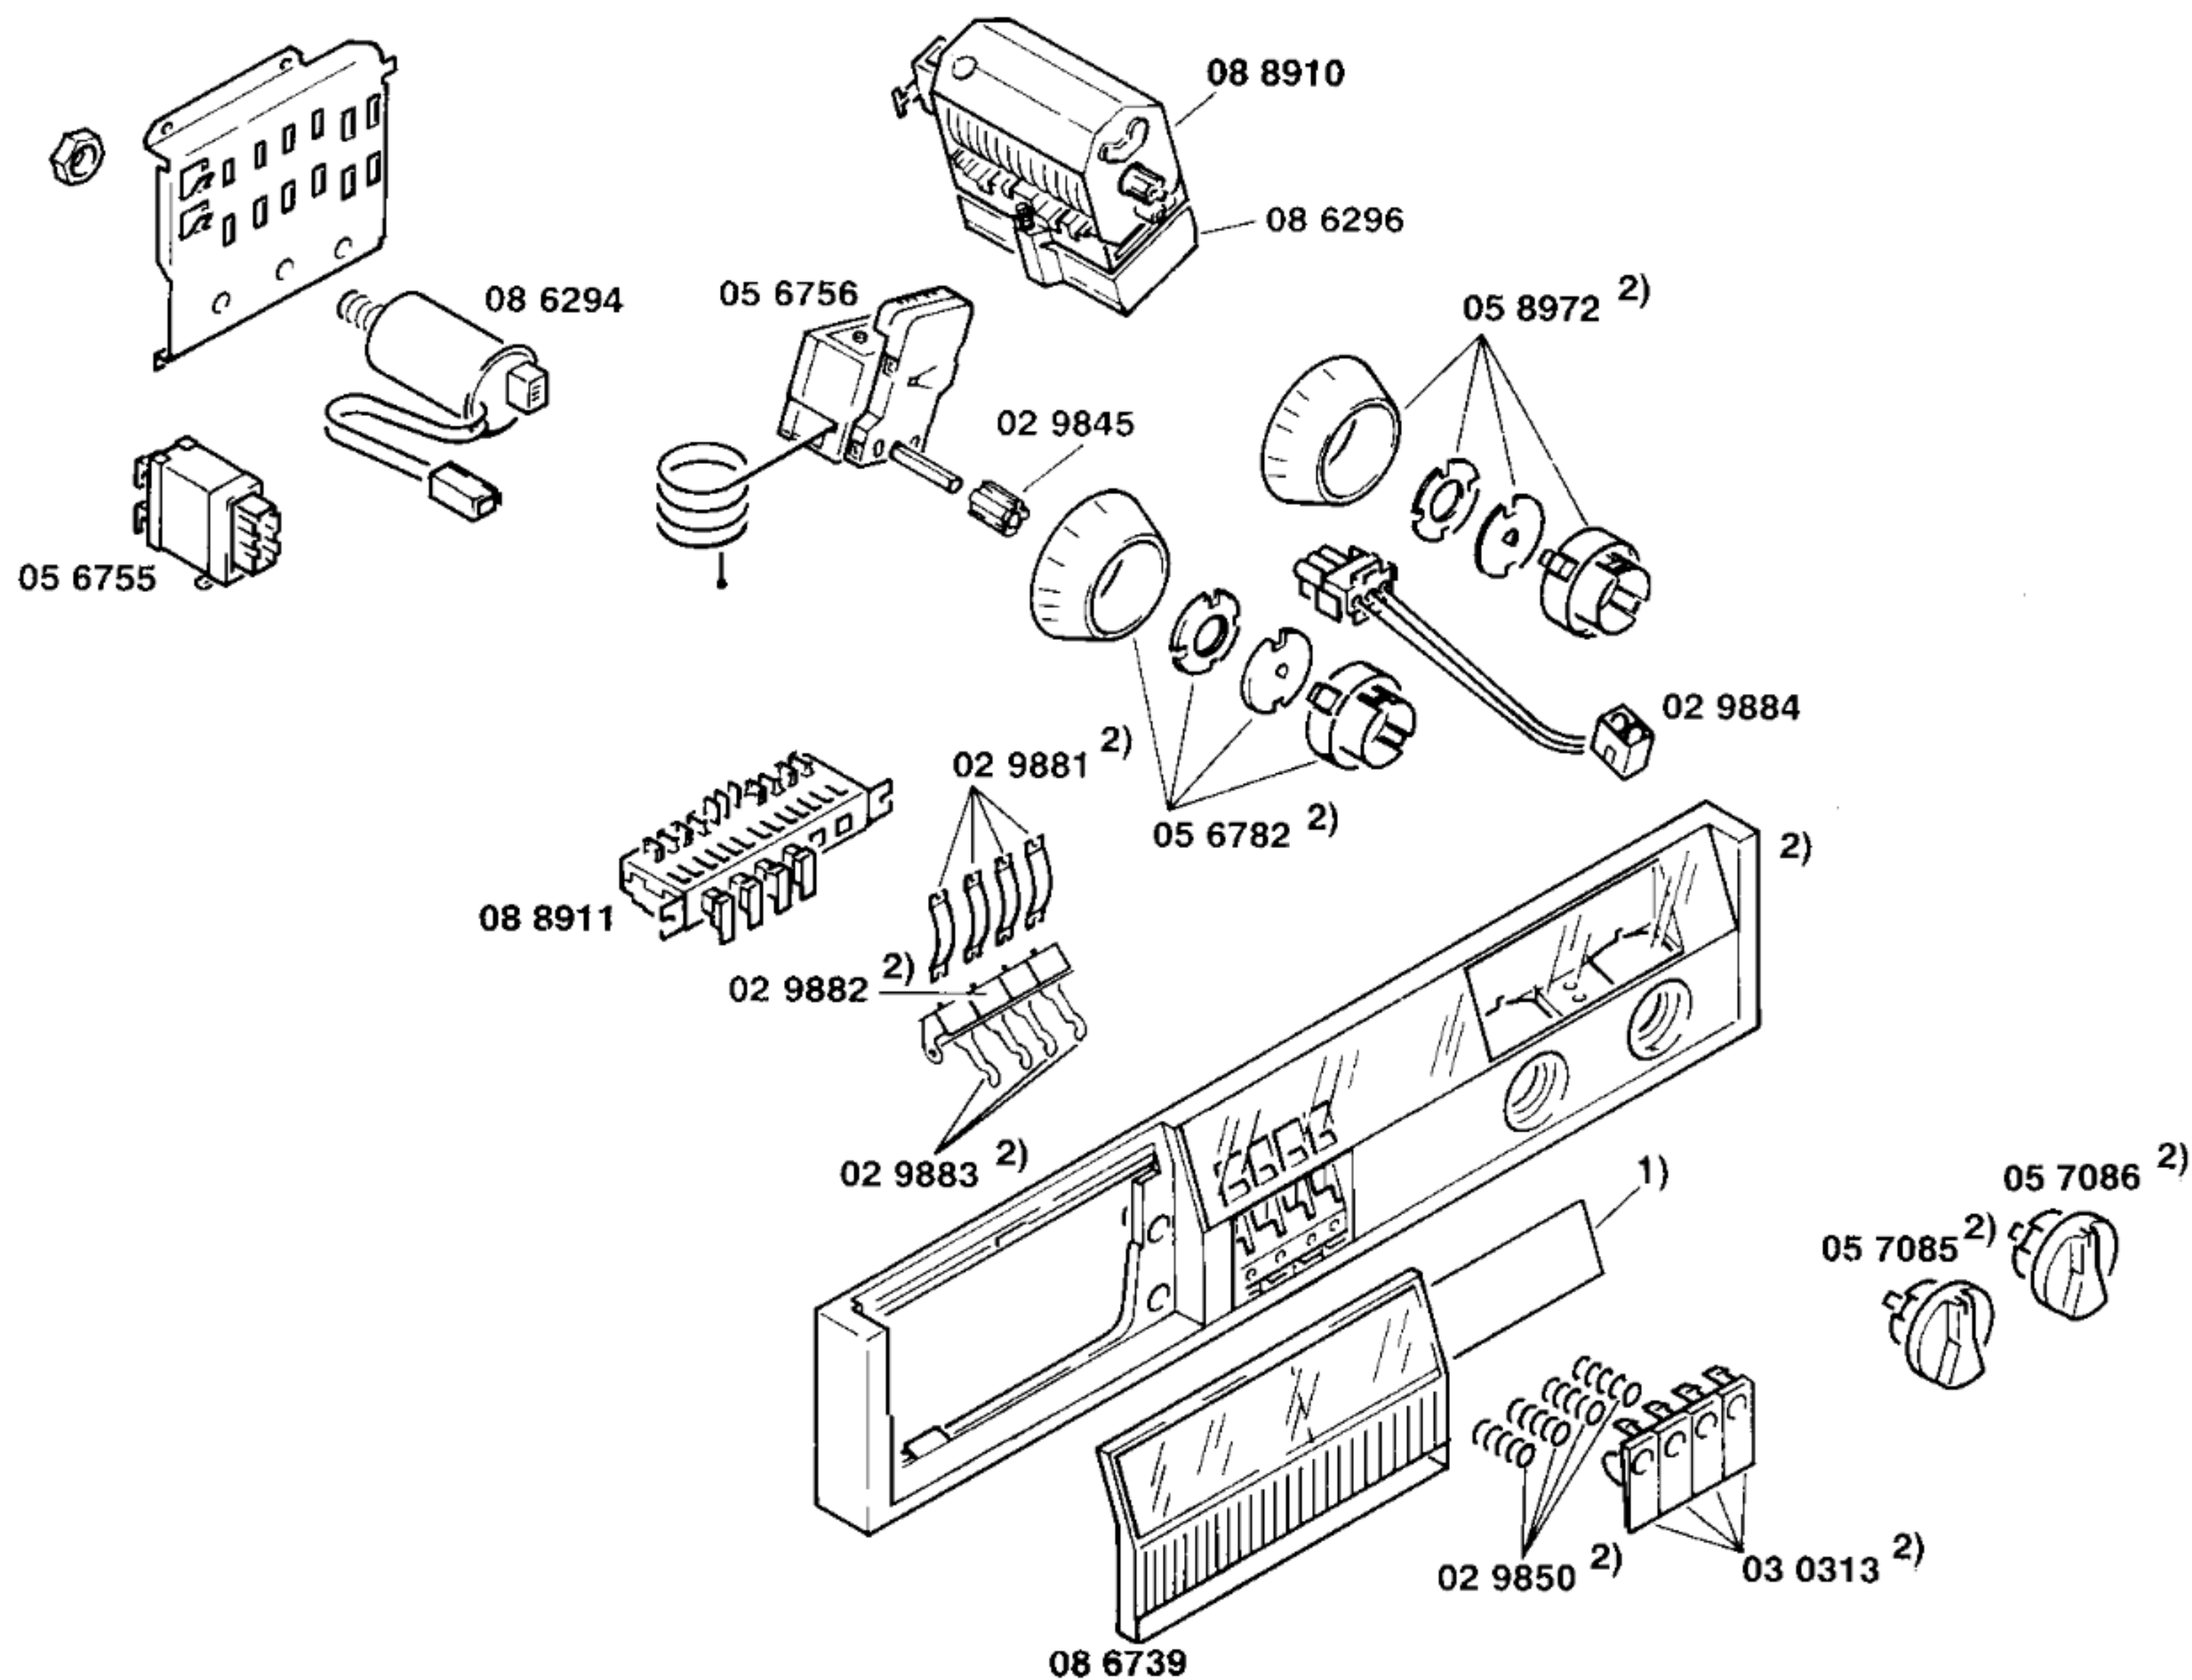


**BOSCH**WFK7310-WFK7310/06-D1
WFK7310-WFK7310FG/06-FG1WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

- 1) 08 8738
(D,I)
08 8734
(NL,F)
08 8735
(S,DK)
08 8736
(E,GB)
08 8737
(SF,N)

Gebrauchsanweisungen:

- 51 3566
(D,I,S,N,SF)
51 3568
(NL,F,E,GB)


Programmtabellen:


- 51 3552
(D)
51 3967
(D,I,S,N,SF)
51 3555
(NL,F,E,GB)


Aufstellanweisungen:

- 51 3968
(D,I,S,N,SF)
51 3969
(NL,F,E,GB)

- 2) 27 7727
Blende kompl.

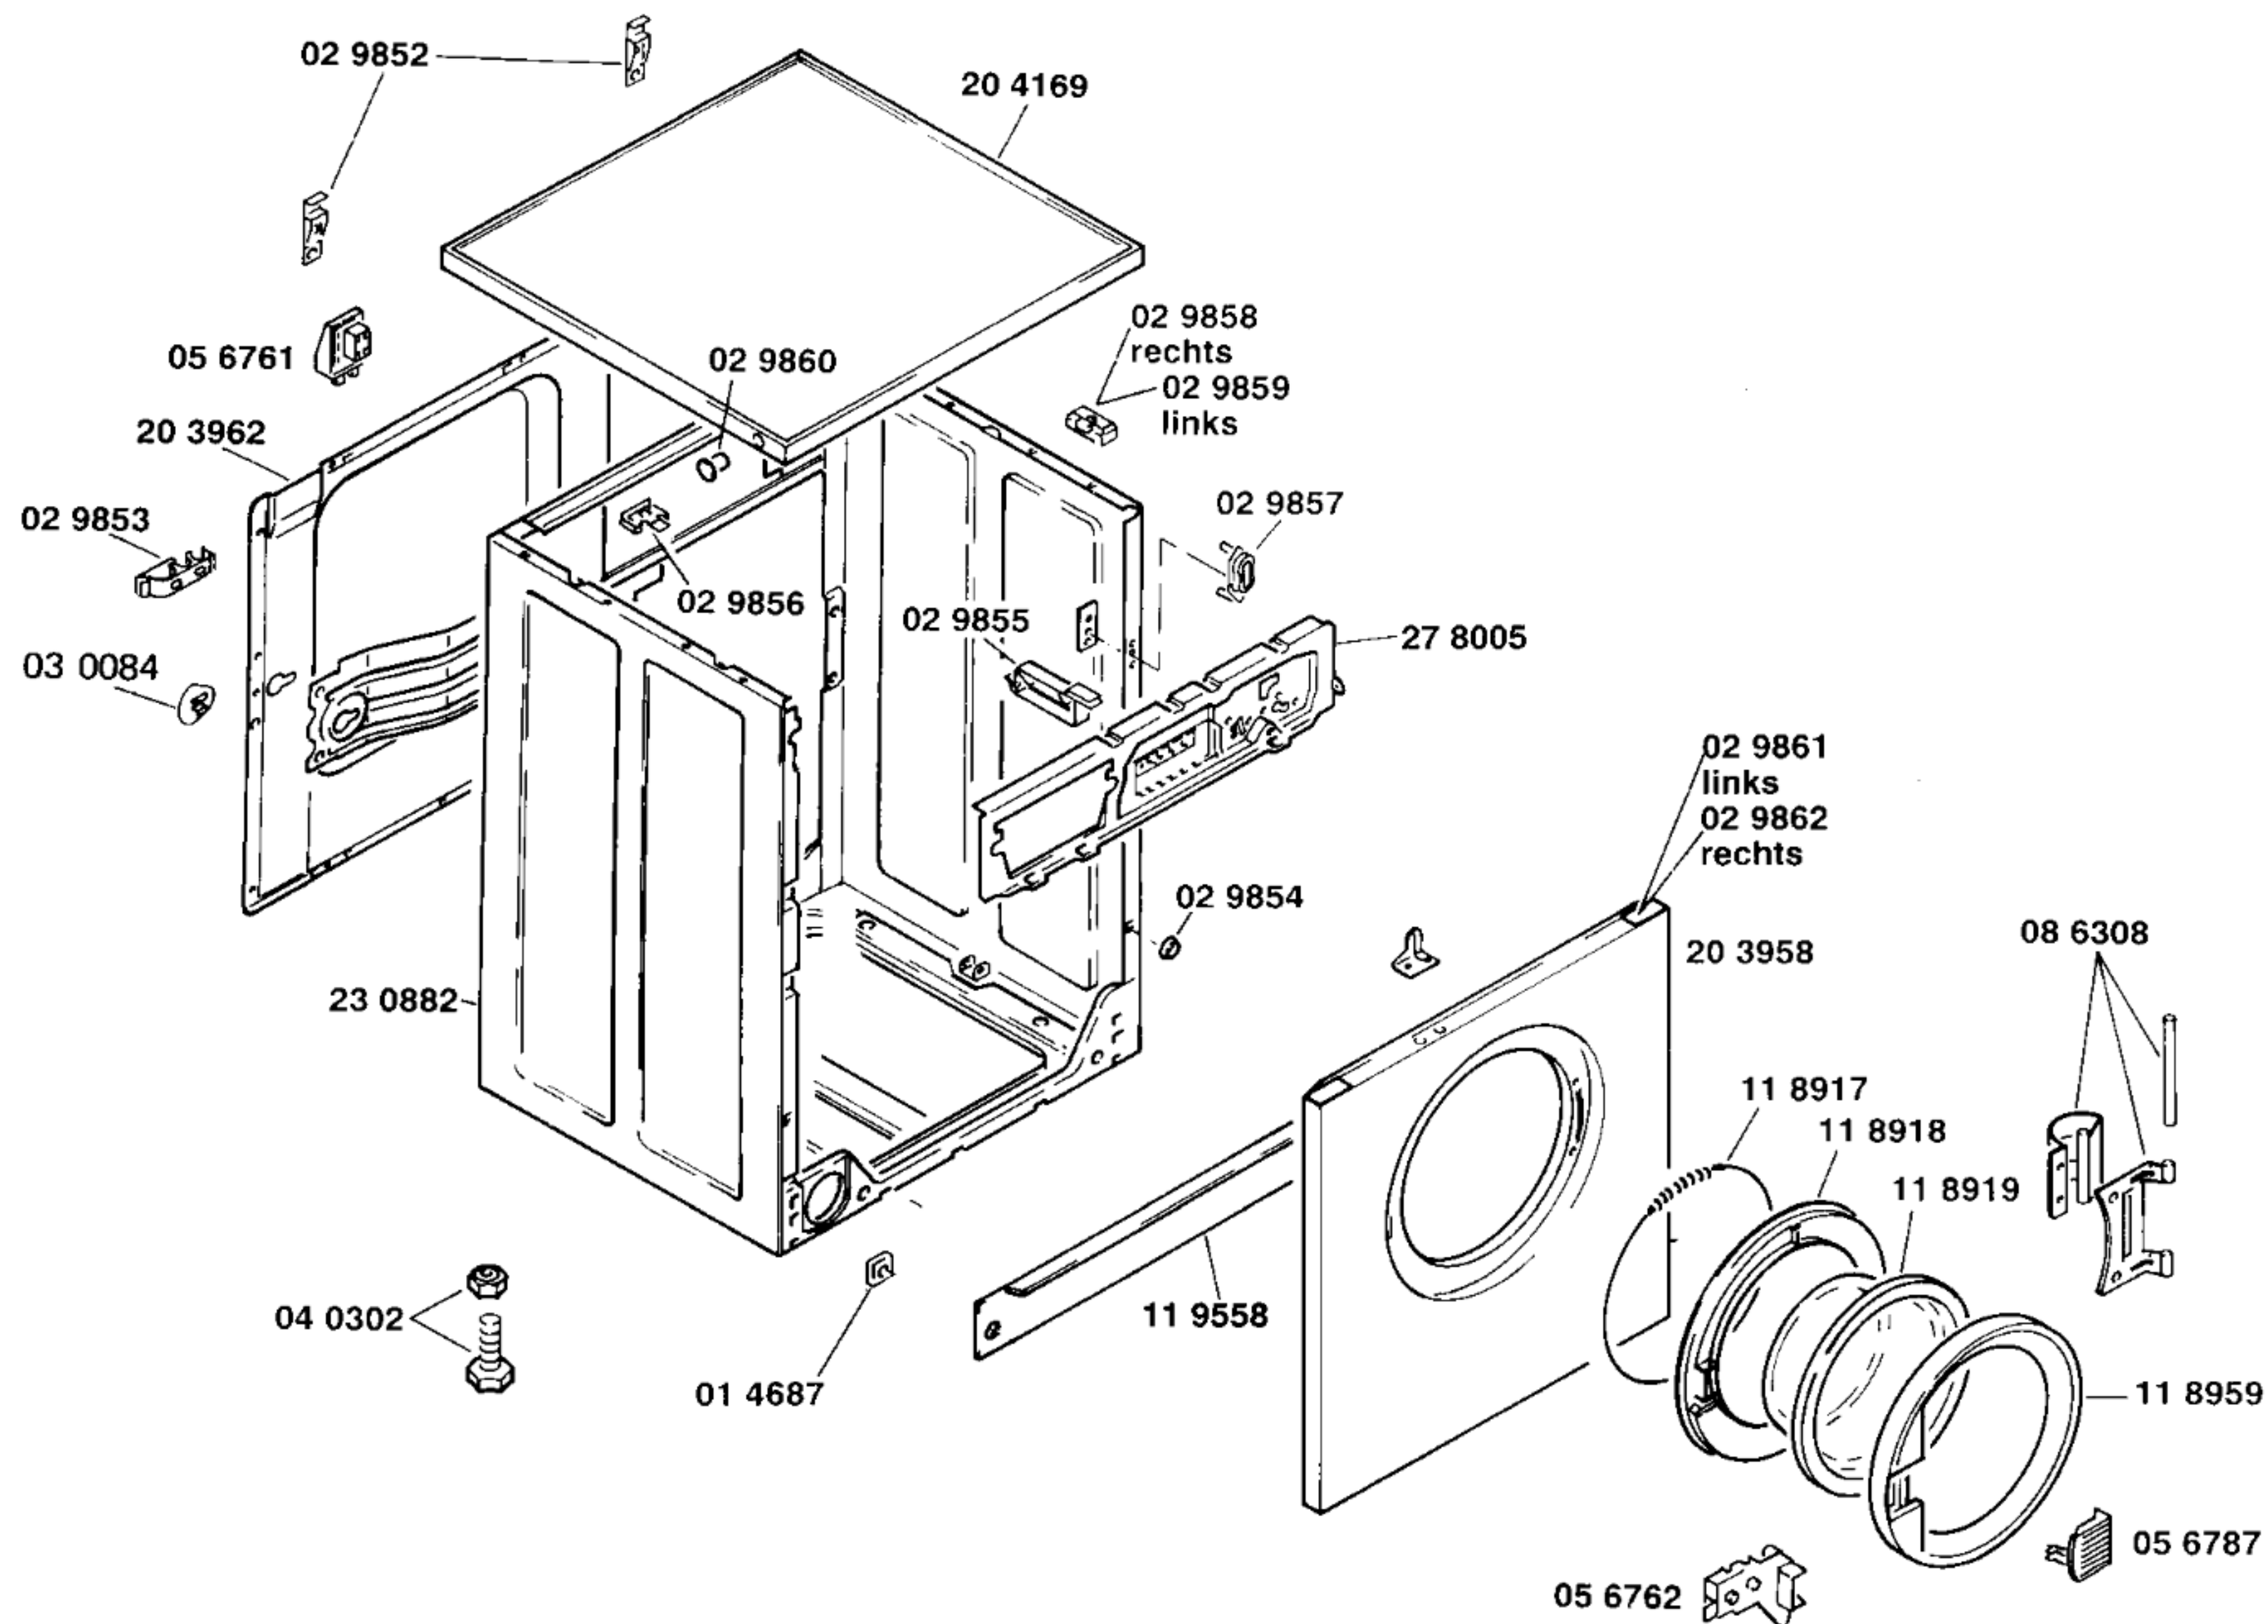**BOSCH**WFK7310-WFK7310/06-D1
WFK7310-WFK7310FG/06-FG1WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

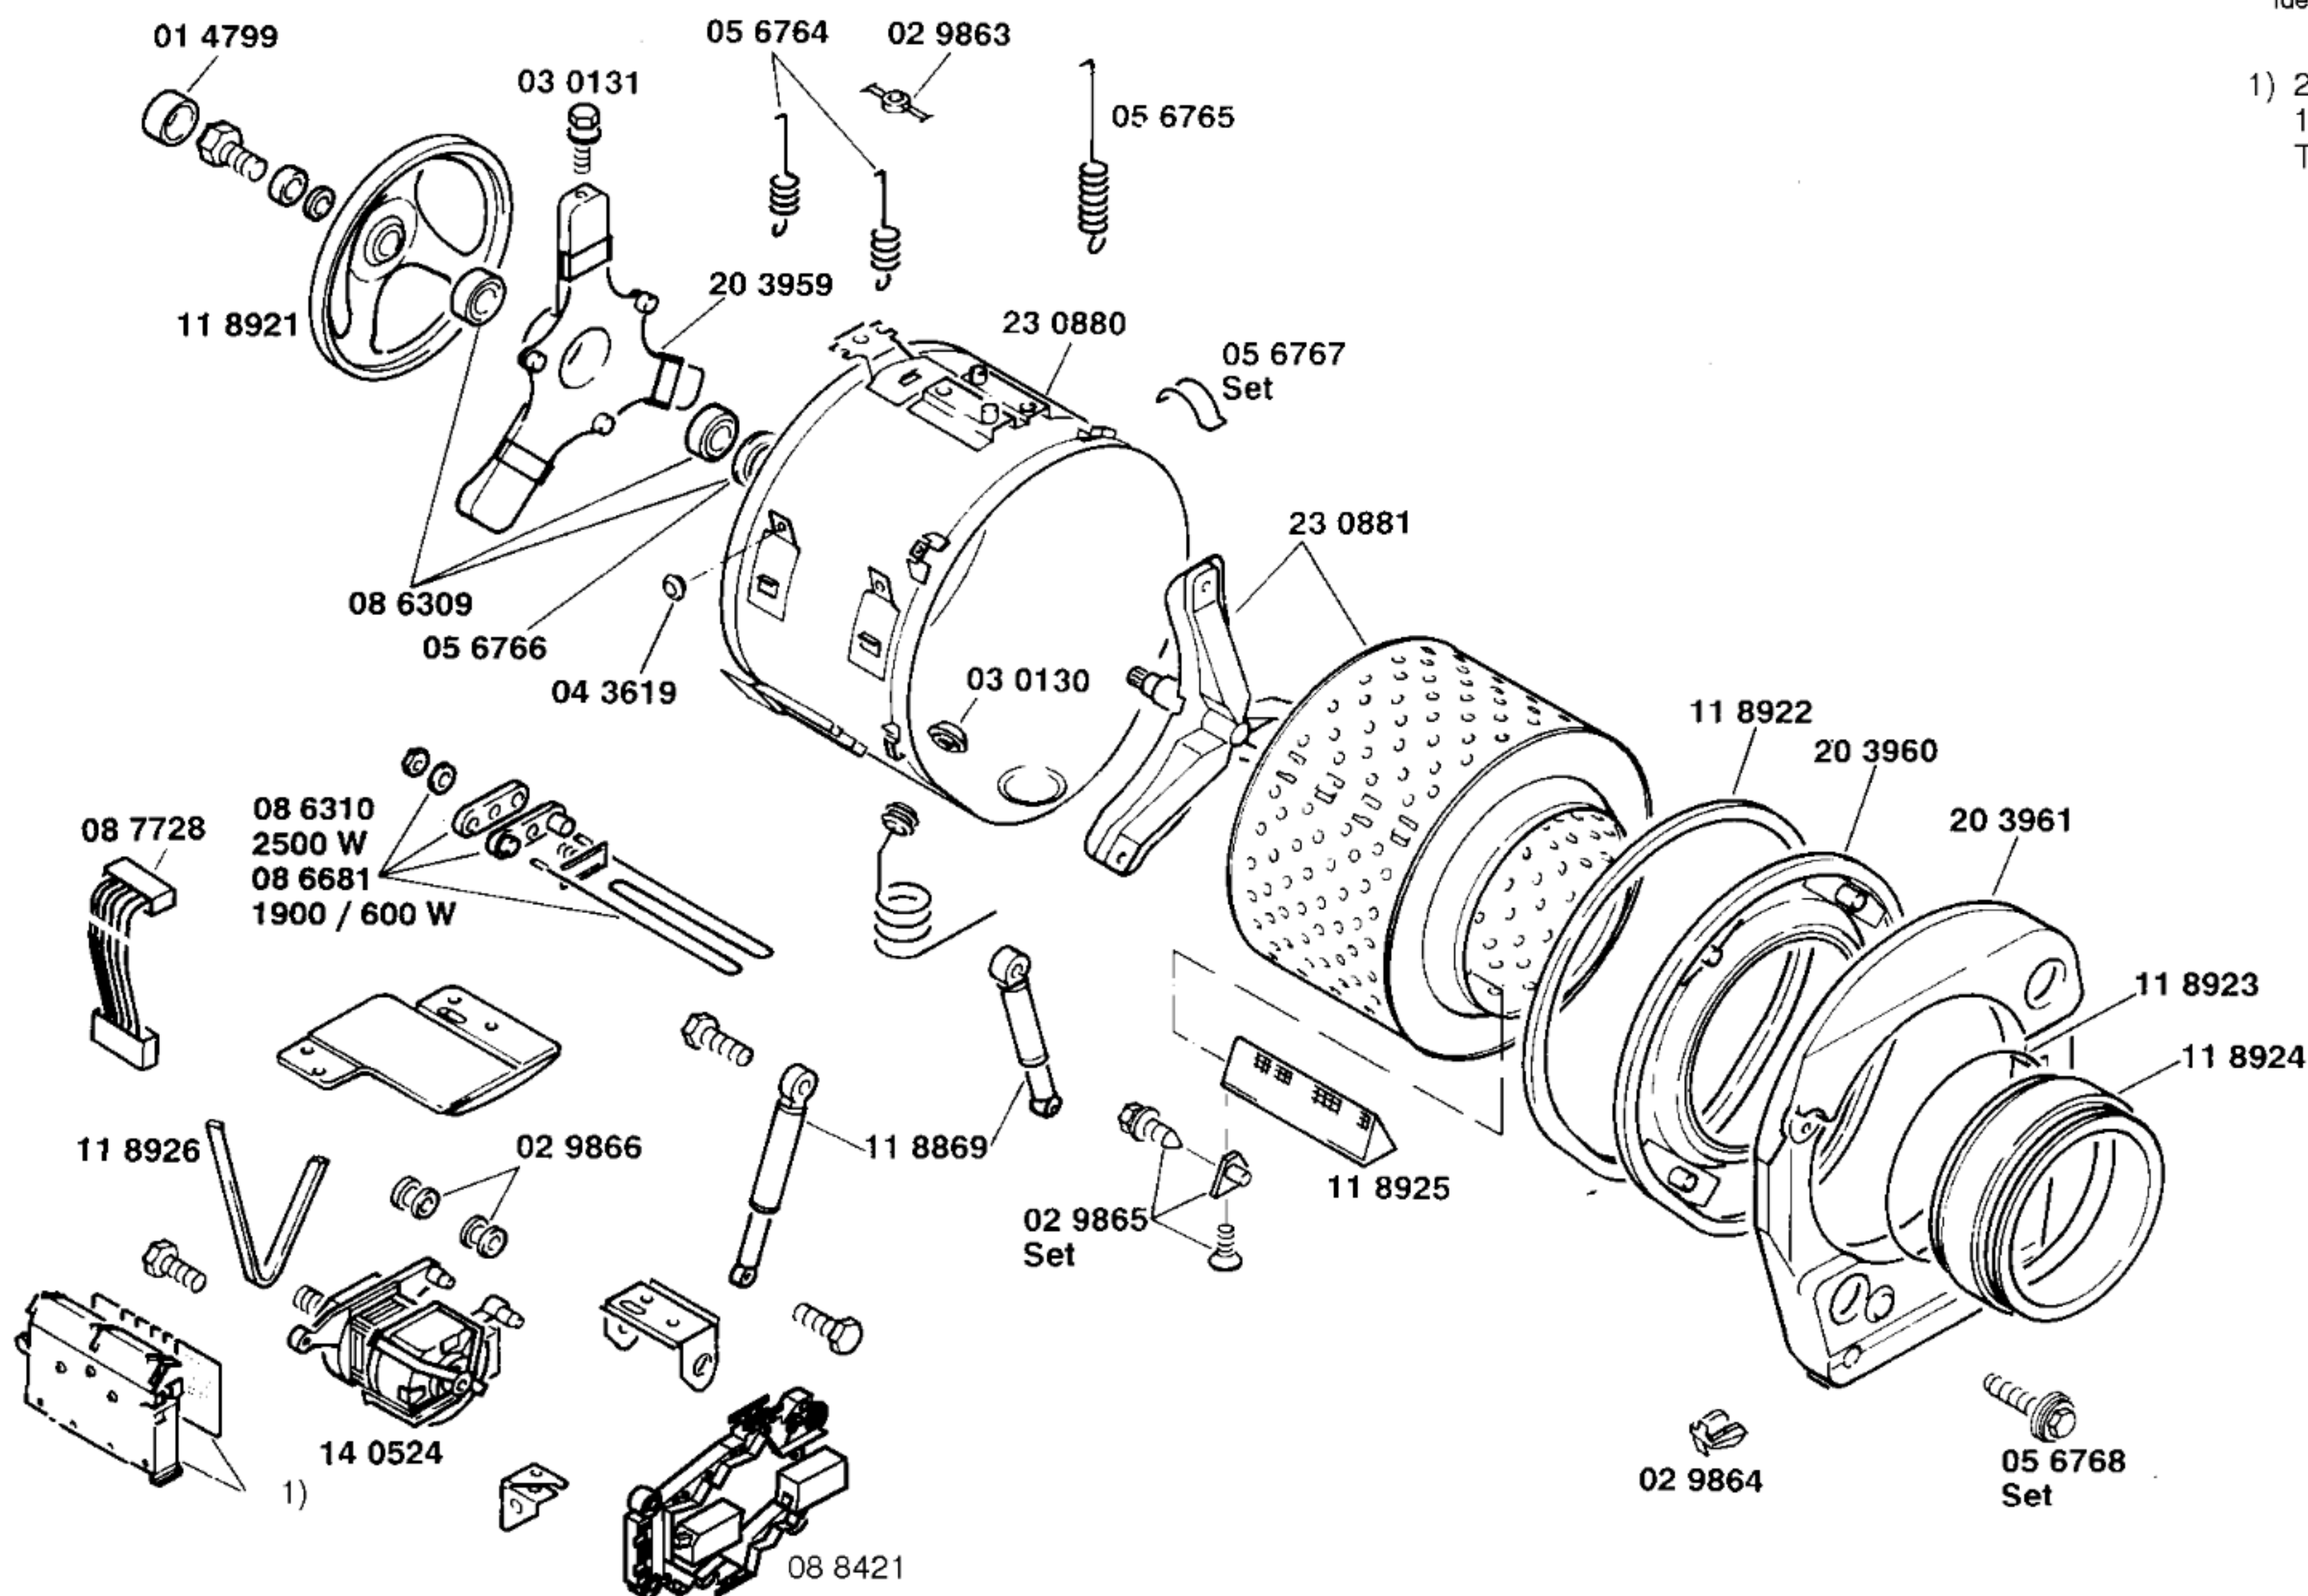**BOSCH**WFK7310-WFK7310/06-D1
WFK7310-WFK7310FG/06-FG1WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
37401) 27 1716
15 5272
Triac-Motorleistung

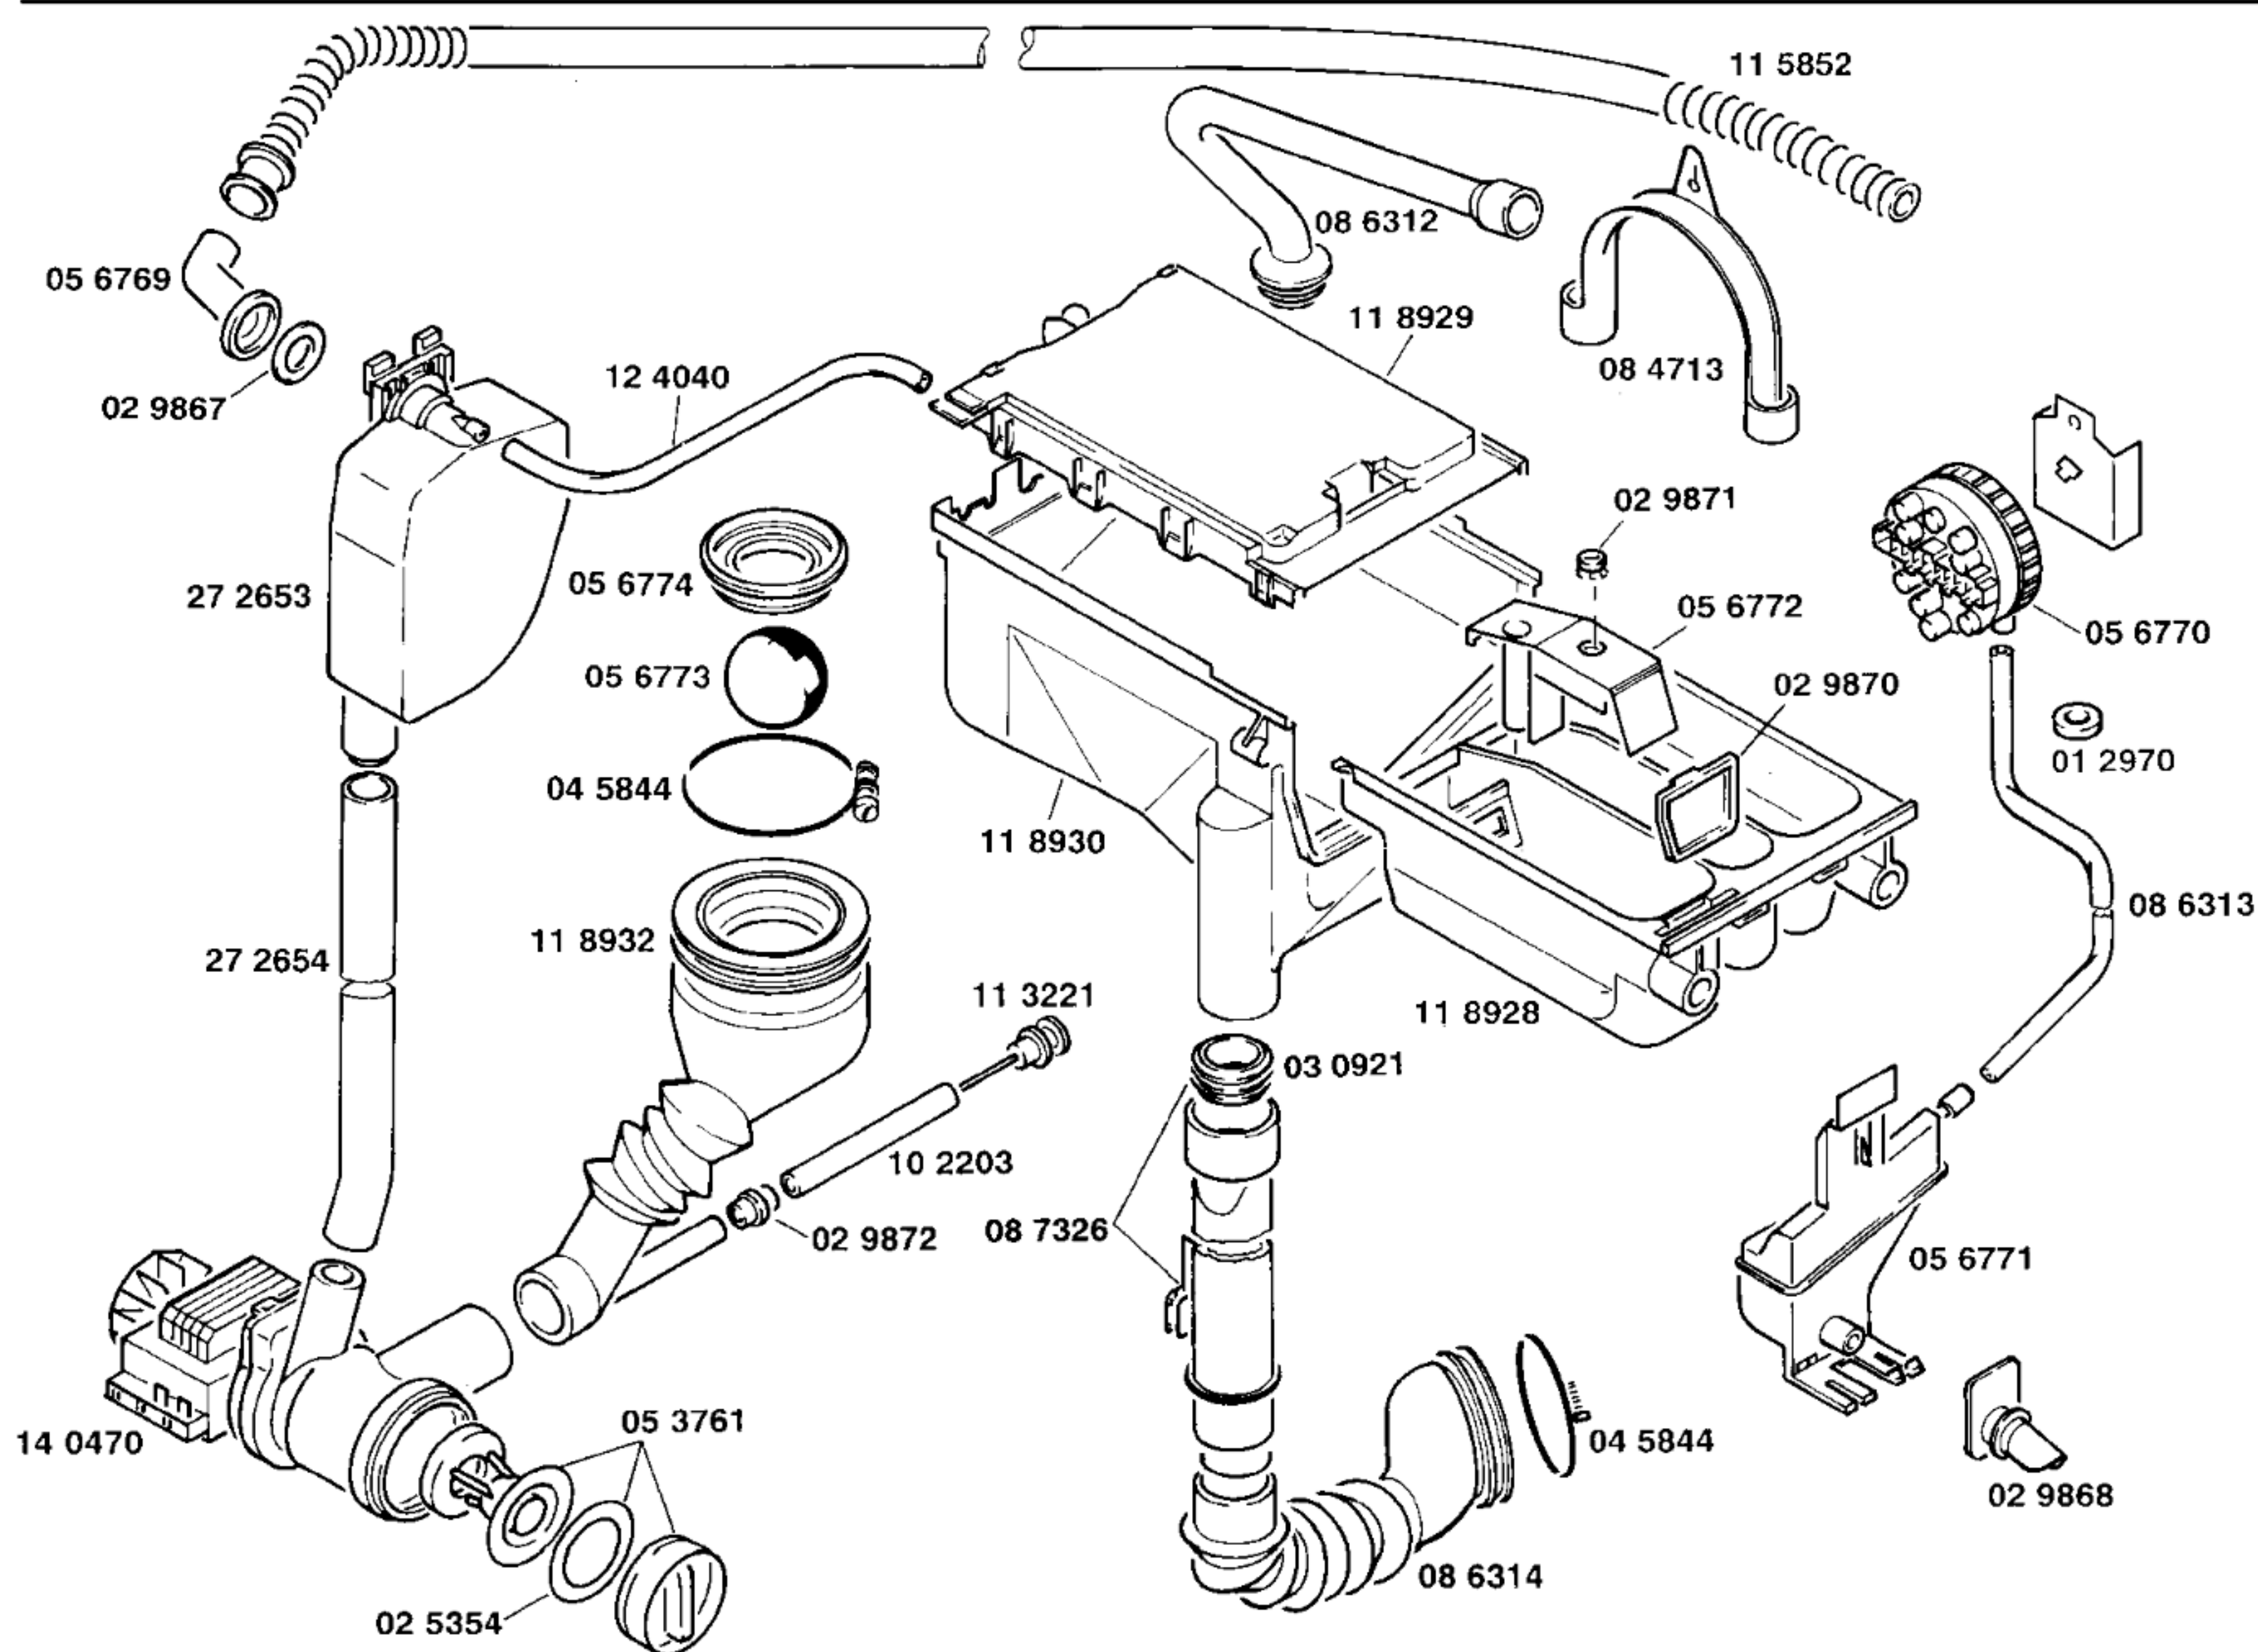

Ident – Nummern – Konstante
3740



BOSCH

WFK7310-WFK7310/06-D1
WFK7310-WFK7310FG/06-FG1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

