


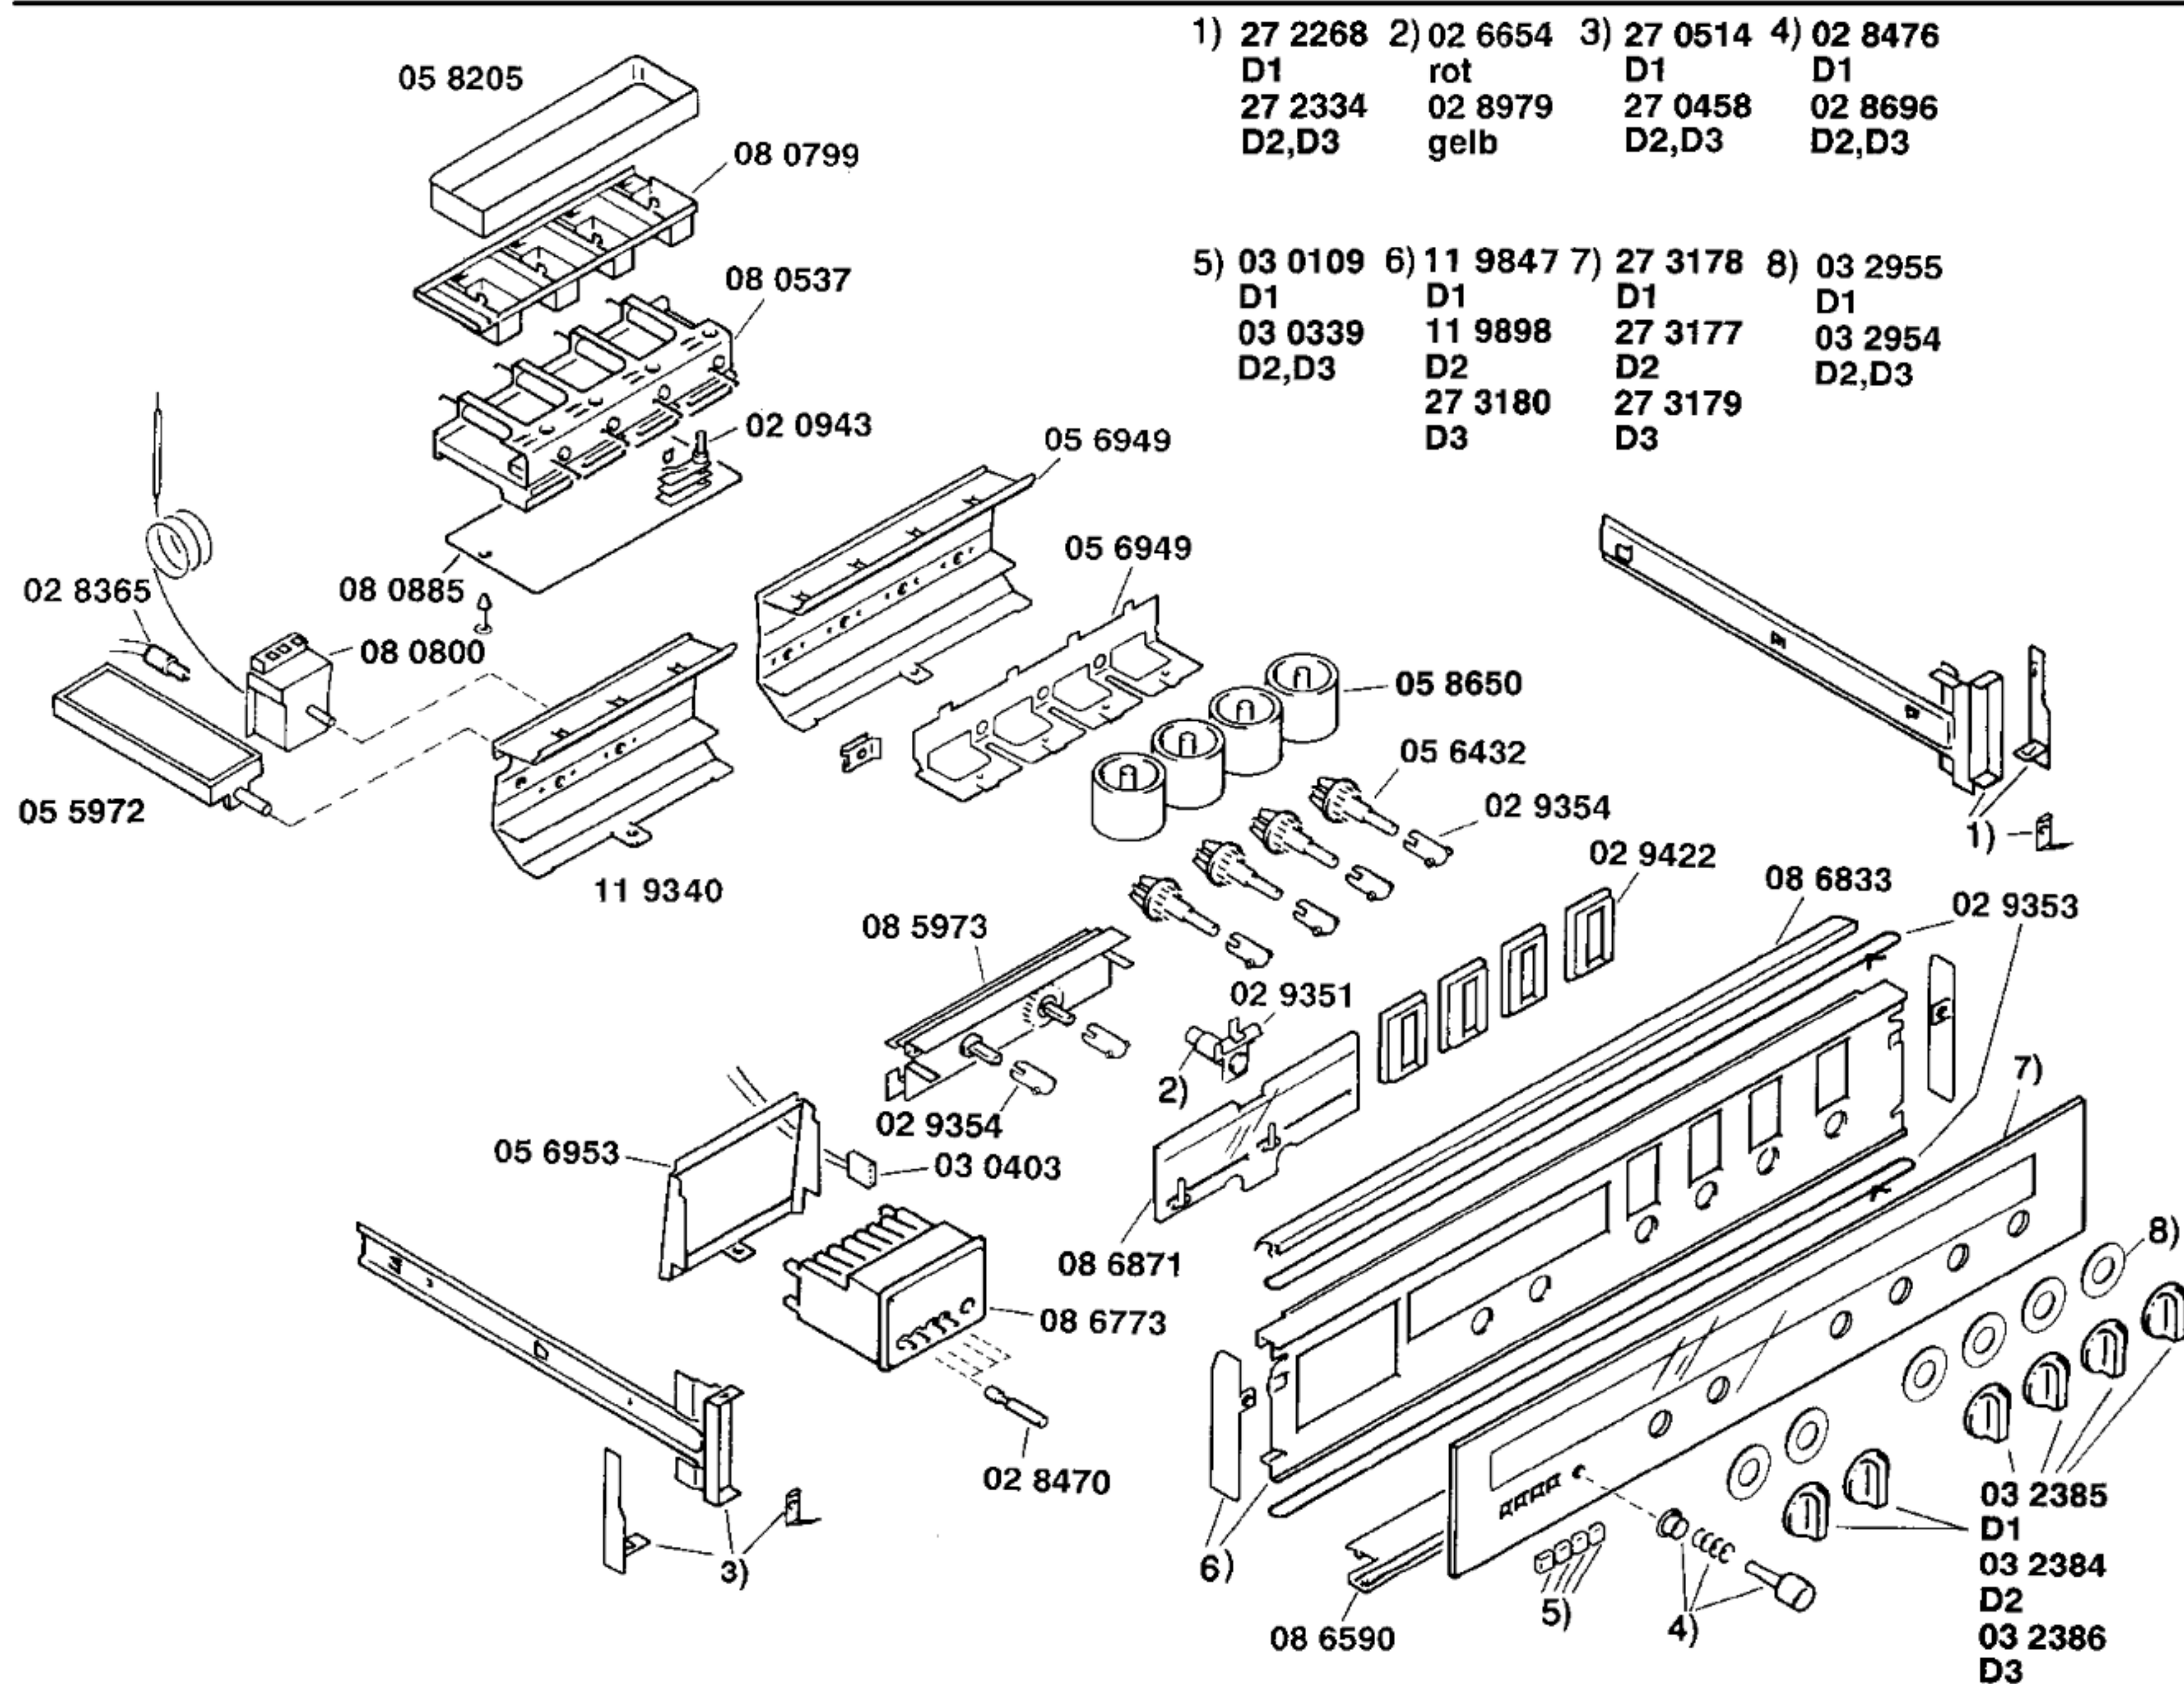

- | | | | |
|--------------------------------------|--|--|--------------------------------------|
| 1) 27 2268
D1
27 2334
D2,D3 | 2) 02 6654
rot
02 8979
gelb | 3) 27 0514
D1
27 0458
D2,D3 | 4) 02 8476
D1
02 8696
D2,D3 |
| 5) 03 0109
D1
03 0339
D2,D3 | 6) 11 9847
D1
11 9898
D2
27 3180
D3 | 7) 27 3178
D1
27 3177
D2
27 3179
D3 | 8) 03 2955
D1
03 2954
D2,D3 |

Gebrauchsanweisung
51 4781
(D,F,GB,I,NL)


Tips und Rezepte
51 3804
(D)


Montageanleitung
51 3664
(D,F,GB,I,NL)

Bratzeitautomatik-
Wählscheibe
51 3359
(D,F,GB,I,NL)

Zubehör:

 HZ 8042
Bratpfanne
HZ 8043
Alu-Backblech
HZ 8044
Spritzschutzpfanne
HZ 8057
Universalpfanne
HZ 8082
Katalyse-Set
HZ 8086
Backblech emailiert
HZ 9150
Glasbräter
HZ1000
Wechselgriff
Messing poliert
HZ10001
Wechselgriff
velour-vernickelt
Wechselgriff
hochglanz-verchromt



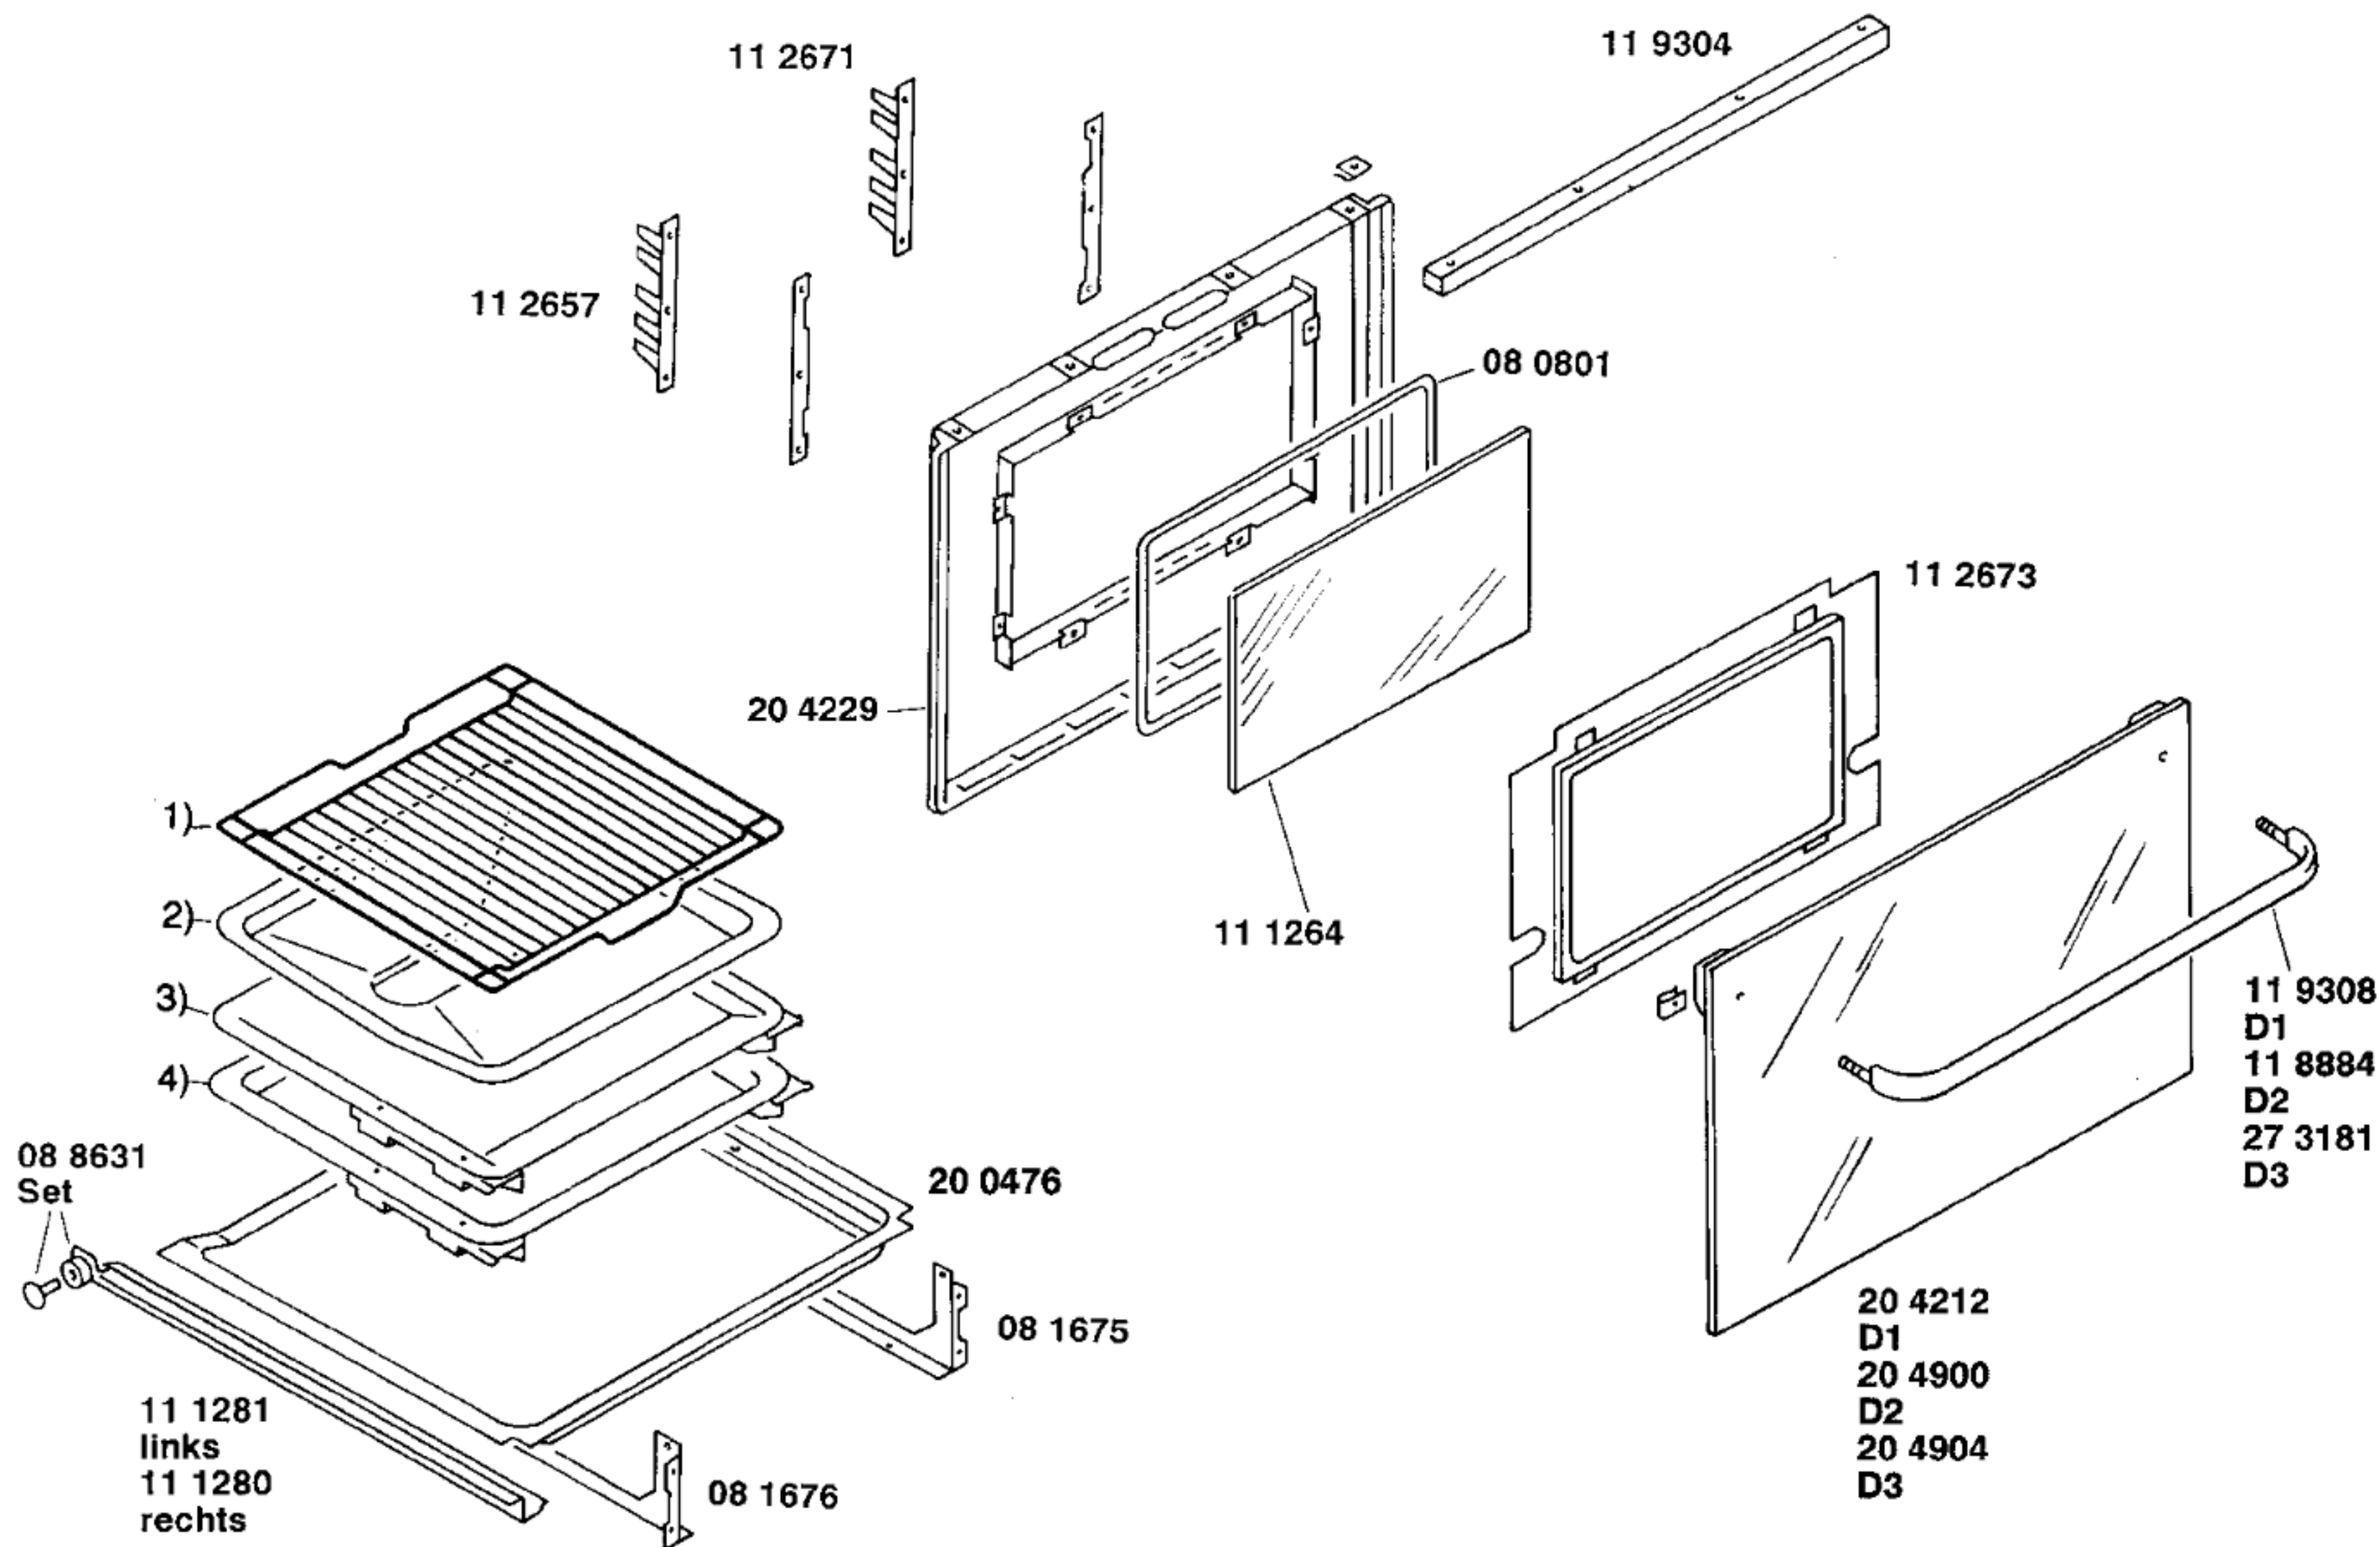

- 1) 11 1284
Rost
- 2) 11 1270
Spritzschutz
- 3) 11 1286
Backblech
- 4) 11 4891
Kombipfanne