


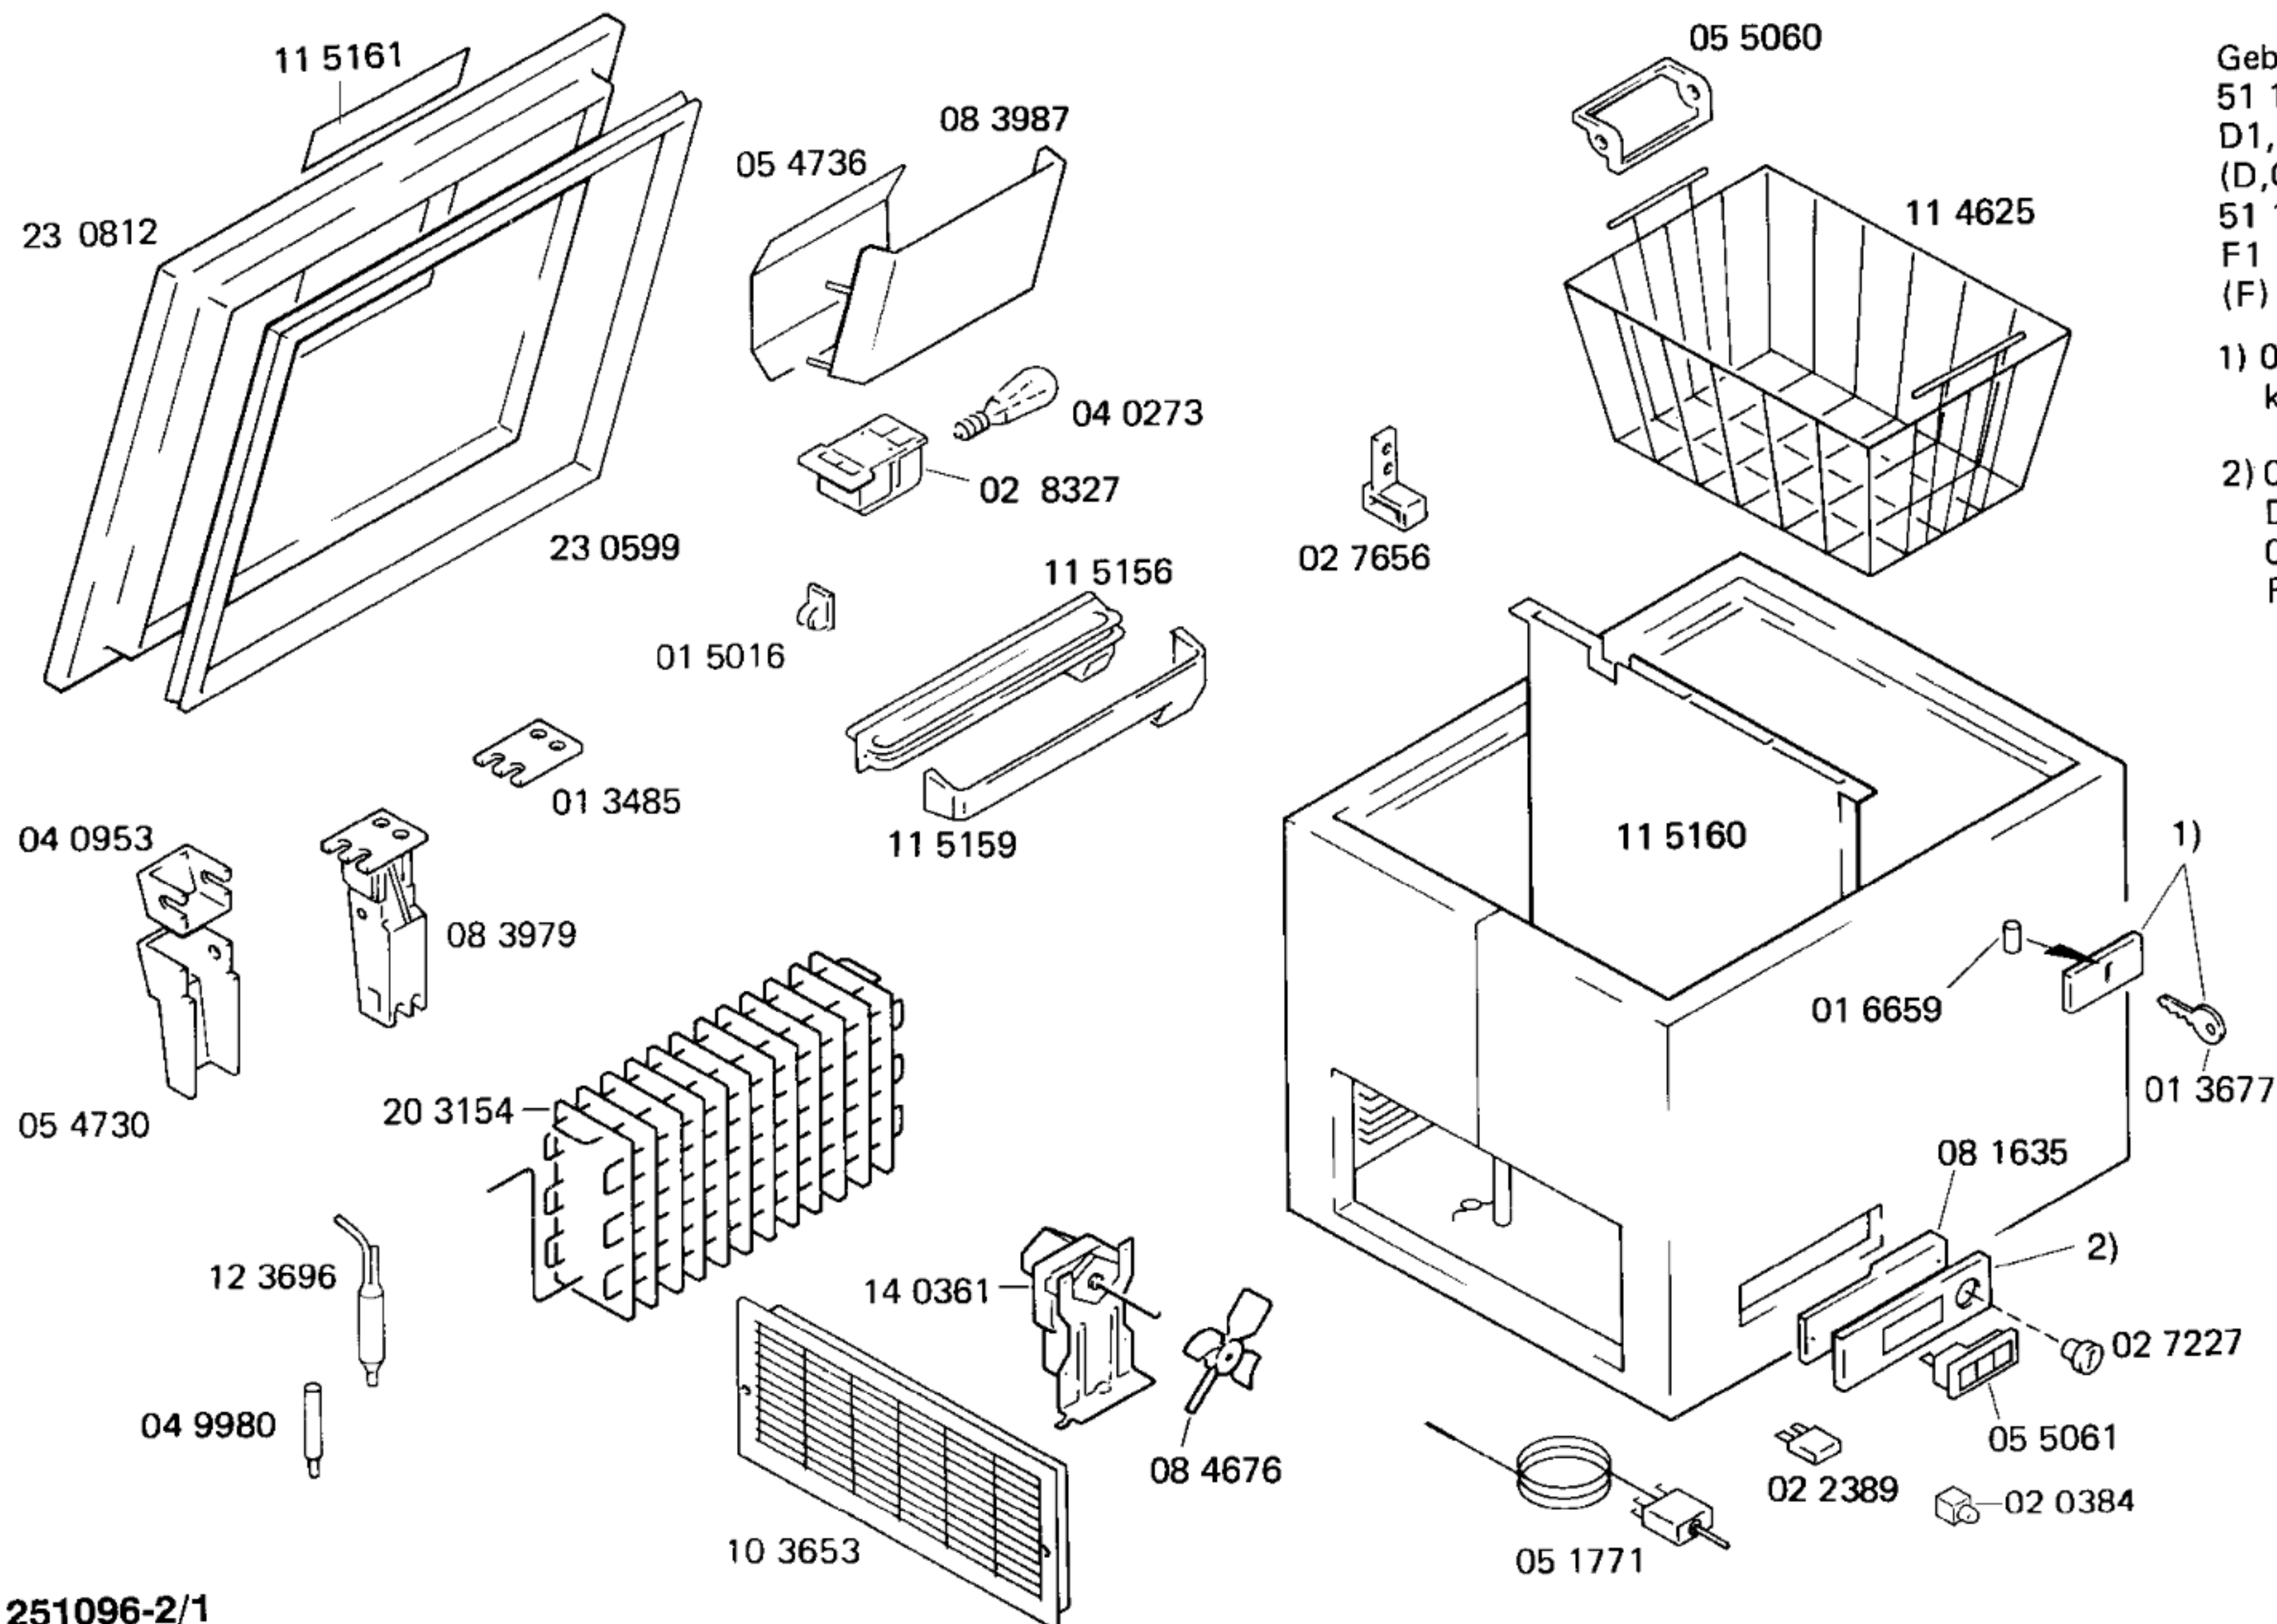

Gebrauchsanweisungen

51 1910

D1, CH1

(D,GB,F,I,NL)


51 1911

F1

(F)

1) 05 0642
kompl.

2) 08 4369
D1, CH1
08 4370
F1

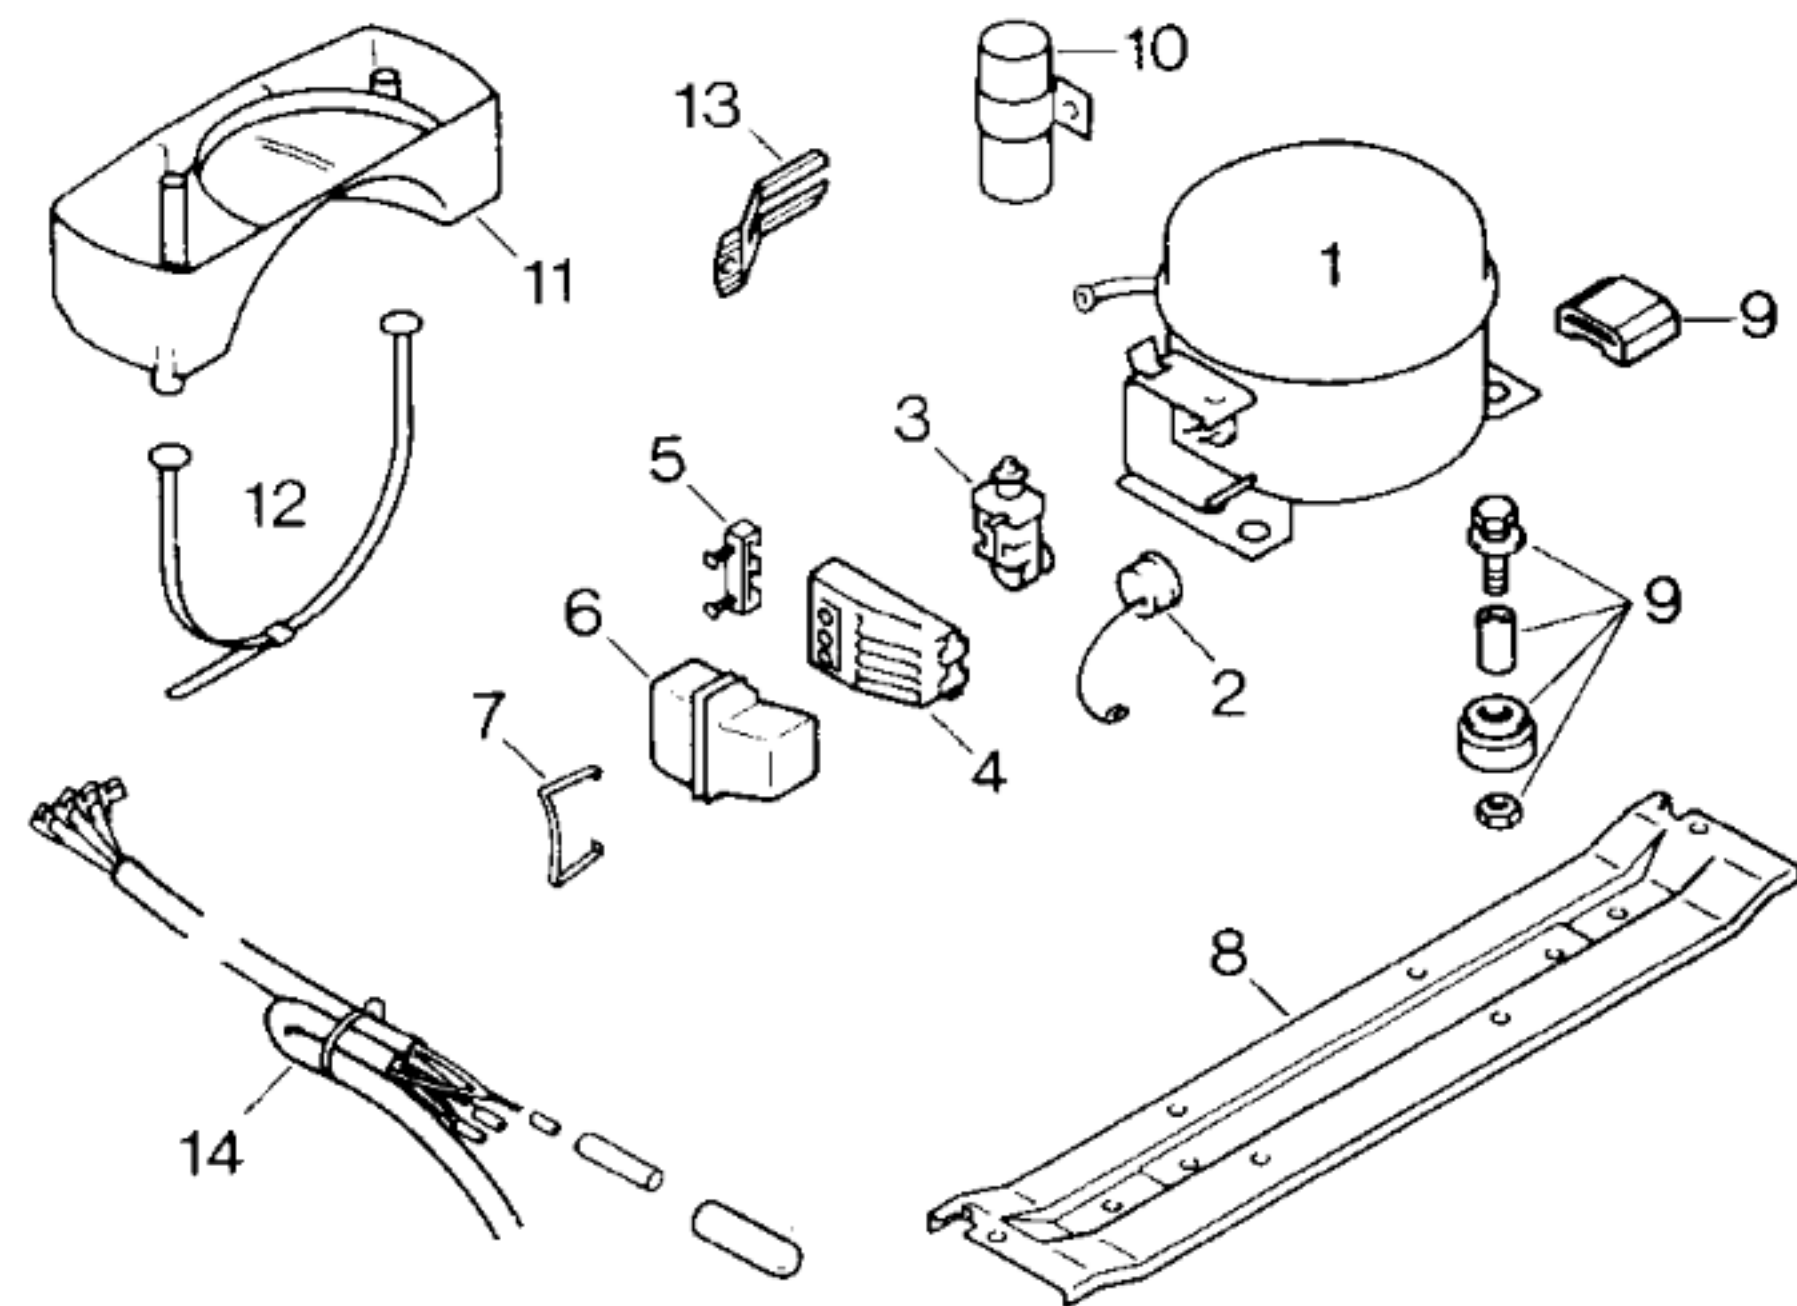

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		FN 91 Q 17 G		
Förderleistung/Delivery/Débit		l/h	V 1633	
Anlaufstrom/Starting current/Cour. de démarrage		A	11,7	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	8,6	
		Hi/aux Ω	30,5	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 54		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	- 24	- 18
Valeurs de commutation		„aus“	- 31	- 24
		(„abtauen“ od.) „alarm“	- 19	- 14
Füllmenge/Fill.quantity/Charge		R12	g	200
Anschlußwert/Conn.load/Puiss. connectée			W	190
Heizung/Heater/Chauffage			Ω	
Widerstand/Resistance/Résistance			W	
Leistung/Power/Puissance				
Ventilator/Blower/Ventilateur			Ω	155
Widerstand/Resistance/Résistance				
Magnetventil/Magnetic valve/Electrovanne			Ω	
Widerstand/Resistance/Résistance			V	
Spannung/Voltage/Tension				

Pos.				
	Matsushita			
1	14 0359			
2				
3	02 6742			
4				
5				
6	05 4733			
7	02 6731			
8				
9	05 0166			
10				
11				
12				
13				
14				