


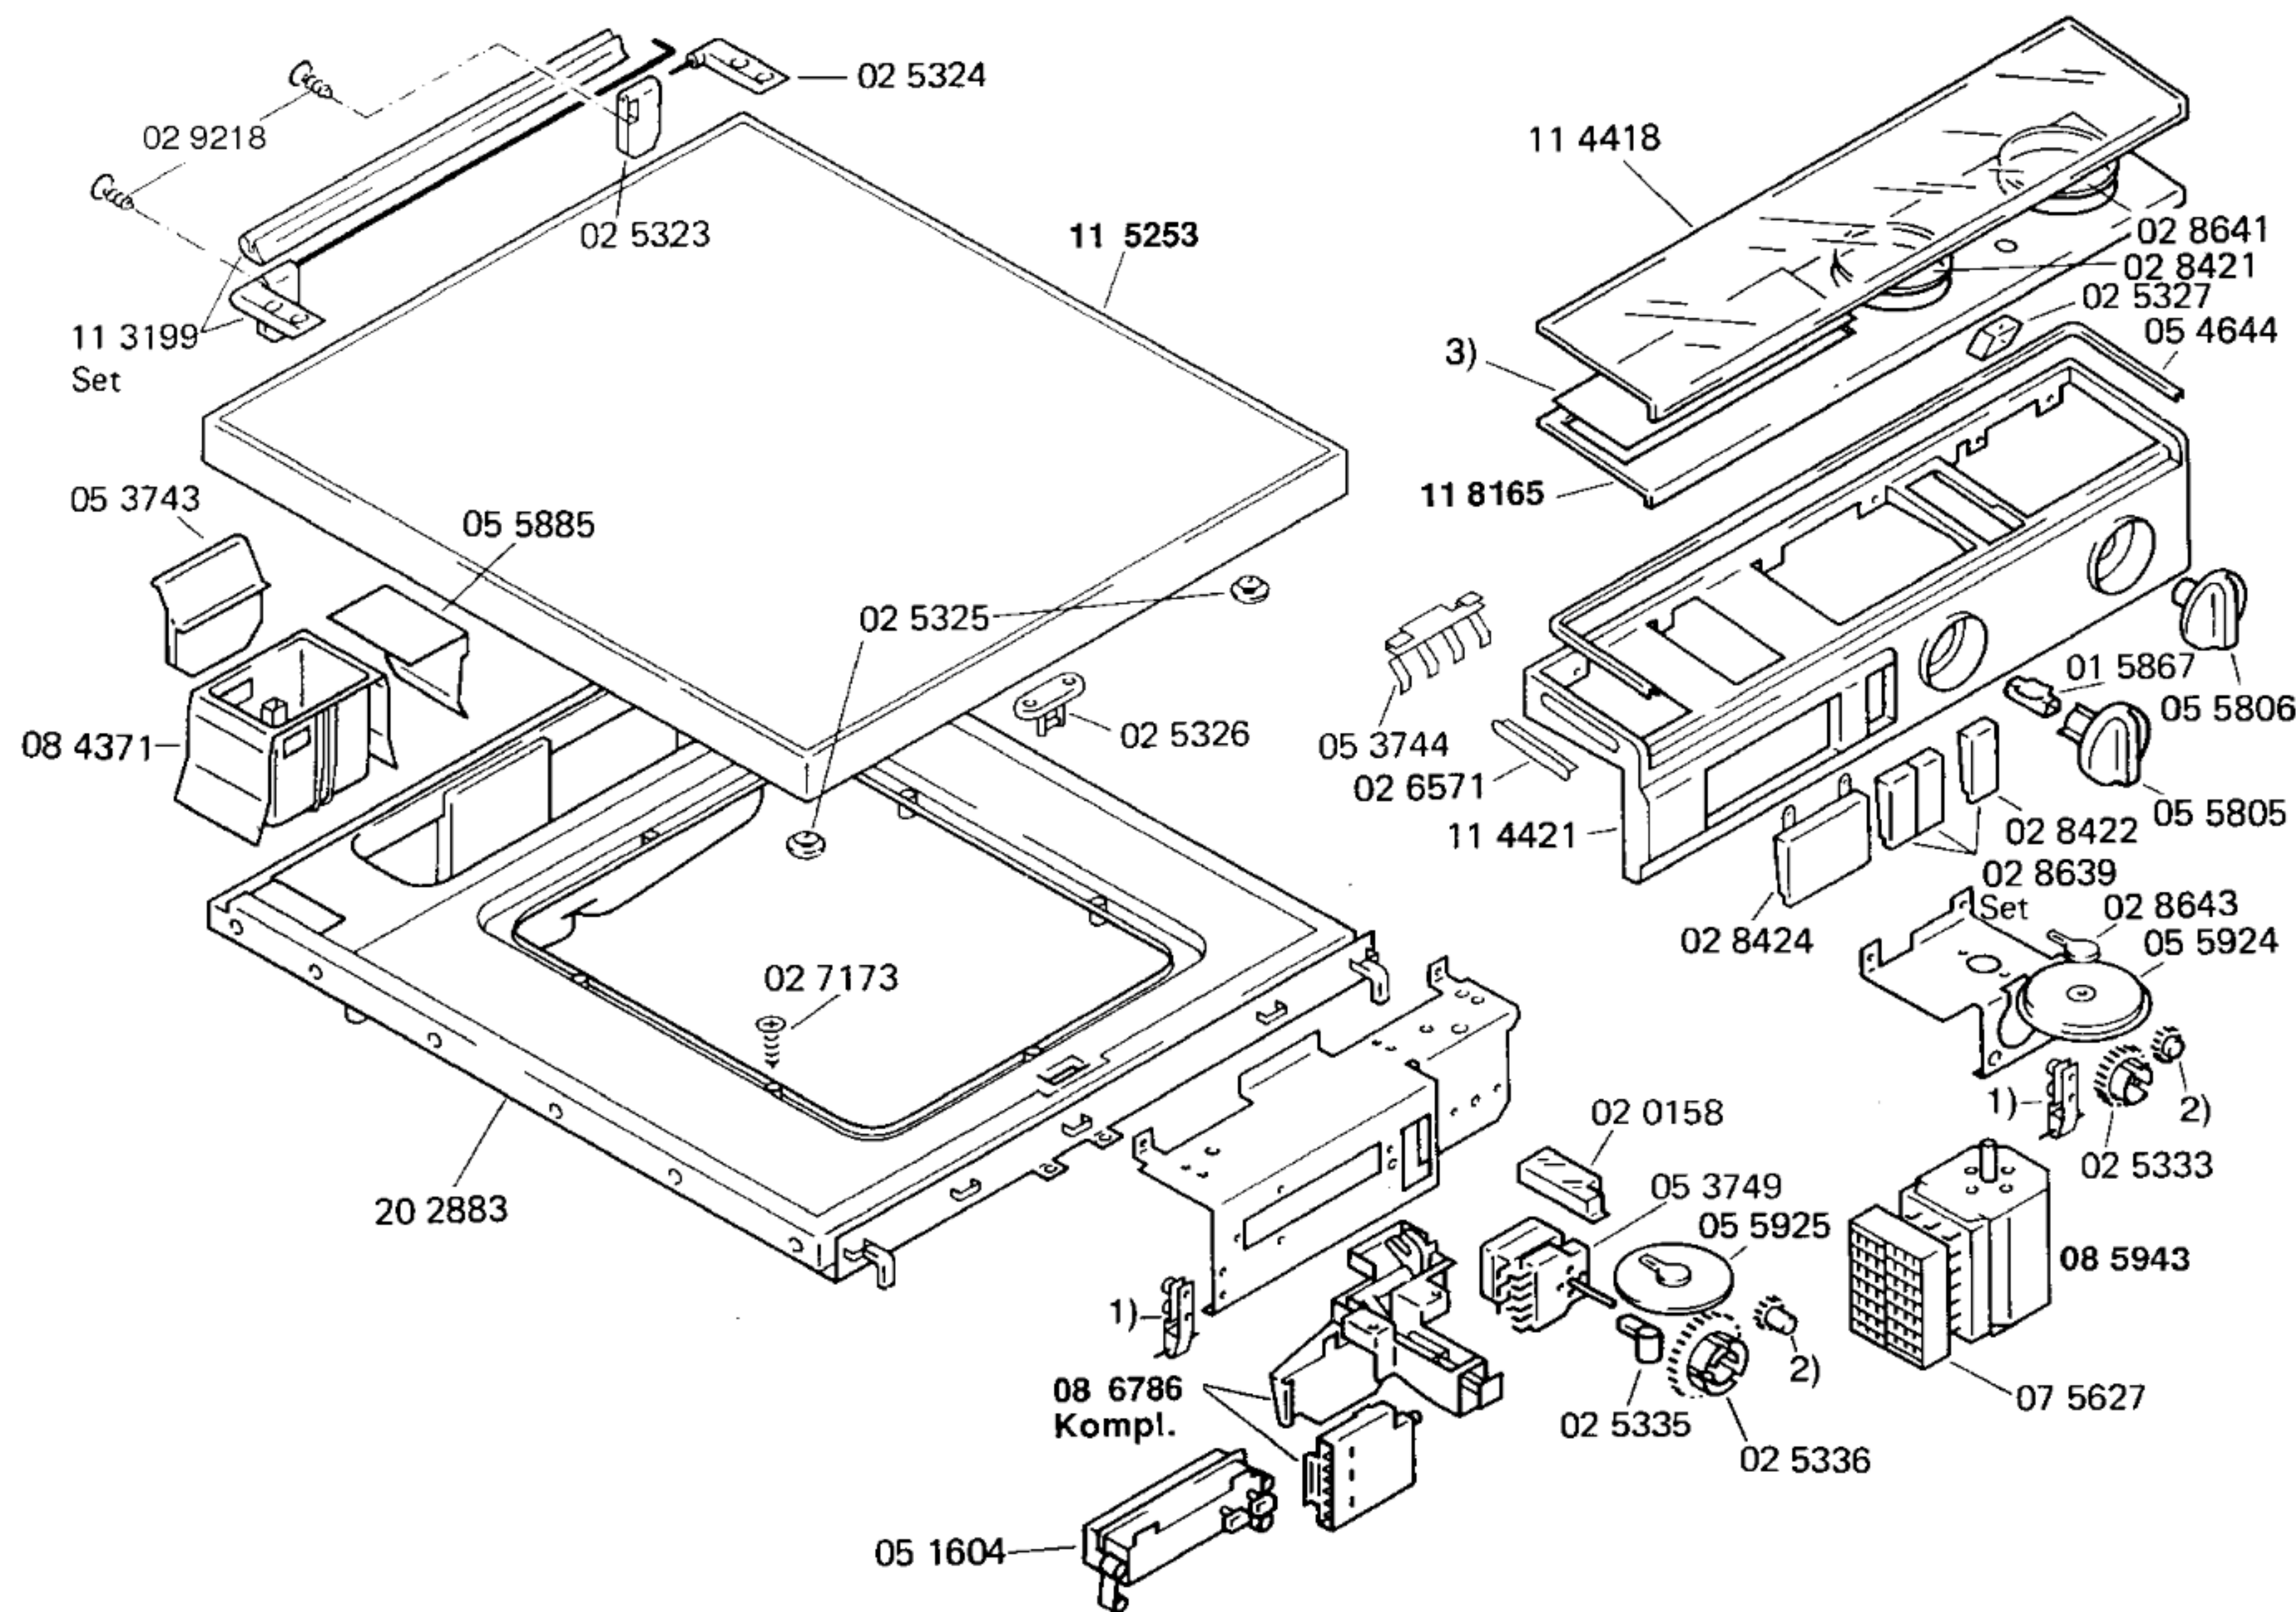

## Aufstellanweisungen

51 3182  
(D,GB,F,I,NL,E)

51 1674  
(D,I,S,DK,N,SF)

## Gebrauchsanweisungen:

51 3321  
(D,GB,F,I,NL,E)


51 3180  
(D,I,S,DK,N,SF)

## Programmtabellen:

51 3177  
(D,I,S,DK,N,SF)


51 3178  
(D,GB,F,I,NL,F)

- 1) 02 5334
- 2) 02 5332
- 3) 08 5638  
(D,Symbole)  
08 5639  
(F,NL)  
08 5640  
(I,GB)  
08 5641  
(S,N)  
08 5642  
(SF,DK)

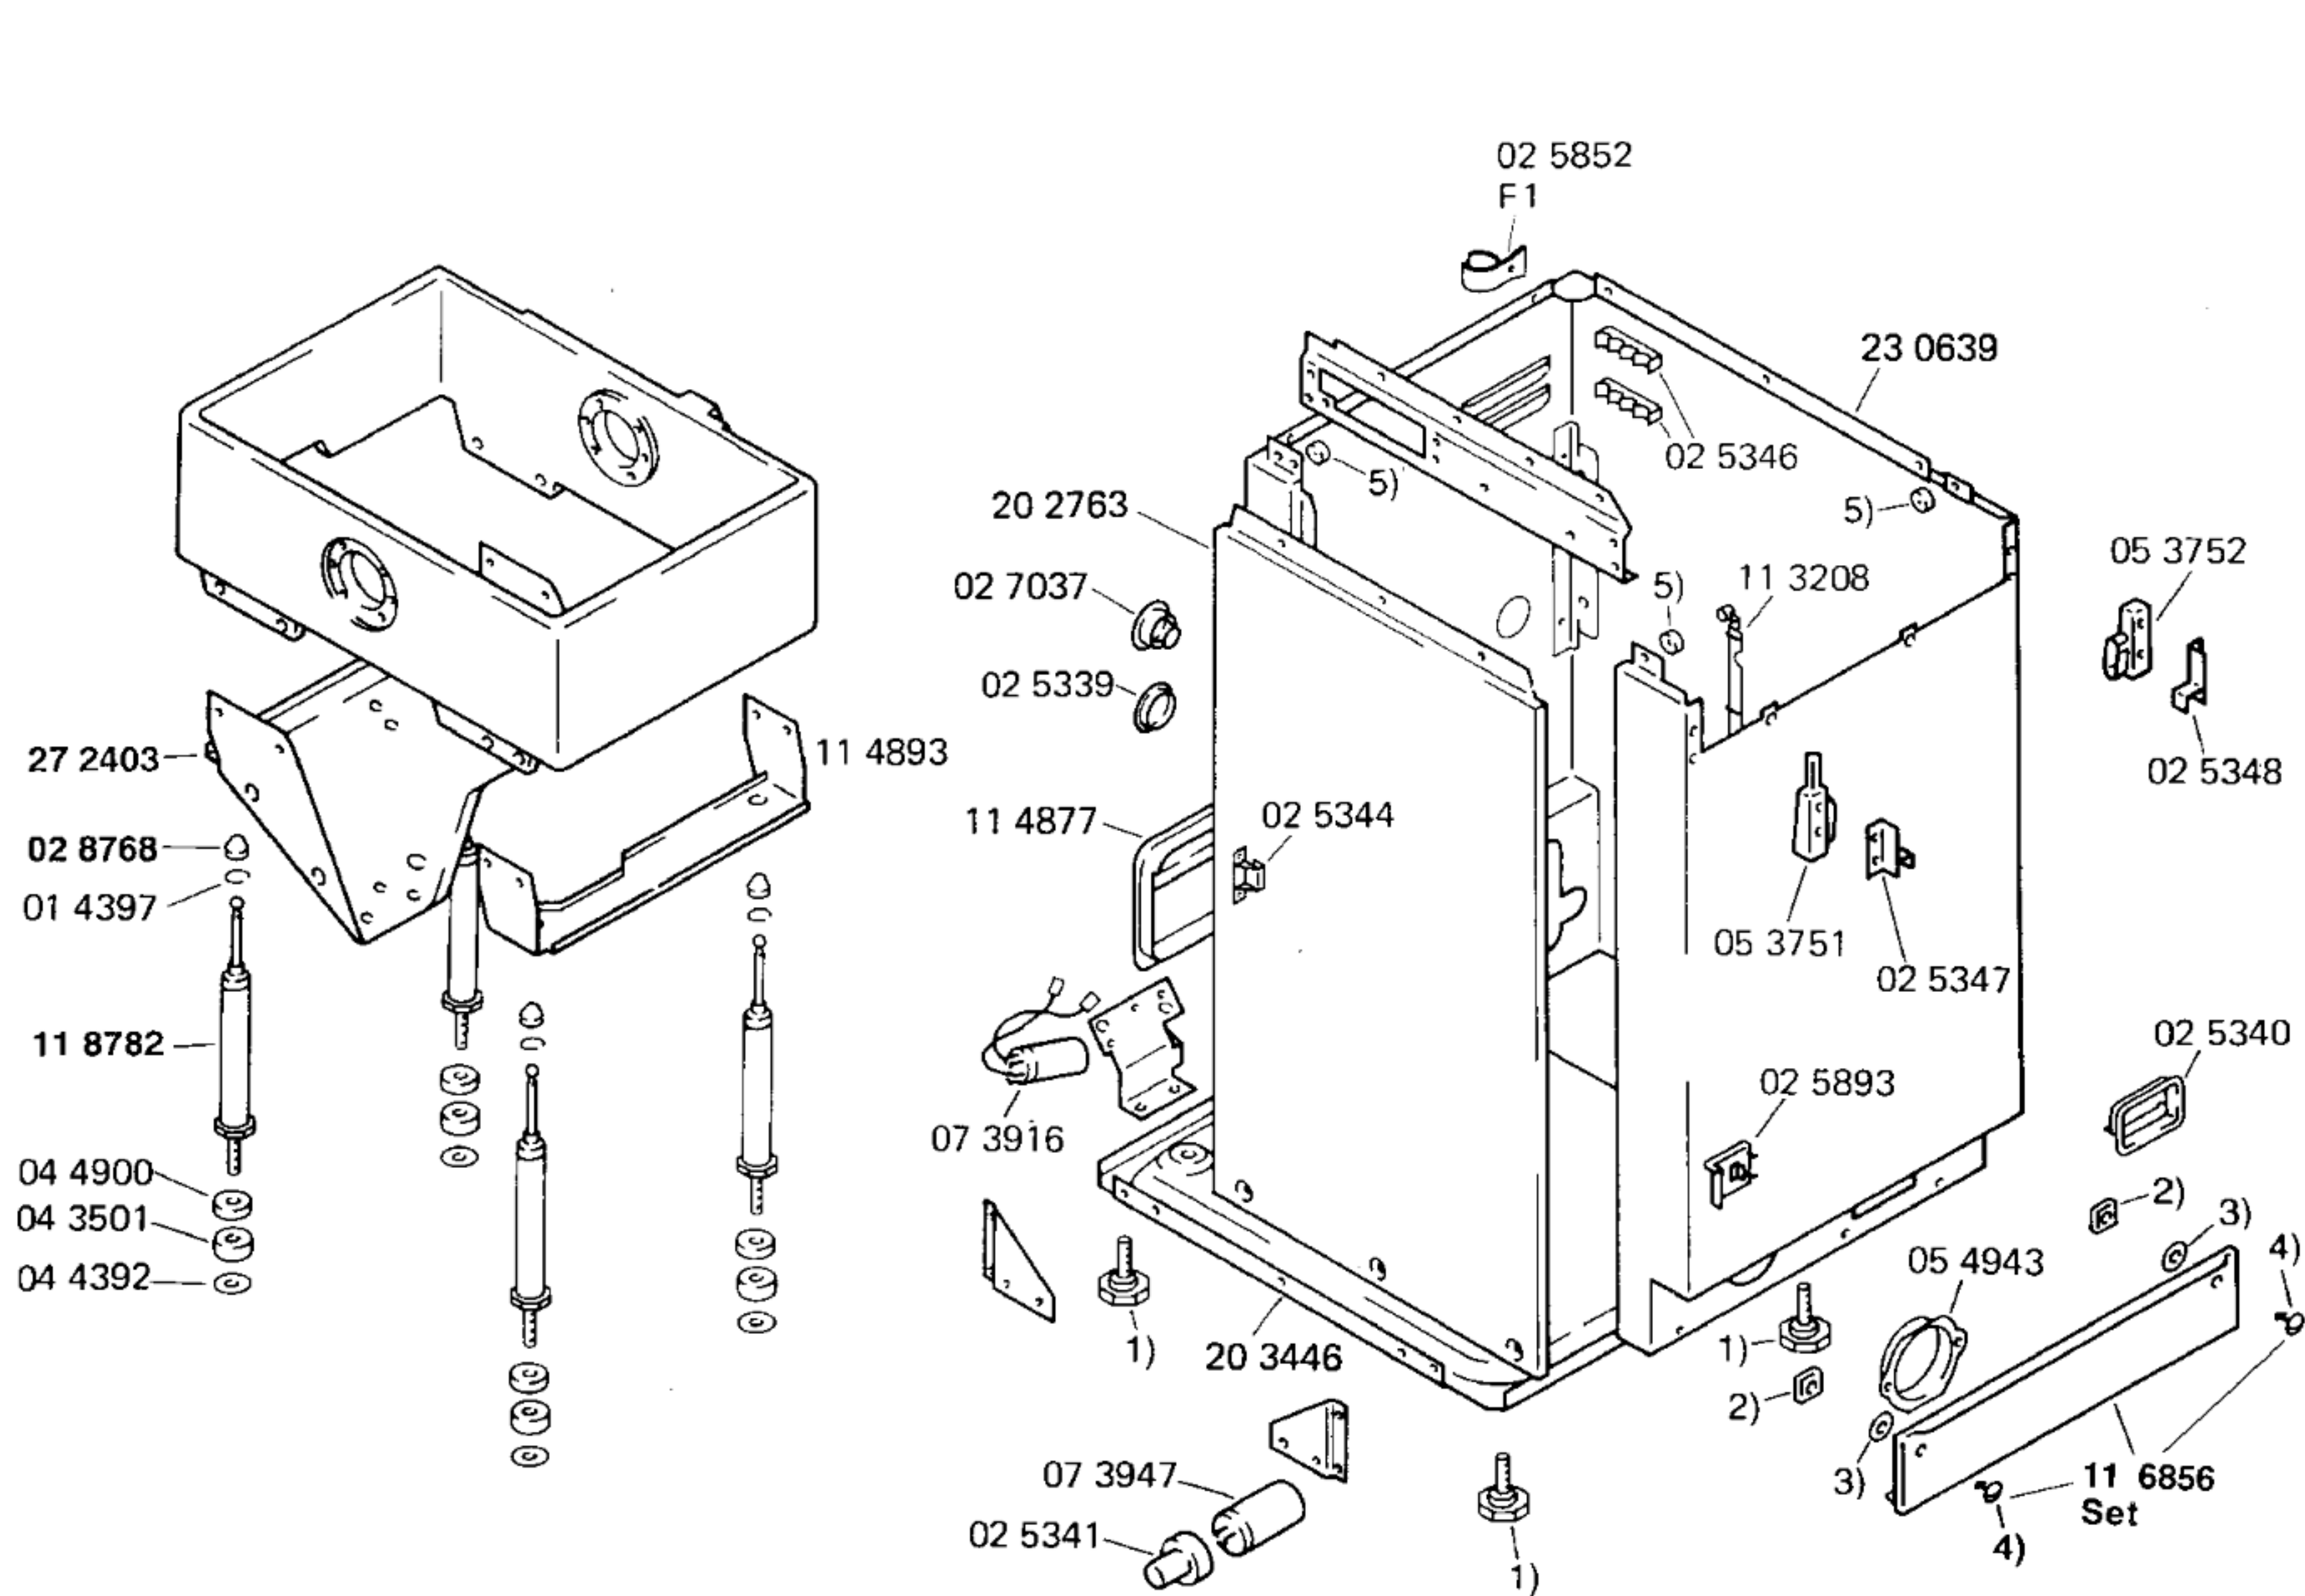


- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8437
- 5) 02 5345



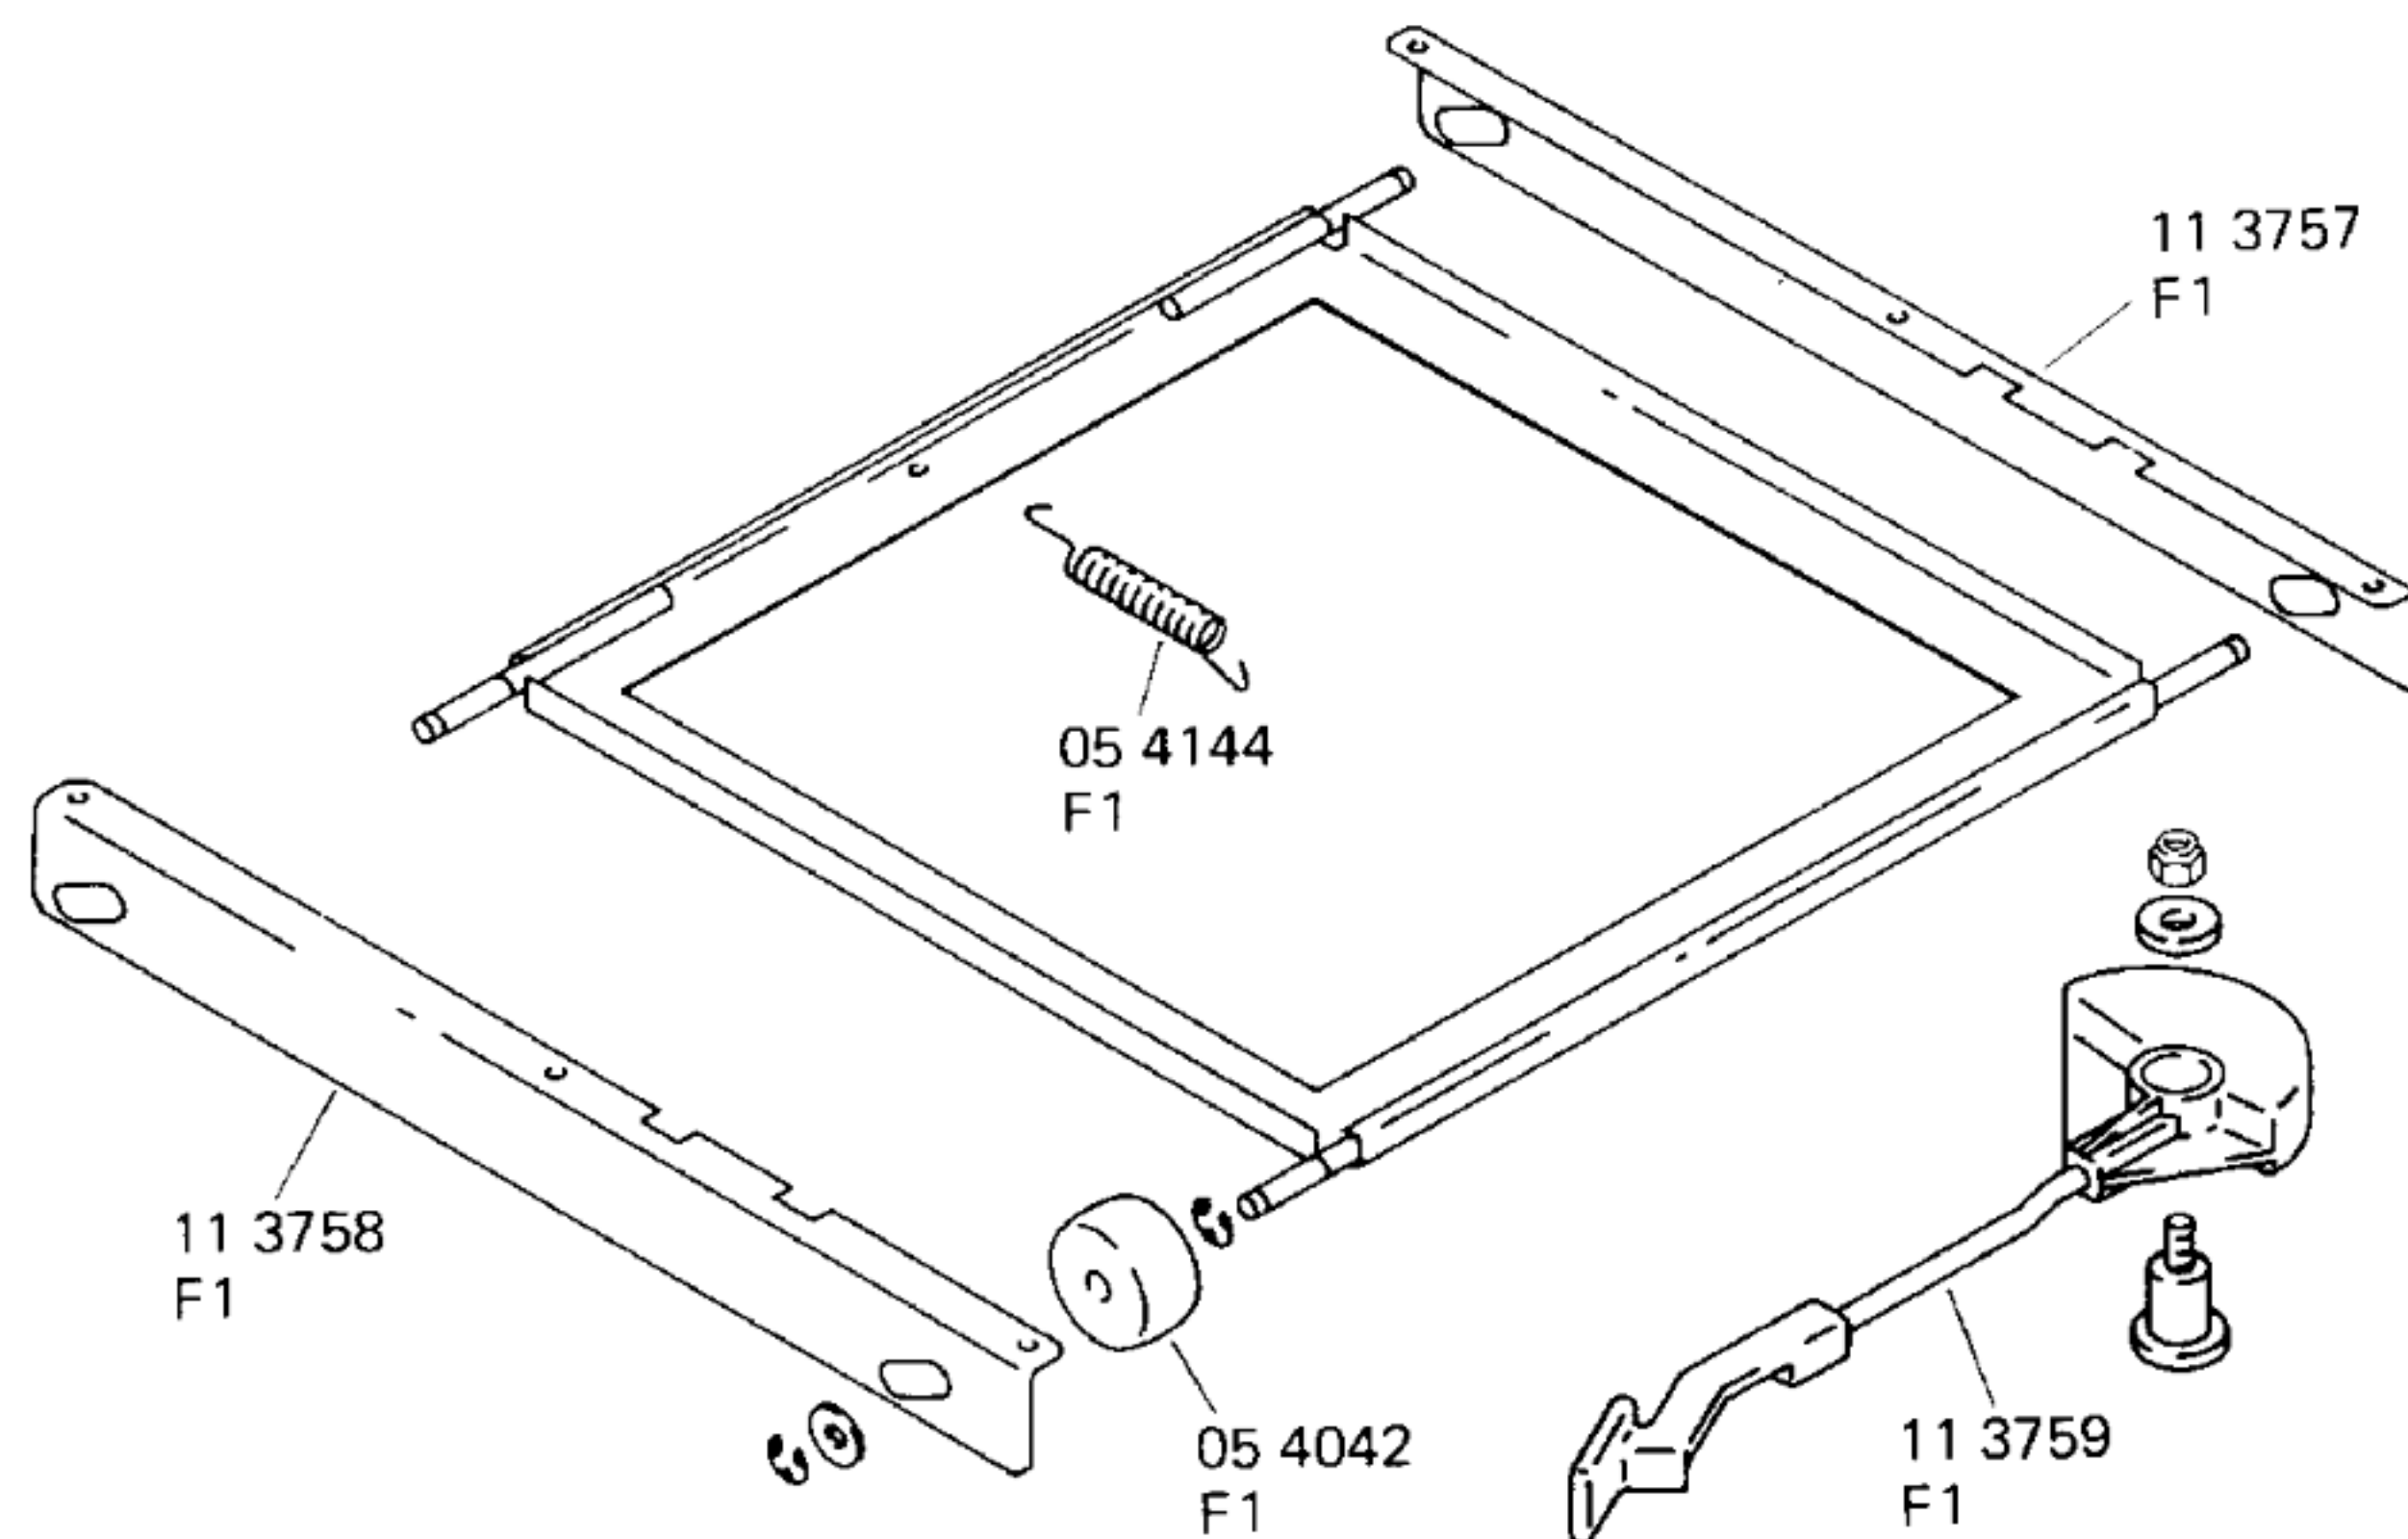



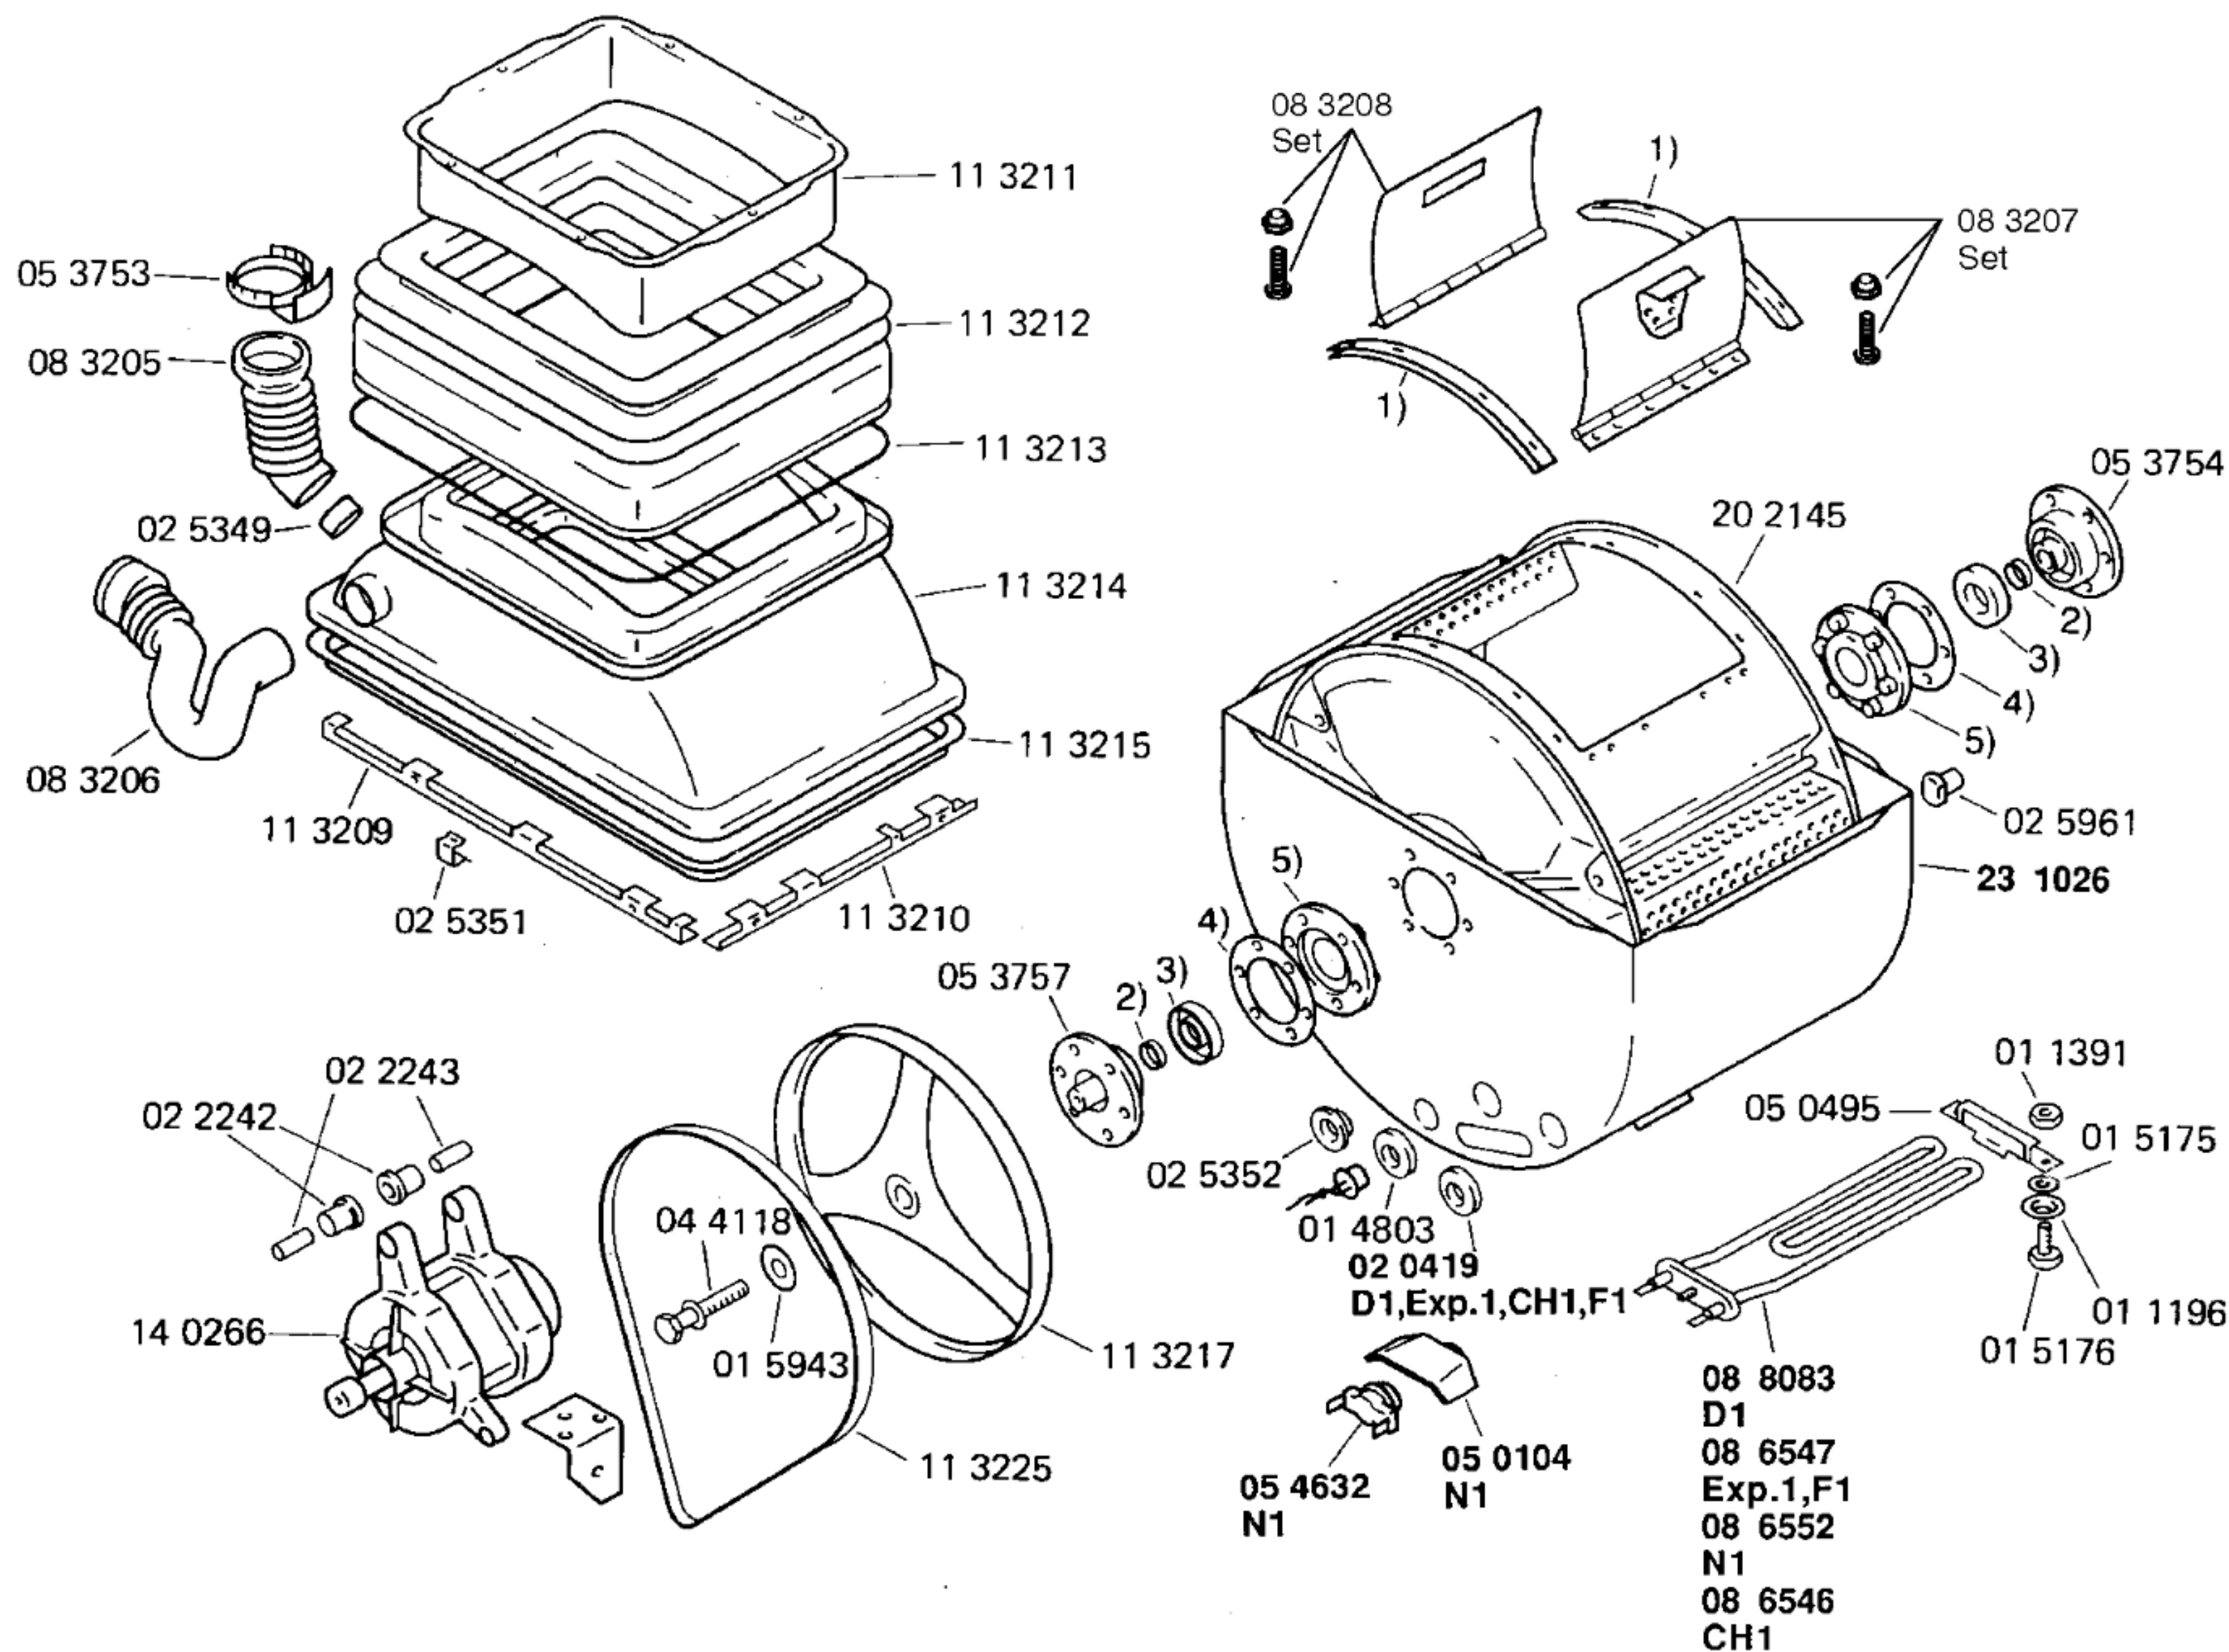

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

