



Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		ELEKTRISCHE TEILE	ELECTRICAL PARTS PIECES ELECTRIQUES
			
IC	75 7937	IR-Receiver	
IC1	73 7323	CXA1081S	
IC3	79 0456	CXD1125Q	
IC4	73 4541	CXK5816PN	
IC5	79 0693	CXA1082BS	
IC6	79 0450	NJM4558S	
IC101	79 0448	CXP5078H	
IC201	79 0449	MN6471	
IC202	79 0451	NJM4565S	
IC203	79 0451	NJM4565S	
IC301	73 8902	KIA78005AP	
IC302	79 0452	NJM7905FA	
IC501	73 7327	BA4560	
			
Q1	73 8861	2SA952C	
Q2	73 8861	2SA952C	
Q3	73 8997	2SC2001C	
Q4	73 8997	2SC2001C	
Q5	73 8861	2SA952C	
Q6	73 8861	2SA952C	
Q7	73 8997	2SC2001C	
Q8	73 8861	2SA952C	
Q9	73 8997	2SC2001C	
Q10	73 8997	2SC2001C	
Q11	73 8861	2SA952C	
Q14	71 4604	2SC1740S	
Q15	79 0228	DTC114YS	
Q16	79 0228	DTC114YS	
Q101	73 8997	2SC2001C	
Q201	71 4604	2SC1740S	
Q202	71 4604	2SC1740S	
Q203	71 4604	2SC1740S	
Q204	71 4604	2SC1740S	
Q205	73 2543	2SA933S-R	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q301	73 2543	2SA933S-R	
Q302	71 4604	2SC1740S	
Q303	73 2543	2SA933S-R	
Q304	73 8861	2SA952C	
Q305	73 8861	2SA952C	
Q701	71 4604	2SC1740S	
Q702	71 4604	2SC1740S	
Q703	71 4604	2SC1740S	
Q704	71 4604	2SC1740S	
Q705	71 4604	2SC1740S	
Q706	71 4604	2SC1740S	
Q707	71 4604	2SC1740S	
Q708	71 4604	2SC1740S	
Q709	71 4604	2SC1740S	
Q710	71 4604	2SC1740S	
Q711	71 4604	2SC1740S	
Q712	71 4604	2SC1740S	
Q713	71 4604	2SC1740S	
			
D102	73 1459	1SS133-T-77	
D301	73 1459	1SS133-T-77	
D302	73 1459	1SS133-T-77	
D303	73 1459	1SS133-T-77	
D304	73 8905	Gleichrichterdiode W005 (BP151M) (B050L)	rectifier
D305	79 0455	MTZ7,5C	
D306	79 0455	MTZ7,5C	
			
VR1	79 0454	20K	
VR2	73 8907	10K	
VR3	79 0454	20K	
VR4	79 0454	20K	
VR5	79 0453	2K	
VR501	73 8879	Volume 2x50K	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
	73 8938	Netzschalter	power switch
	79 0472	Tippschalter	tact switch
		DIVERSE TEILE	DIVERSES PARTS PIECES DIVERSE
	79 0471	Lampe 20mm, 9V 0.1A	lamp
	73 8913	Kopfhörerbuchse	headphone jack
	73 8914	Buchse 2P	jack 2P
	79 0466	Stecker 7P	plug 7P/fiche
	79 0467	Stecker 3P	plug 3P/fiche
	53 0772	Bedienungsanleitung (RA306R4)	instruction book mode d'emploi
	53 0836	Bedienungsanleitung (RA300M4)	instruction book mode d'emploi
	53 5457	Service-Schrift	service manual brochure service

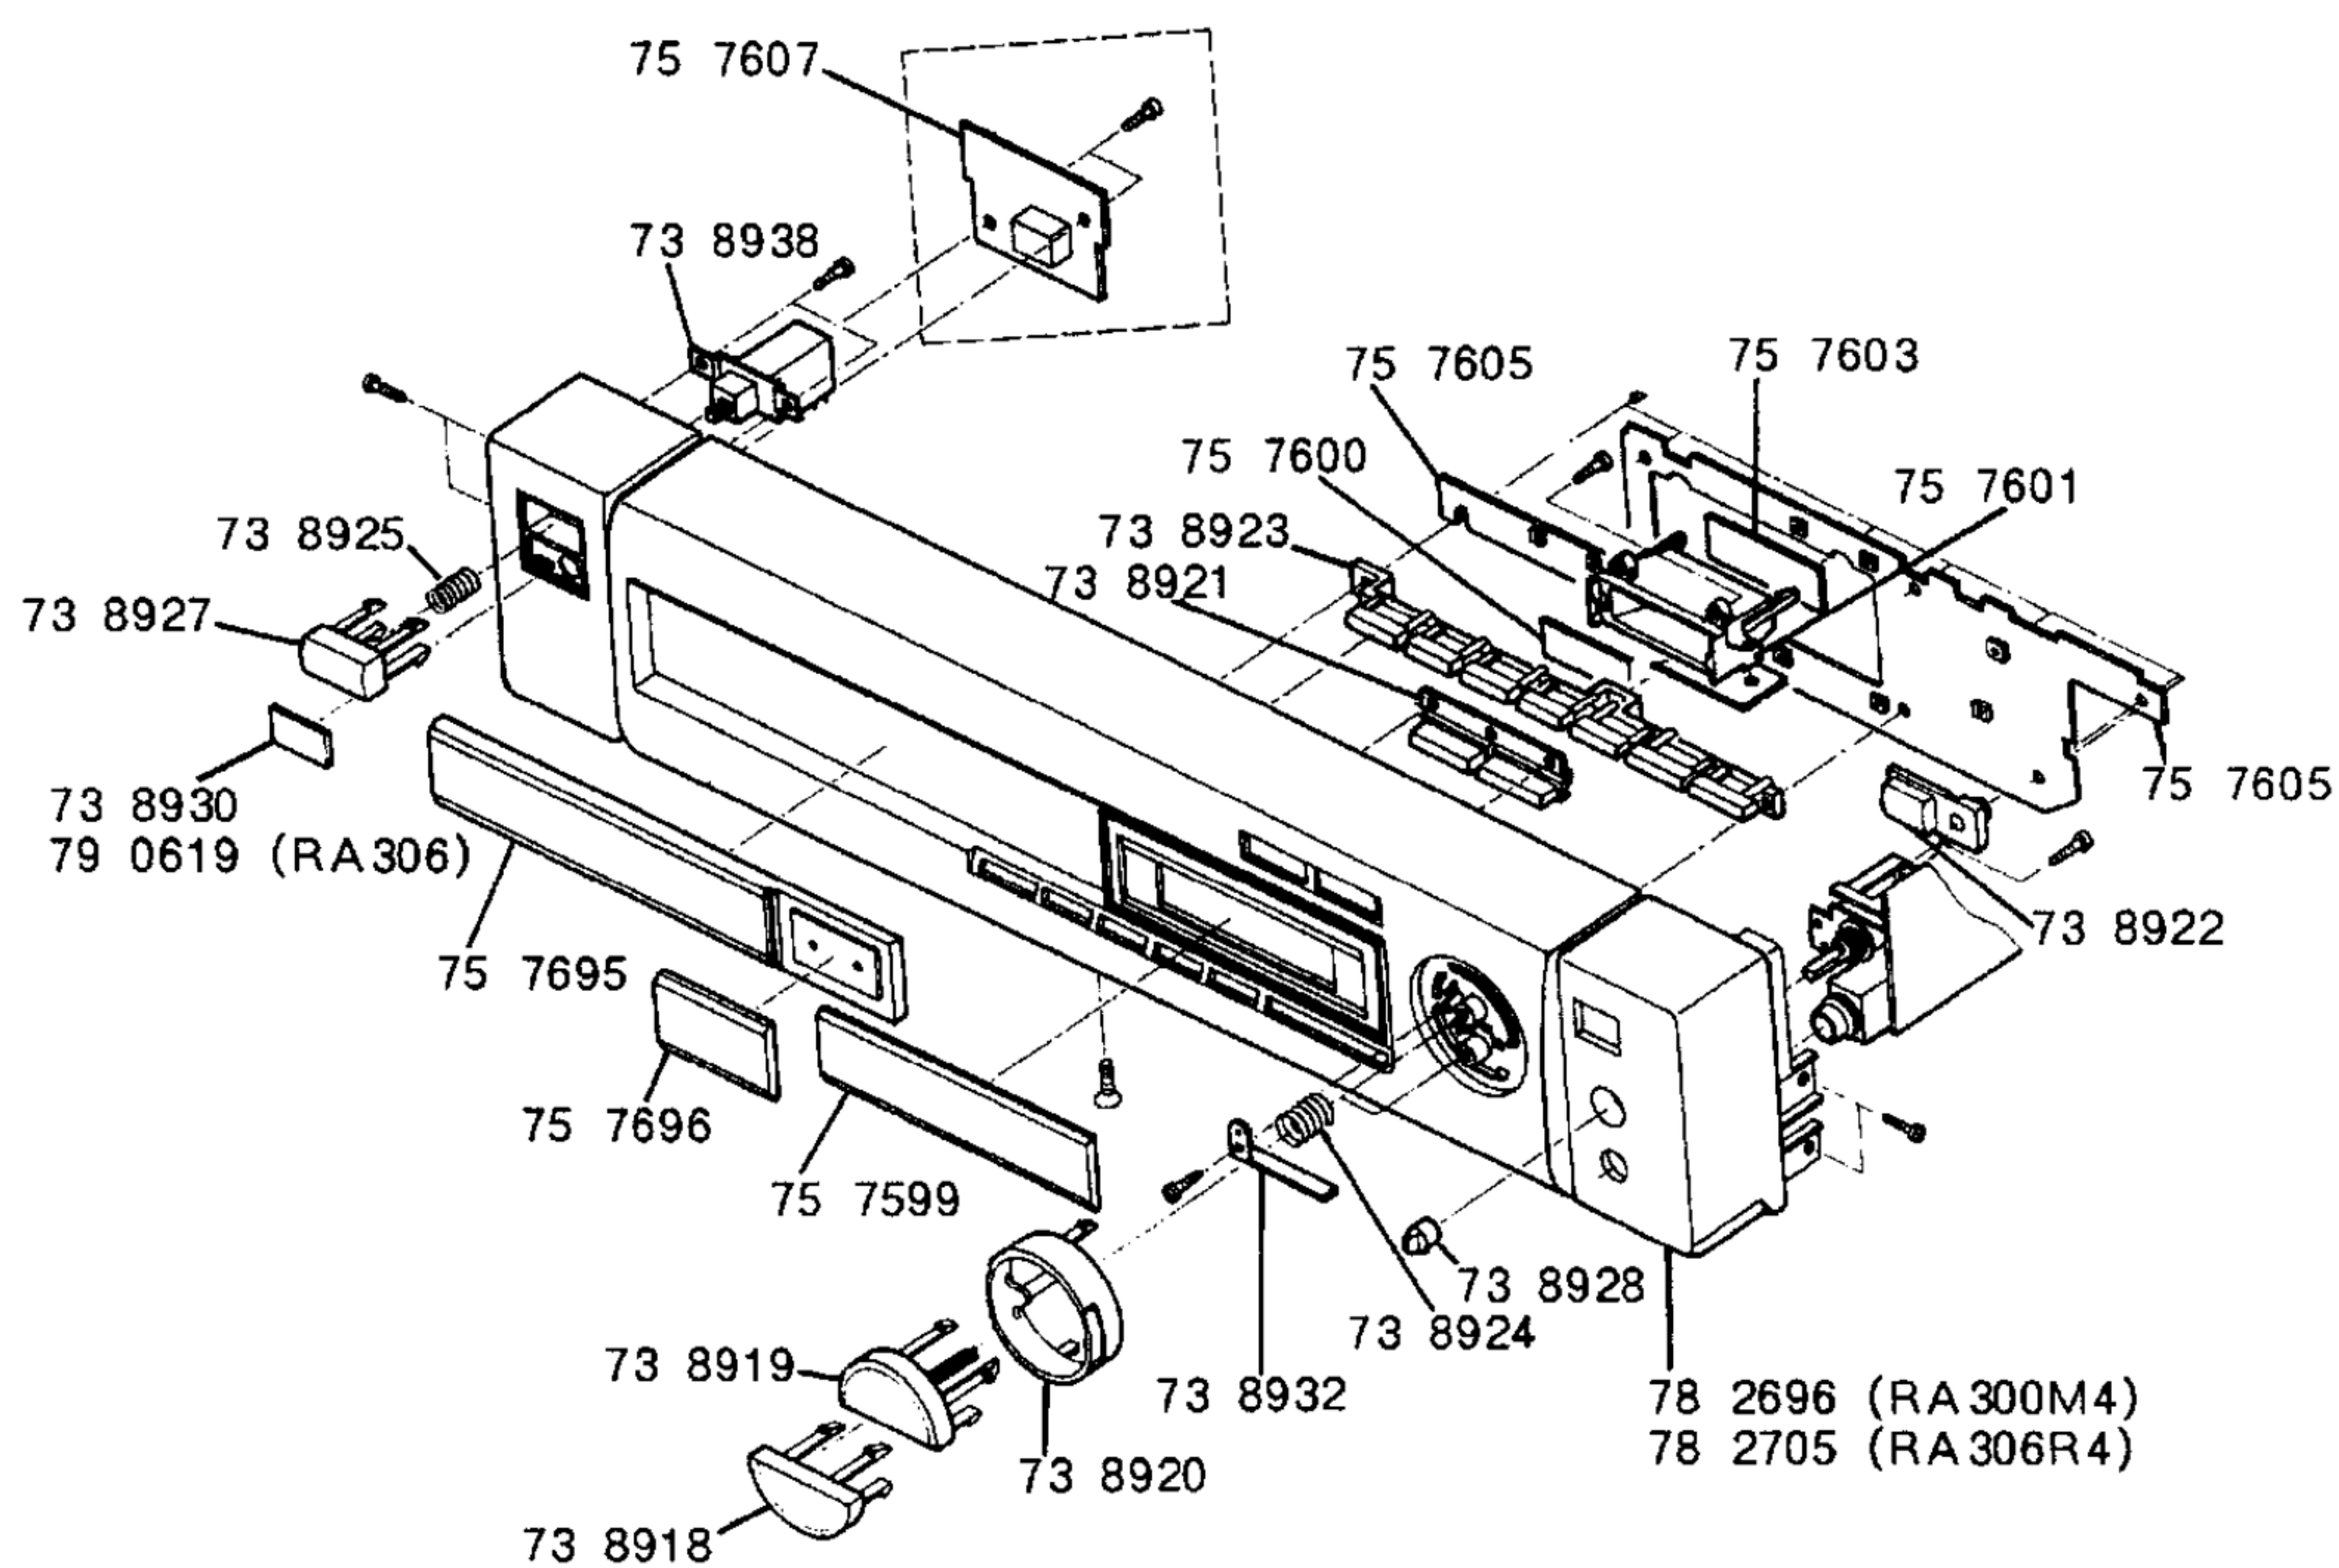

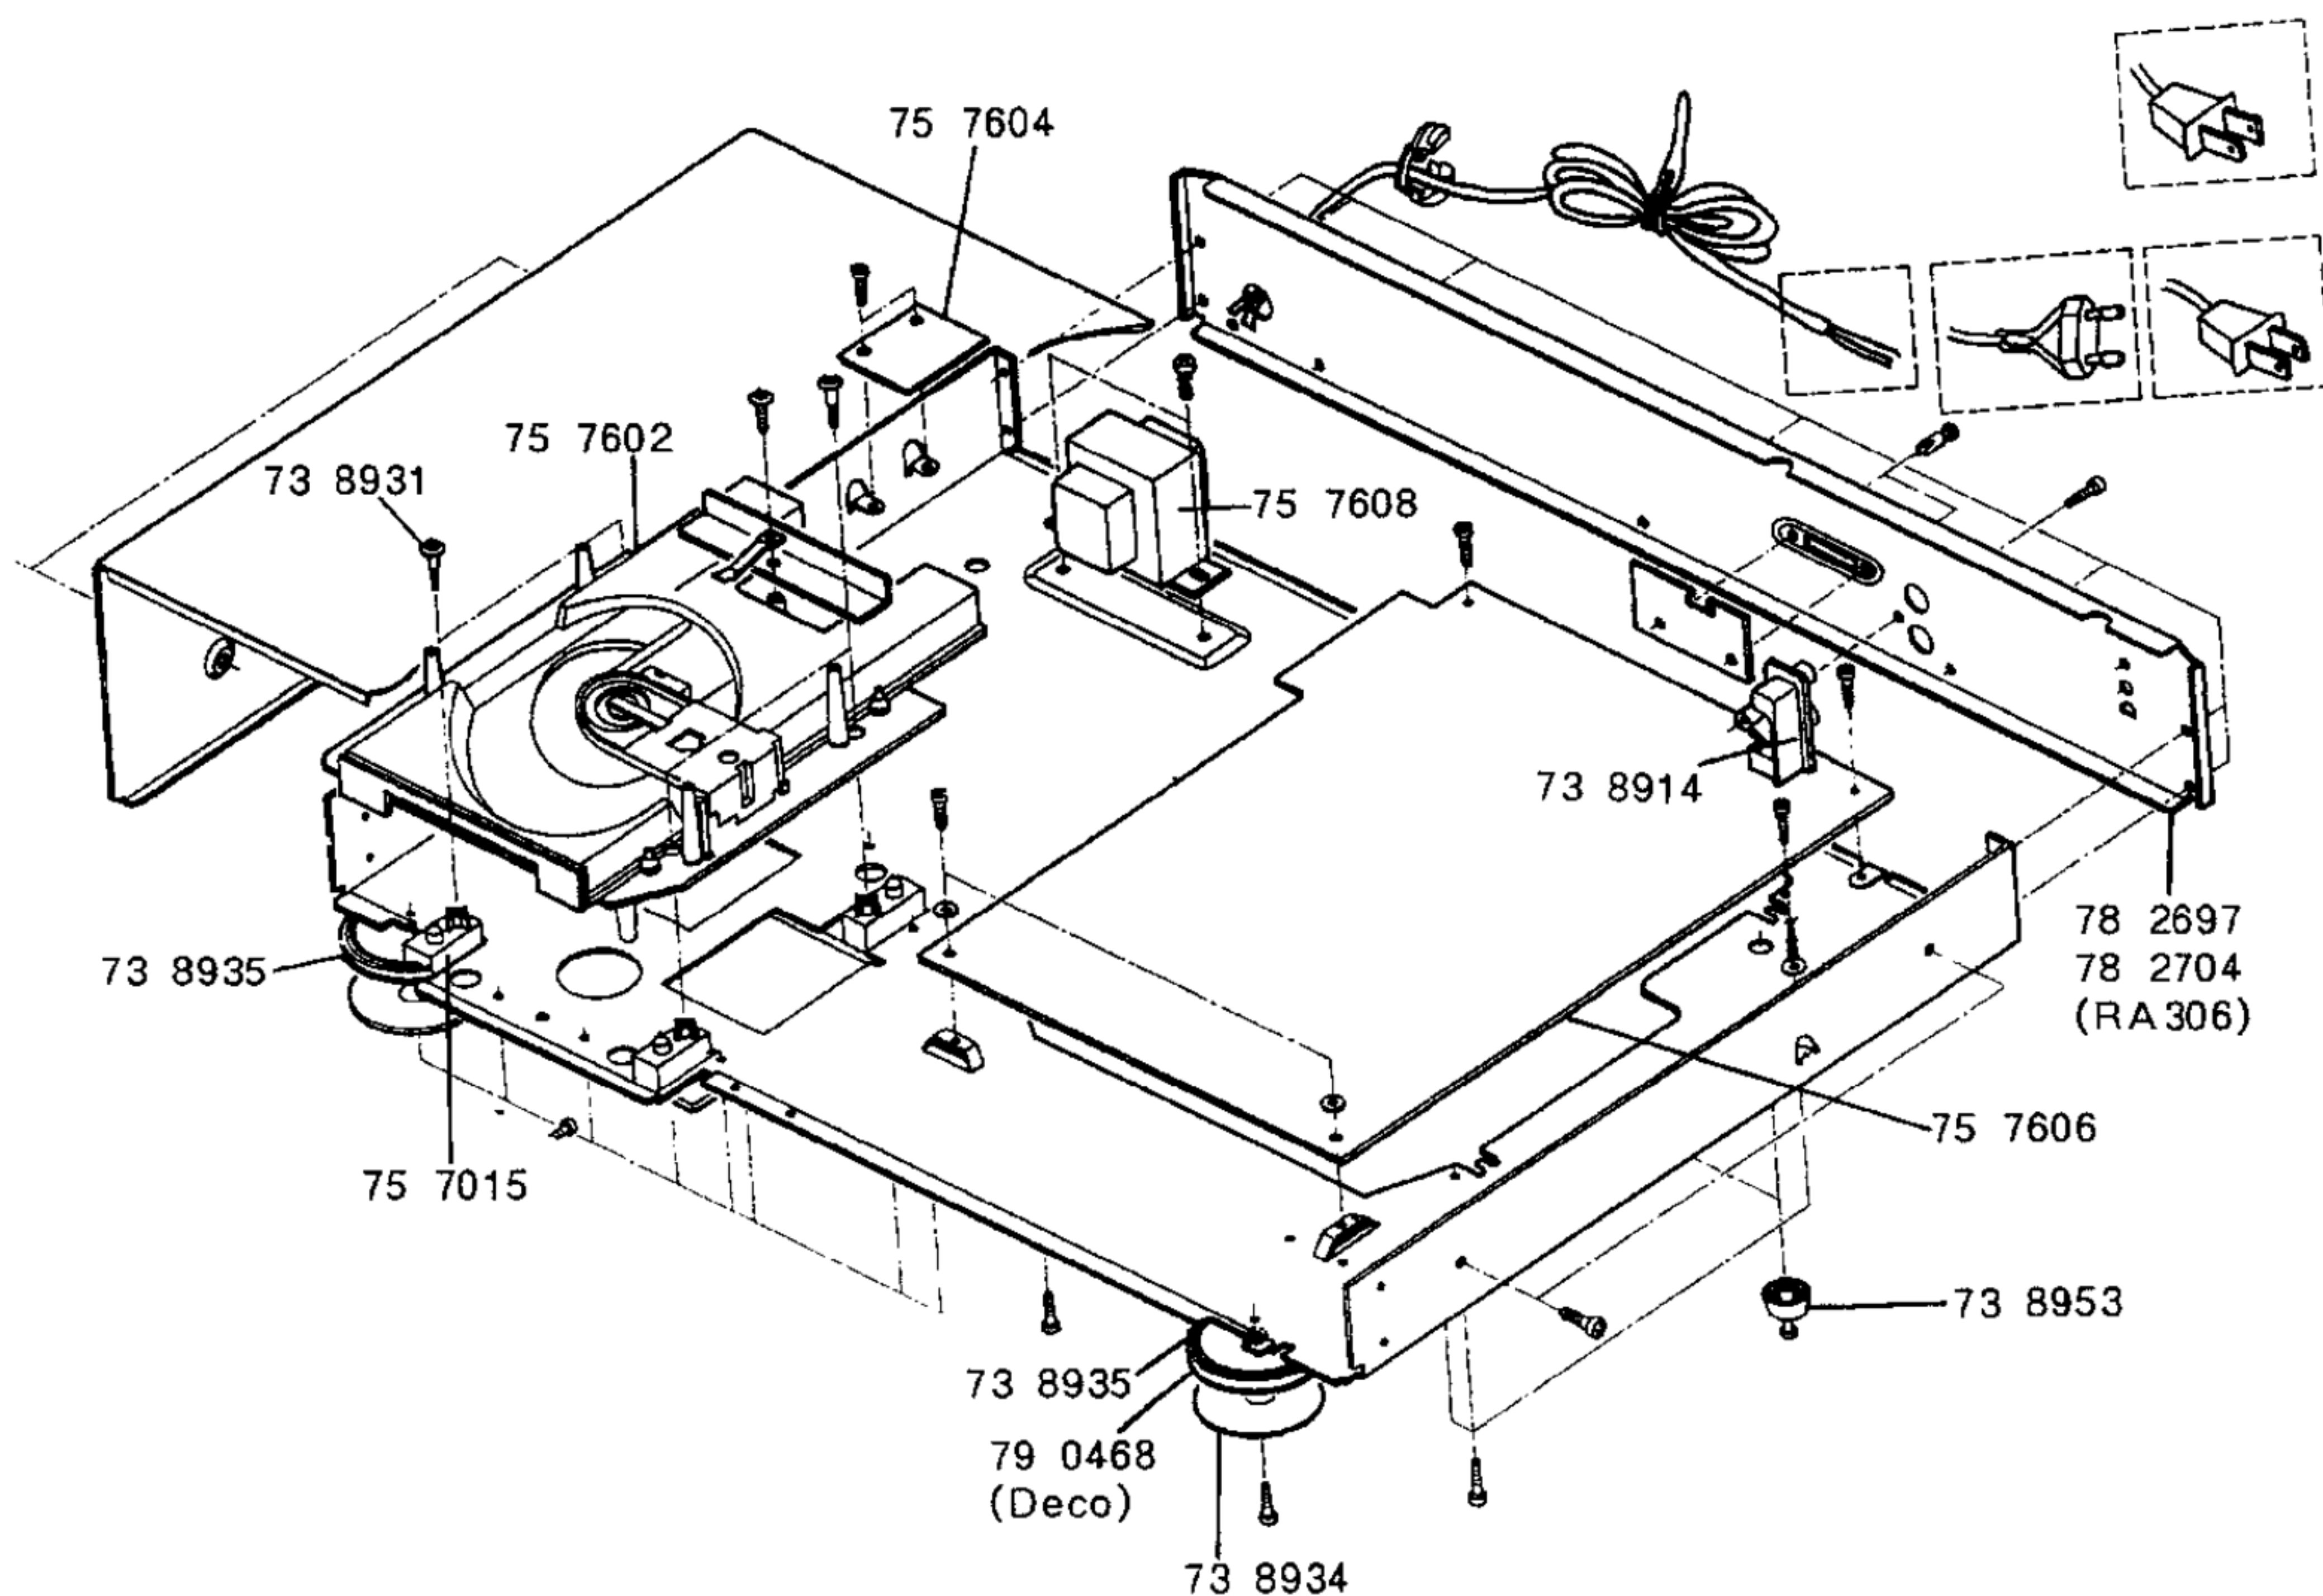

75 7731 Fernbedienung
remote control
telecommande

boards/plaquettes RA306R4

75 7938 Leiterplatte LCD/ PCB LCD
78 2775 Haupt/main
75 7934 Lampe/lamp
75 7935 Tippschalter/tact switch
75 7936 Volume/headphone
75 7939 Netz/power

