

**BOSCH**

V 468-WMV468234/02-Exp.1

V 468-WMV468234/04-Exp.4

V 468-WMV468259/02-S1

WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

Gebrauchsanweisung:

51 3211

(D,GB,F,I,NL,E)

51 3212

(D,F,I,S,DK)

Aufstellanweisung:

51 1820

(D,GB,F,I,NL,E,P)

51 2223

(D,F,I,S,DK)

Programmtabelle:

51 3213

(D,GB,F,I,NL,E)

51 3214

(D,F,I,S,DK)

1) 05 6844

Symbole

(Einlage vollst.)

05 6839

(D)

08 6424

 
(F,I,NL,GB)

 
08 6425

(F,I,DK,S)

08 6427

(F,NL,DK,S)

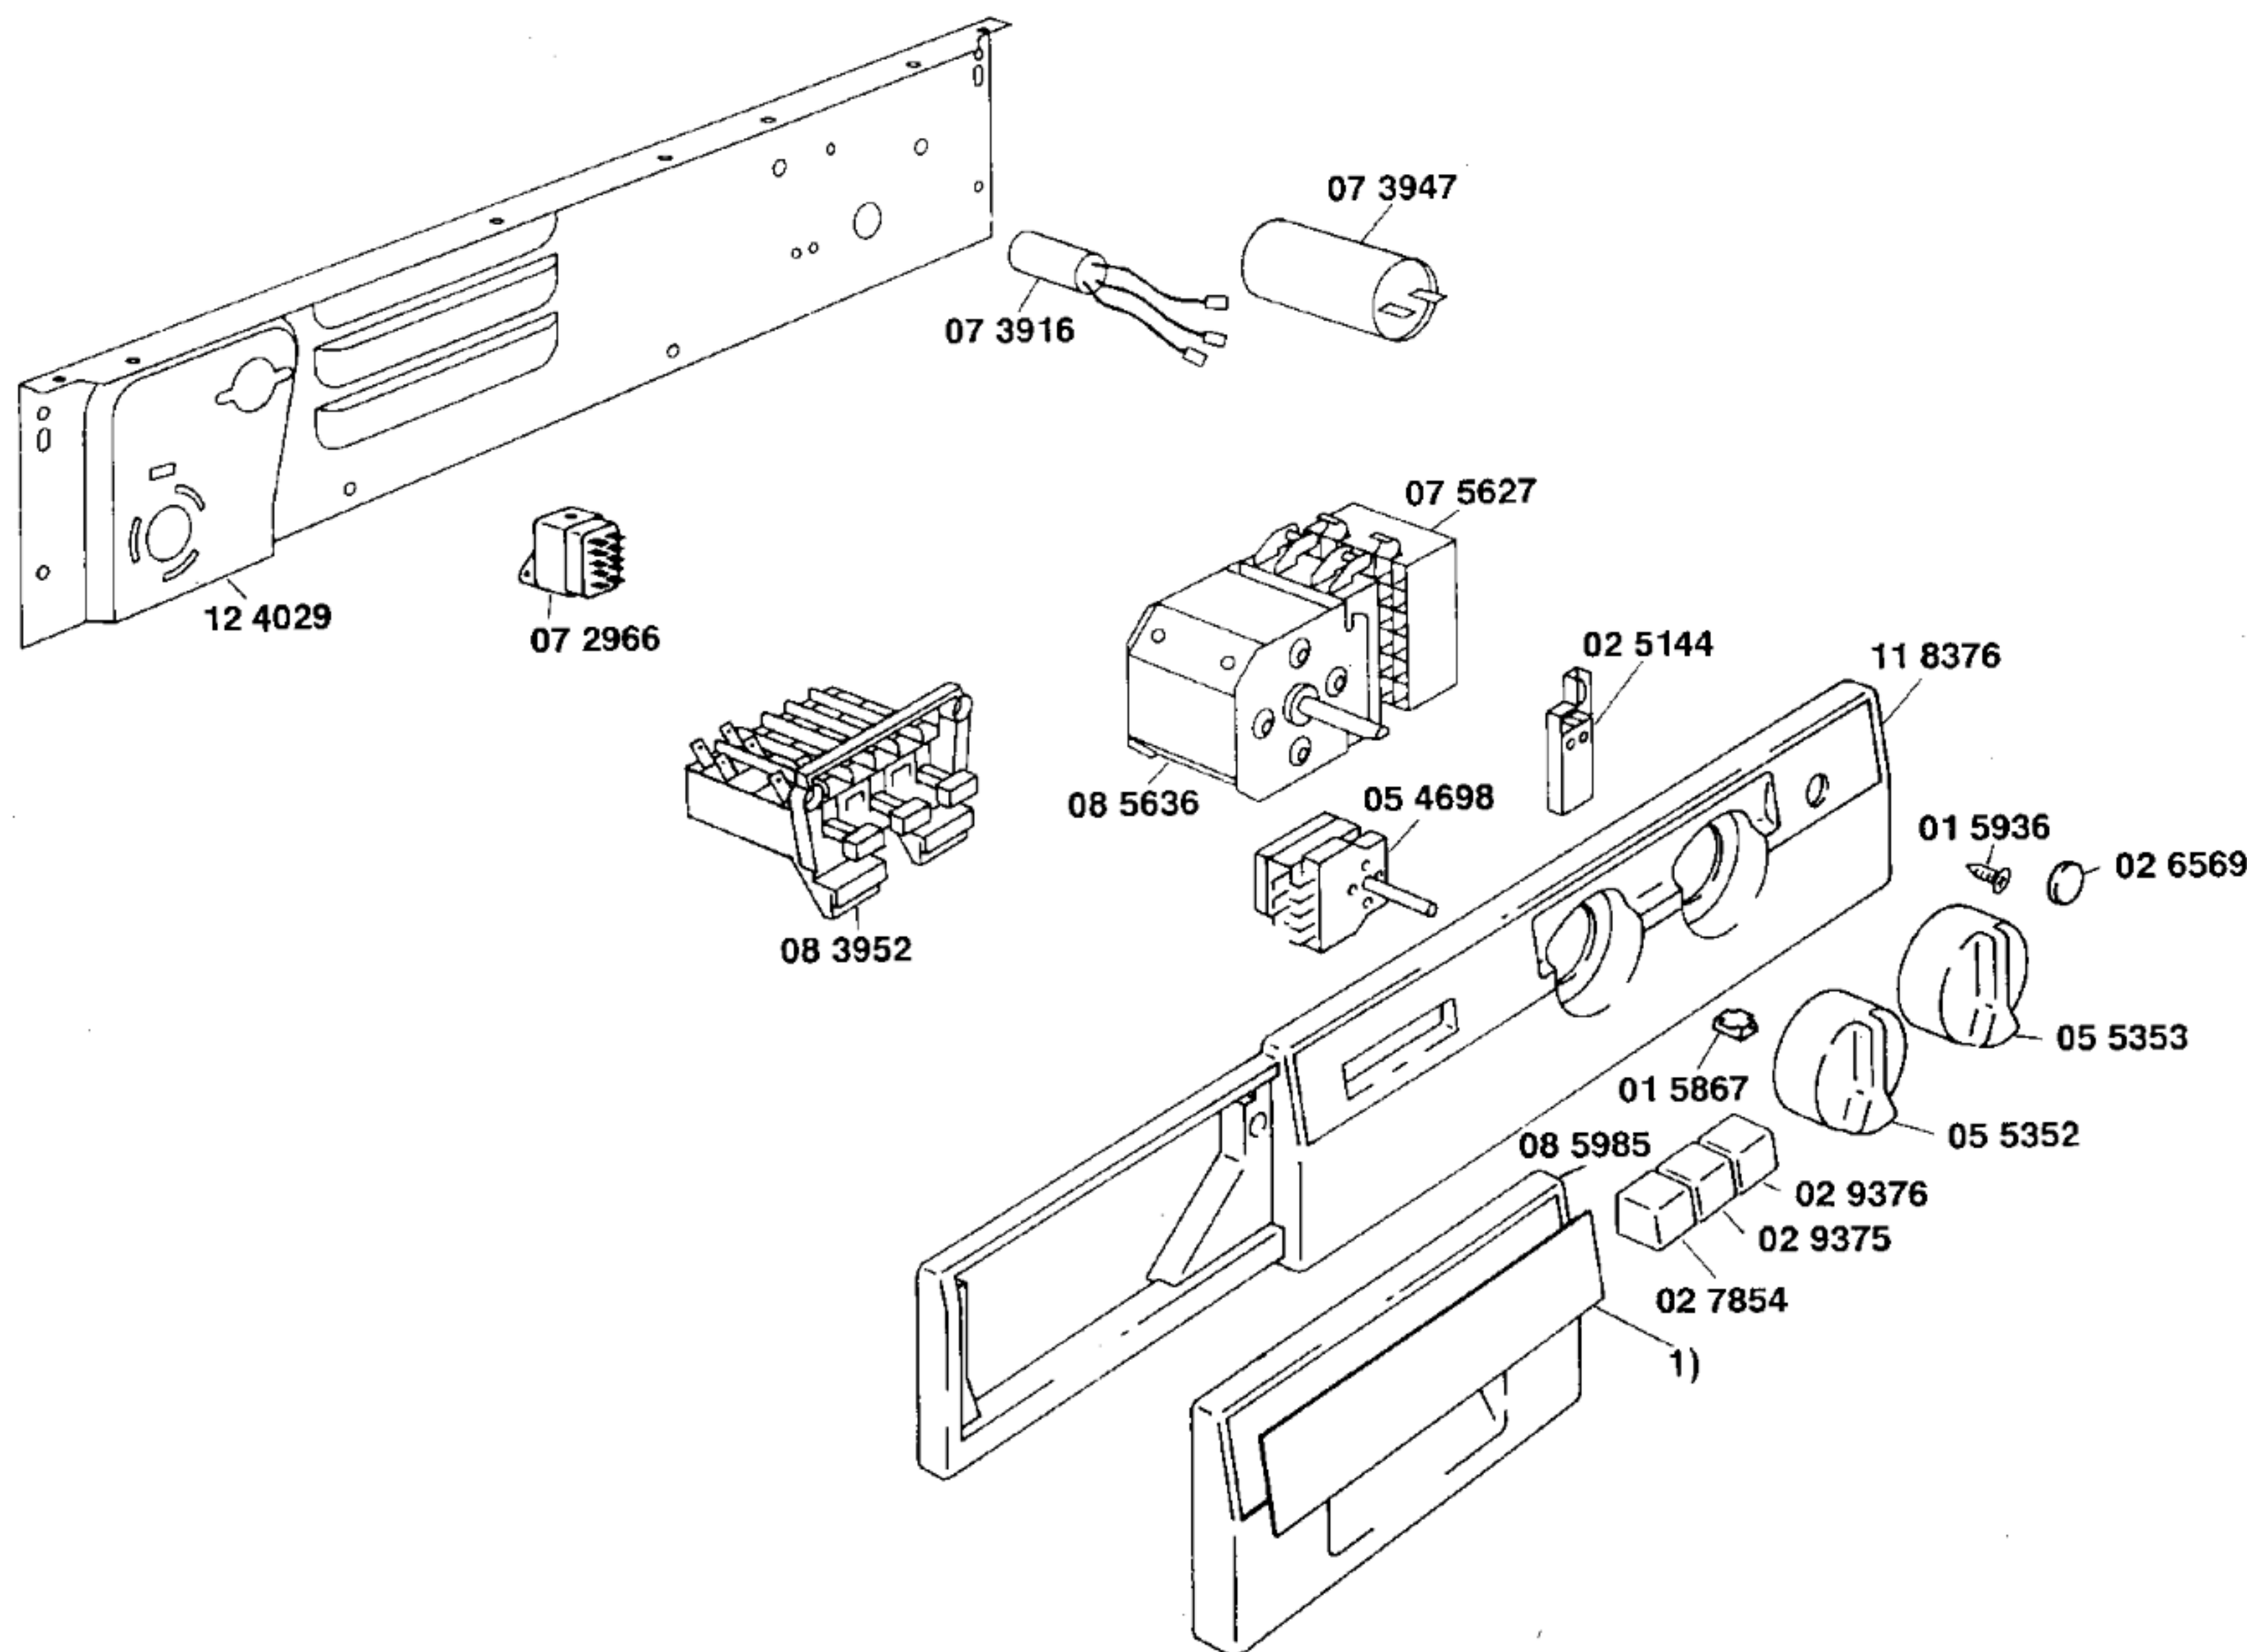

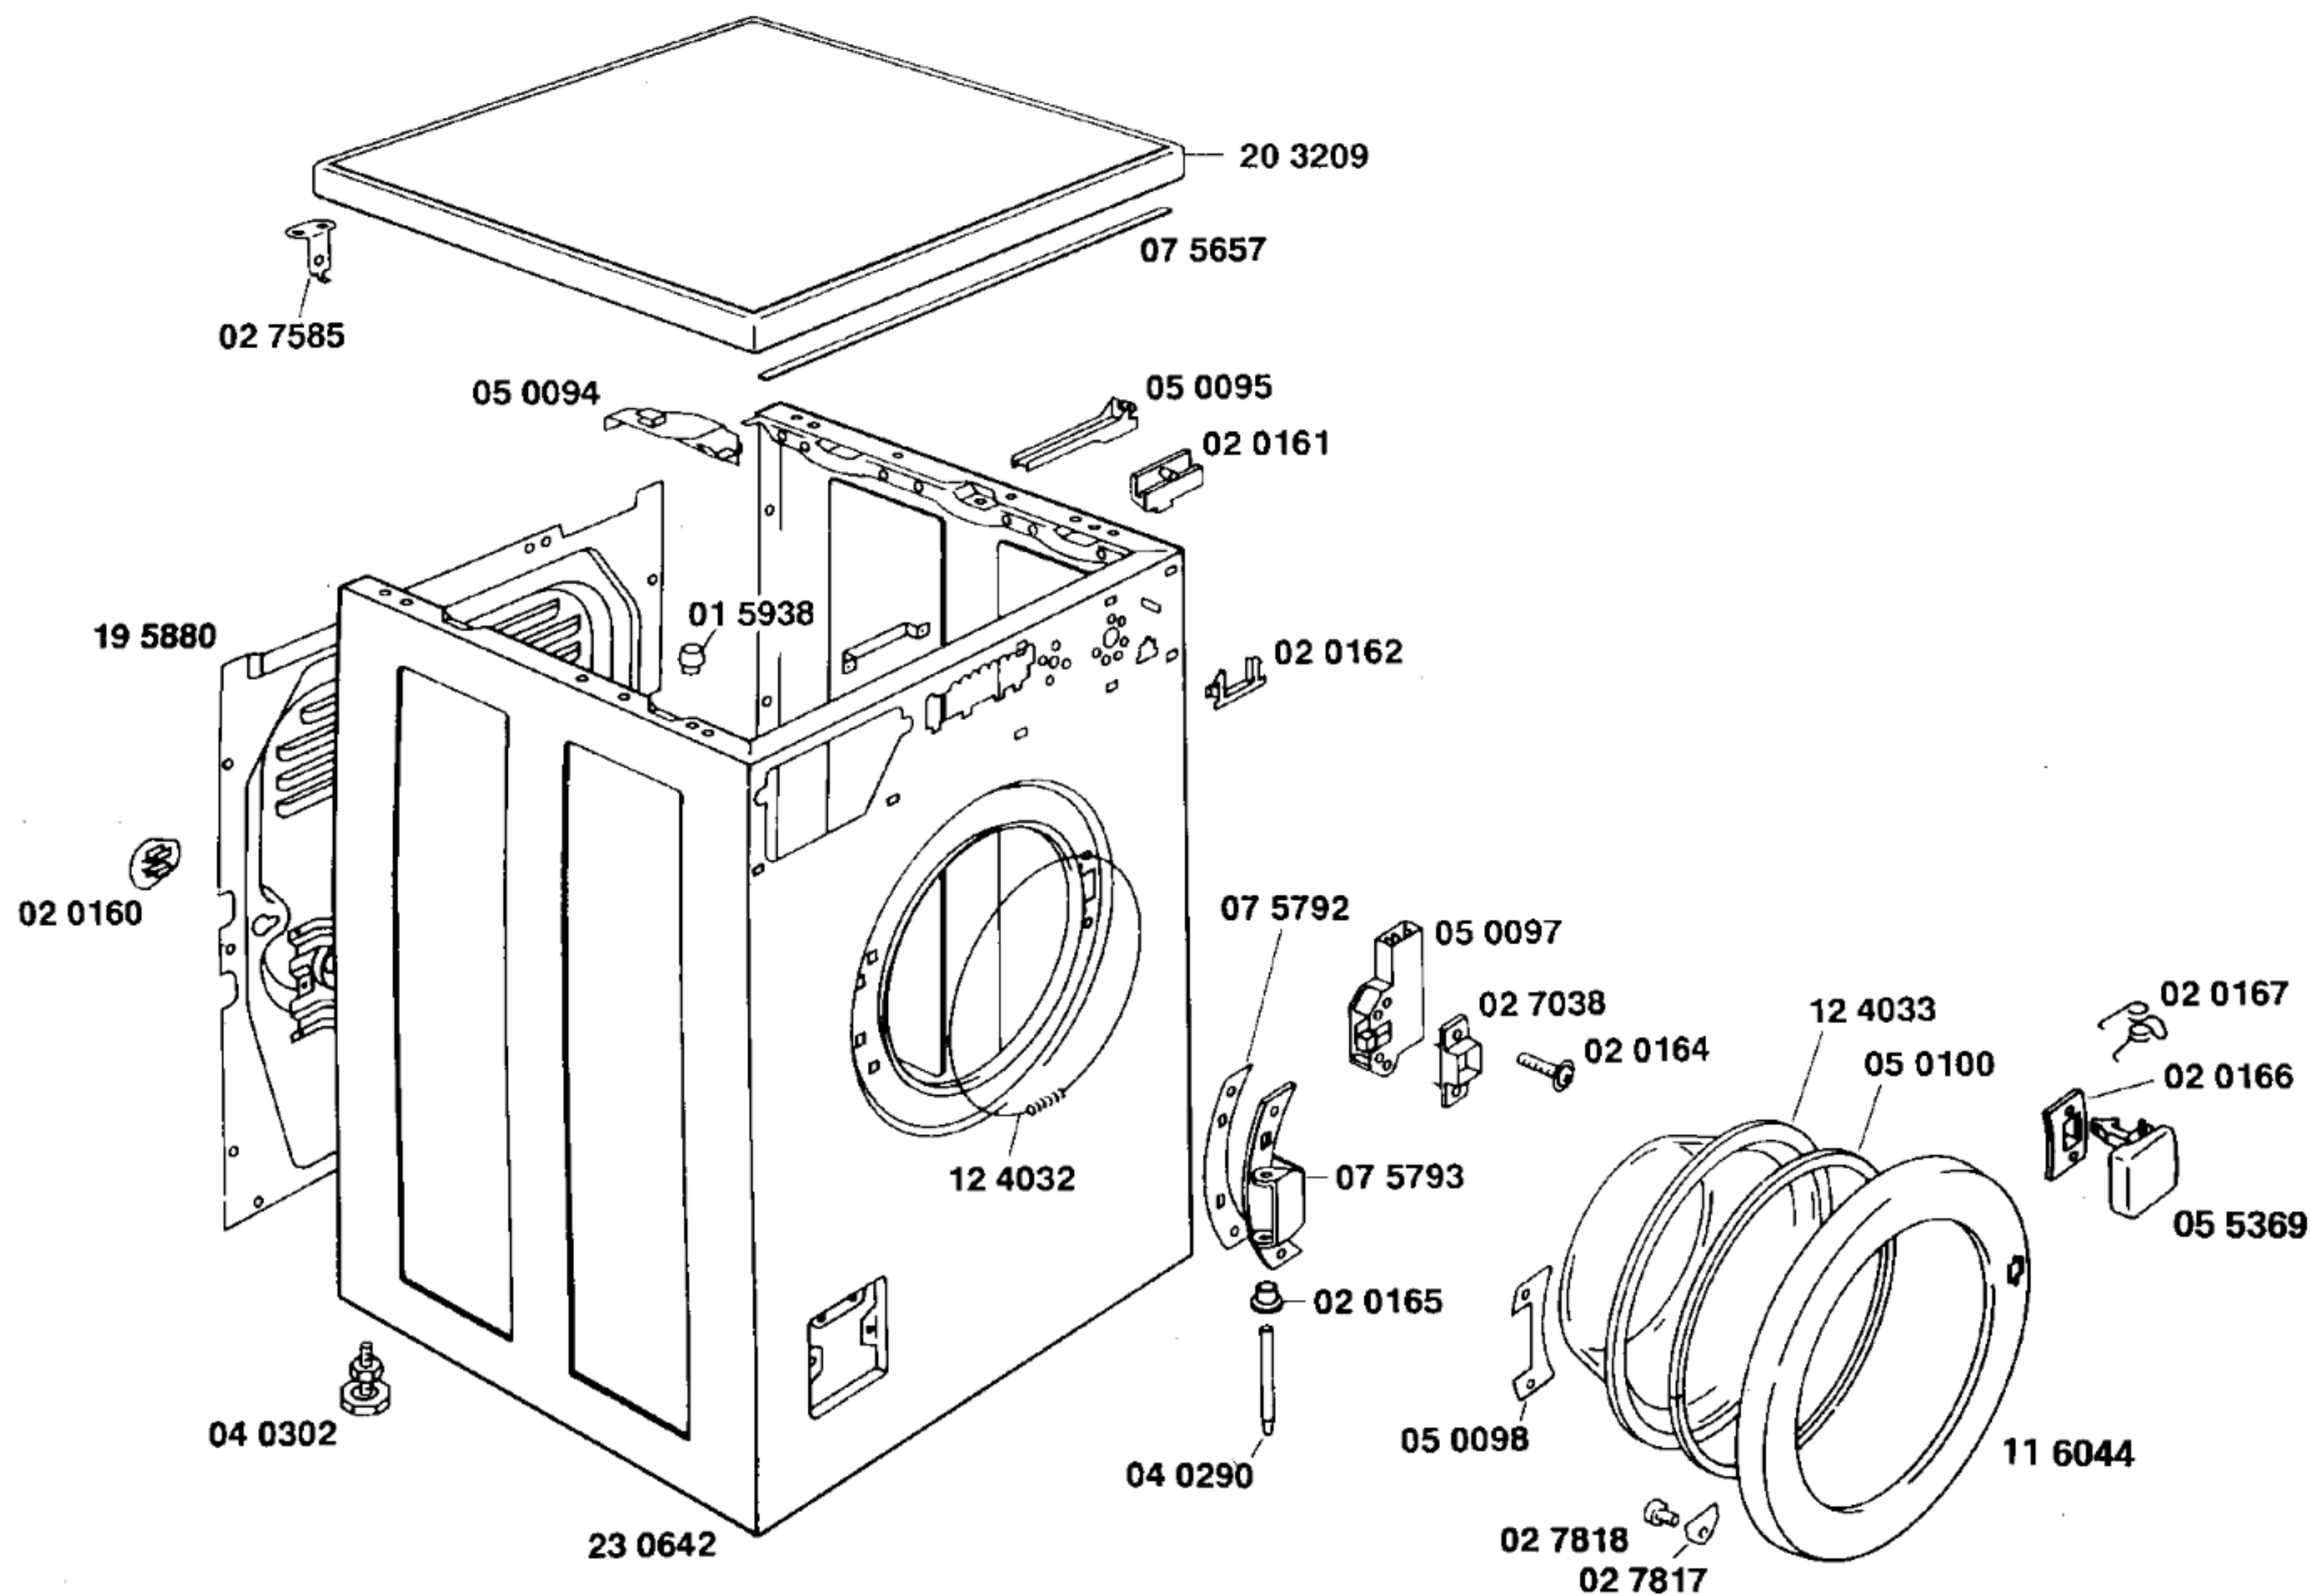


**BOSCH**

V 468-WMV468234/02-Exp.1

V 468-WMV468234/04-Exp.4

 V 468-WMV468259/02-S1

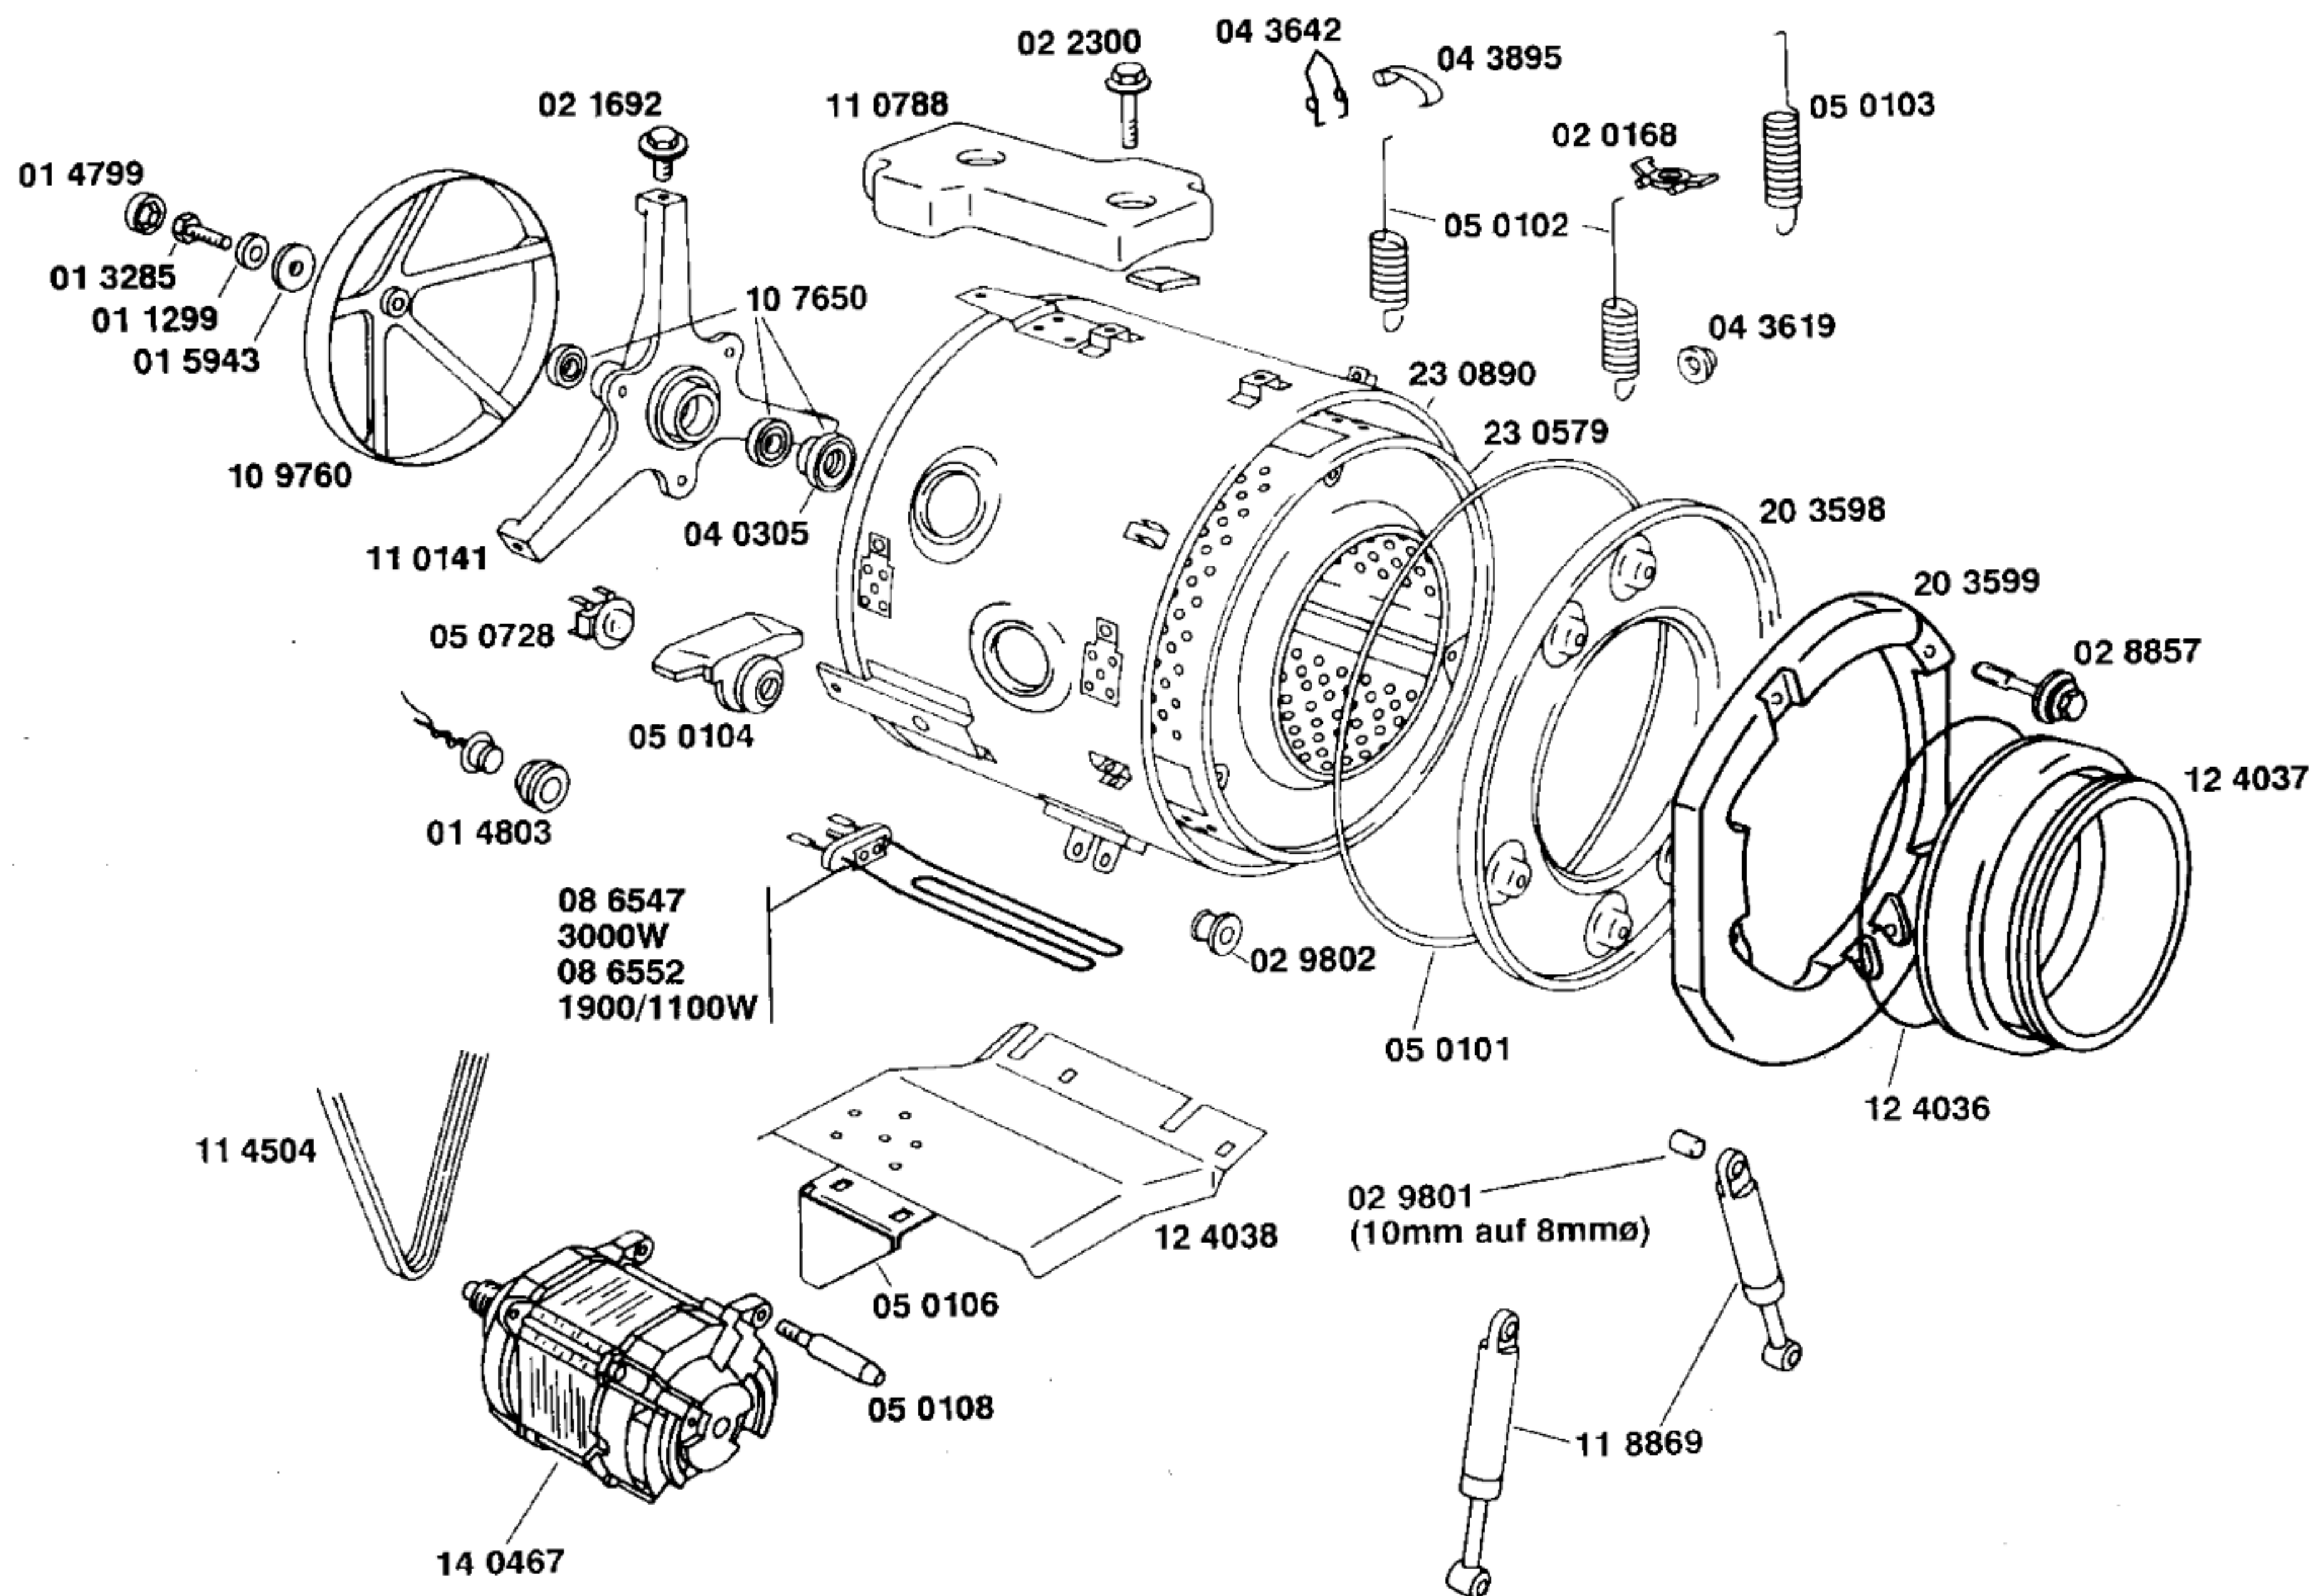WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

Ident – Nummern – Konstante
3740

1) 04 5844

