 


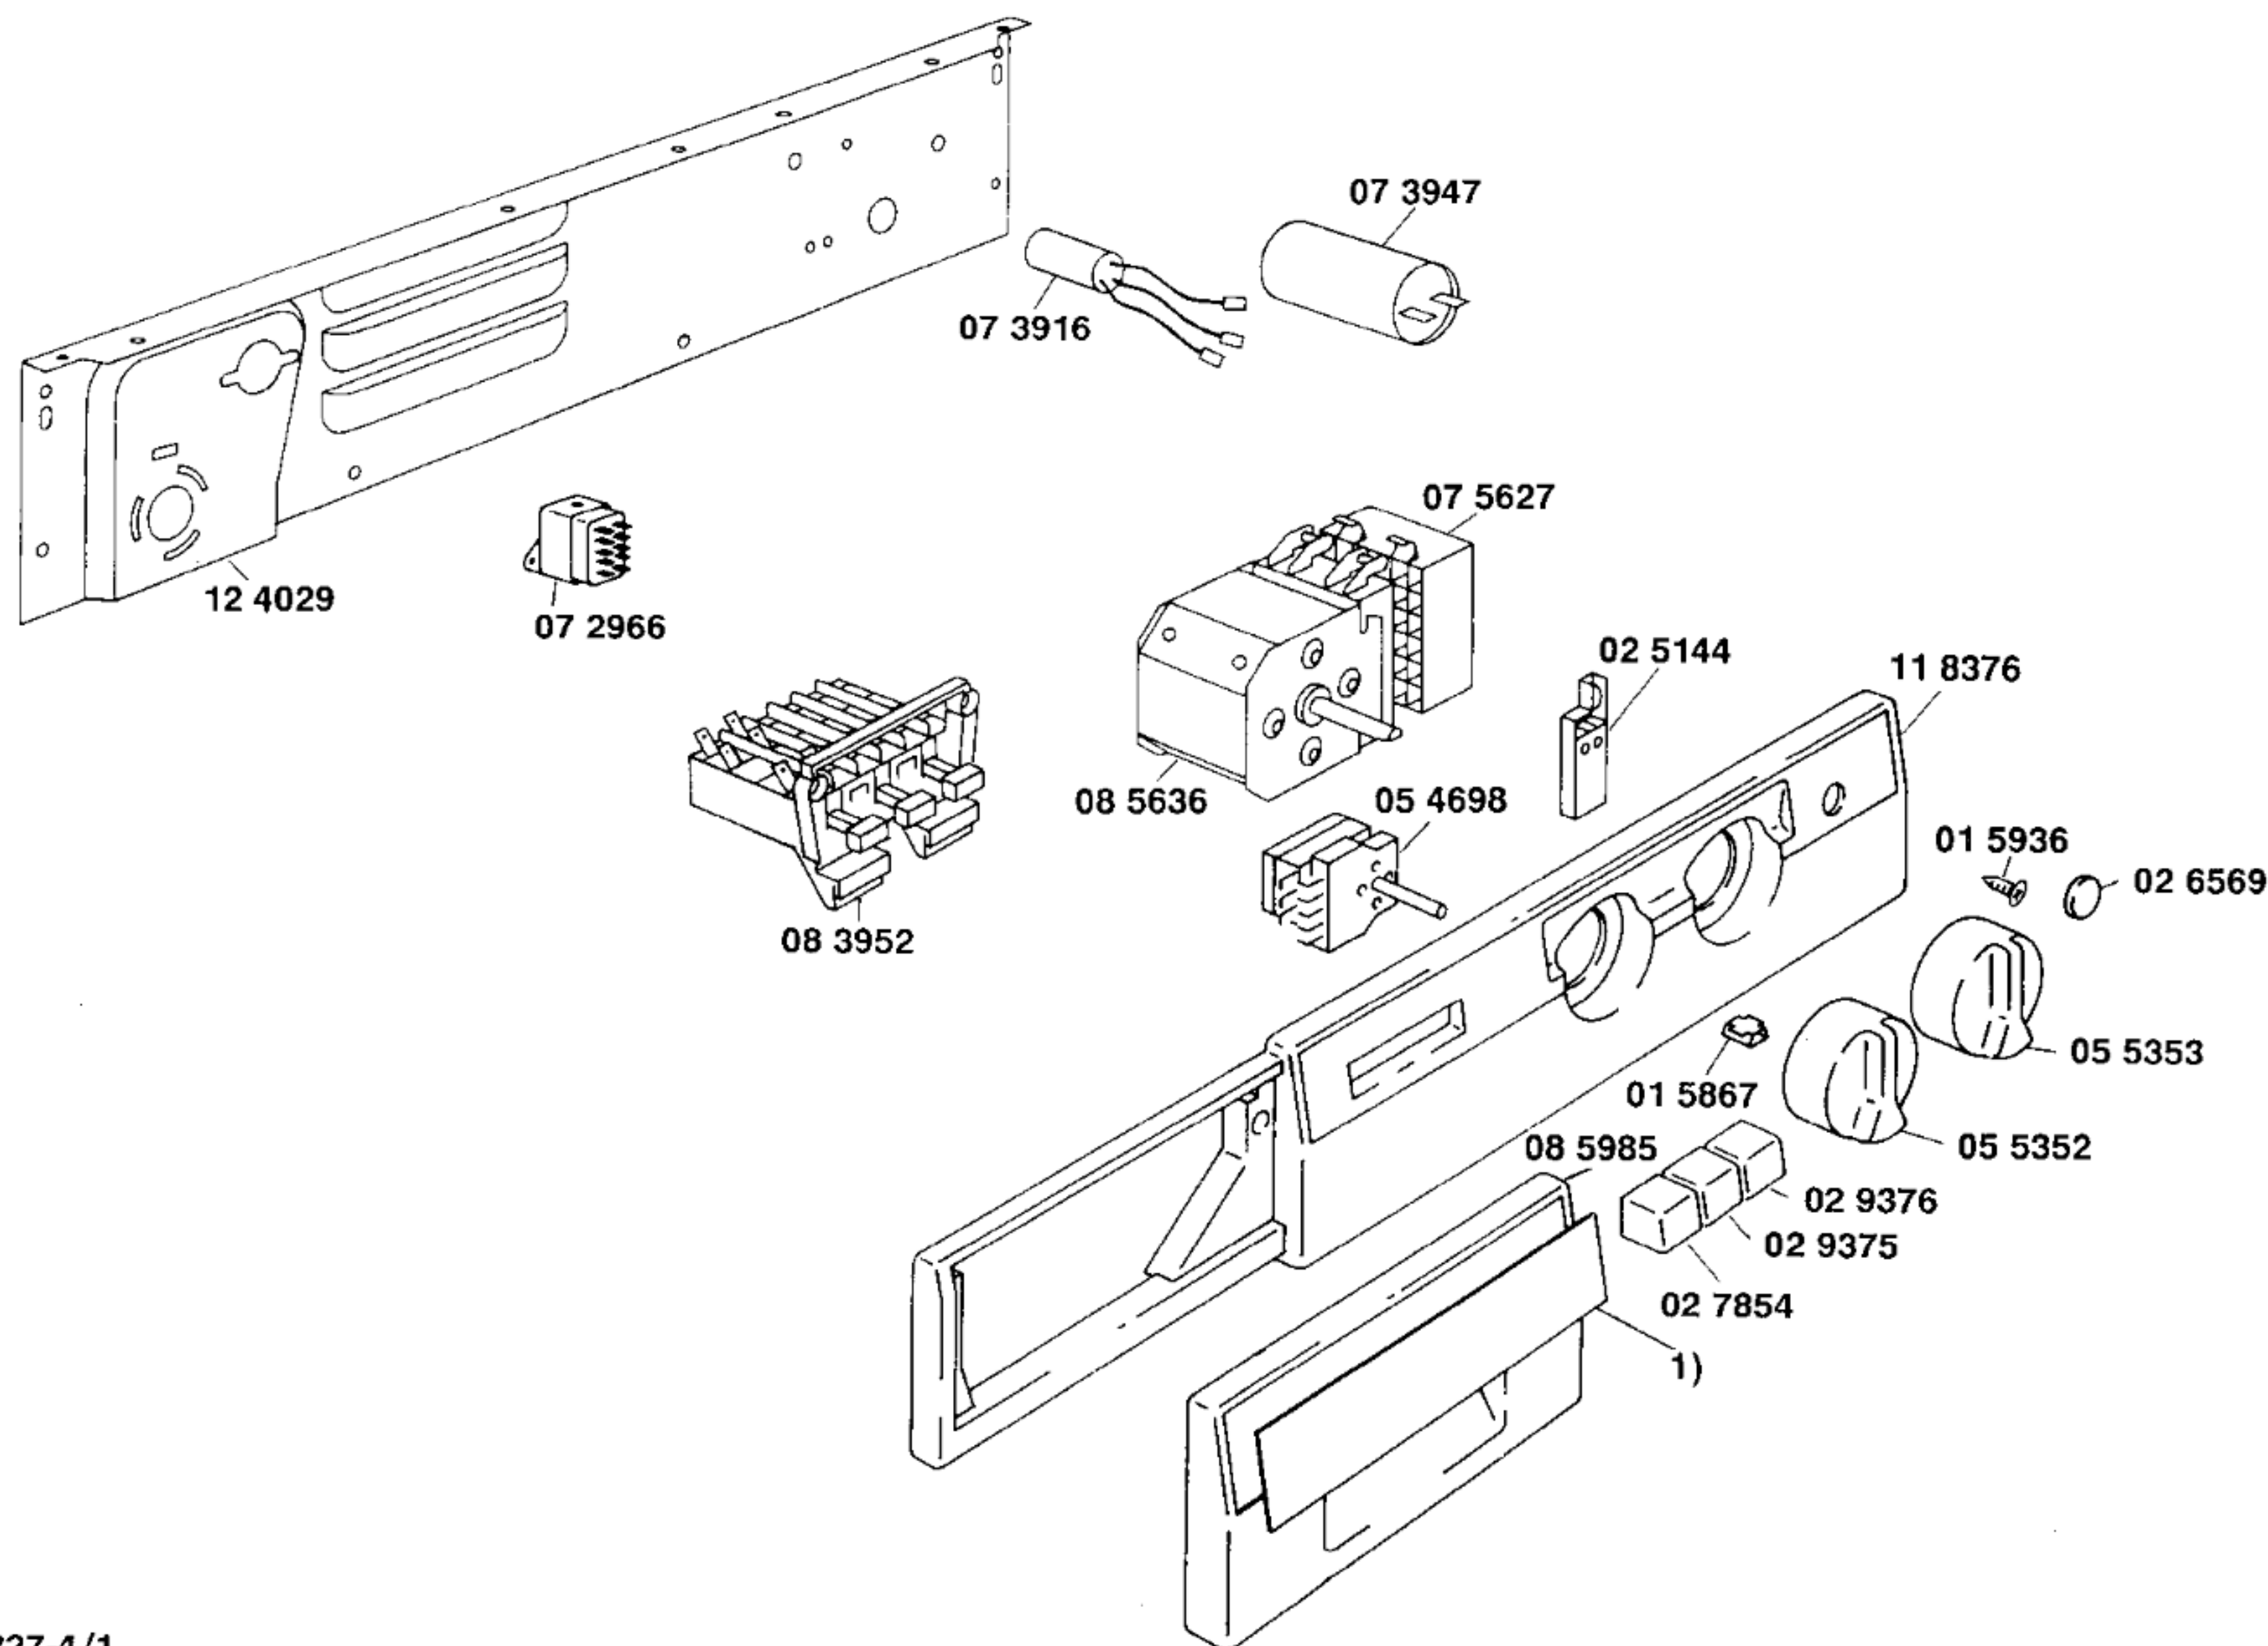

Gebrauchsanweisung:

51 3211

(D,GB,F,I,NL,E)

51 3212

(D,F,I,S,DK)

Aufstellanweisungen:

51 1820

(D,GB,F,I,NL,E,P)

51 2223

(D,F,I,S,DK)

Programmtabellen:

51 3213

(D,GB,F,I,NL,E)

51 3214

(D,F,I,S,DK)

- 1) bis FD 6711
08 5984
(D,Symbole)
08 4871
(F,I)
08 4872
(NL,GB)
08 4873
(S,DK)

- ab FD 6712
05 6844
Symbole
(Einlage vollst.)


- 05 6839
(D)
08 6424
(F,I,NL,GB)
08 6425
(F,I,DK,S)
08 6427
(F,NL,DK,S)
Klebefolien


**BOSCH**

   
V468-WMV468234/00-Exp.1
V468-WMV468234/01-Exp.2

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

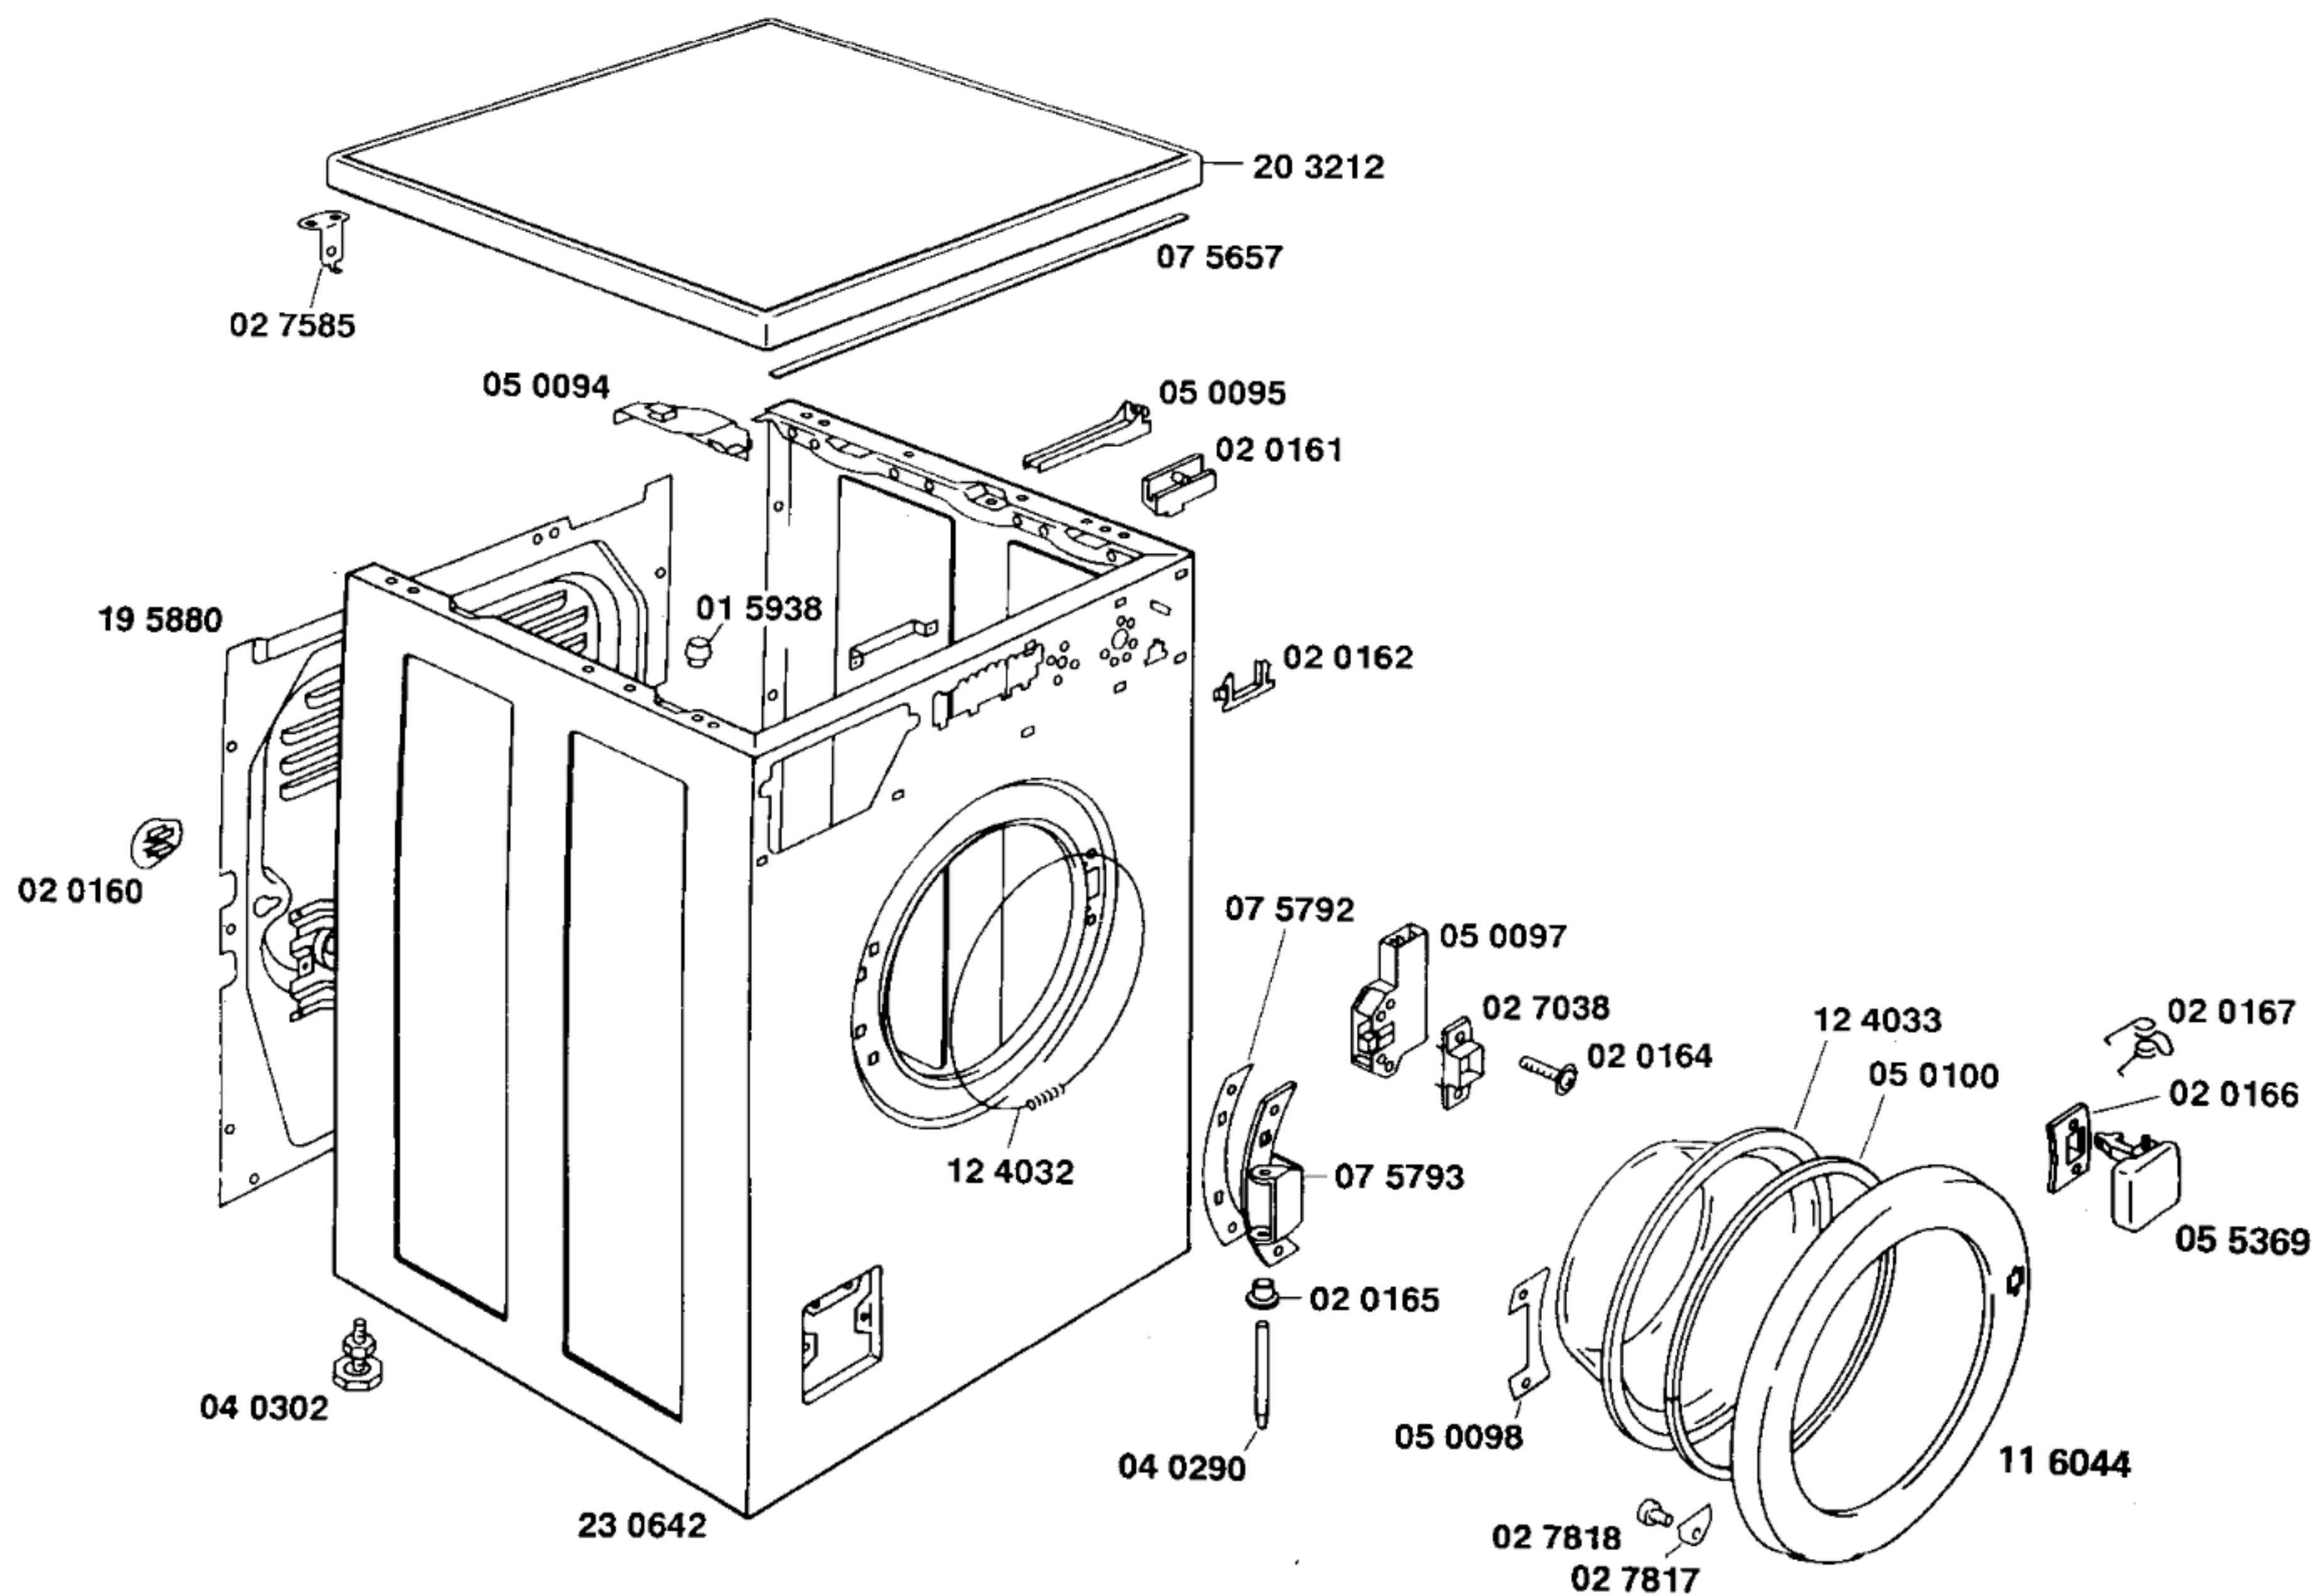



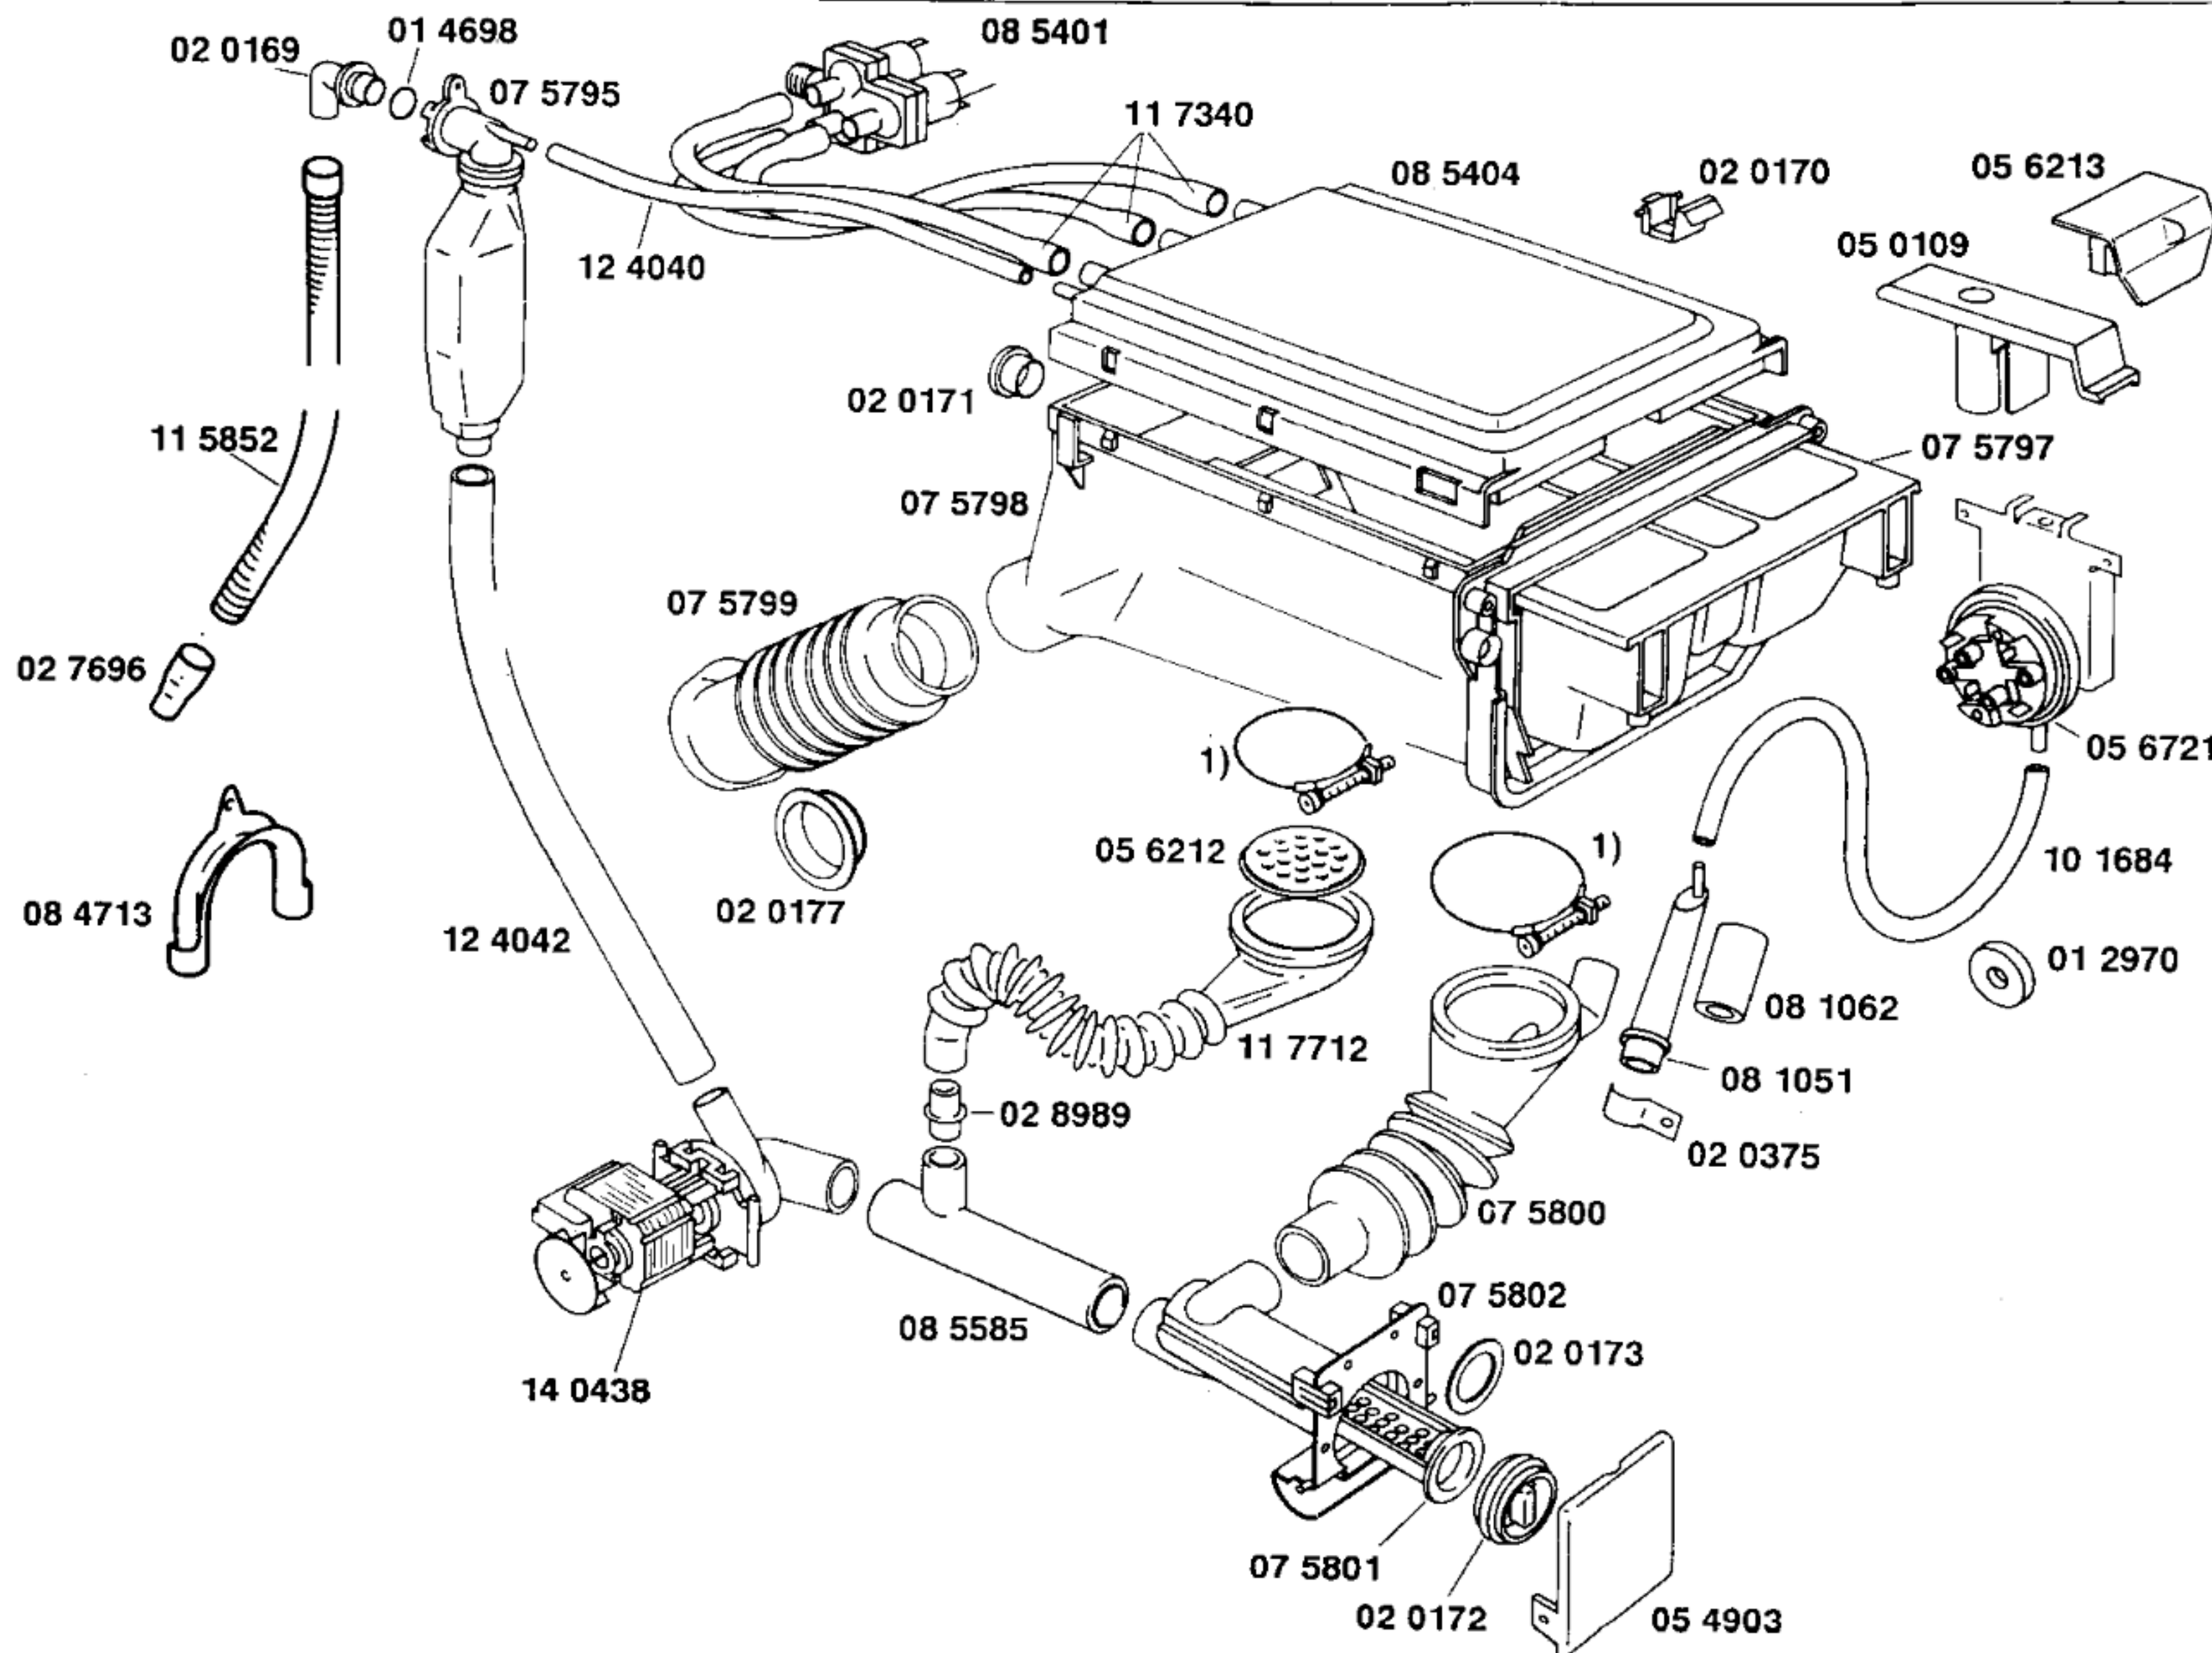

1) 04 5844