


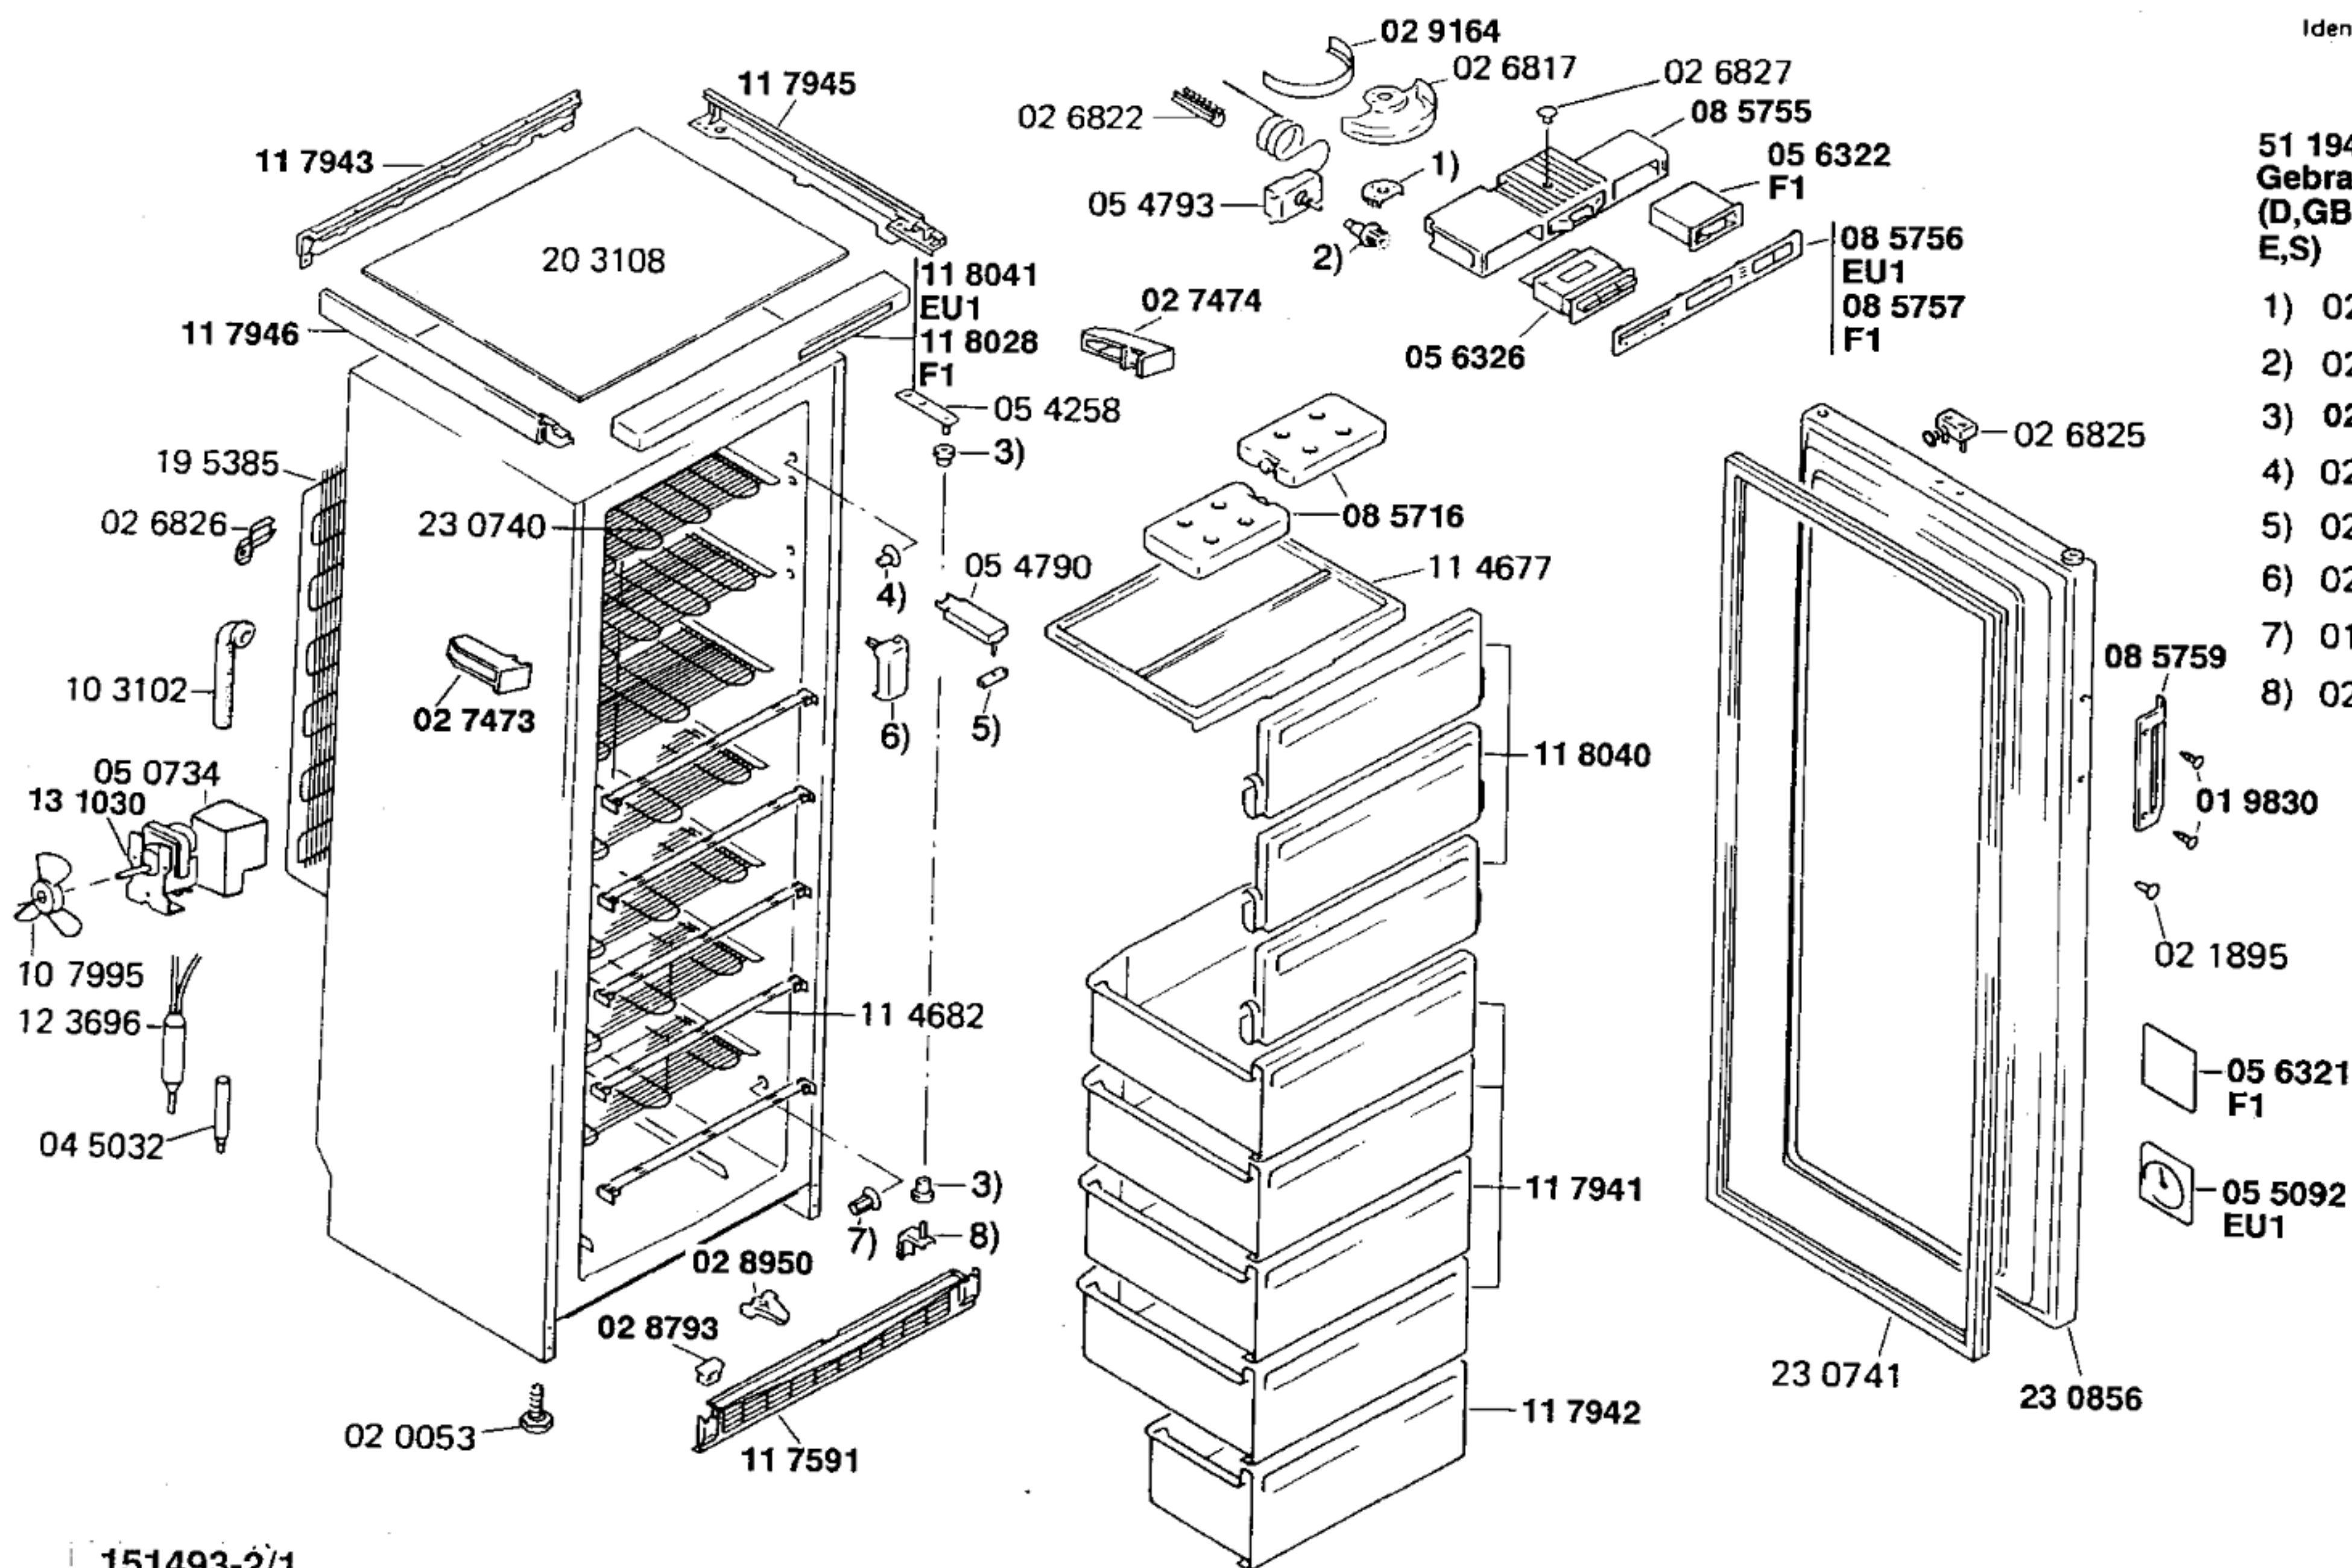


51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) **02 7786**
- 4) 02 6824
- 5) 02 6815
- 6) 02 6823
- 7) 01 8901
- 8) 02 6747

08 5759
8)
01 9830
02 1895
05 632
F1
05 509
EU1

Ident-Nummern-Konstante
3740

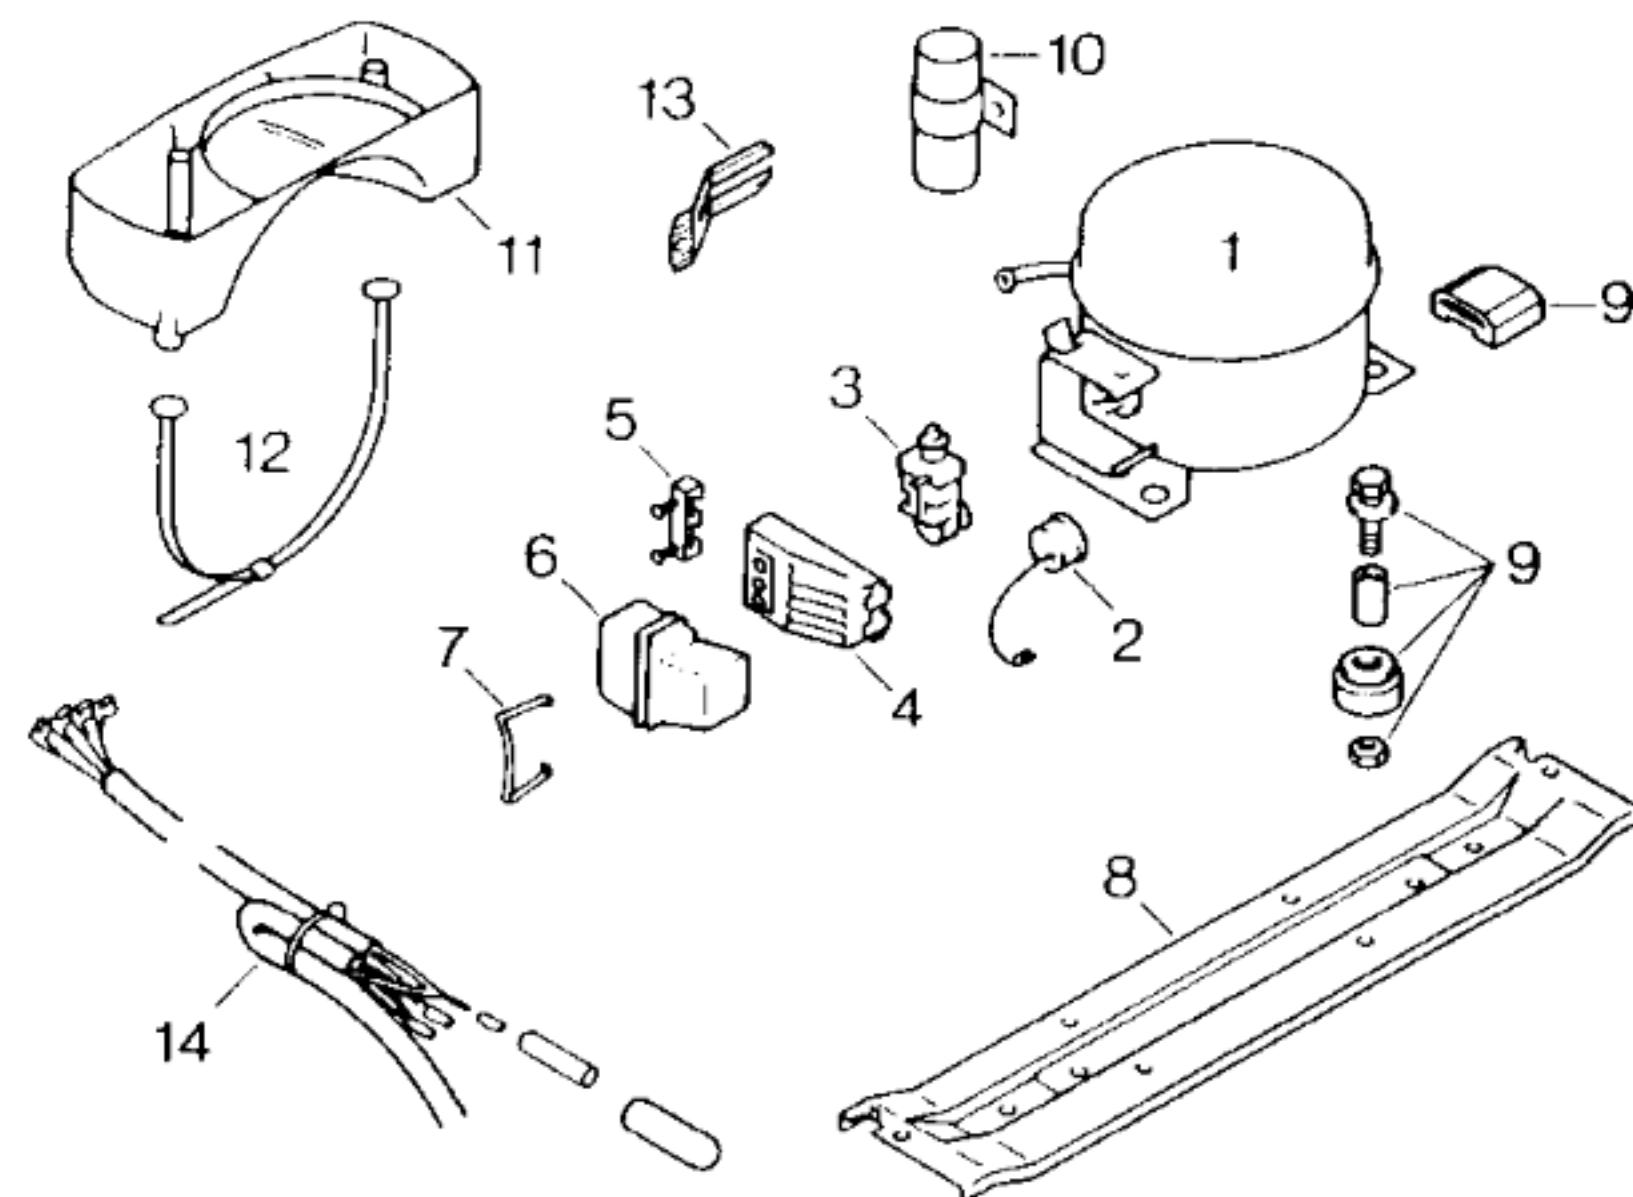

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		FR 10 A		
Förderleistung/Delivery/Débit	l/h	1629		
Anlaufstrom/Starting current/Cour. de démarrage	A	11,4		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	10,7	
	Hi/aux	Ω	13,0	
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		077 B 2054		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	- 24	- 16	
Valeurs de commutation	„aus“	- 34	- 24	
	(„abtauen“ od.)	„alarm“	- 19	- 12
Füllmenge/Fill.quantity/Charge	R12	g	220	
Anschlußwert/Conn.load/Puiss. connectée		W	190	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	190	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	Danfoss	
	FR 10 A	
1	14 0427	
2		
3	02 0108	
4		
5	02 1361	
6	05 1413	
7		
8		
9	05 0166	
10		
11		
12		
13		
14		