


Ident-Nummern-Konstante
3740


51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815
- 6) 01 8901
- 7) 02 6747

- 8) 08 5759
EU1
08 5717
EU2

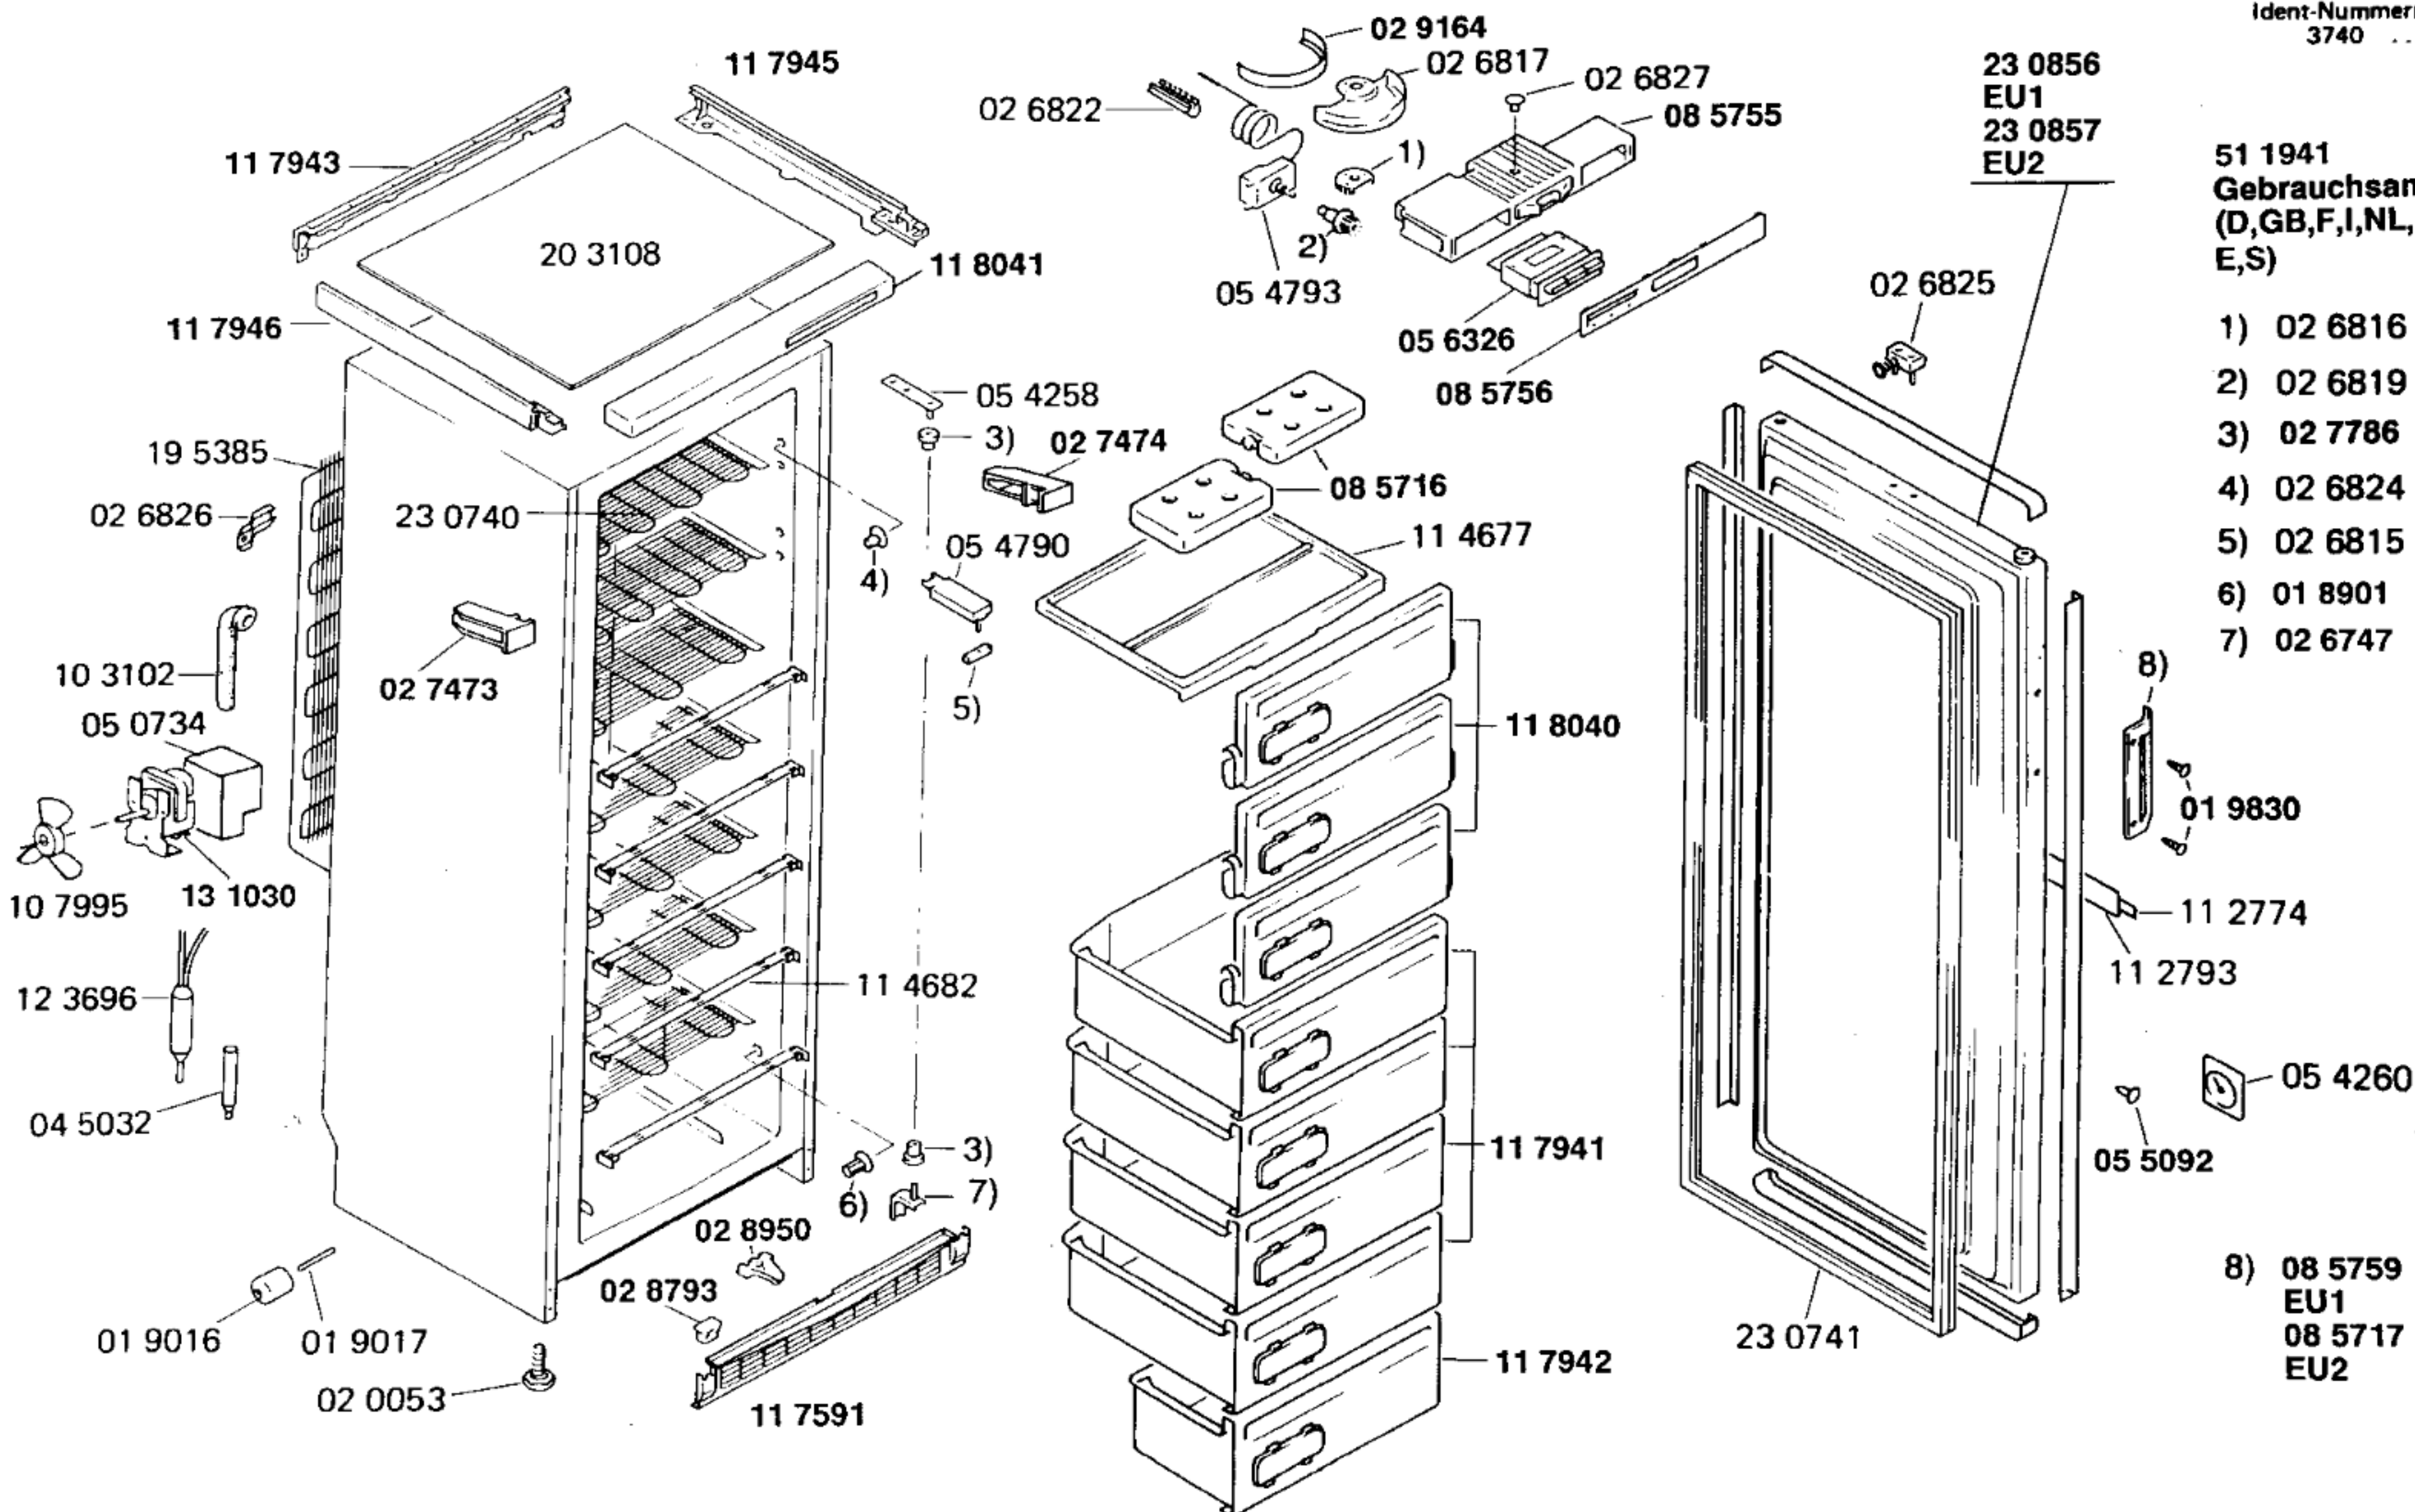

Ident-Nummern-Konstante
3740

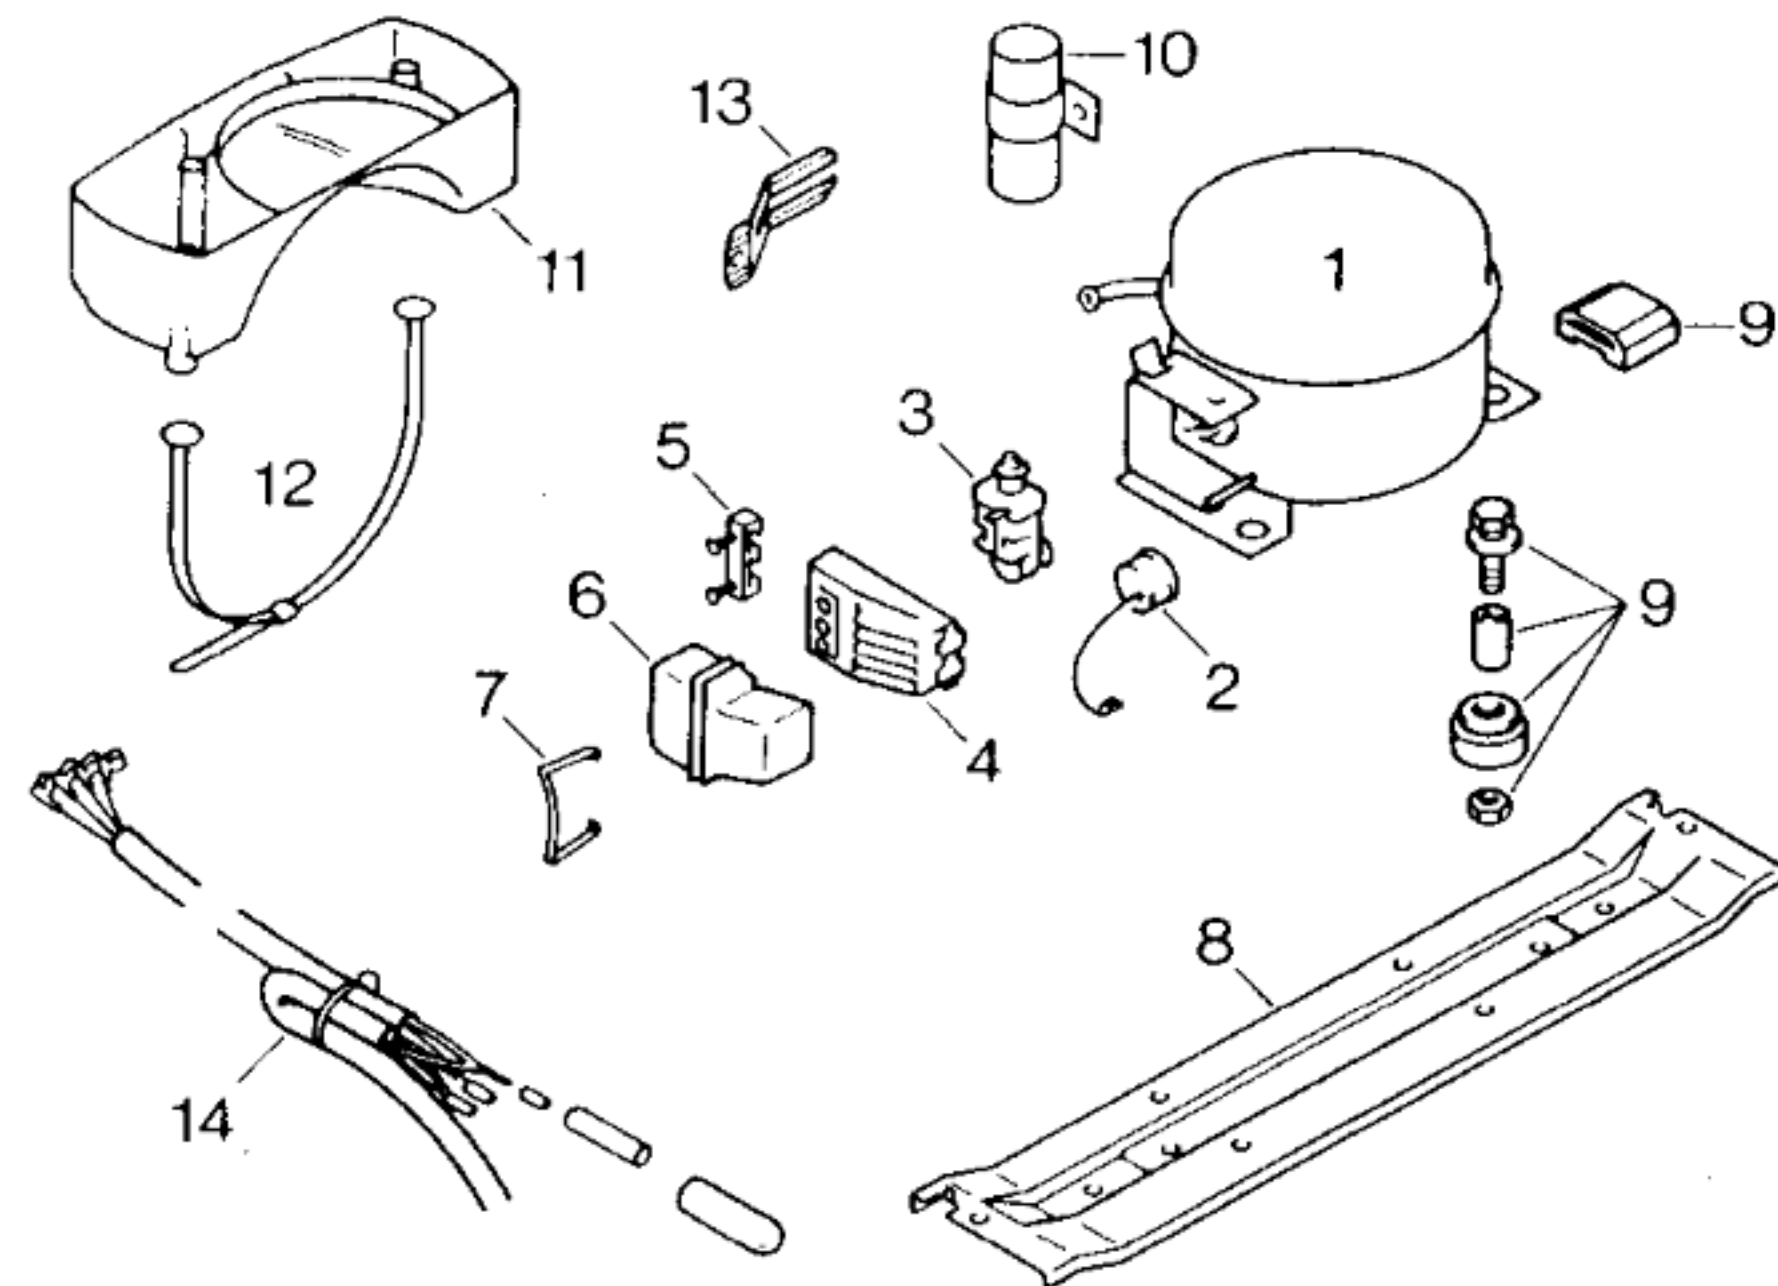

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type		Aspera BY 1118 A	Danfoss FR 10 A		
Förderleistung/Delivery/Débit		l/h	1596	1629	
Anlaufstrom/Starting current/Cour. de démarrage		A	11,0	11,4	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	9,9	10,7	
		Hi/aux Ω	37,3	13,0	
Temp.-Regler/Thermostat Typ/Type		Danfoss 077 B 2054			
Reglerstellung/Position			kalt warm		
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	- 24	- 16	
		„aus“	- 34	- 24	
		(„abtauen“ od.) „alarm“	- 19	- 12	
Füllmenge/Fill.quantity/Charge		R12	g	220	
Anschlußwert/Conn.load/Puiss. connectée			W	190	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω	190	
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		

Pos.	EU1	EU2		
	Aspera	Danfoss		
1	14 0363	14 0427		
2	02 7670			
3	02 2342	02 0108		
4	05 1748			
5		02 1361		
6	05 1746	05 1413		
7	02 2339			
8				
9	05 0166			
10				
11				
12				
13				
14				