


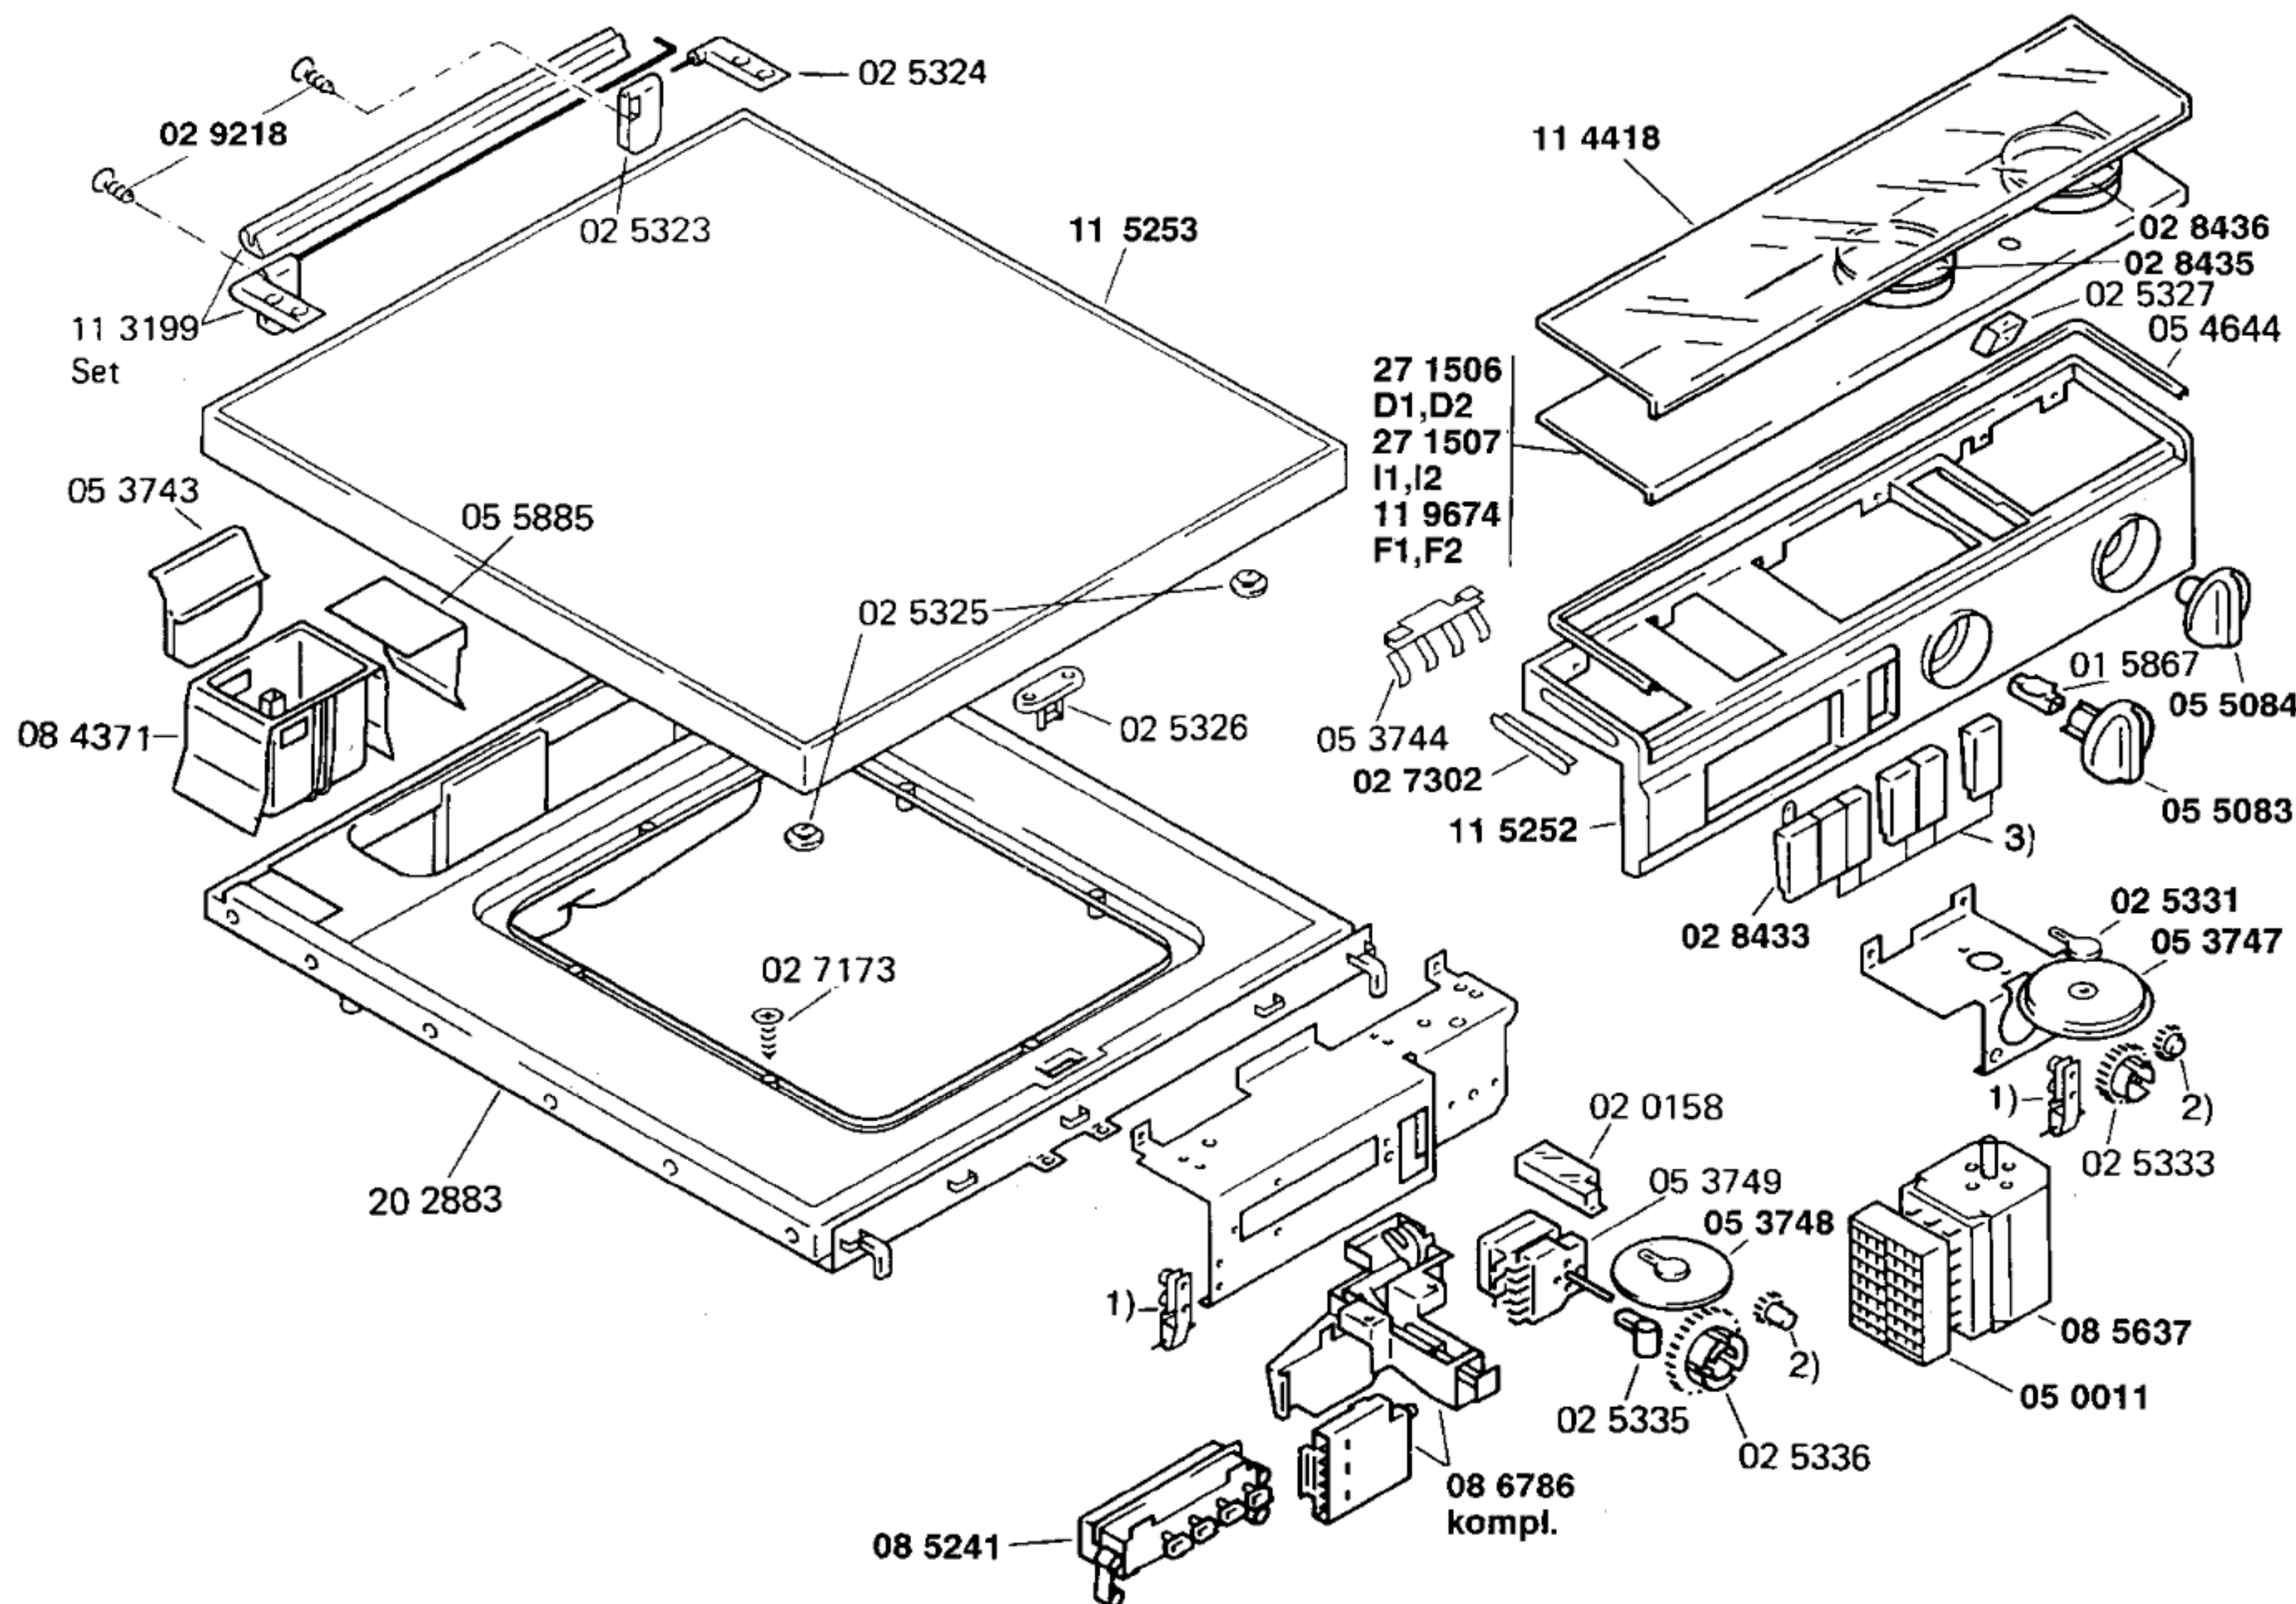

- 1) 02 5334
- 2) 02 5332
- 3) 03 1332
Set, D1
03 1331
Set, I1
03 0231
Set, F1

Aufstellanweisung

51 3182
(D,GB,F,I,NL,E)
51 4257

Gebrauchsanweisung

51 4262
(D)

51 4260

(I)

51 3772

(F)

Programmtabelle

51 4263


(D)

51 4261


(I)


51 3759

(F)

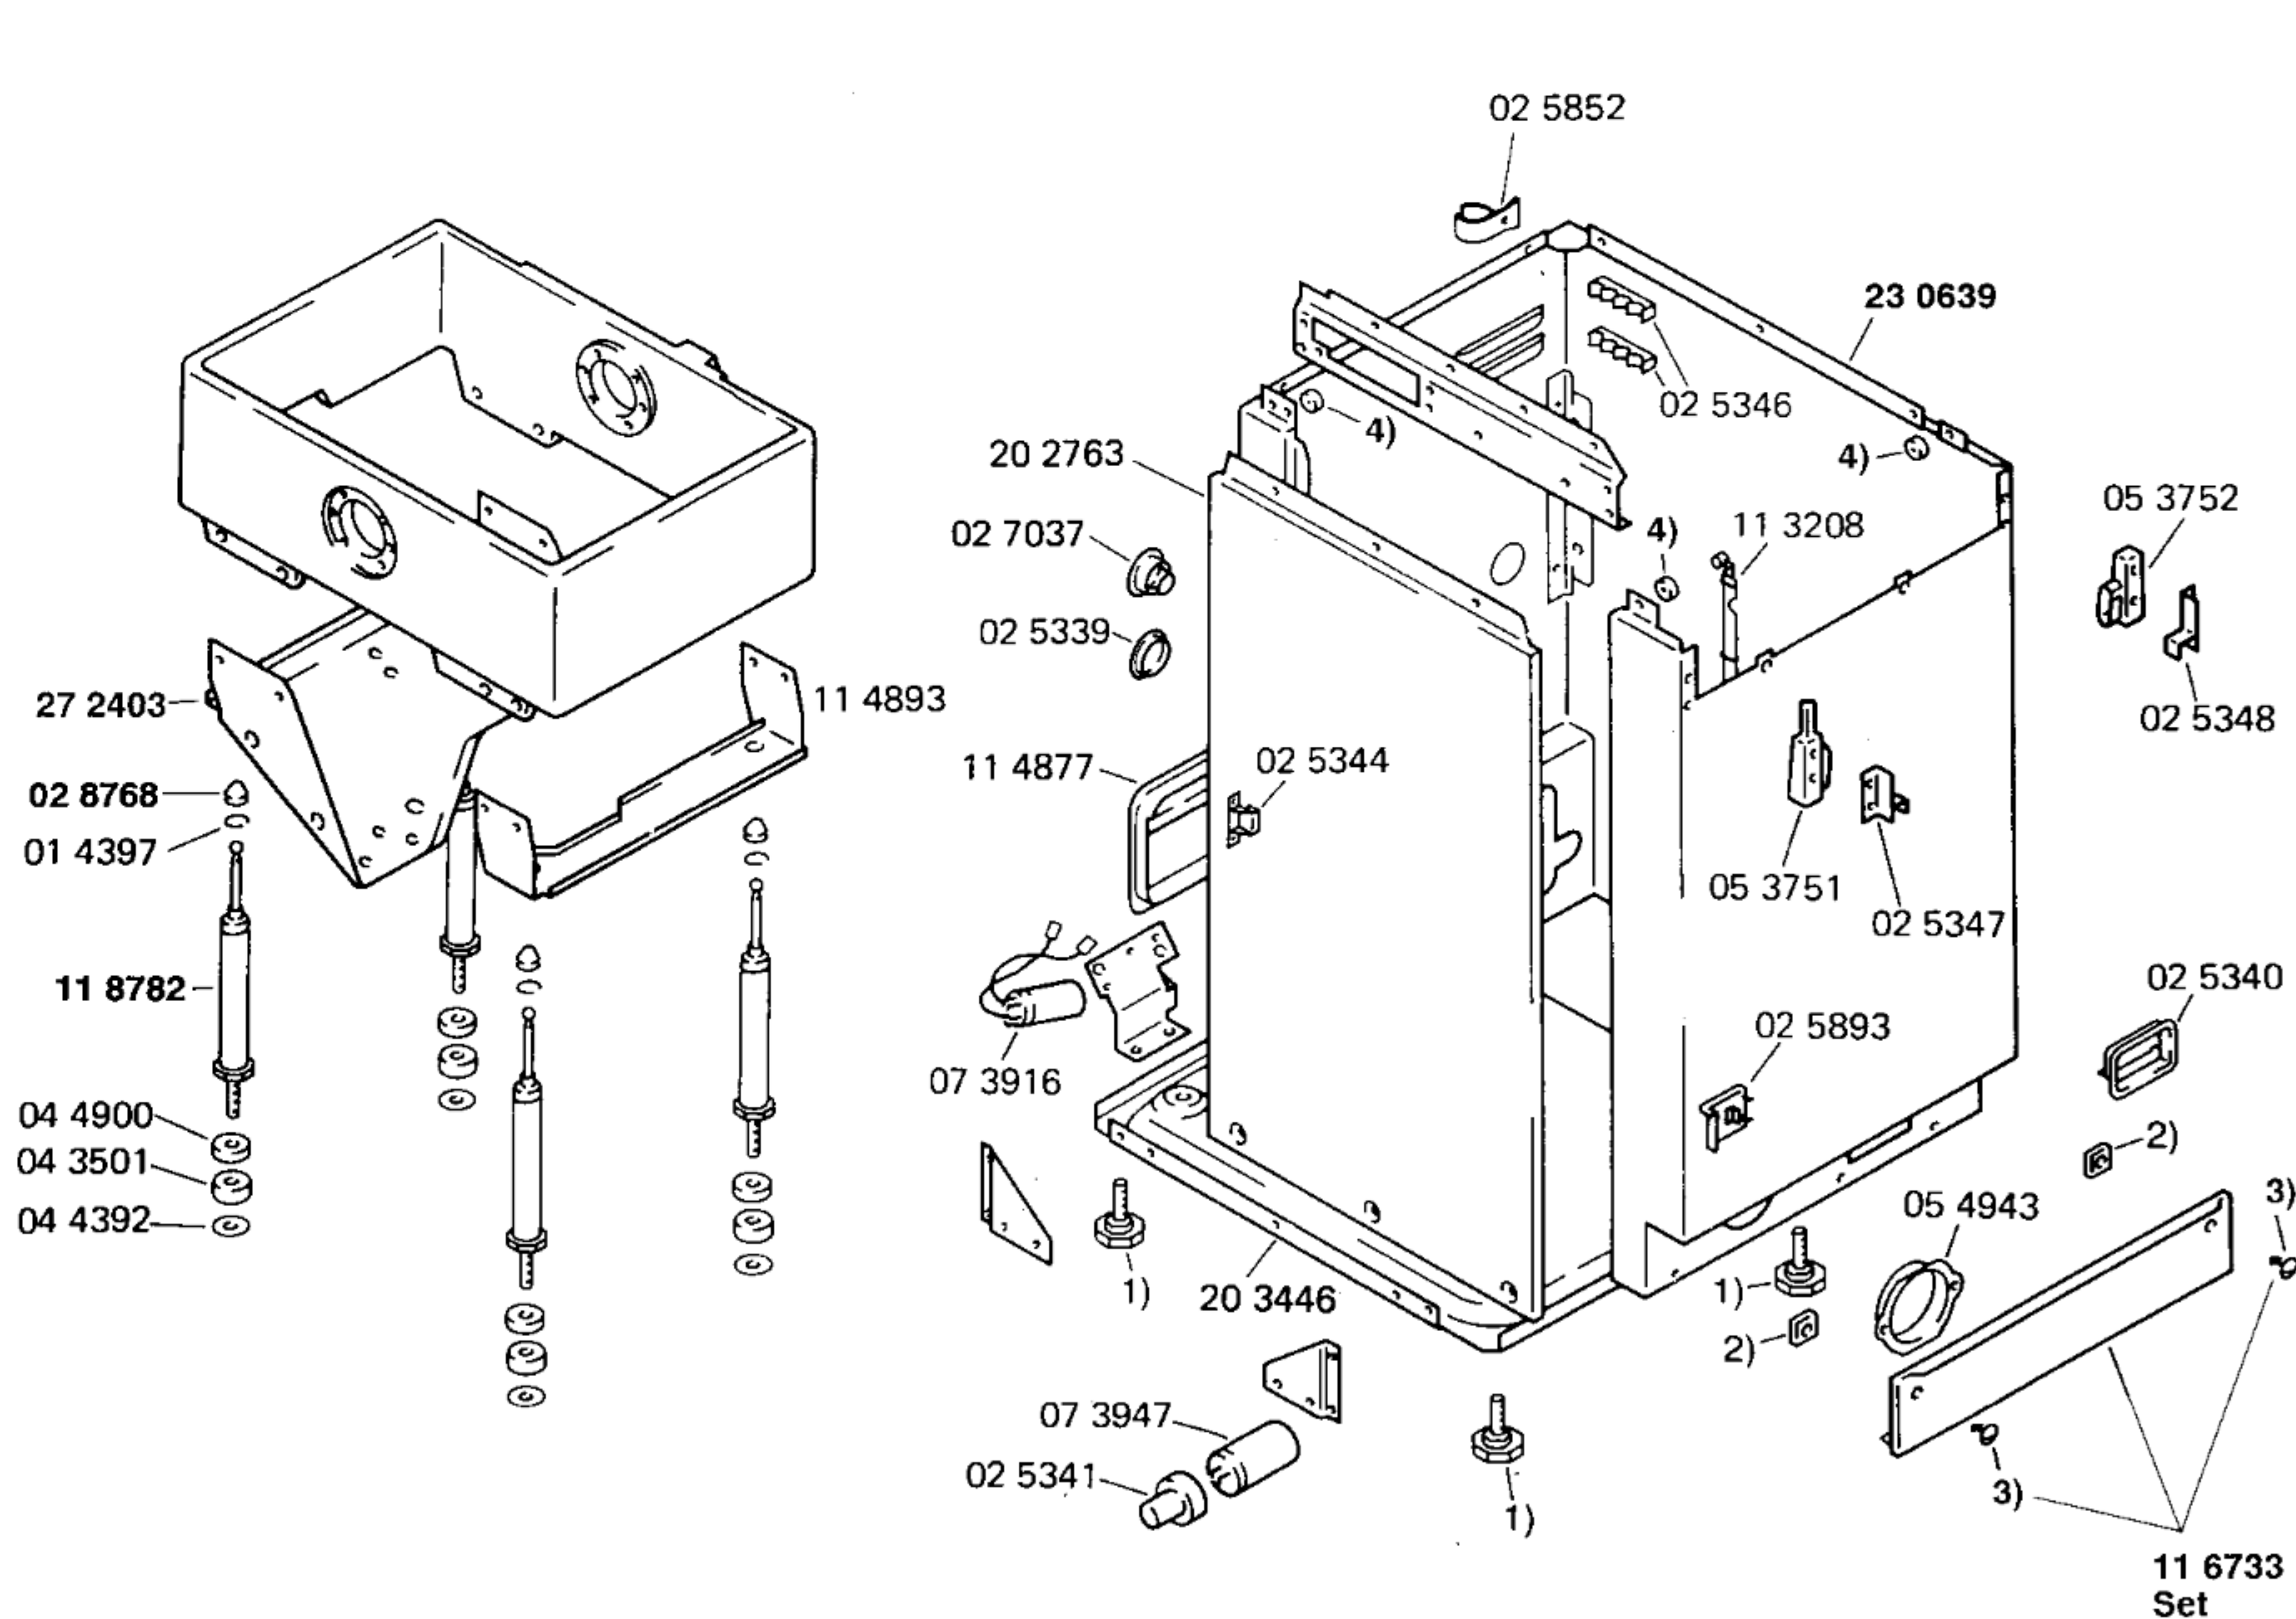

- 1) 04 5561
- 2) 01 4687
- 3) 02 8340
- 4) 02 5345

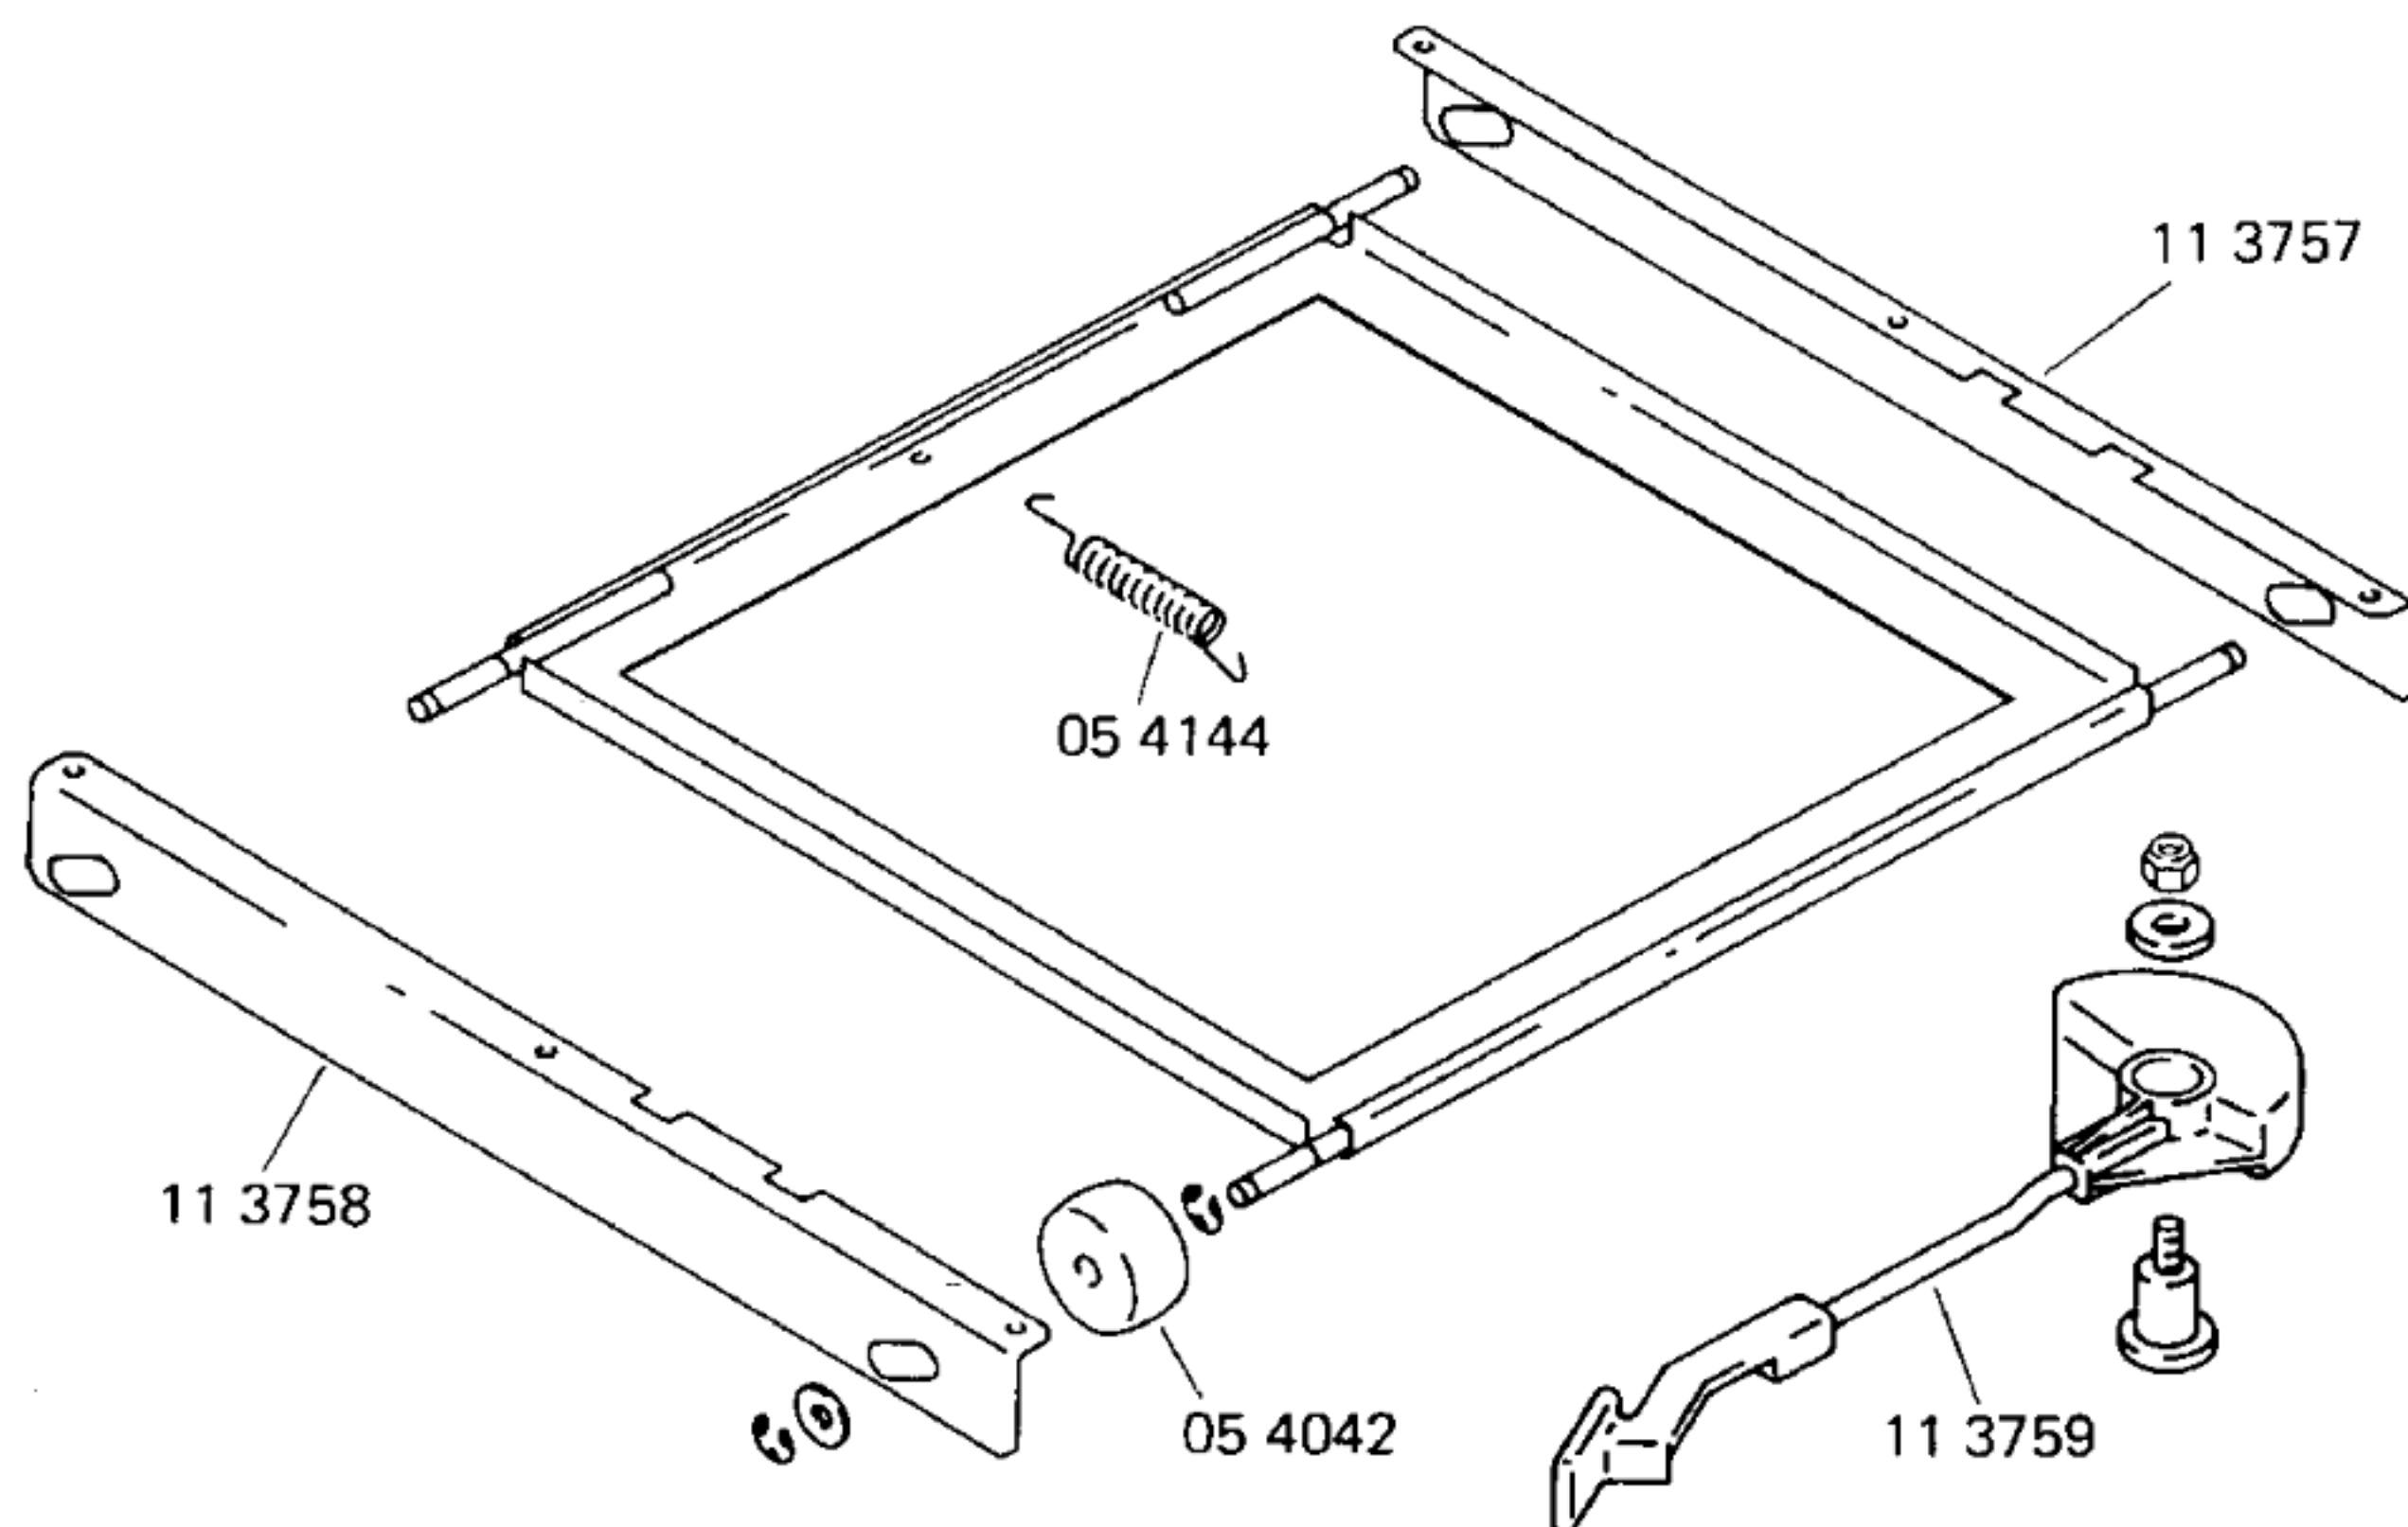

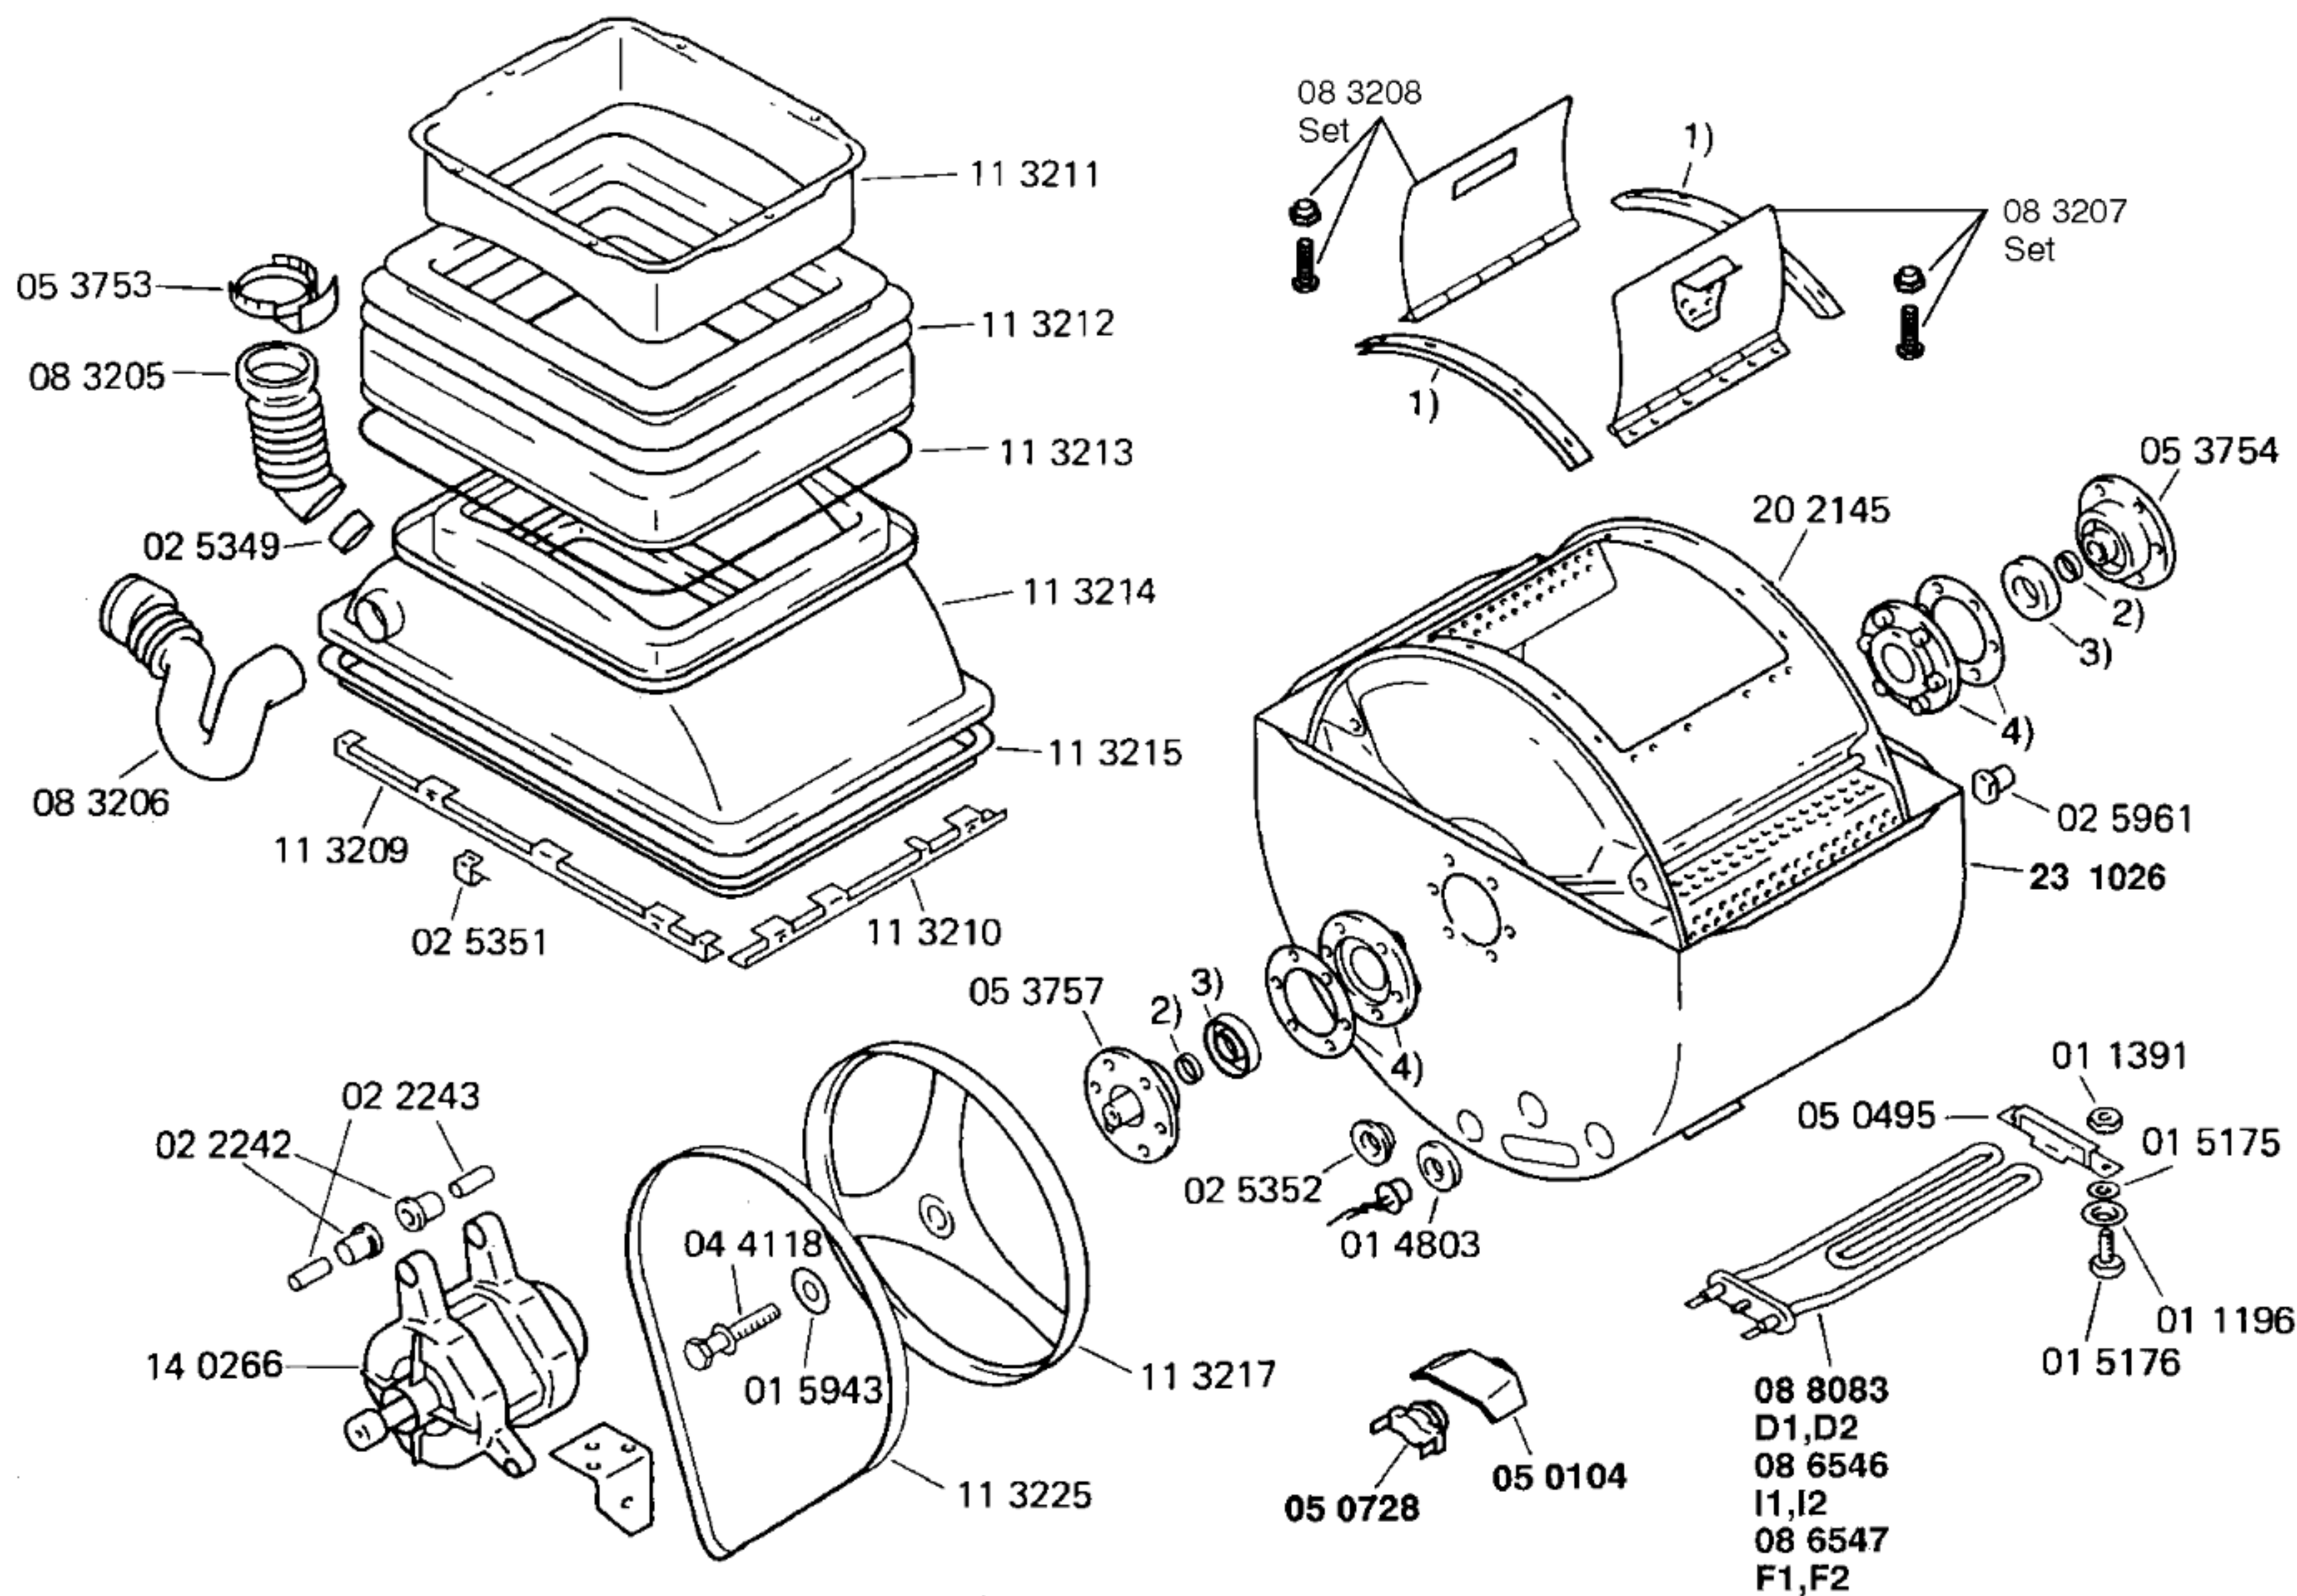

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

