



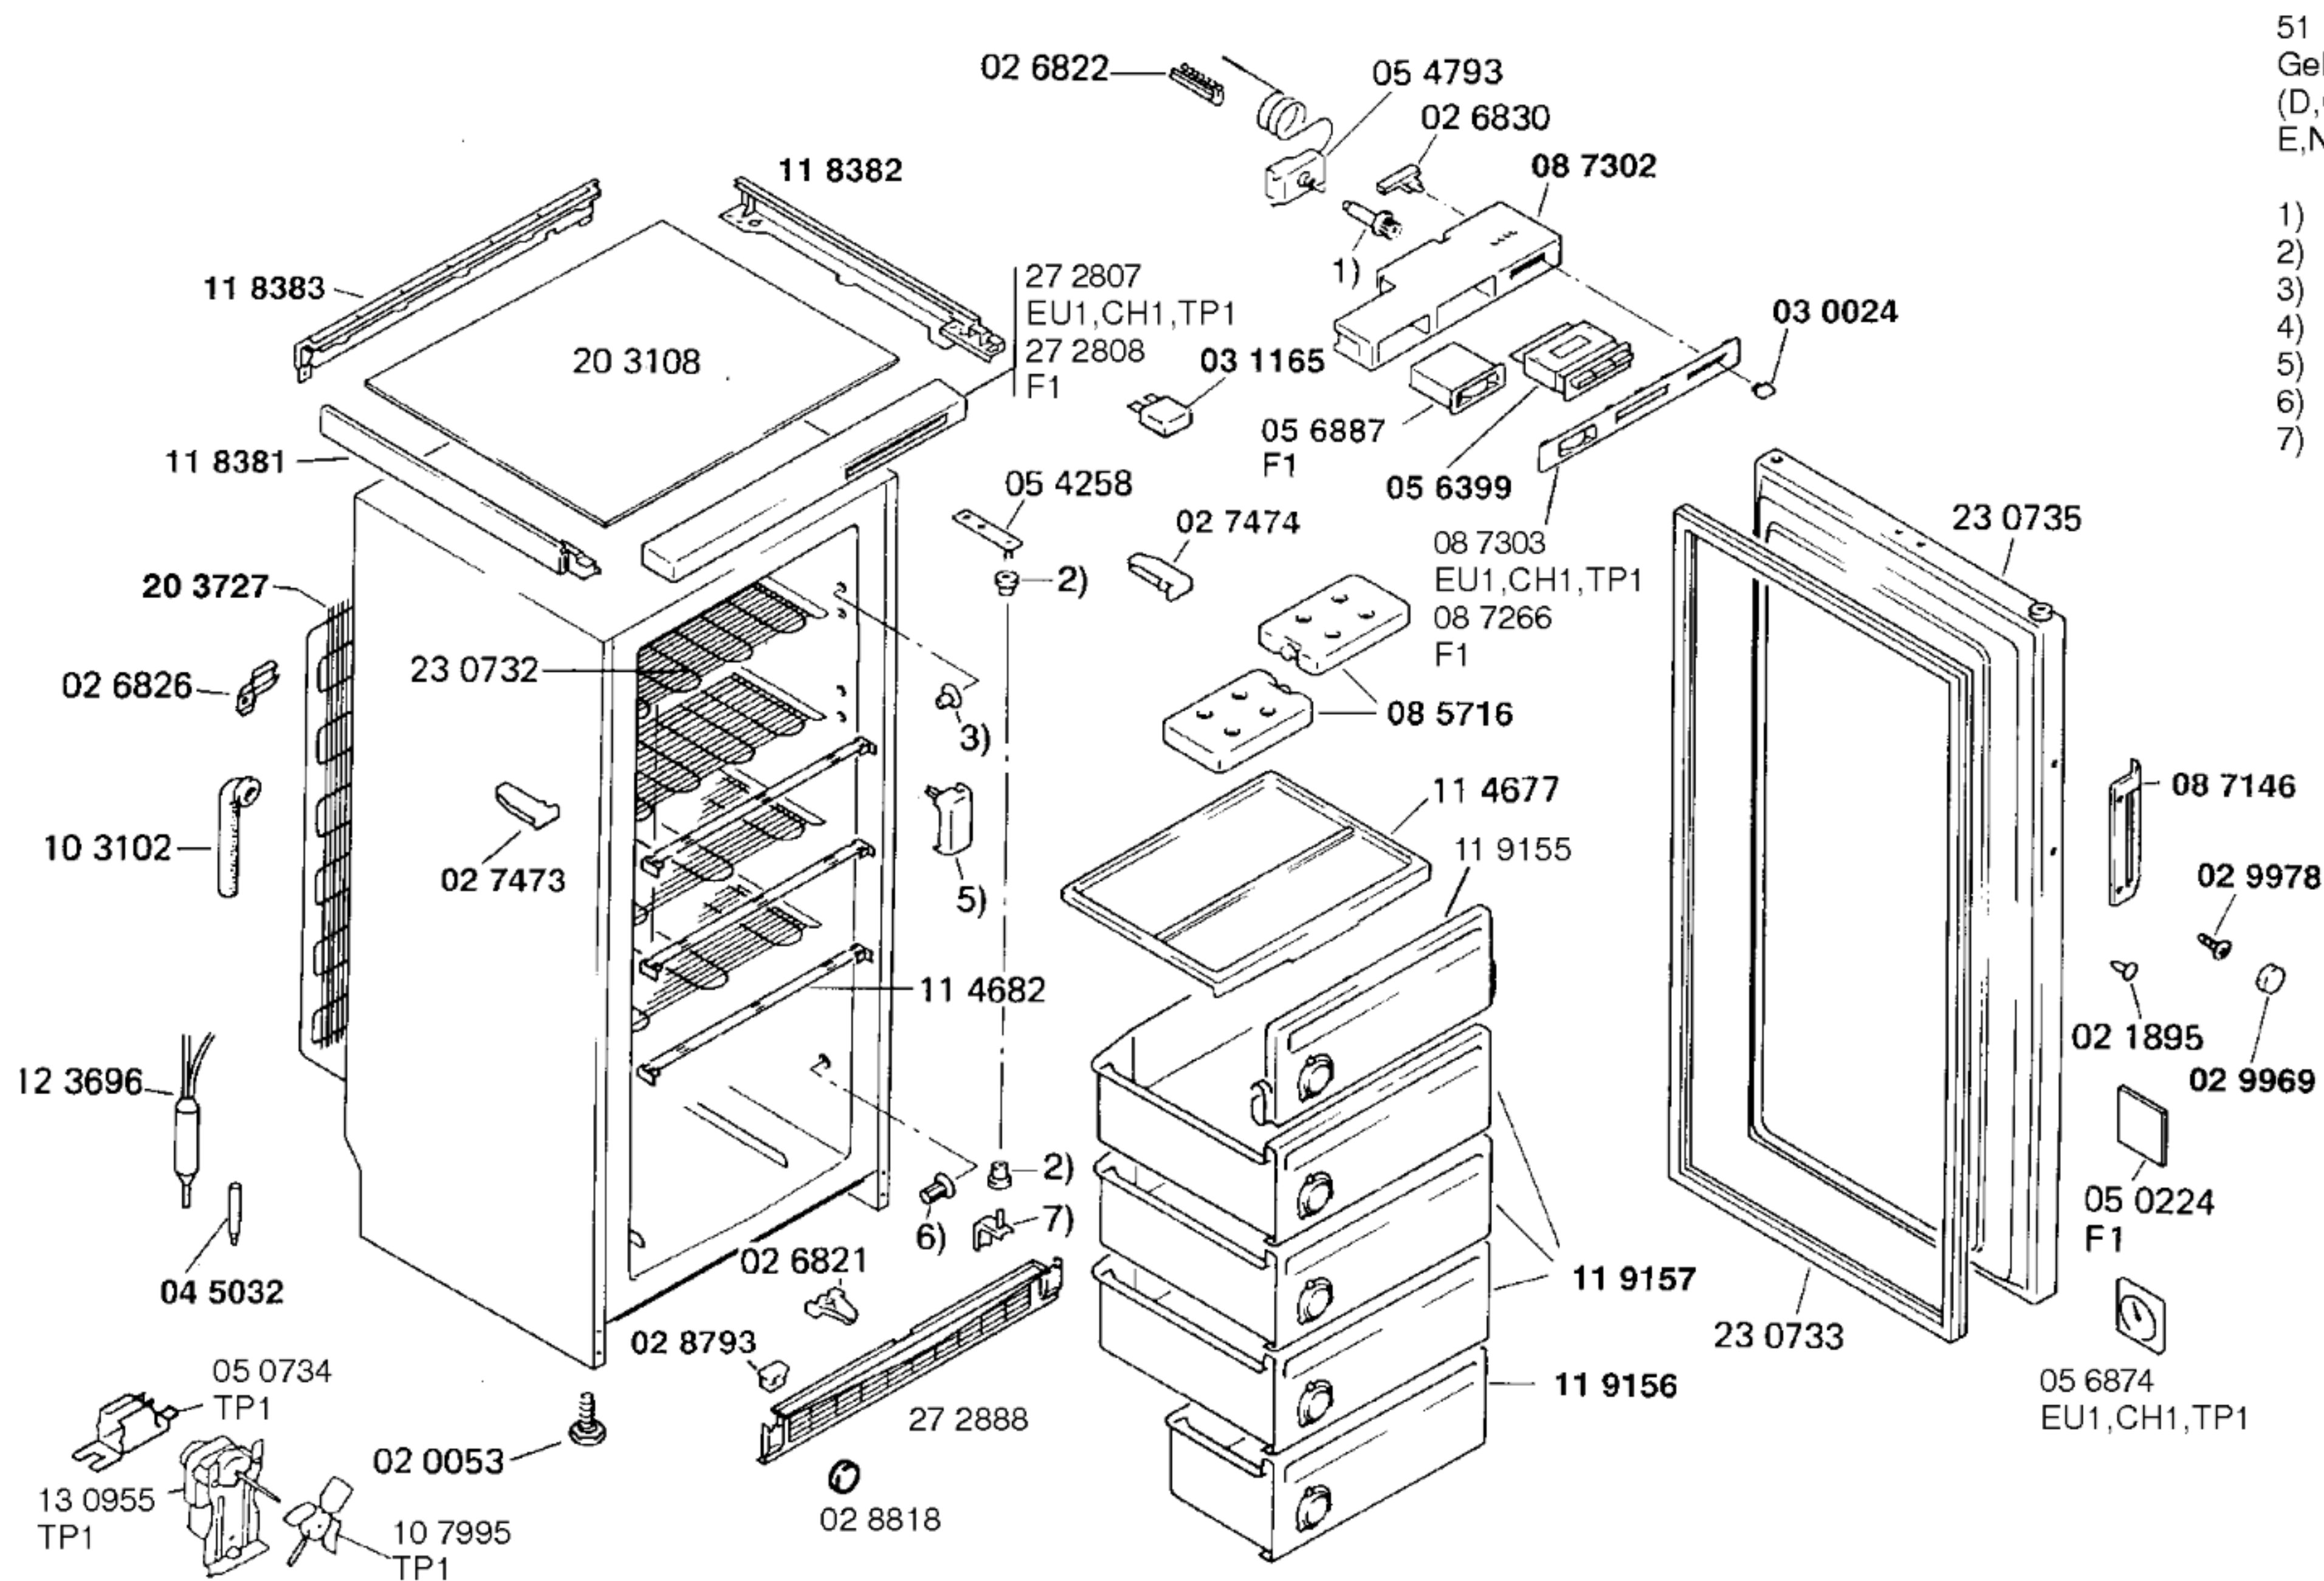

51 1948
Gebrauchsanweisung
(D,GB,F,I,SF,NL,S,DK,P
E,N)

- | | |
|----|---------|
| 1) | 02 6828 |
| 2) | 02 7786 |
| 3) | 02 6824 |
| 4) | — |
| 5) | 02 6823 |
| 6) | 01 8901 |
| 7) | 02 6747 |

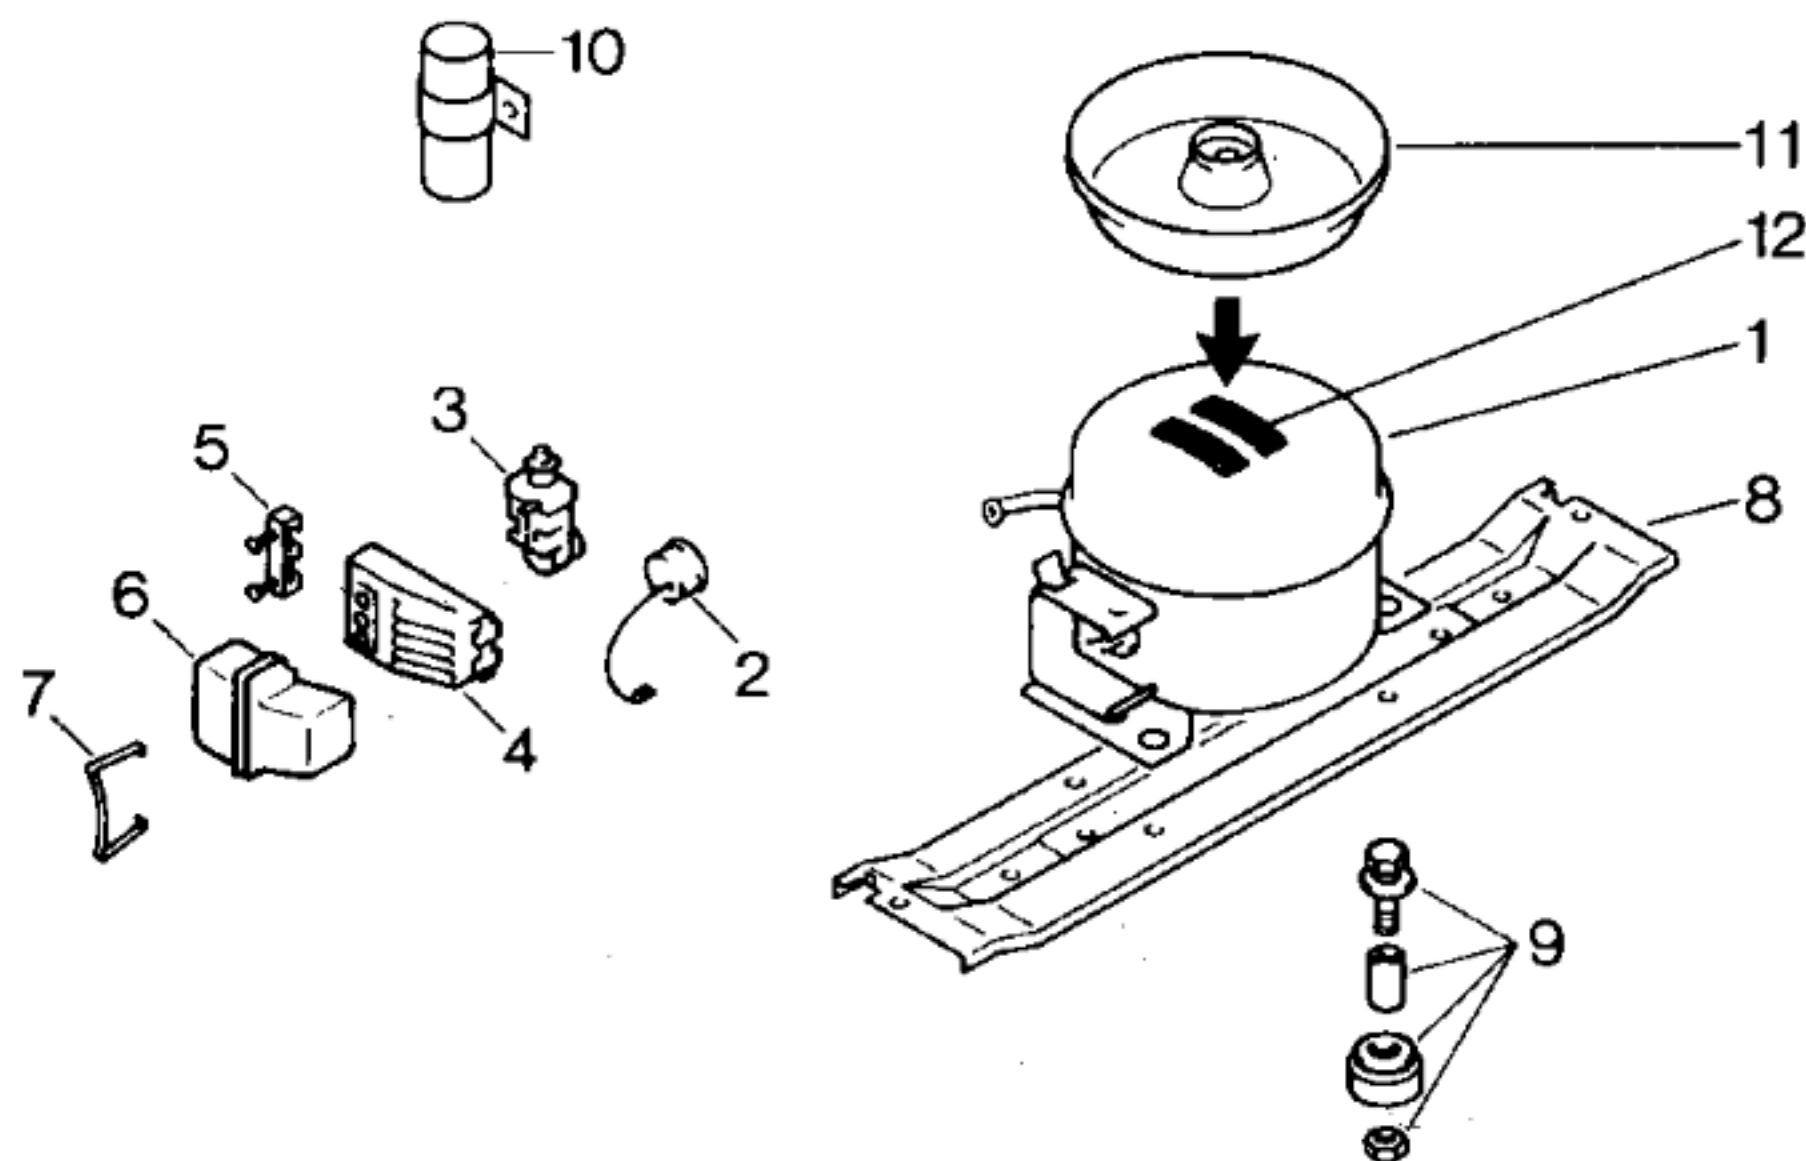

Pos.			
	Matsushita		
	FN66 Q11G		
1	14 0362		
2			
3	02 7666		
4			
5			
6	05 8458		
7	02 6731		
8	11 1567		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Matsushita	
Typ/Type		FN66 Q11G	
Förderleistung/Delivery/Débit	l/h	1184	
Anlaufstrom/Starting current/Cour de démarrage	A	7,9	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	11,8	
	Hi/aux Ω	40,1	
Temp.-Regler/Thermostat		Danfoss	
Typ/Type		077 B 2054	
Reglerstellung/Position		kalt warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-24 -16	
Valeurs de commutation	„aus“	-34 -24	
	(„abtauen“ od.) „alarm“	-19 -12	
Füllmenge/Fill.quantity/Charge	R12 g	185	
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		