




Gebrauchsanweisung
51 2839
(D, GB, F, I, NL)

Kochbücher:
51 2761
(D)
51 2762
(GB)
51 2763
(F)
51 3233
(NL)

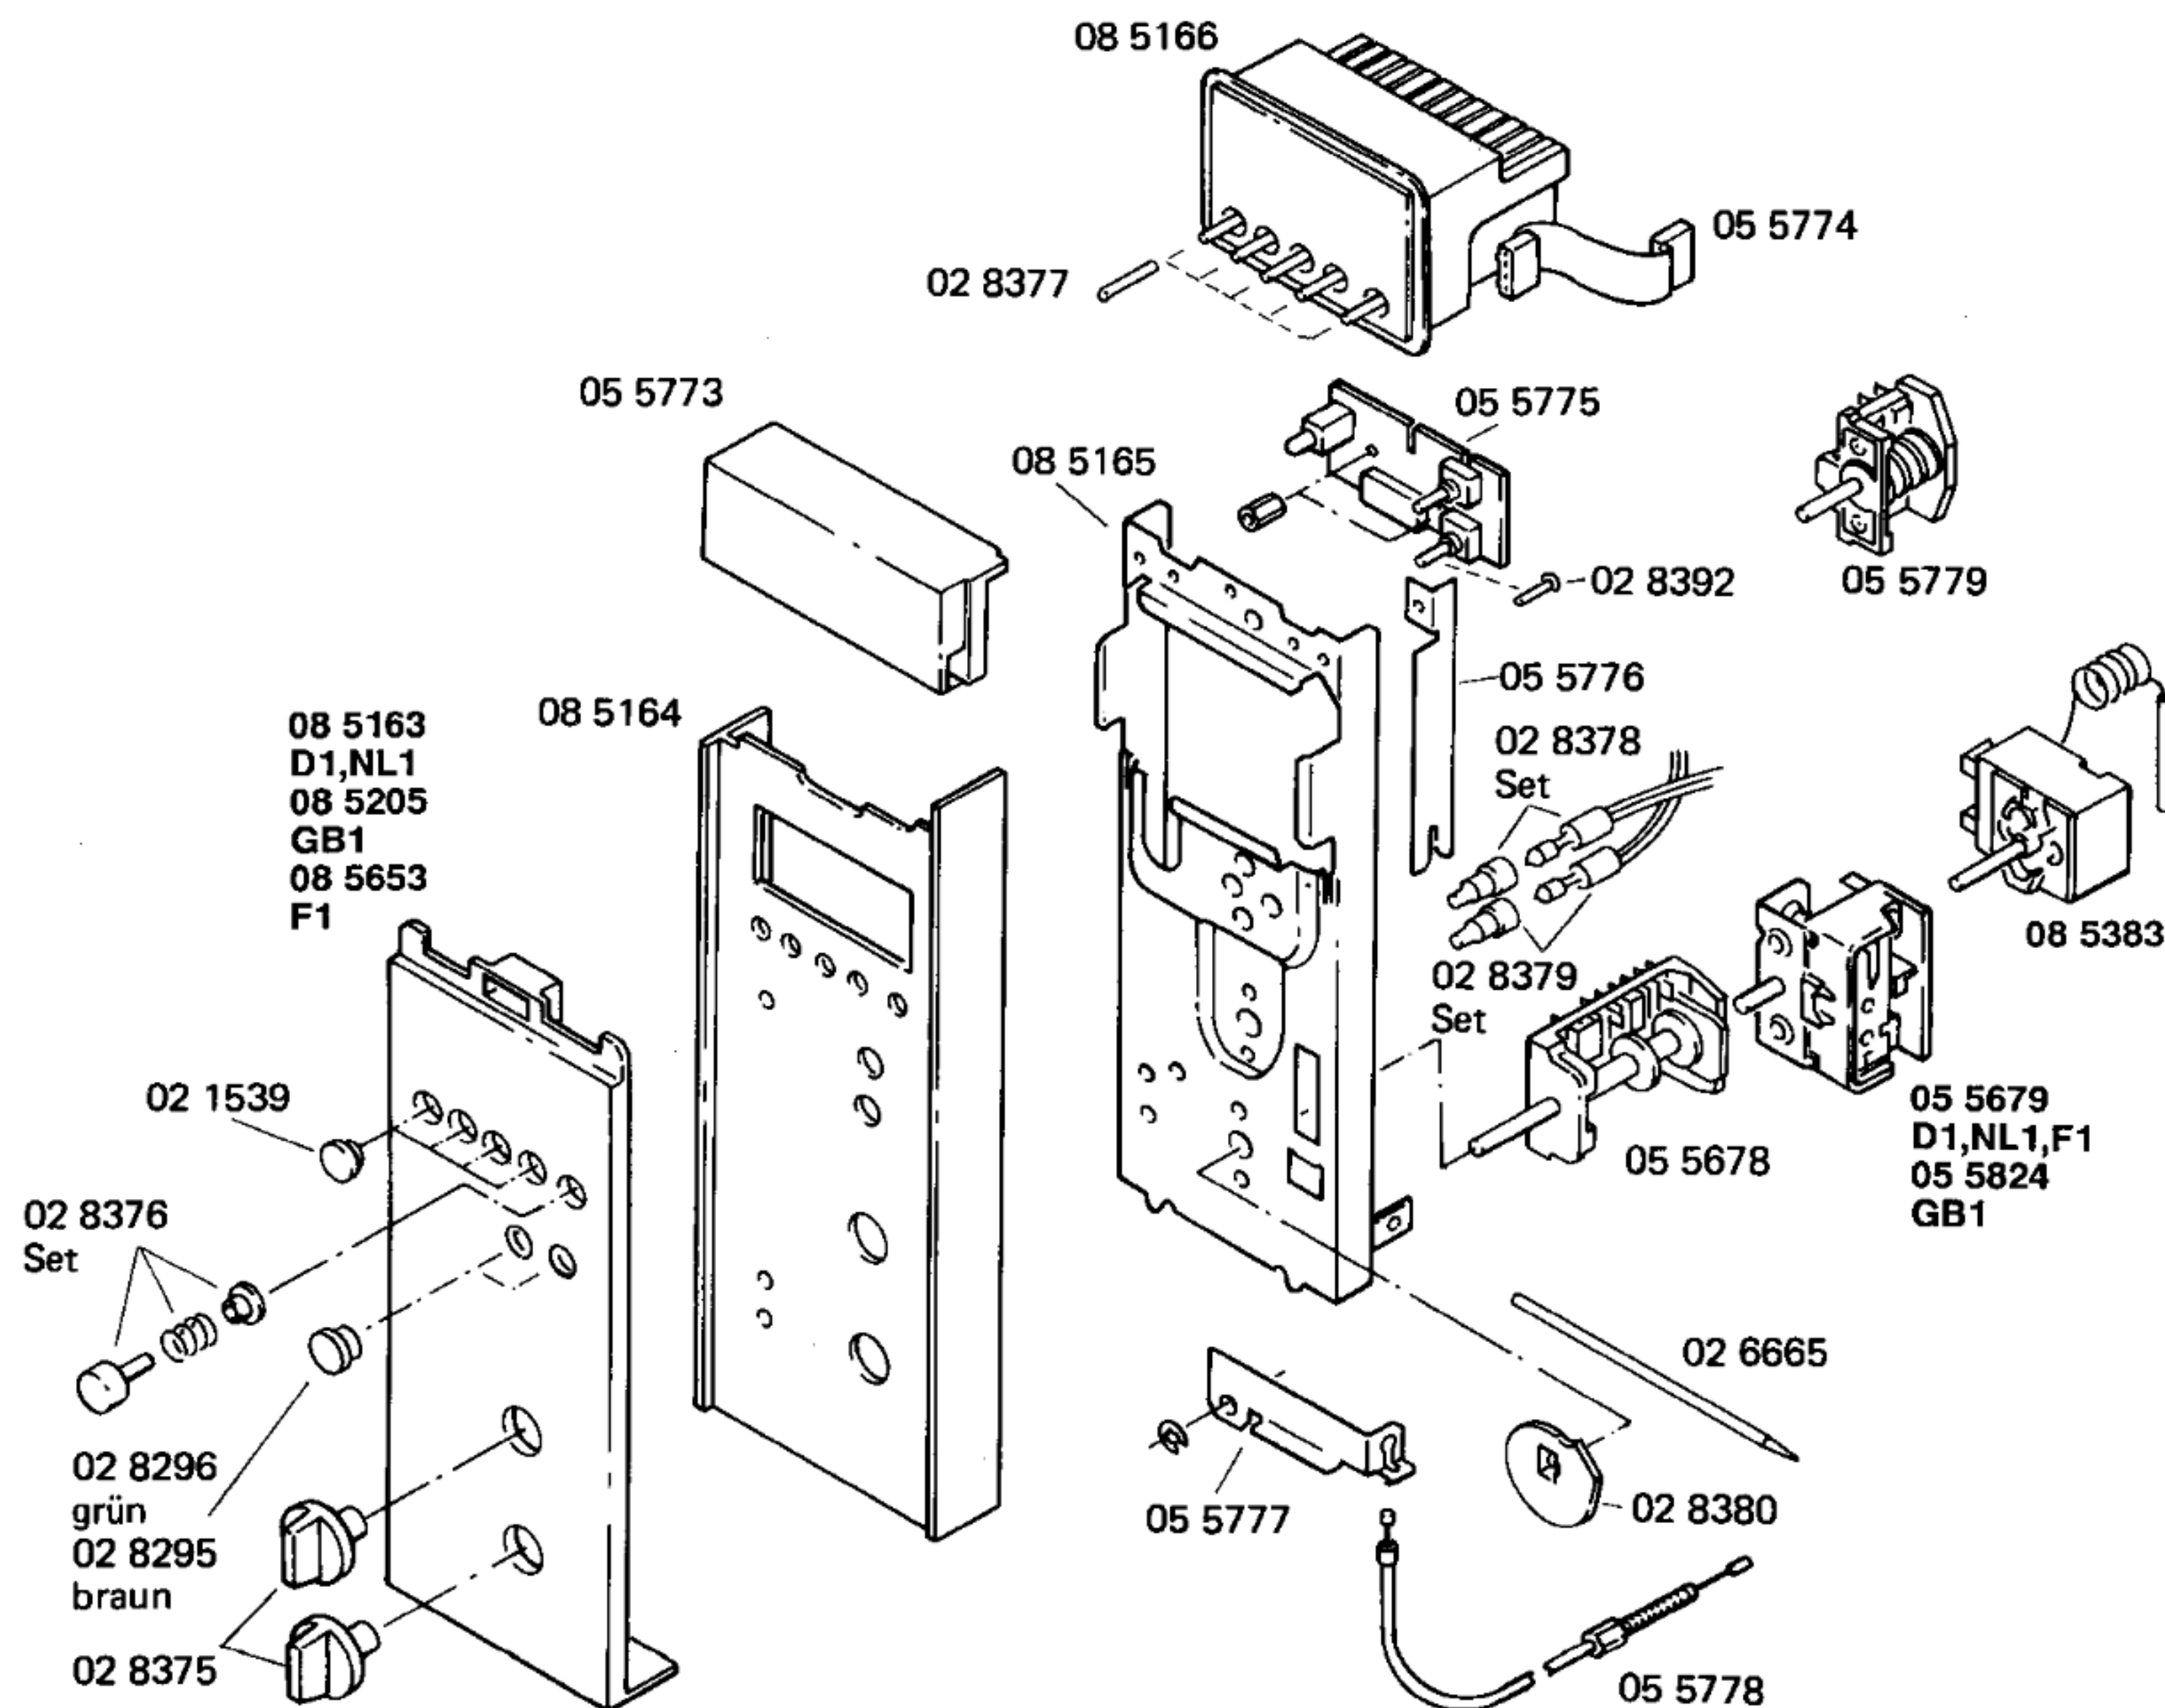

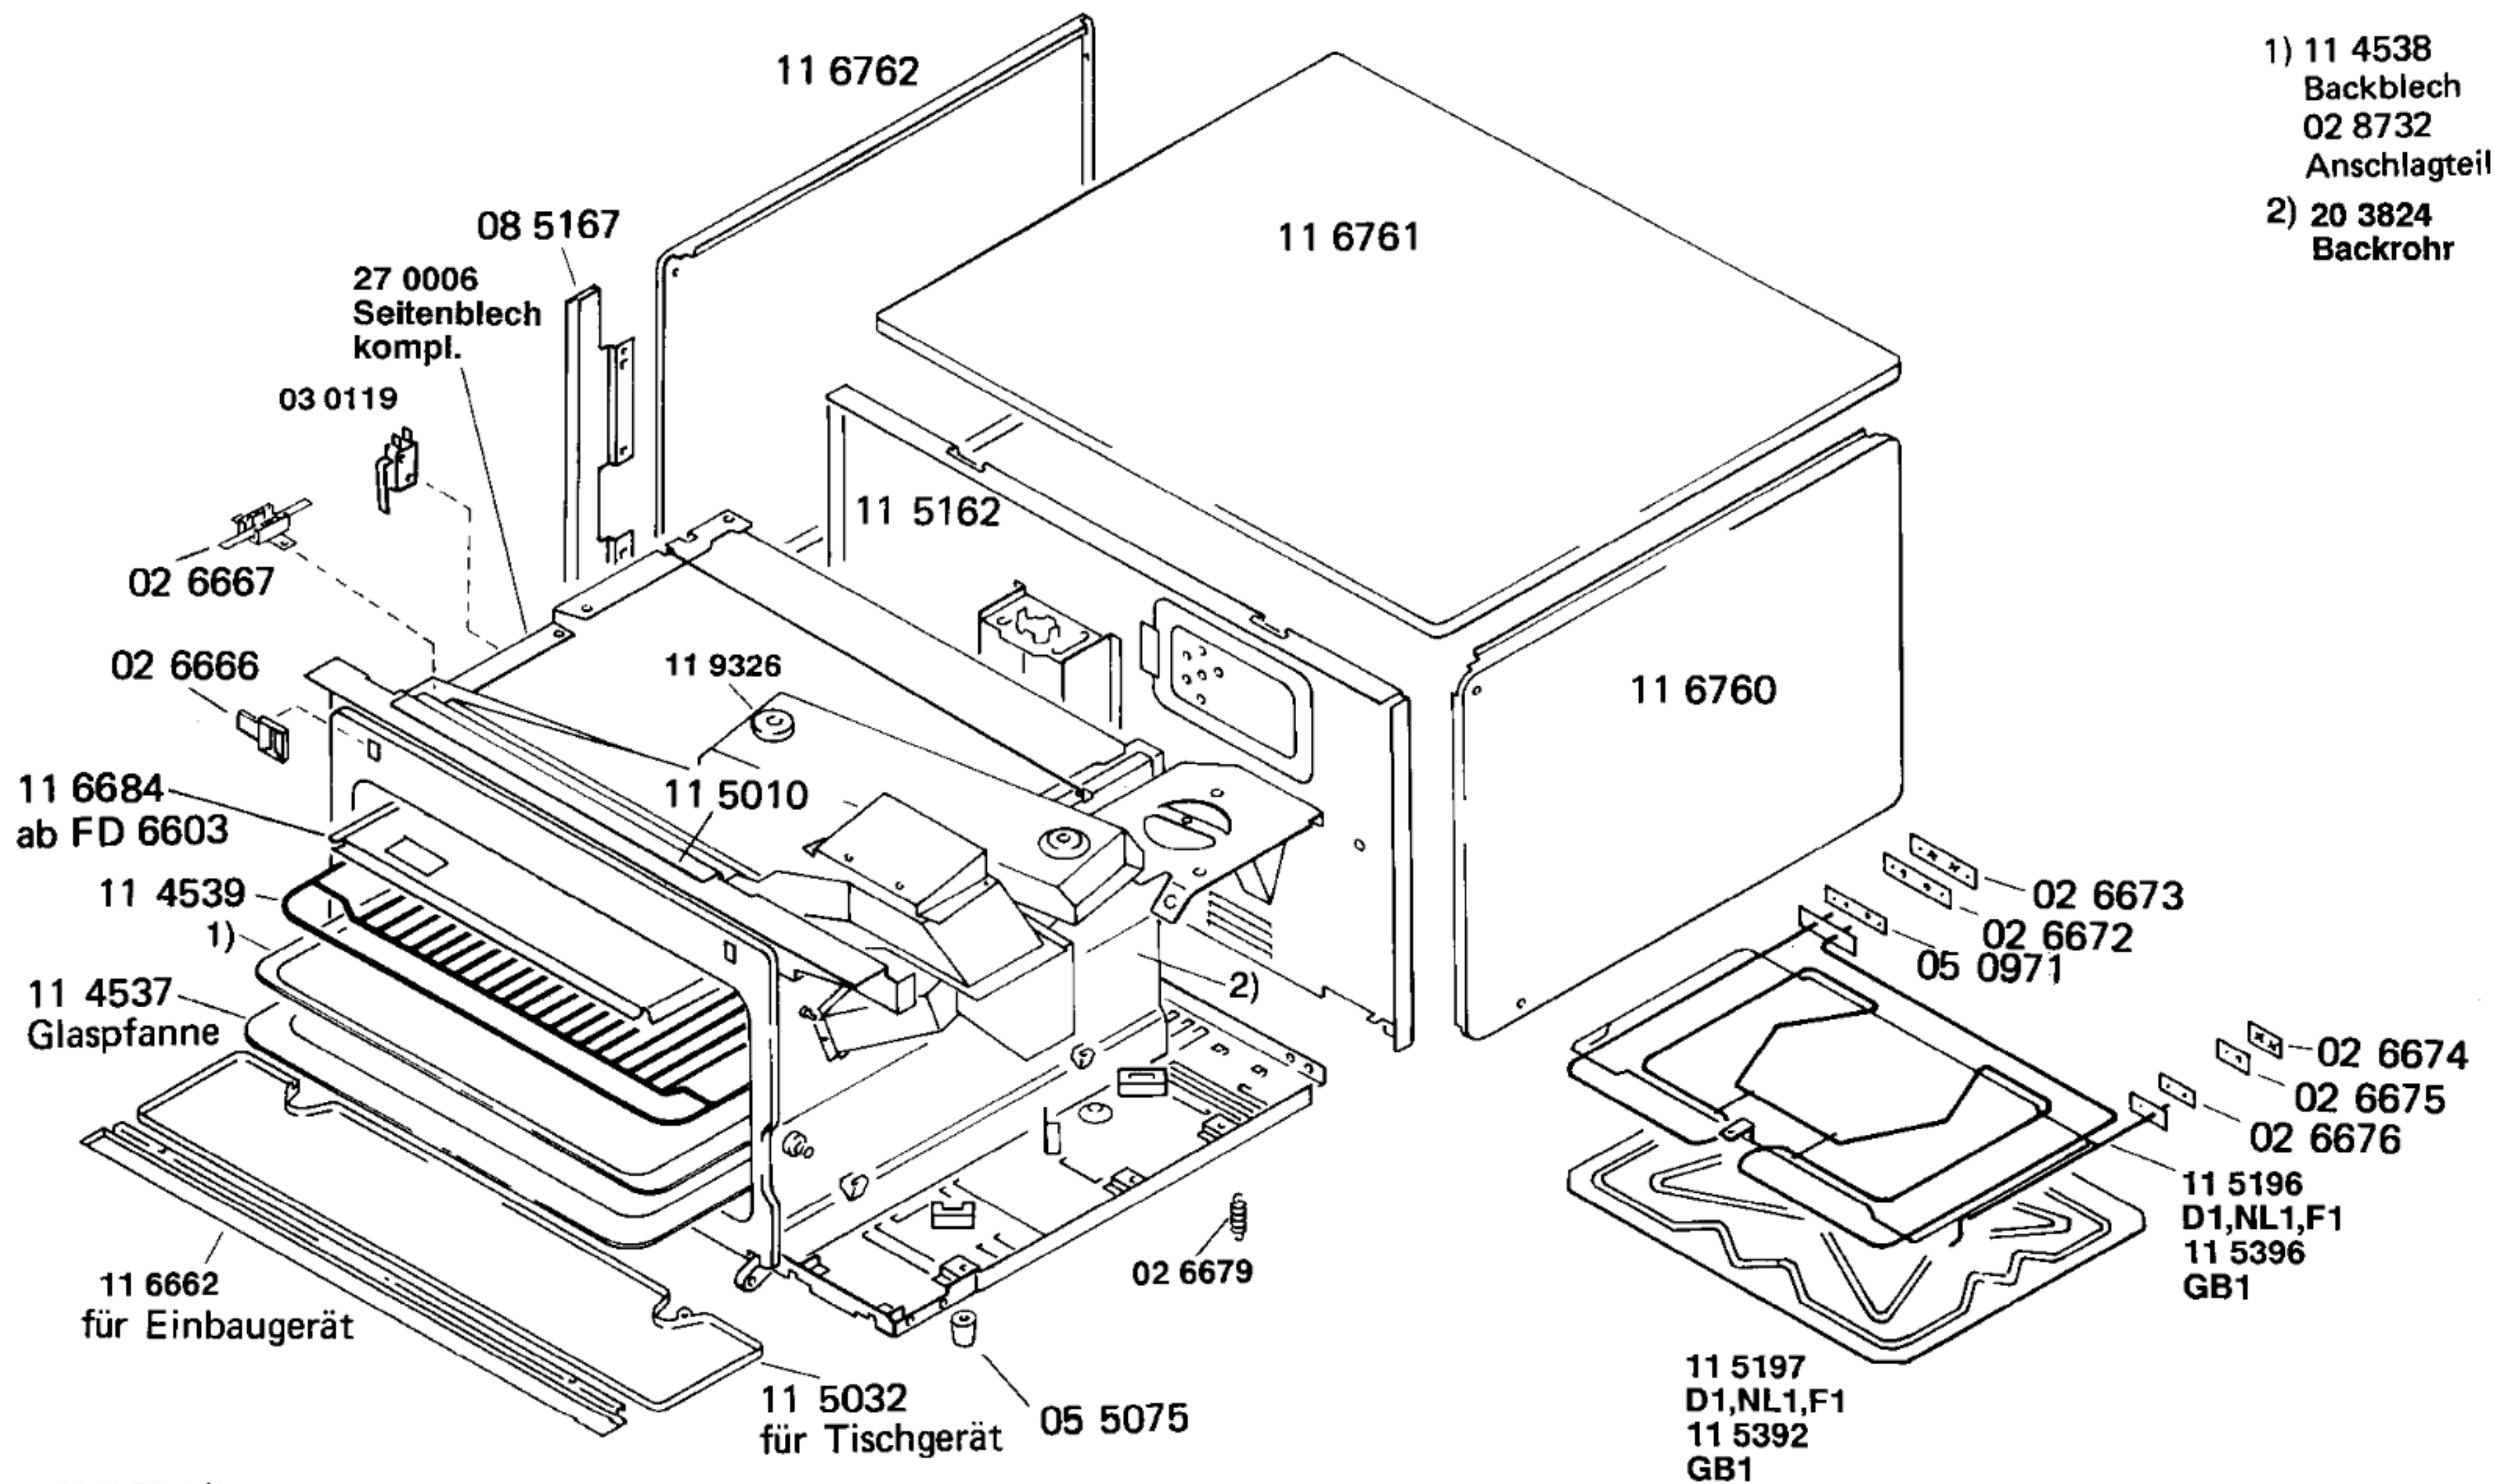

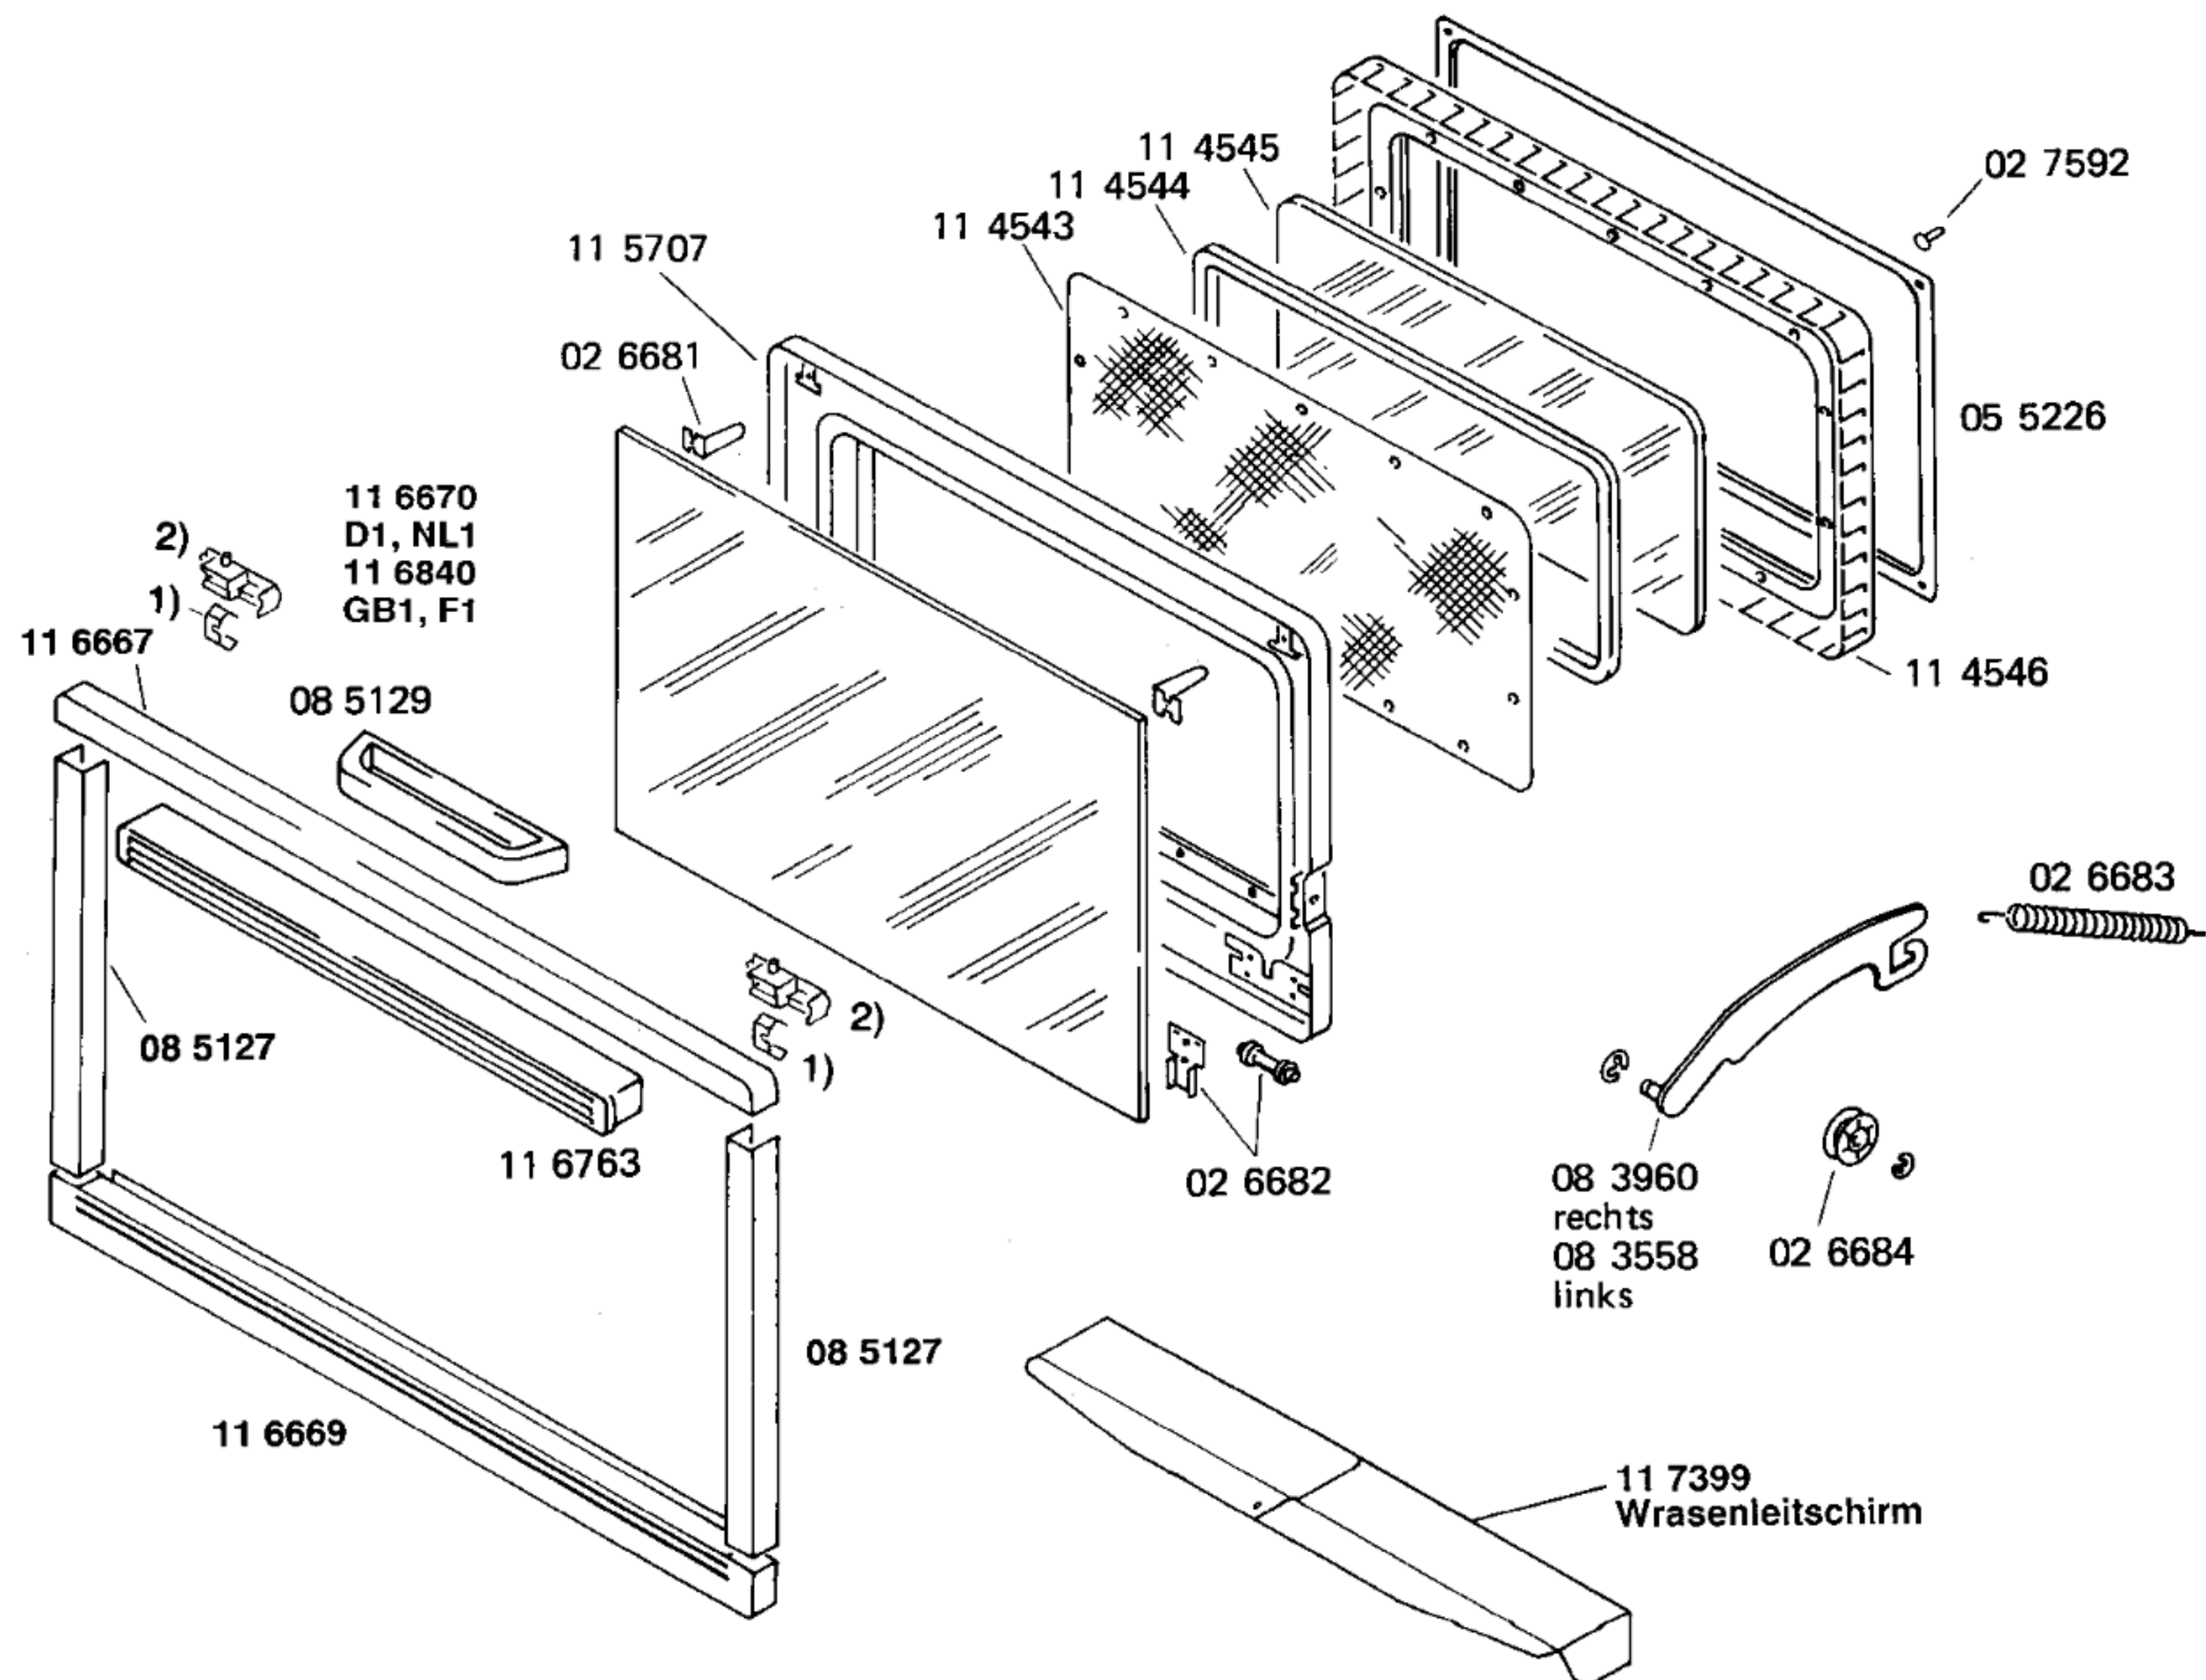

1) 02 7045
2) 02 7044

