 


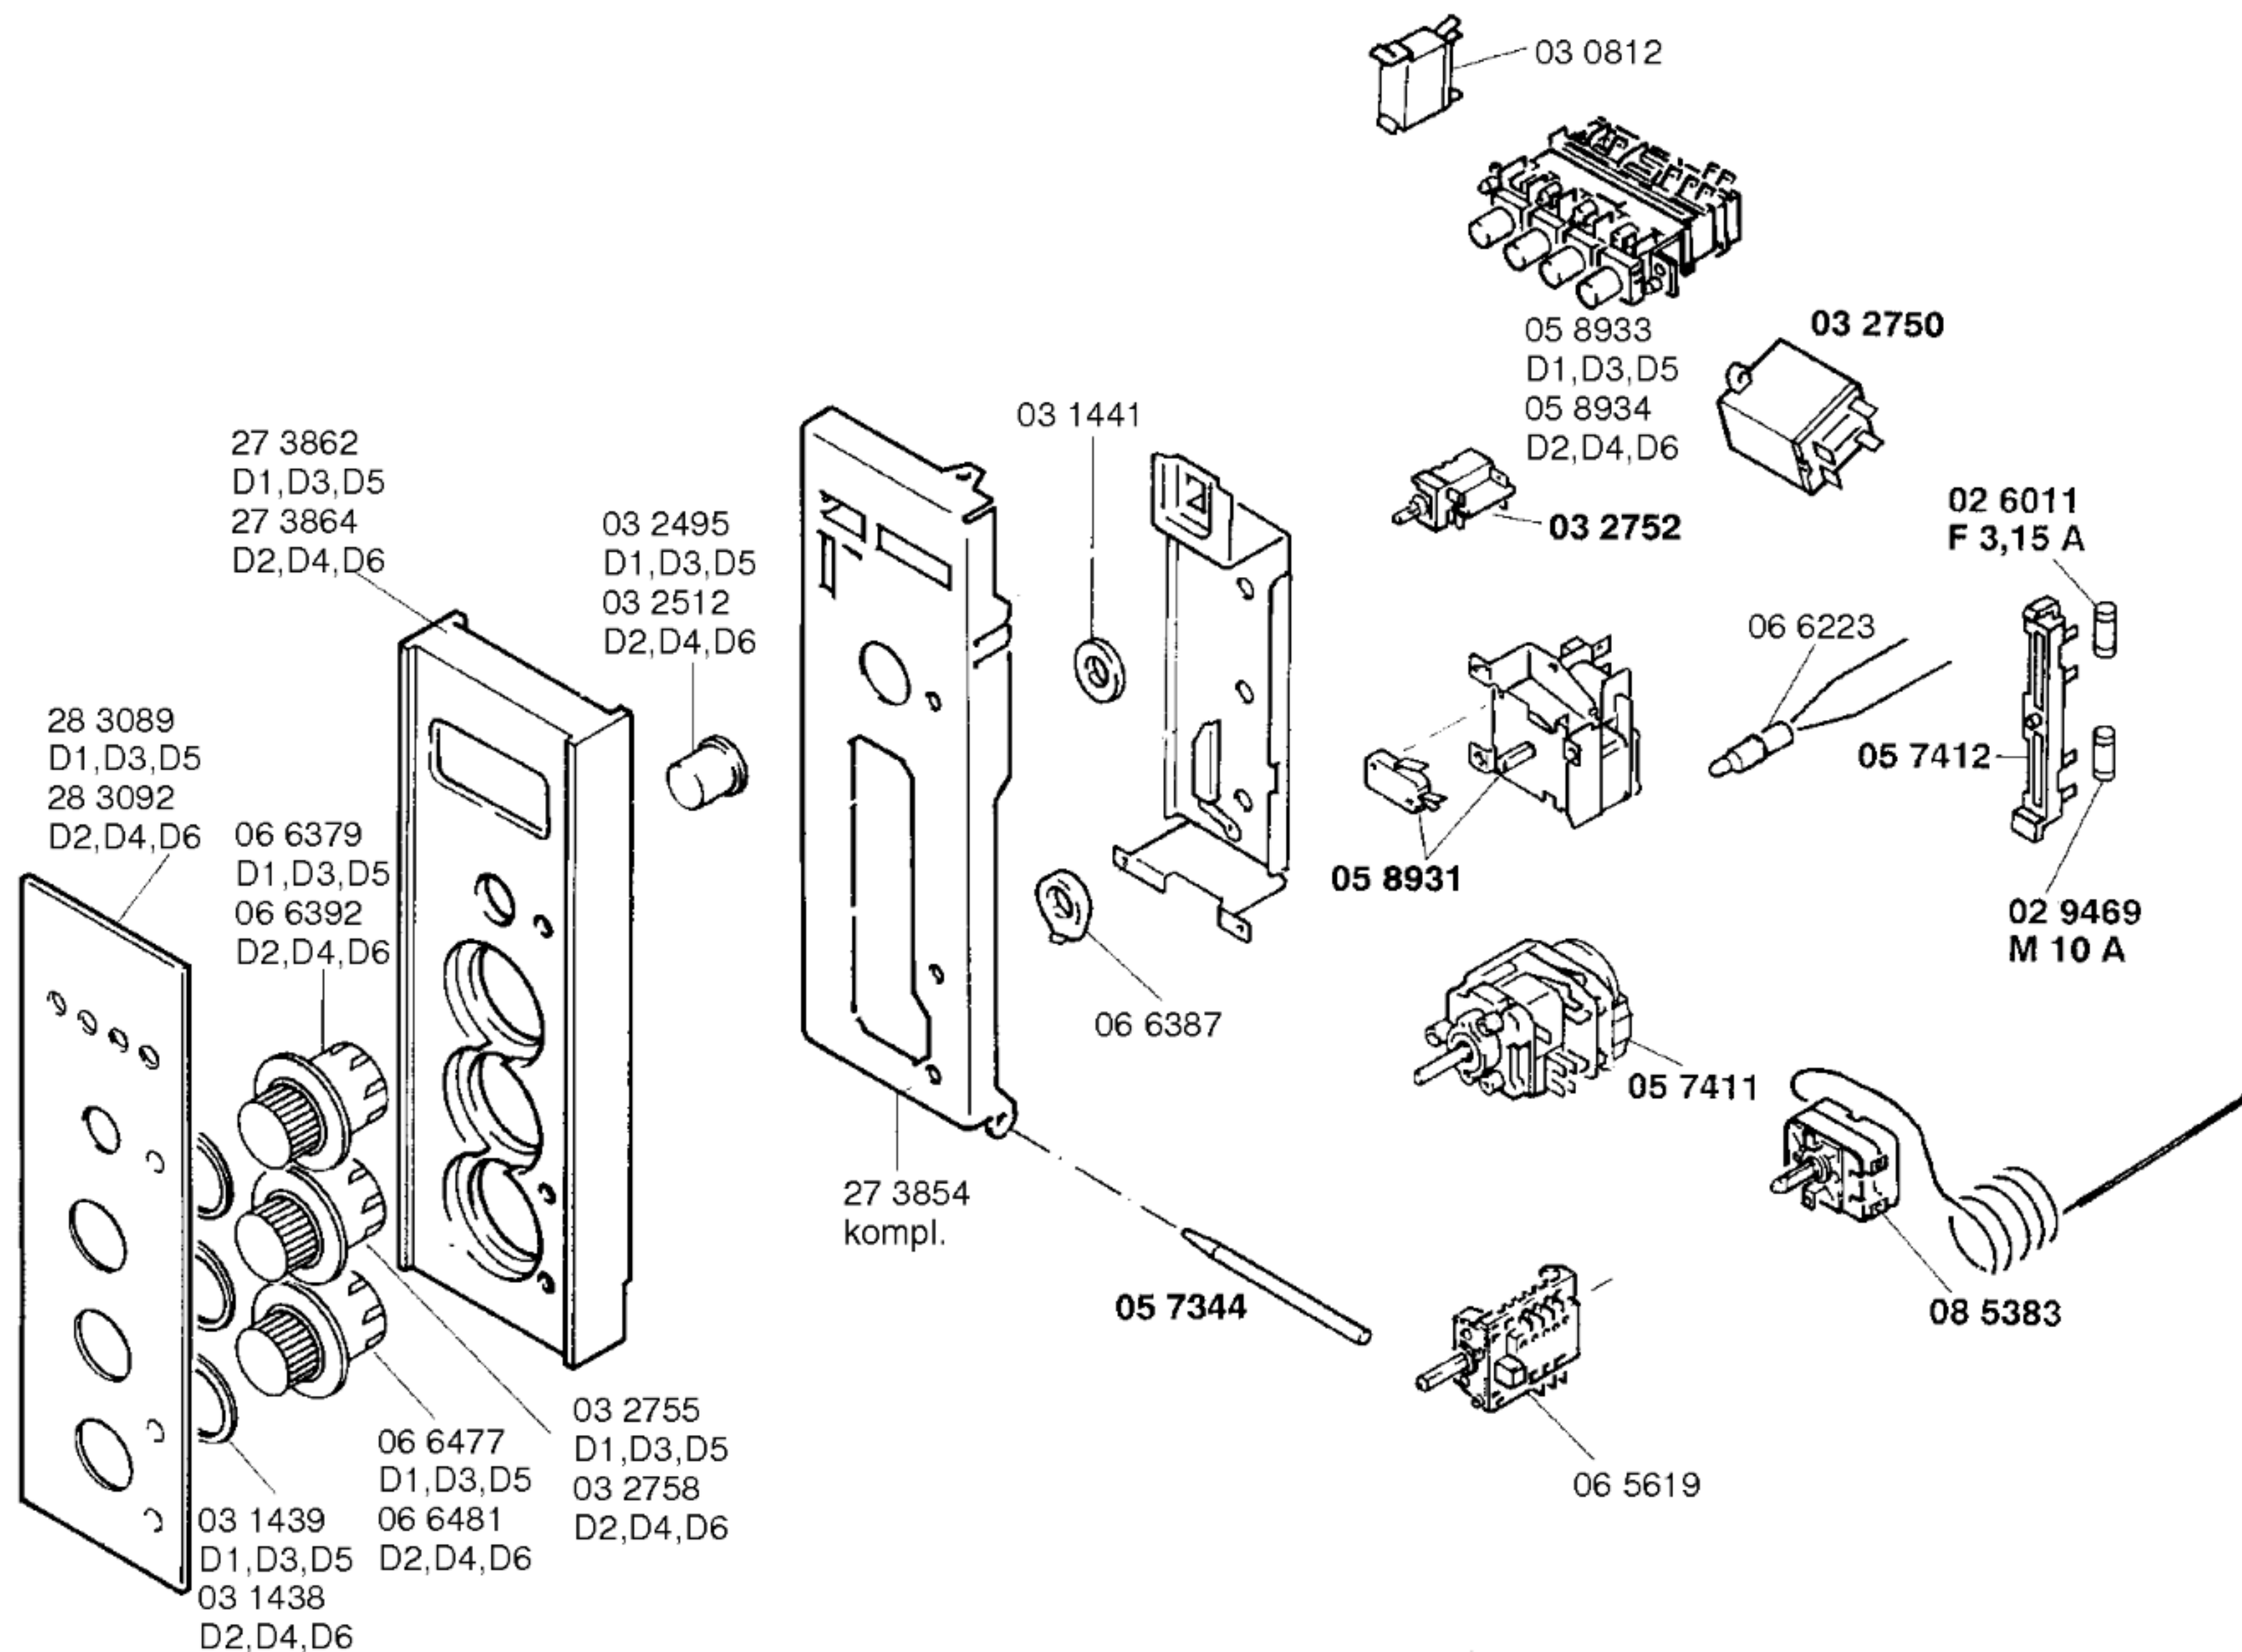


Gebrauchsanweisung
 51 6058
 (D,GB,F,I,NL)
 Tips und Rezepte
 51 6059
 (D)

Zubehör:


Einbaurahmen
 Z6180W1
 D1,D3,D5
 Z6180B1
 D2,D4,D6

Glaspfanne
 Z6290X0

 Alu-Backblech
 Z6330X0

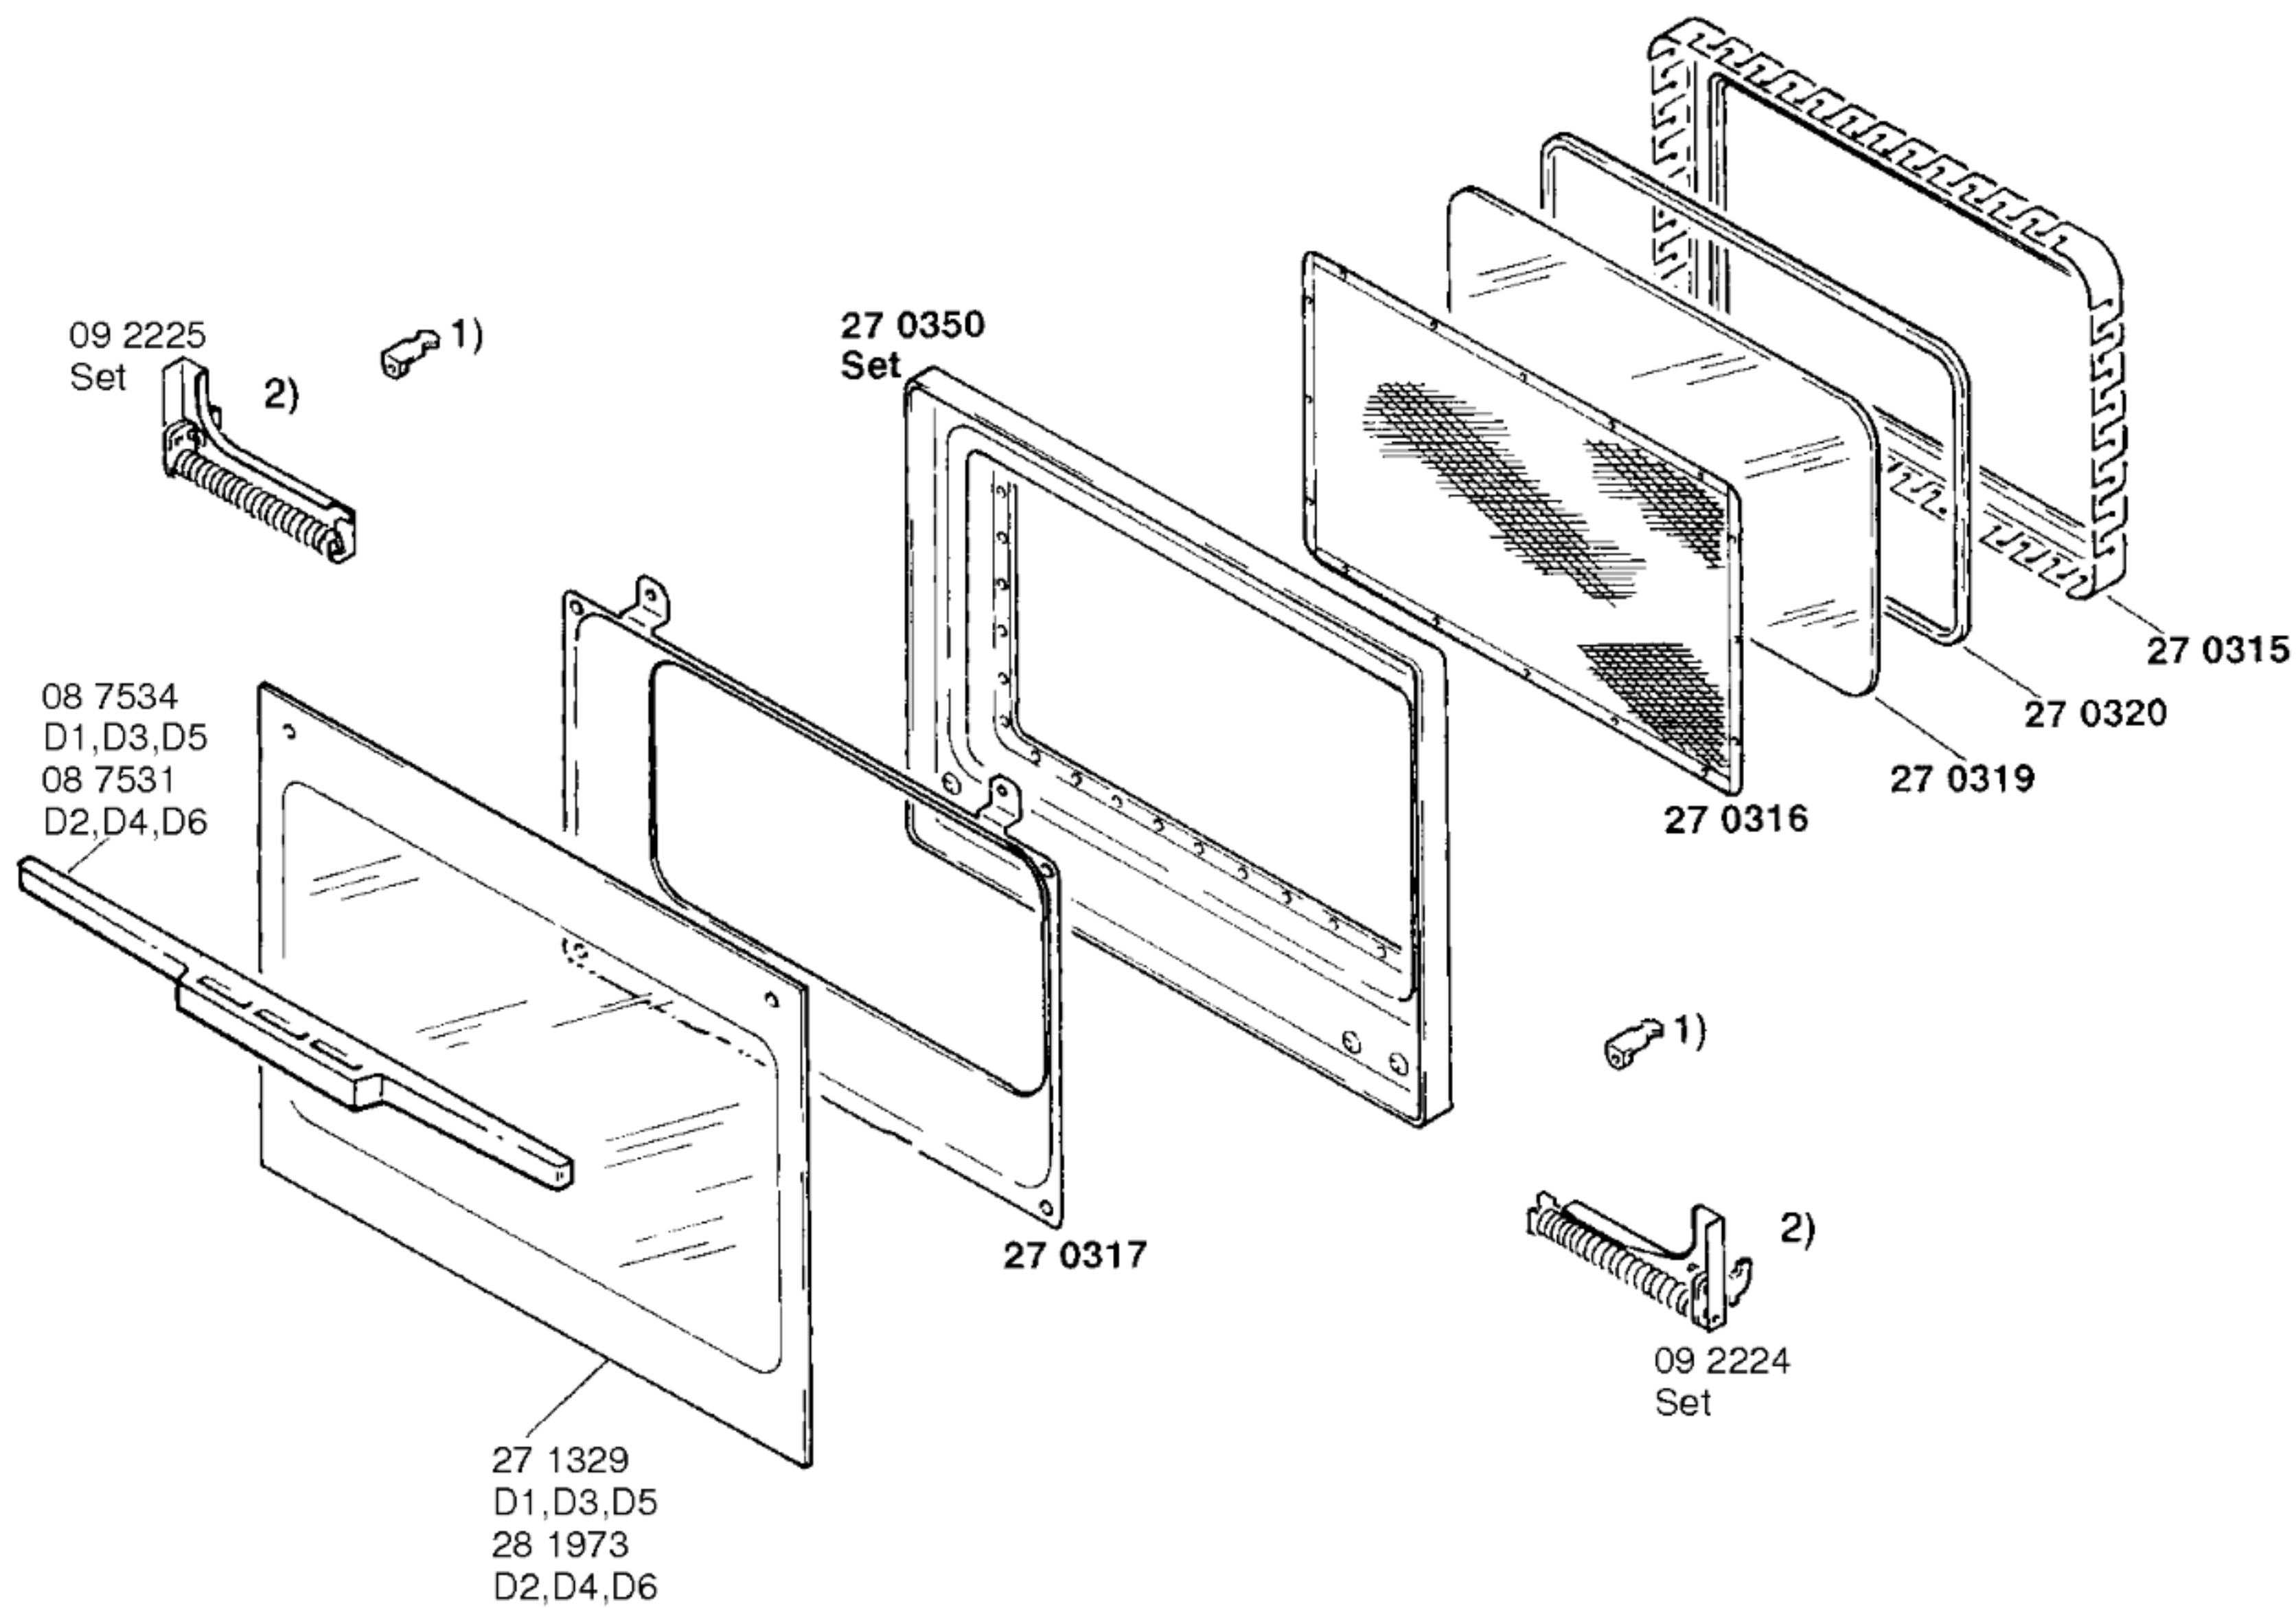

 - 1) 03 0671
 2) 03 0813
 Arretierstifte

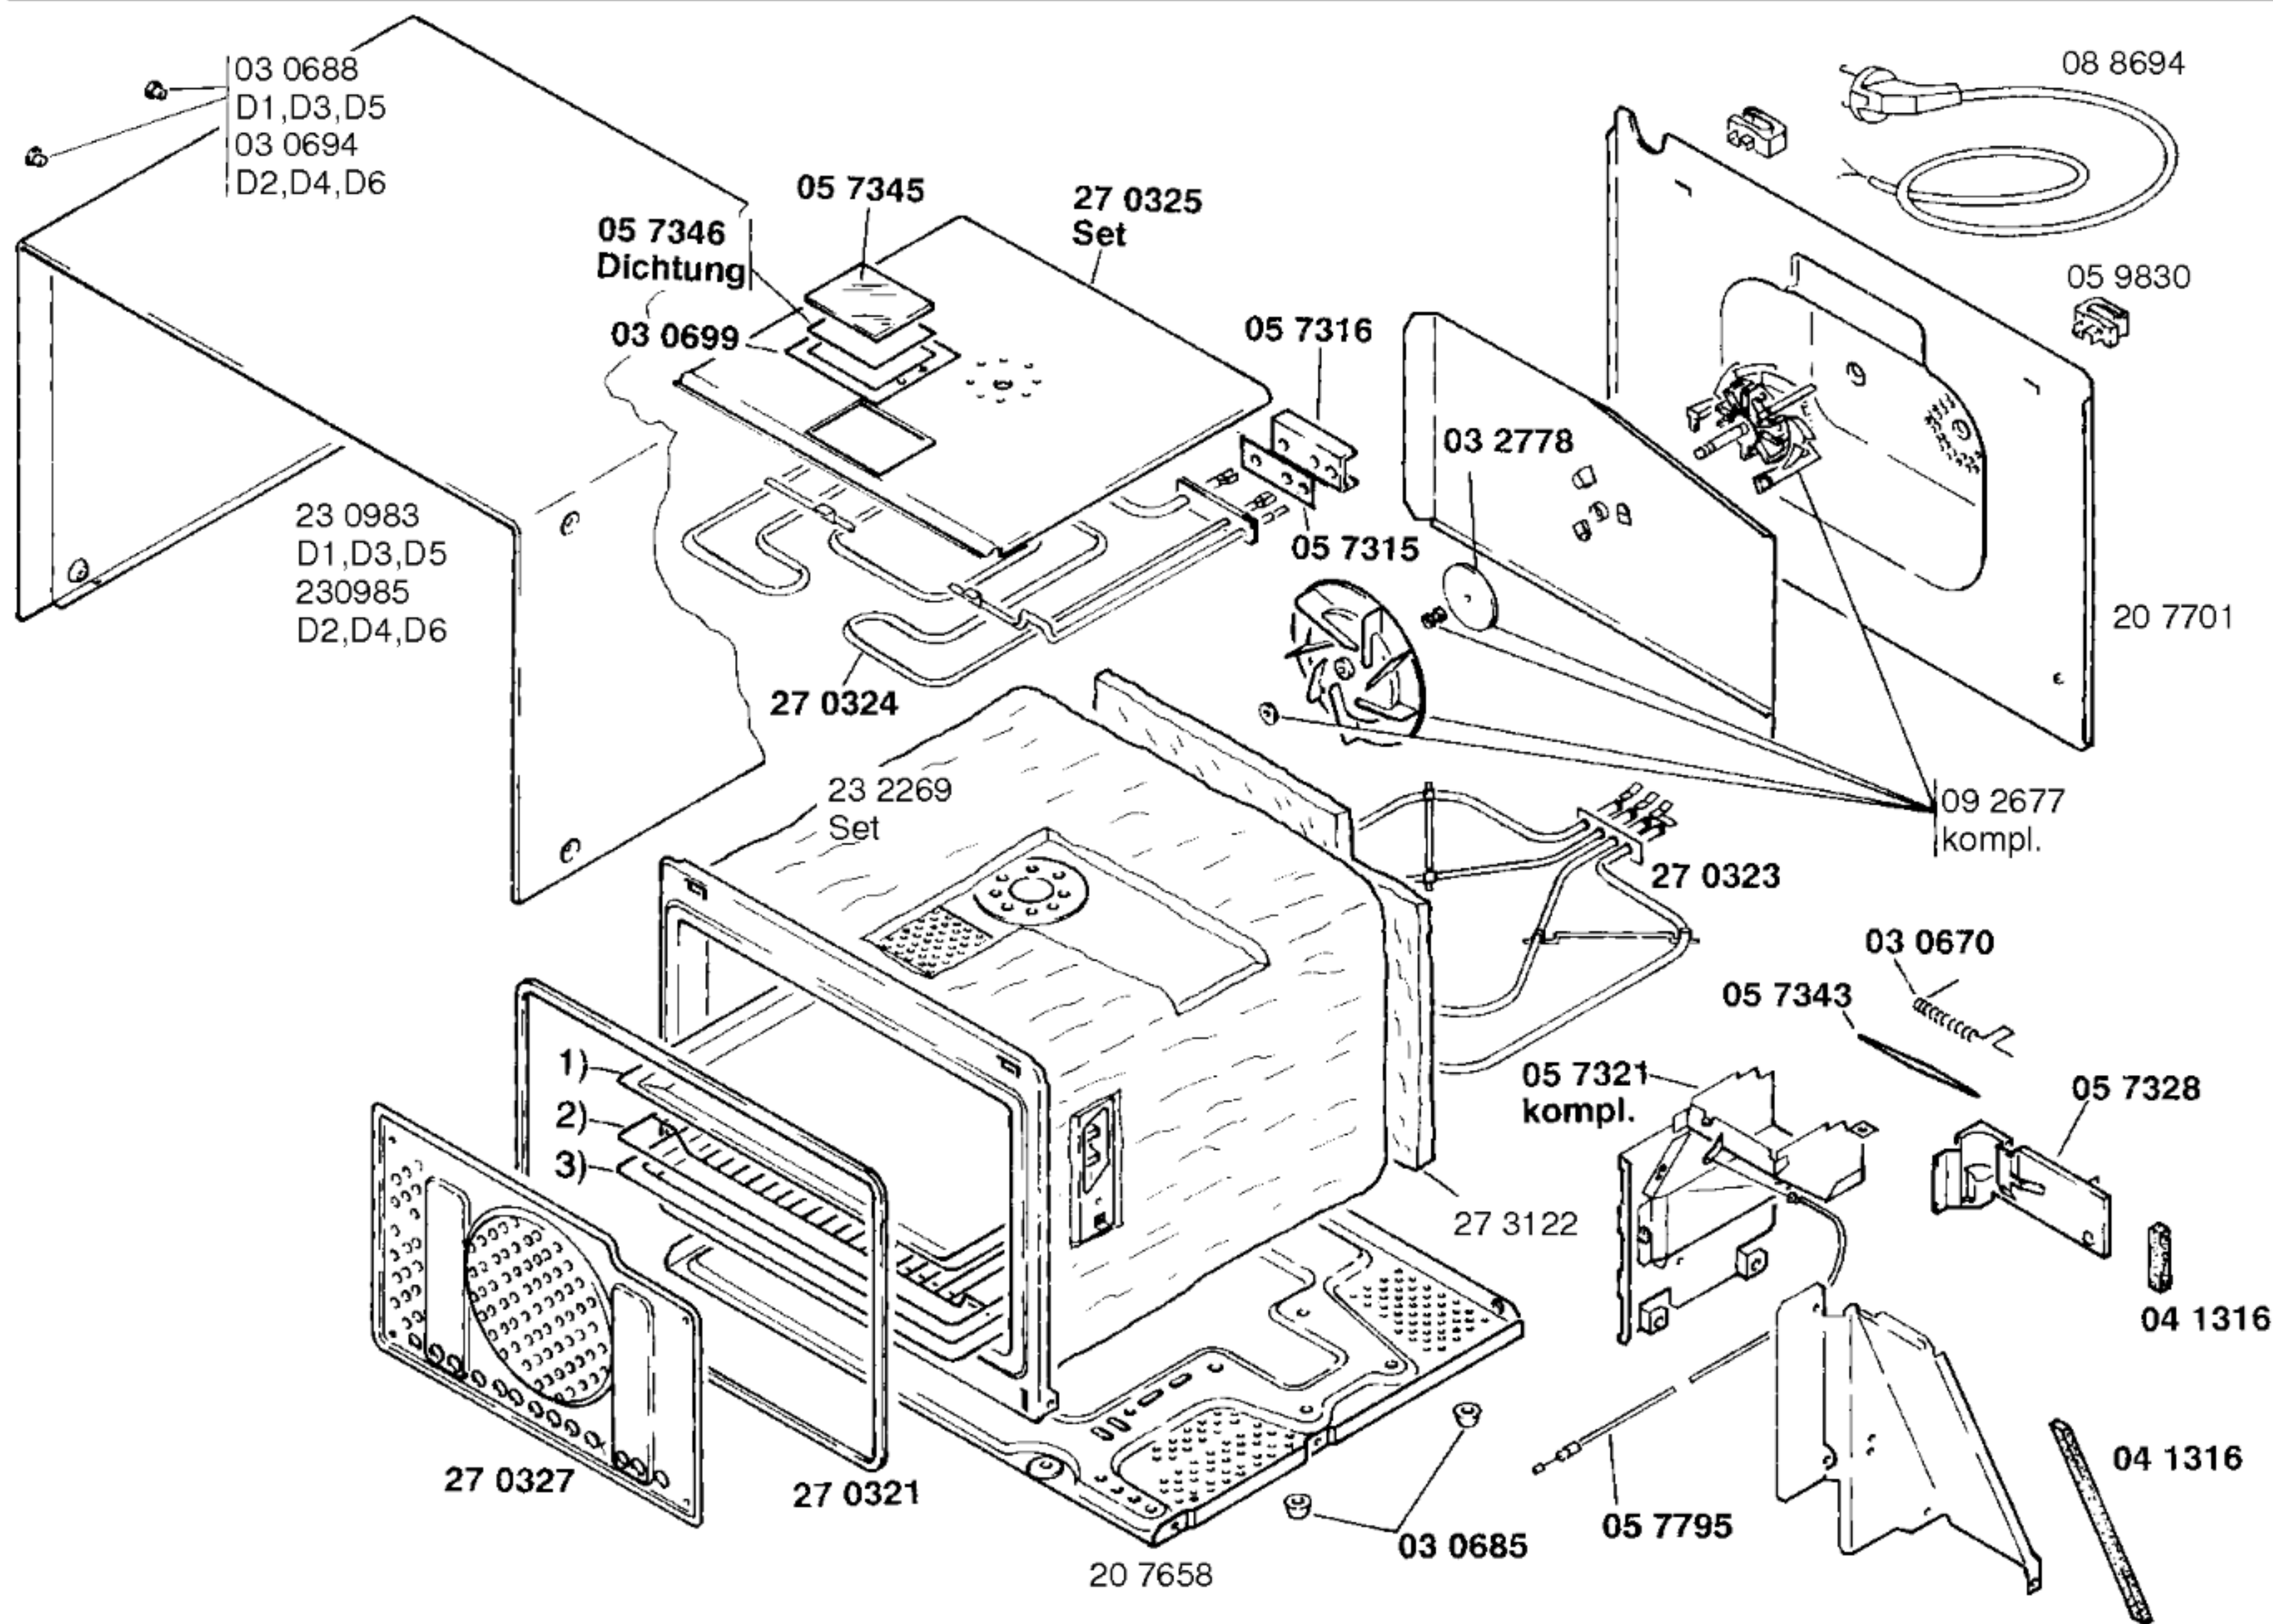

- 1) 11 4538
Backblech
 - 2) 11 4539
 - 3) 27 3844
Universalpfanne
- 02 8732
Anschlag-Backblech

