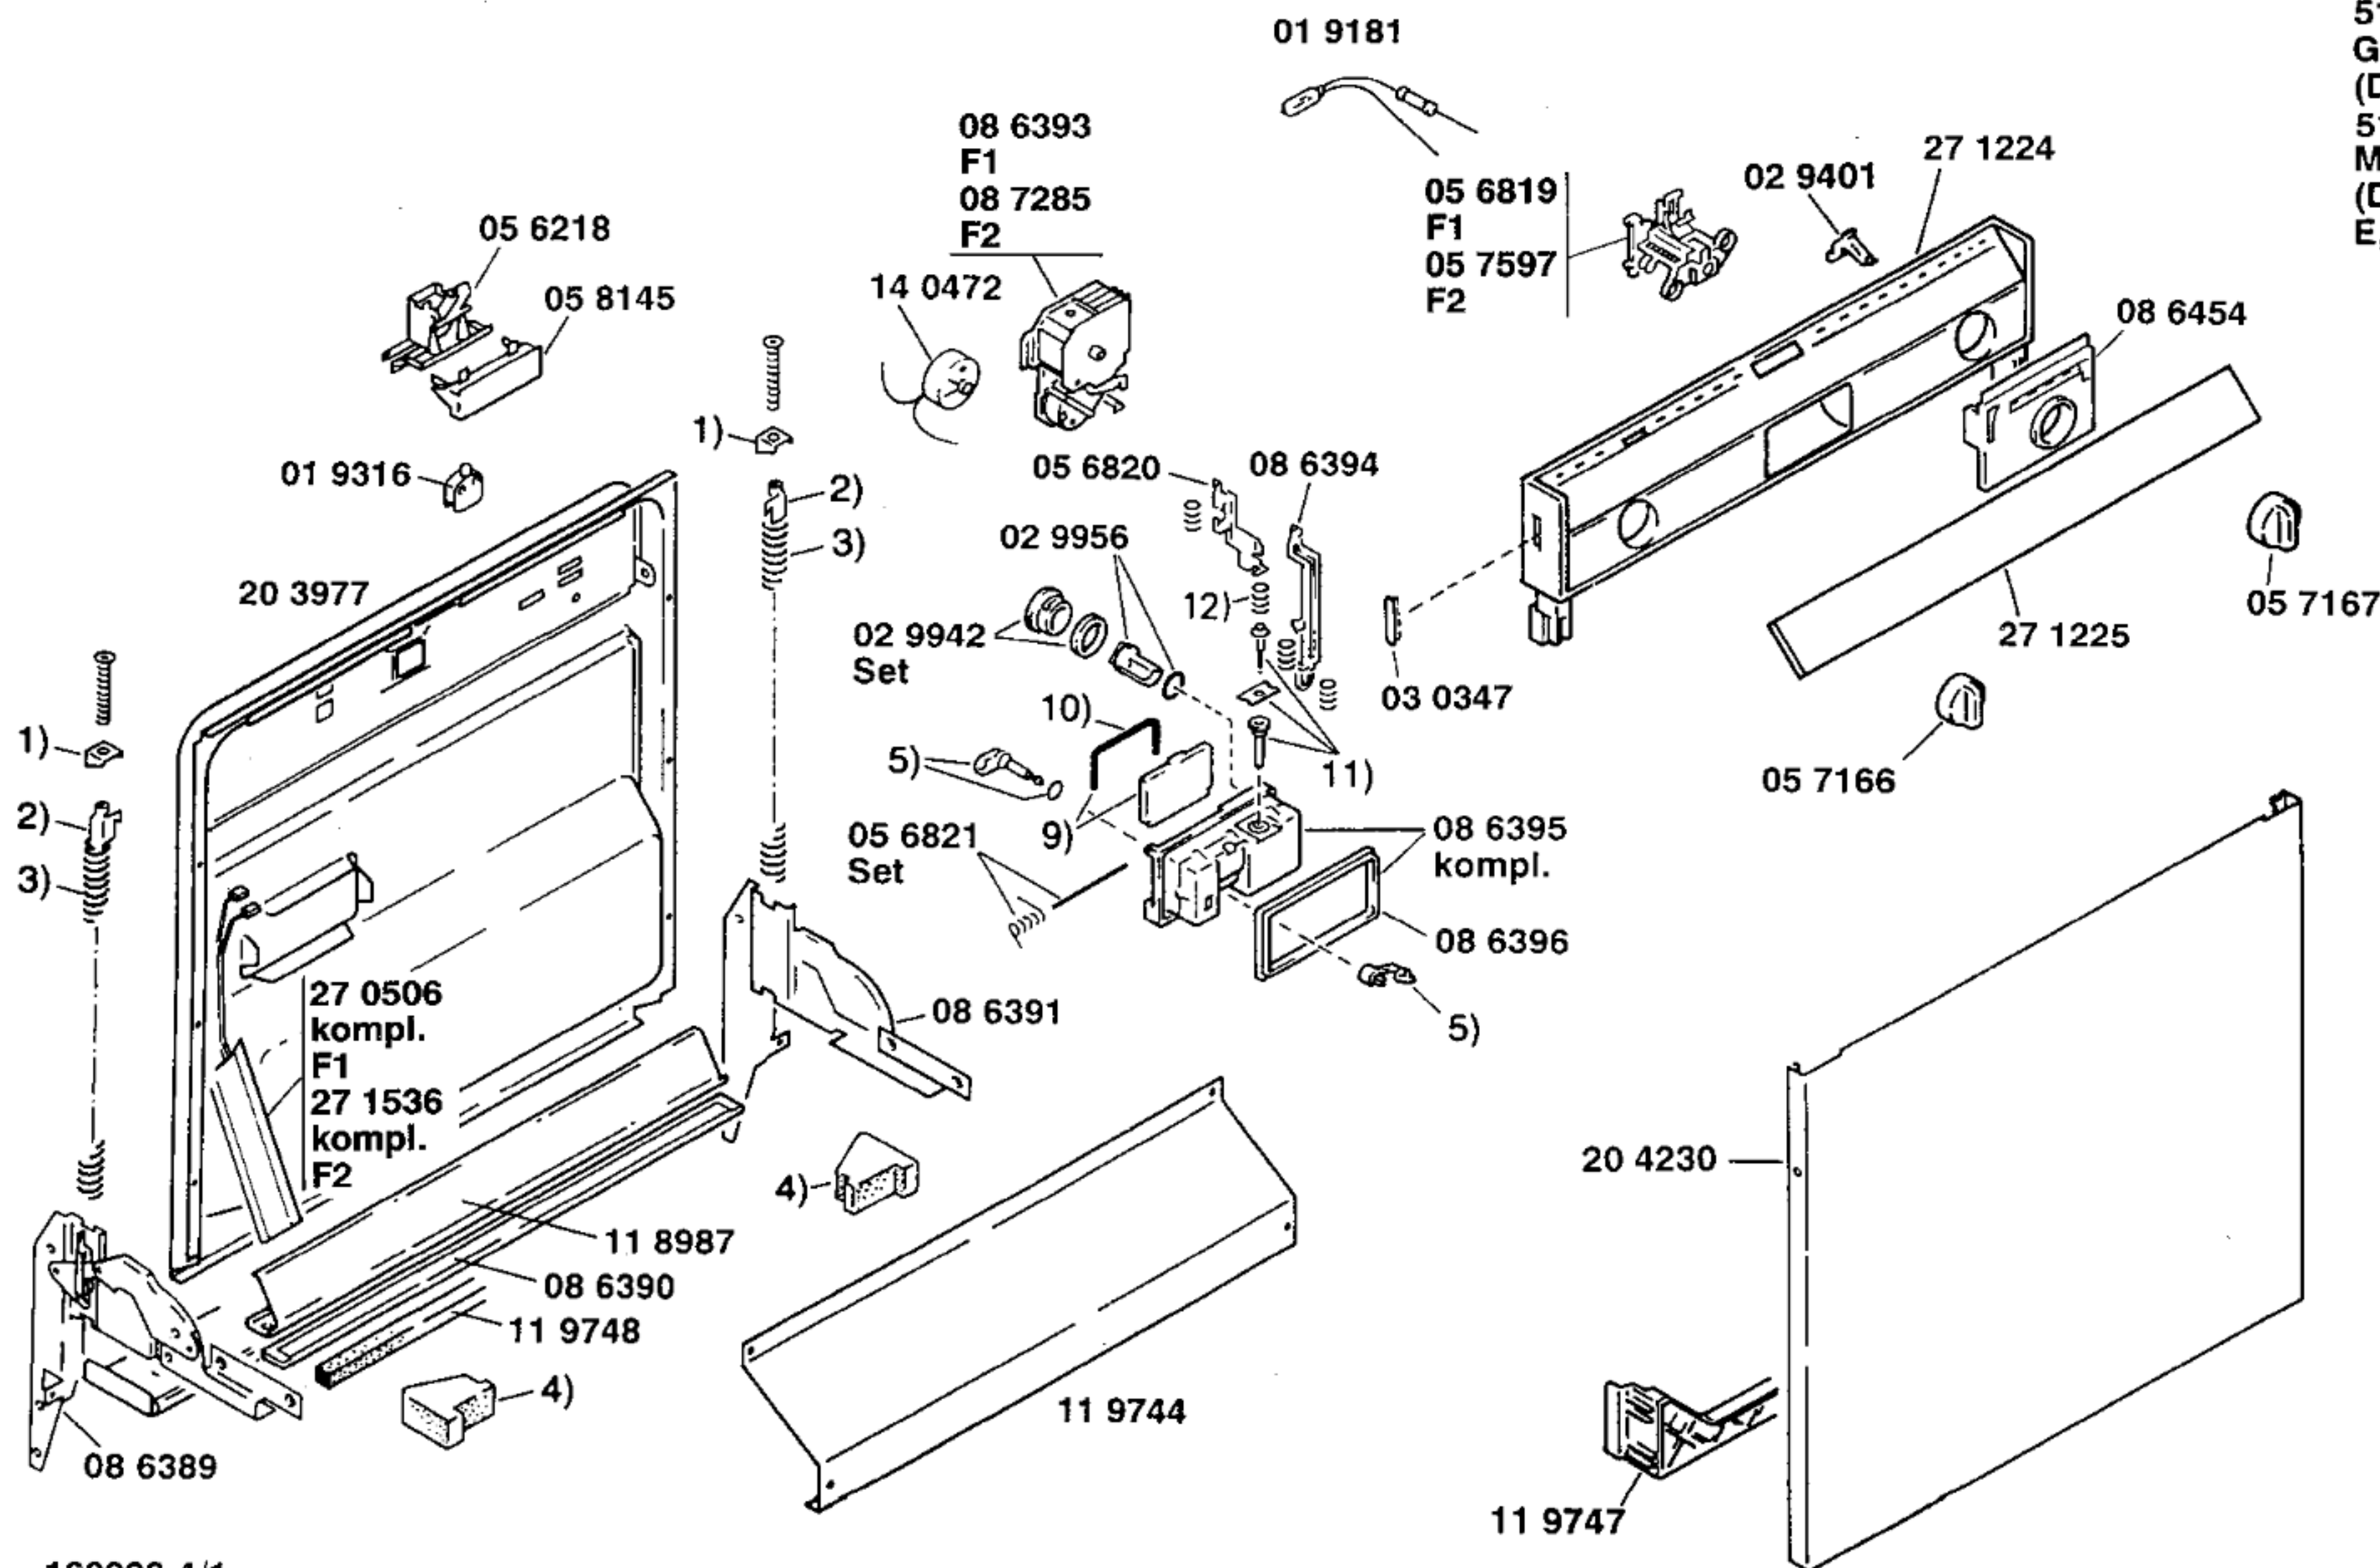
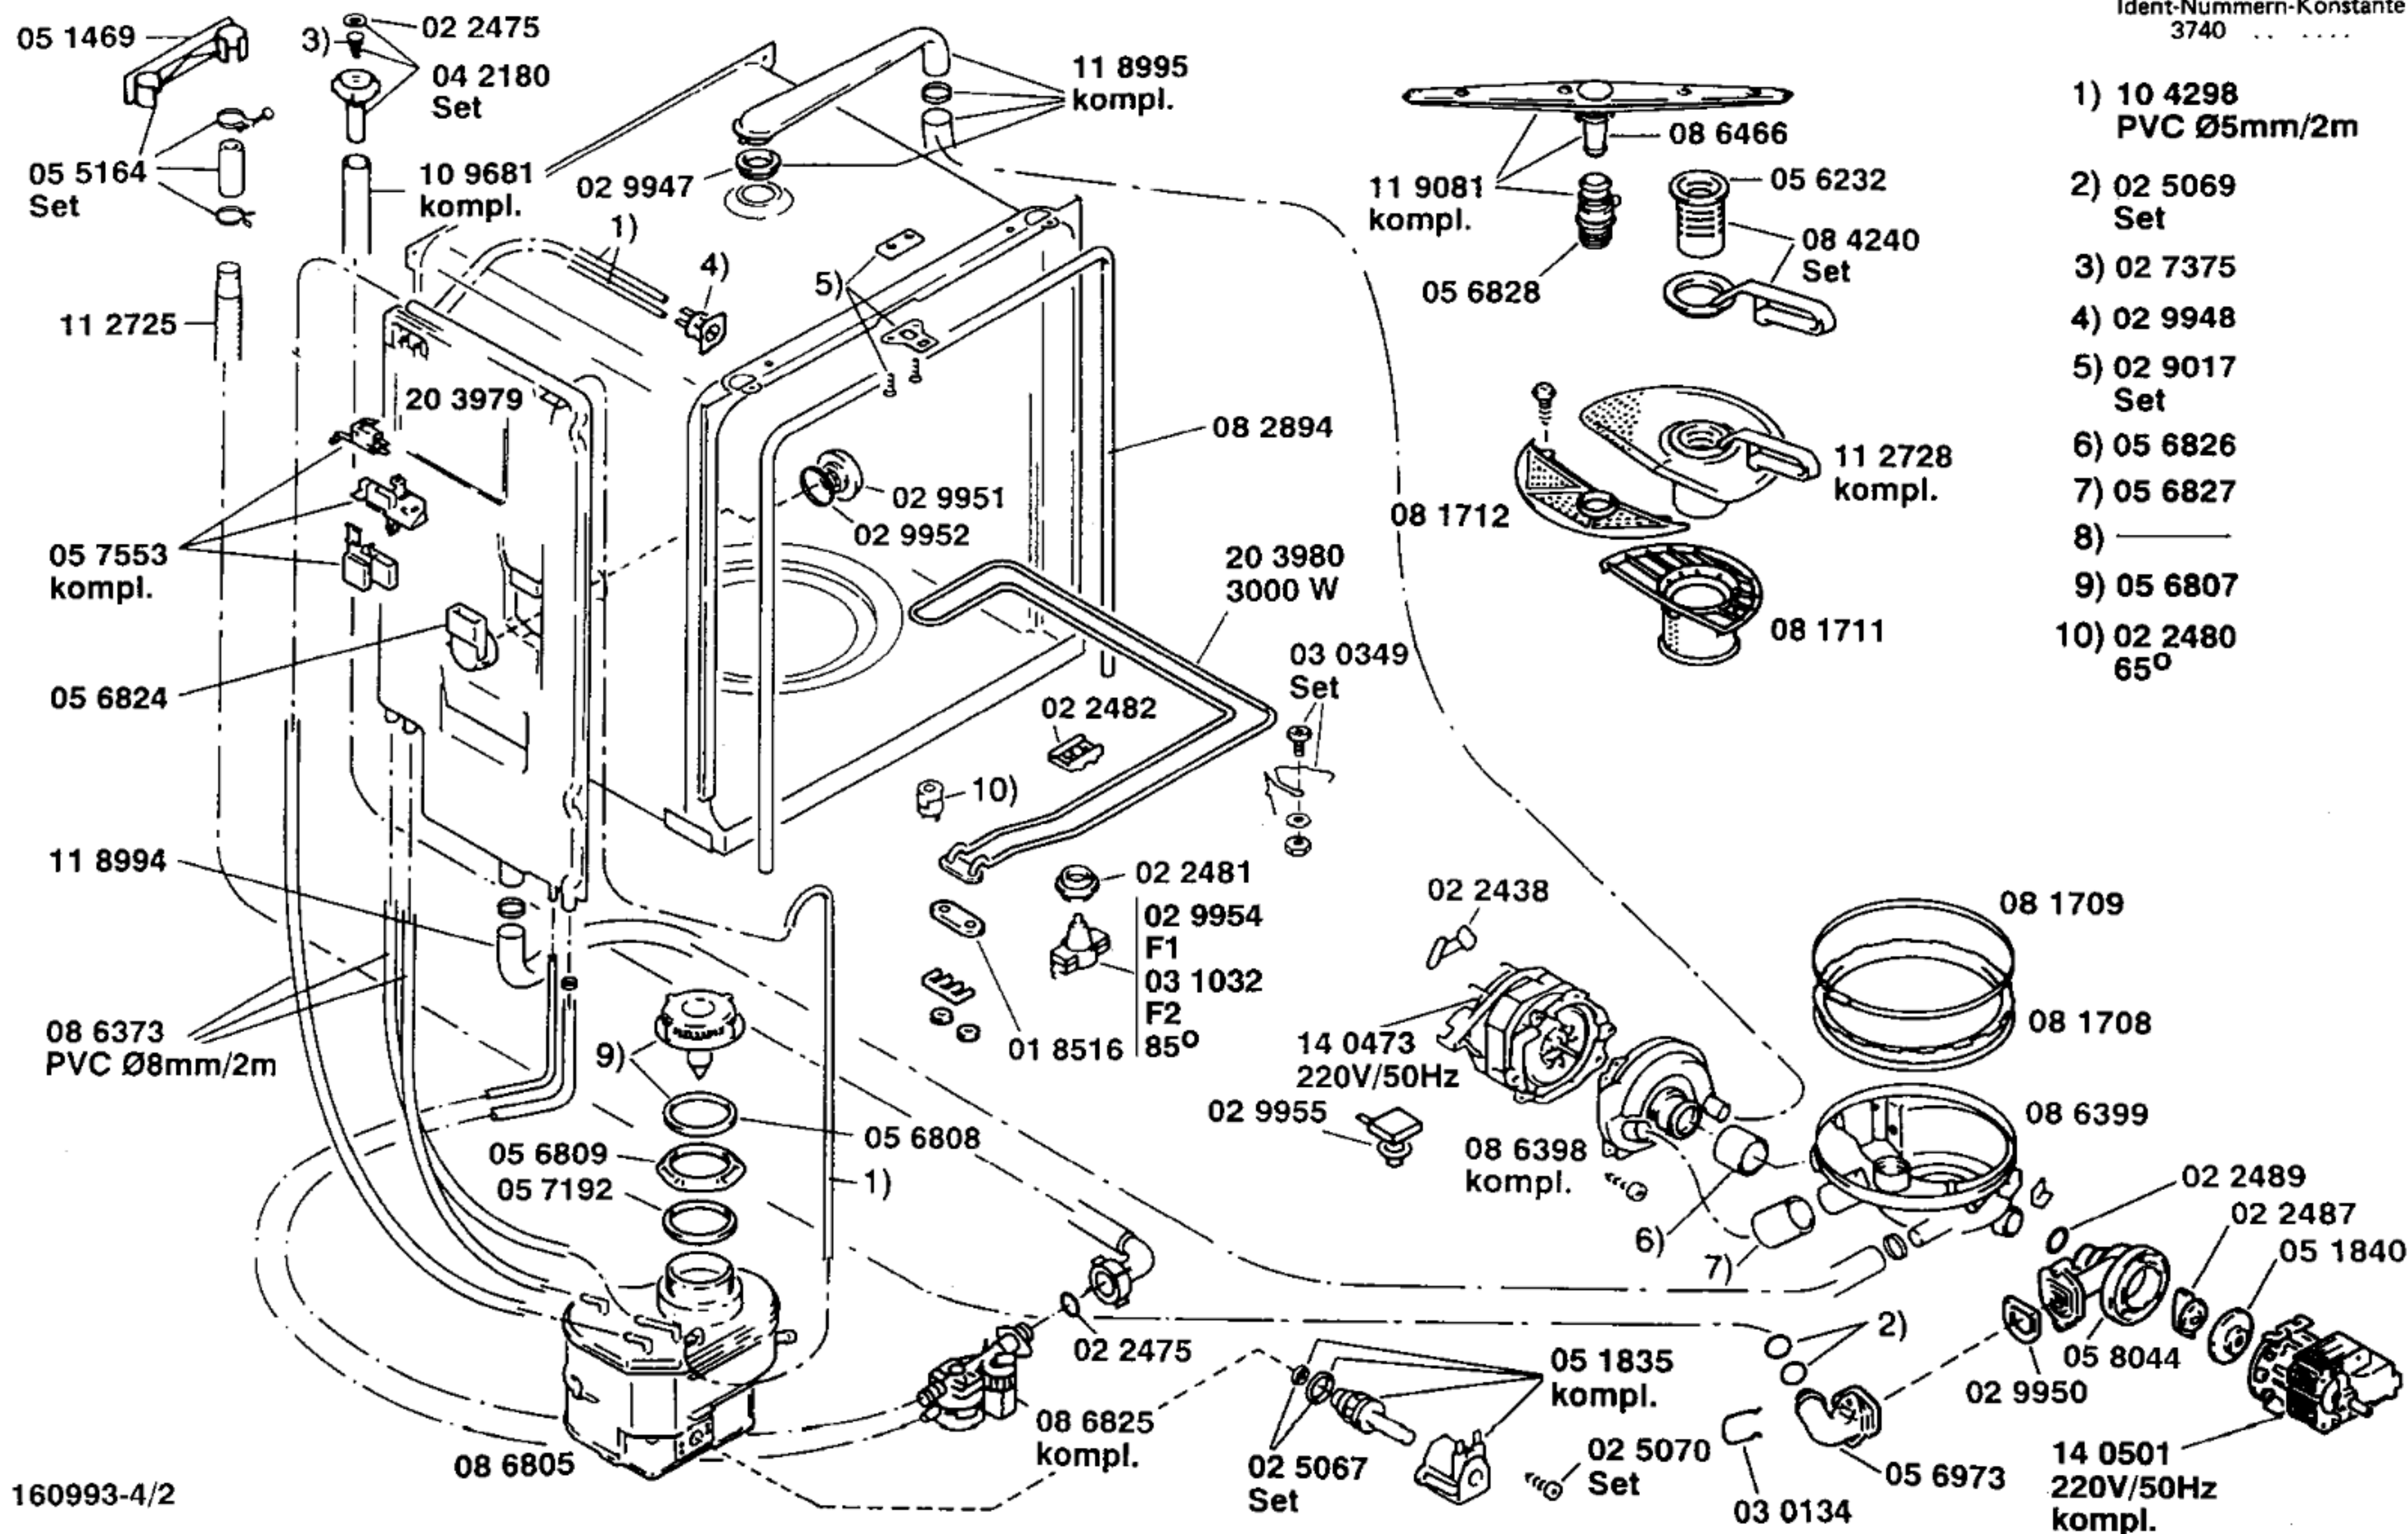
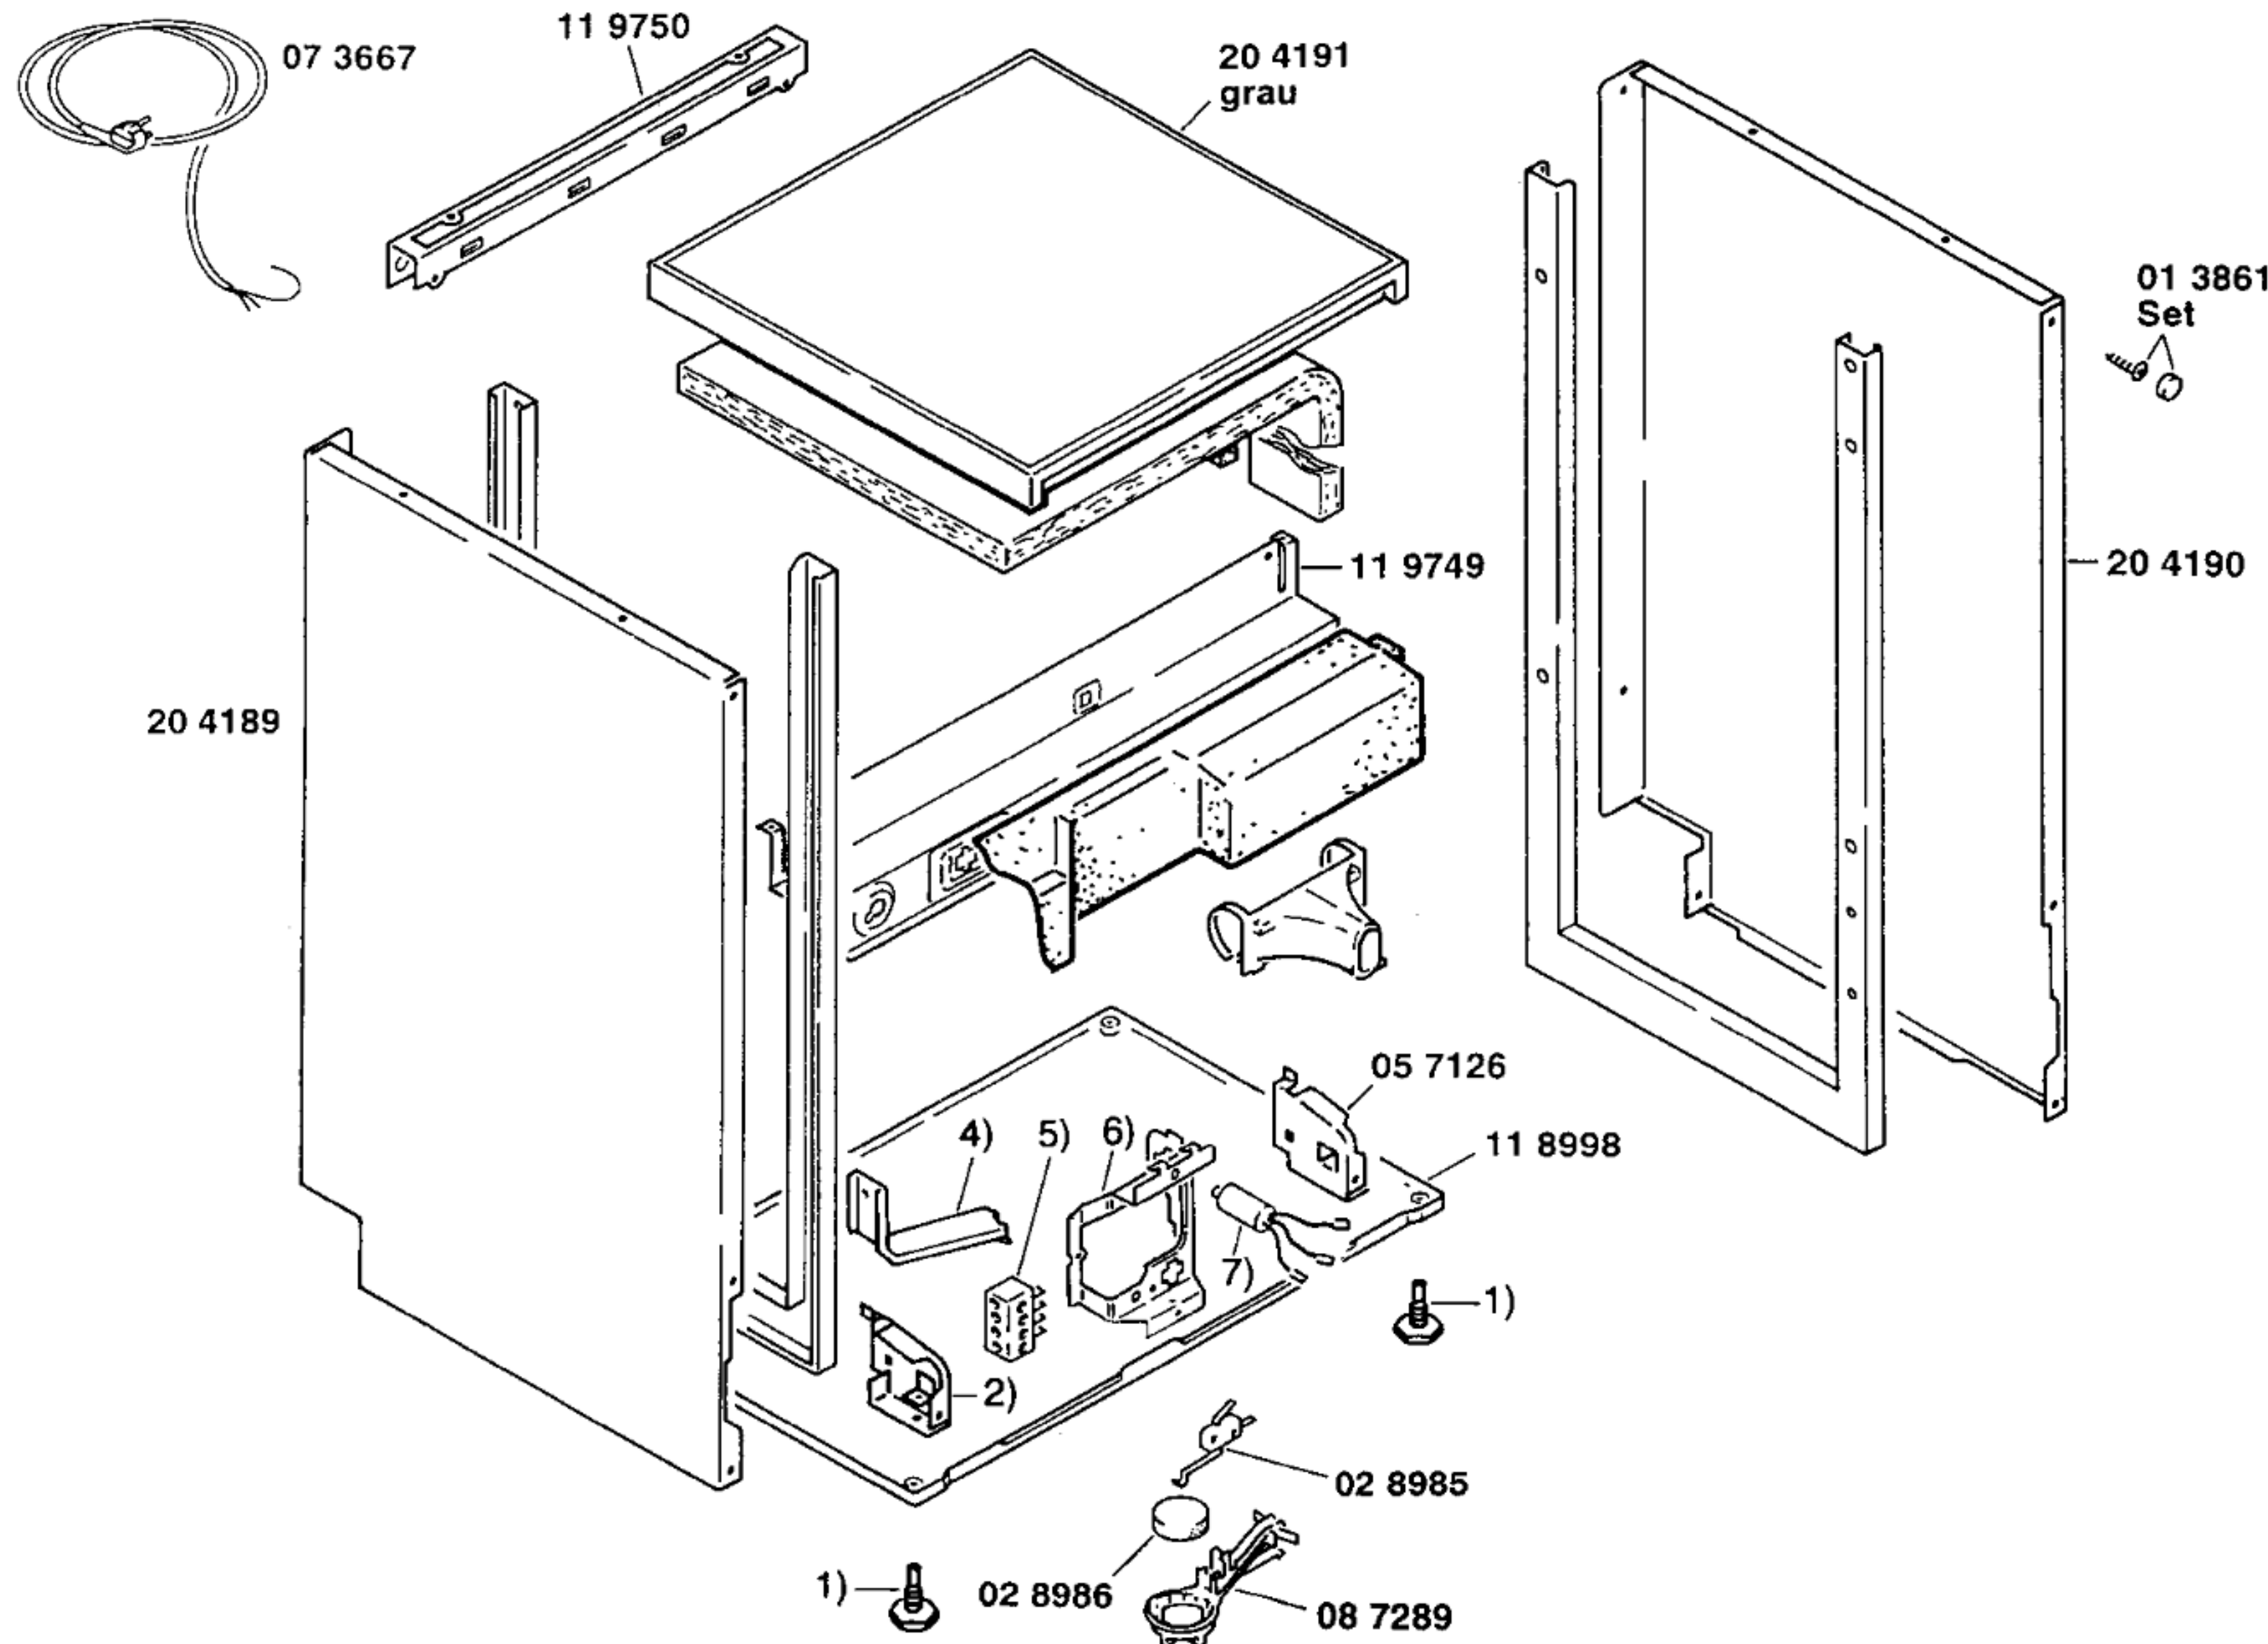


**BOSCH**SMS3041FF/01-F1
SMS3041FF/03-F2**GESCHIRRSPÜLGERÄTE**
StandgeräteIdent-Nummern-Konstante
374051 3601
Gebrauchsanweisung
(D,F,GB,I,NL)
51 3779
Montageanweisung
(D,F,GB,I,NL,DK,
E,P,S,N,SF,GR,TR)

- 1) 02 9941
- 2) 02 9029
- 3) 11 9795
- 4) 05 6860
- 5) 02 9944 Set
- 6) —
- 7) —
- 8) —
- 9) 05 6822
- 10) 02 9943
- 11) 02 9945 Set
- 12) 02 9002 Set

**BOSCH**SMS3041FF/01-F1
SMS3041FF/03-F2**GESCHIRRSPÜLGERÄTE**
StandgeräteIdent-Nummern-Konstante
3740

**BOSCH**SMS3041FF/01-F1
SMS3041FF/03-F2**GESCHIRRSPÜLGERÄTE**
StandgeräteIdent.-Nummern-Konstante
3740

- 1) 02 9020
- 2) 05 7127
- 3) —
- 4) 08 6400
- 5) 02 7385
- 6) 08 6970
- 7) 04 3889



BOSCH

SMS3041FF/01-F1
SMS3041FF/03-F2

GESCHIRRSPÜLGERÄTE
Standgeräte

Ident-Nummern-Konstante
3740

