


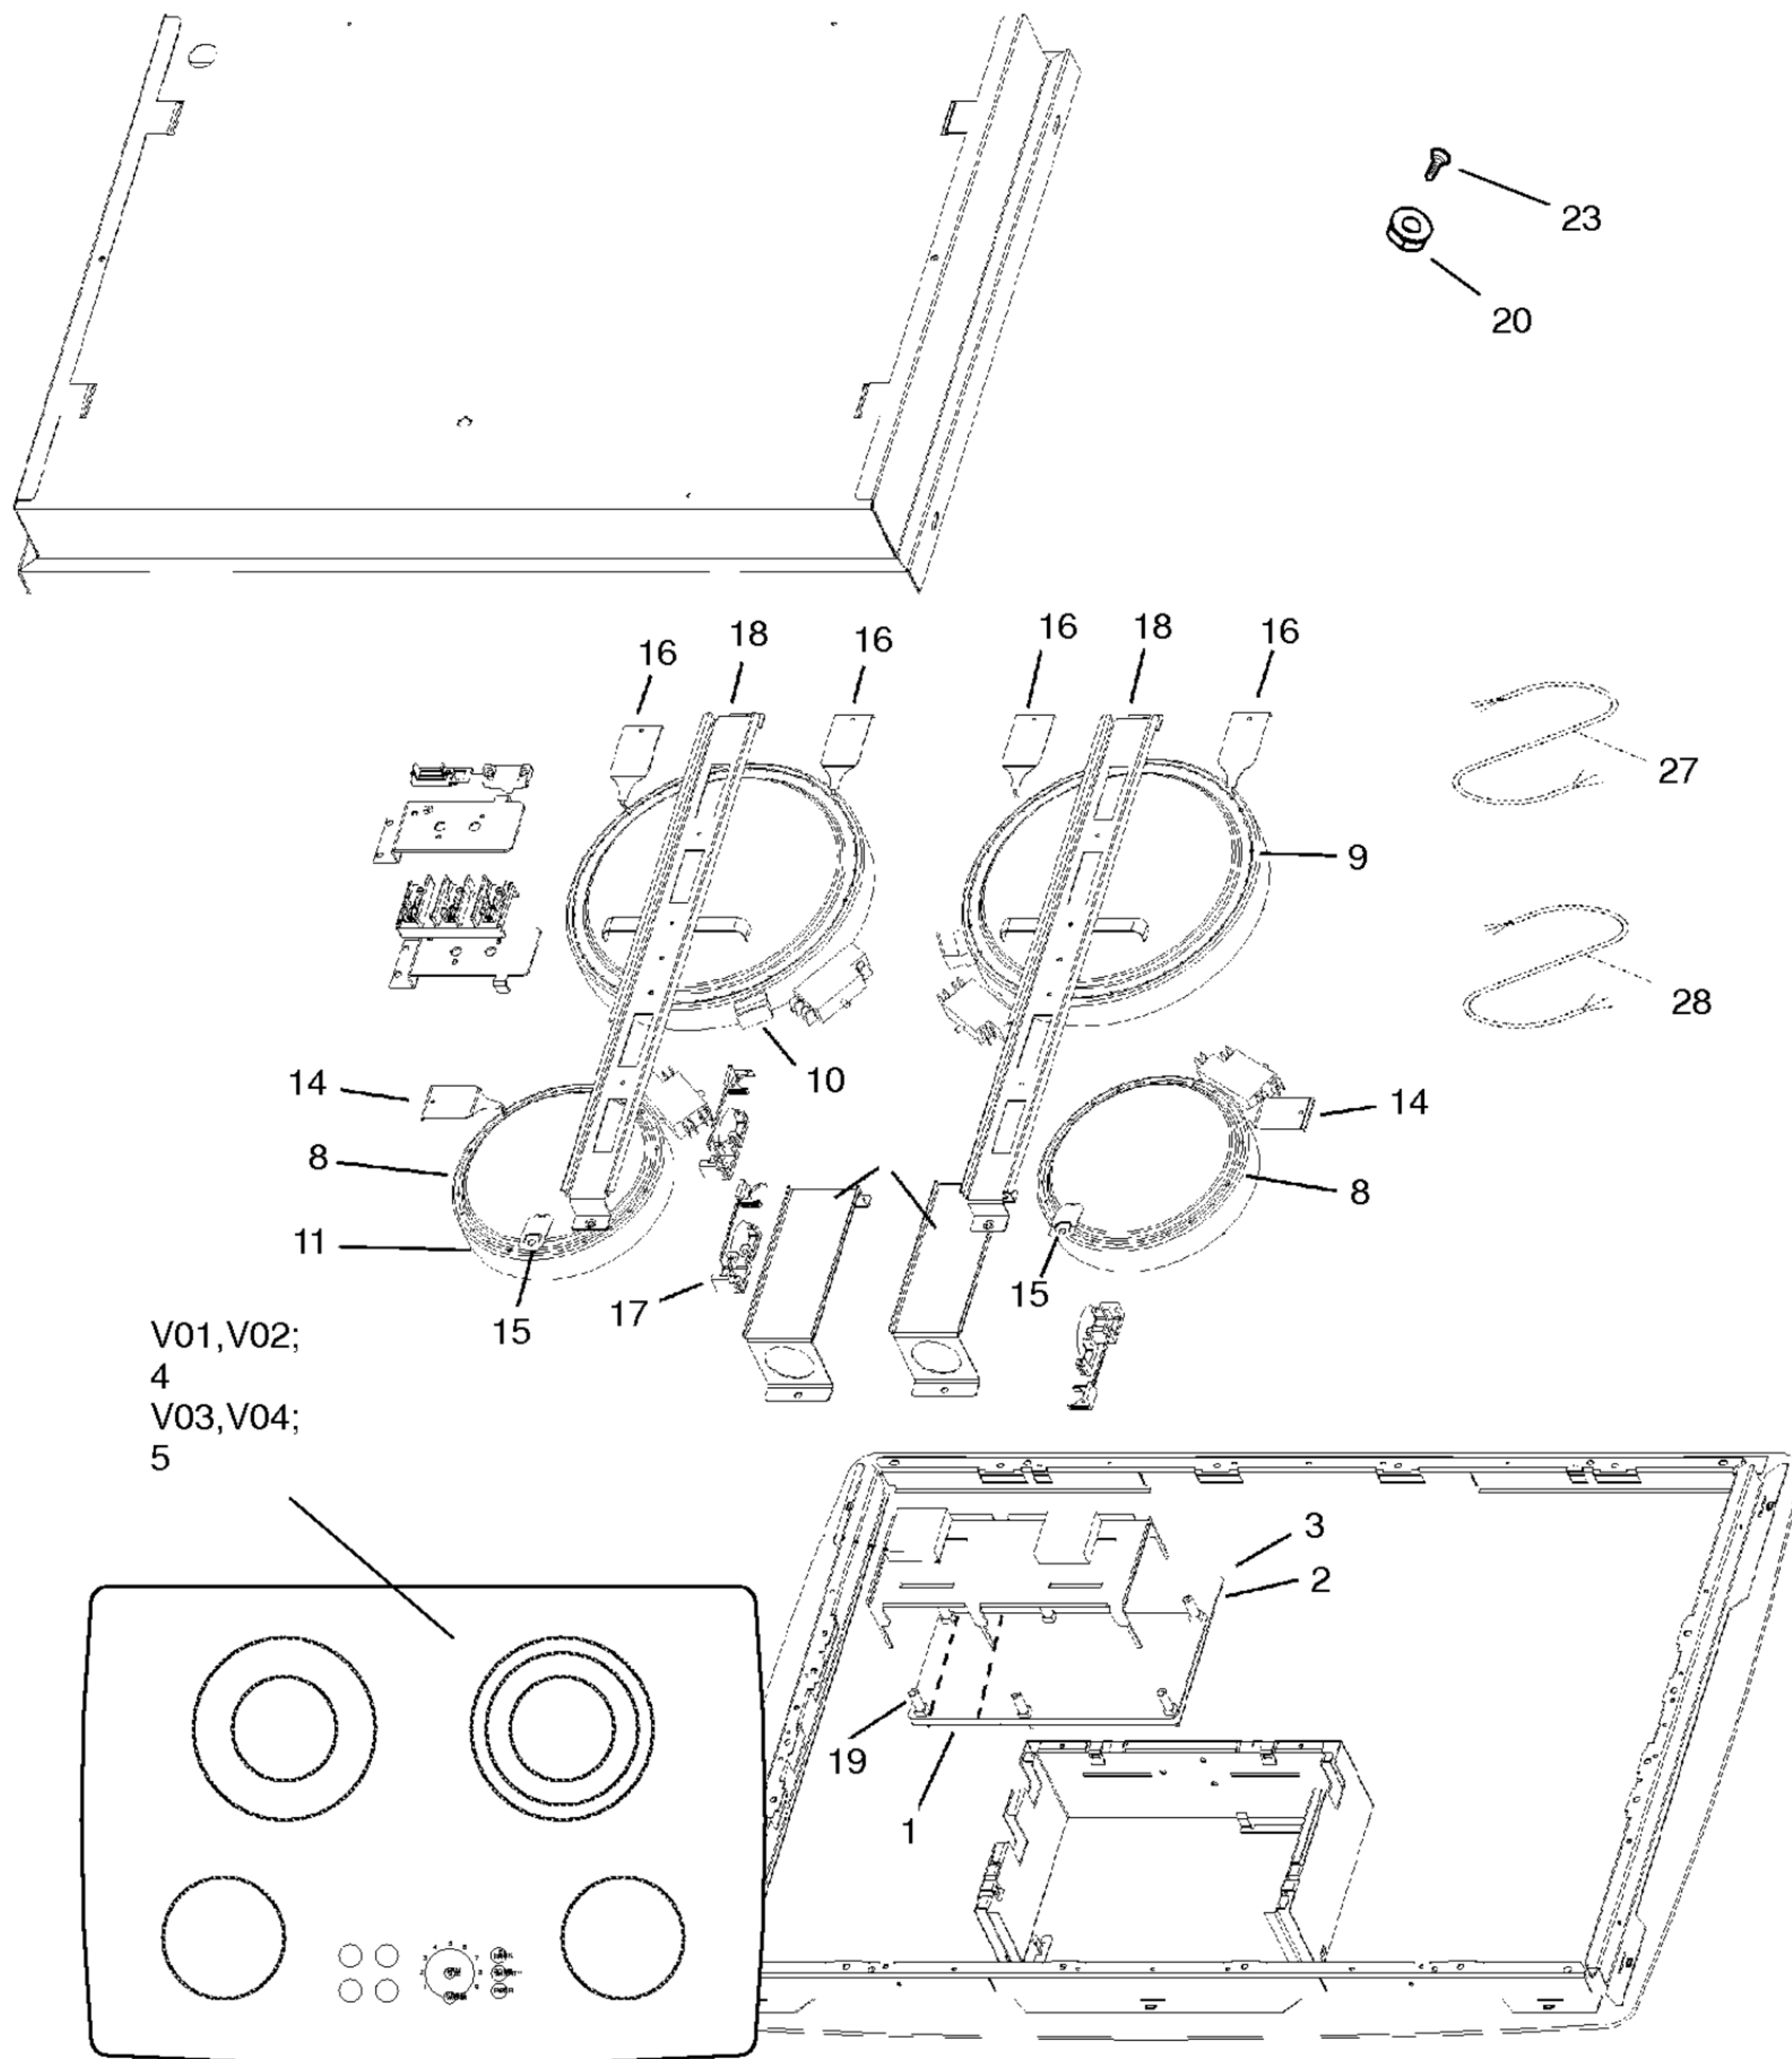

Page/Item	Part No.	Image	Part Discription
01 02	491266	PC BOARD	Touch control
01 04	187294	GLASS CERAMIC HOB TOP	GLUED GLASS ASSEMBLY
01 05	V01,V02, 187295 V03,V04,	GLASS CERAMIC HOB TOP	GLUED GLASS ASSEMBLY
01 08	491270	HEATER-ELEMENT	1200W,240V, 1 way
01 09	491271	HEATER-ELEMENT	2200/750W, 240/210/120
01 10	491272	HEATER-ELEMENT	2300/800/800W, 240V
01 14	421501	SPRING	spring, element 53.7mm
01 15	421502	CLAMPING PIECE	spring, element
01 16	421503	CLAMPING PIECE	spring element
01 17	421504	STRESS-RELIEF	strain relief bushing
01 18	491274	RAIL	rail, long
01 19	188956	SUPPORT	Stand off, 9.5 x 4 mm
01 20	421505	WASHER	washer, star #10
* 01 21	421506	SCREW	screw, #10, green, ground
* 01 22	421507	SCREW	screw, #10-32x5/16 in. pa
01 23	421508	SCREW	screw
* 01 24	491277	SCRAPER	scrapper blade
* 01 25	491278	CLEANING PRODUCTS	ELCO cleaner
* 01 26	188954	BRACKET	Hold Down Bracket, Kit
01 27	491275	WIRE	harness, element
01 28	491276	WIRE	harness, power

* Not illustrated