 


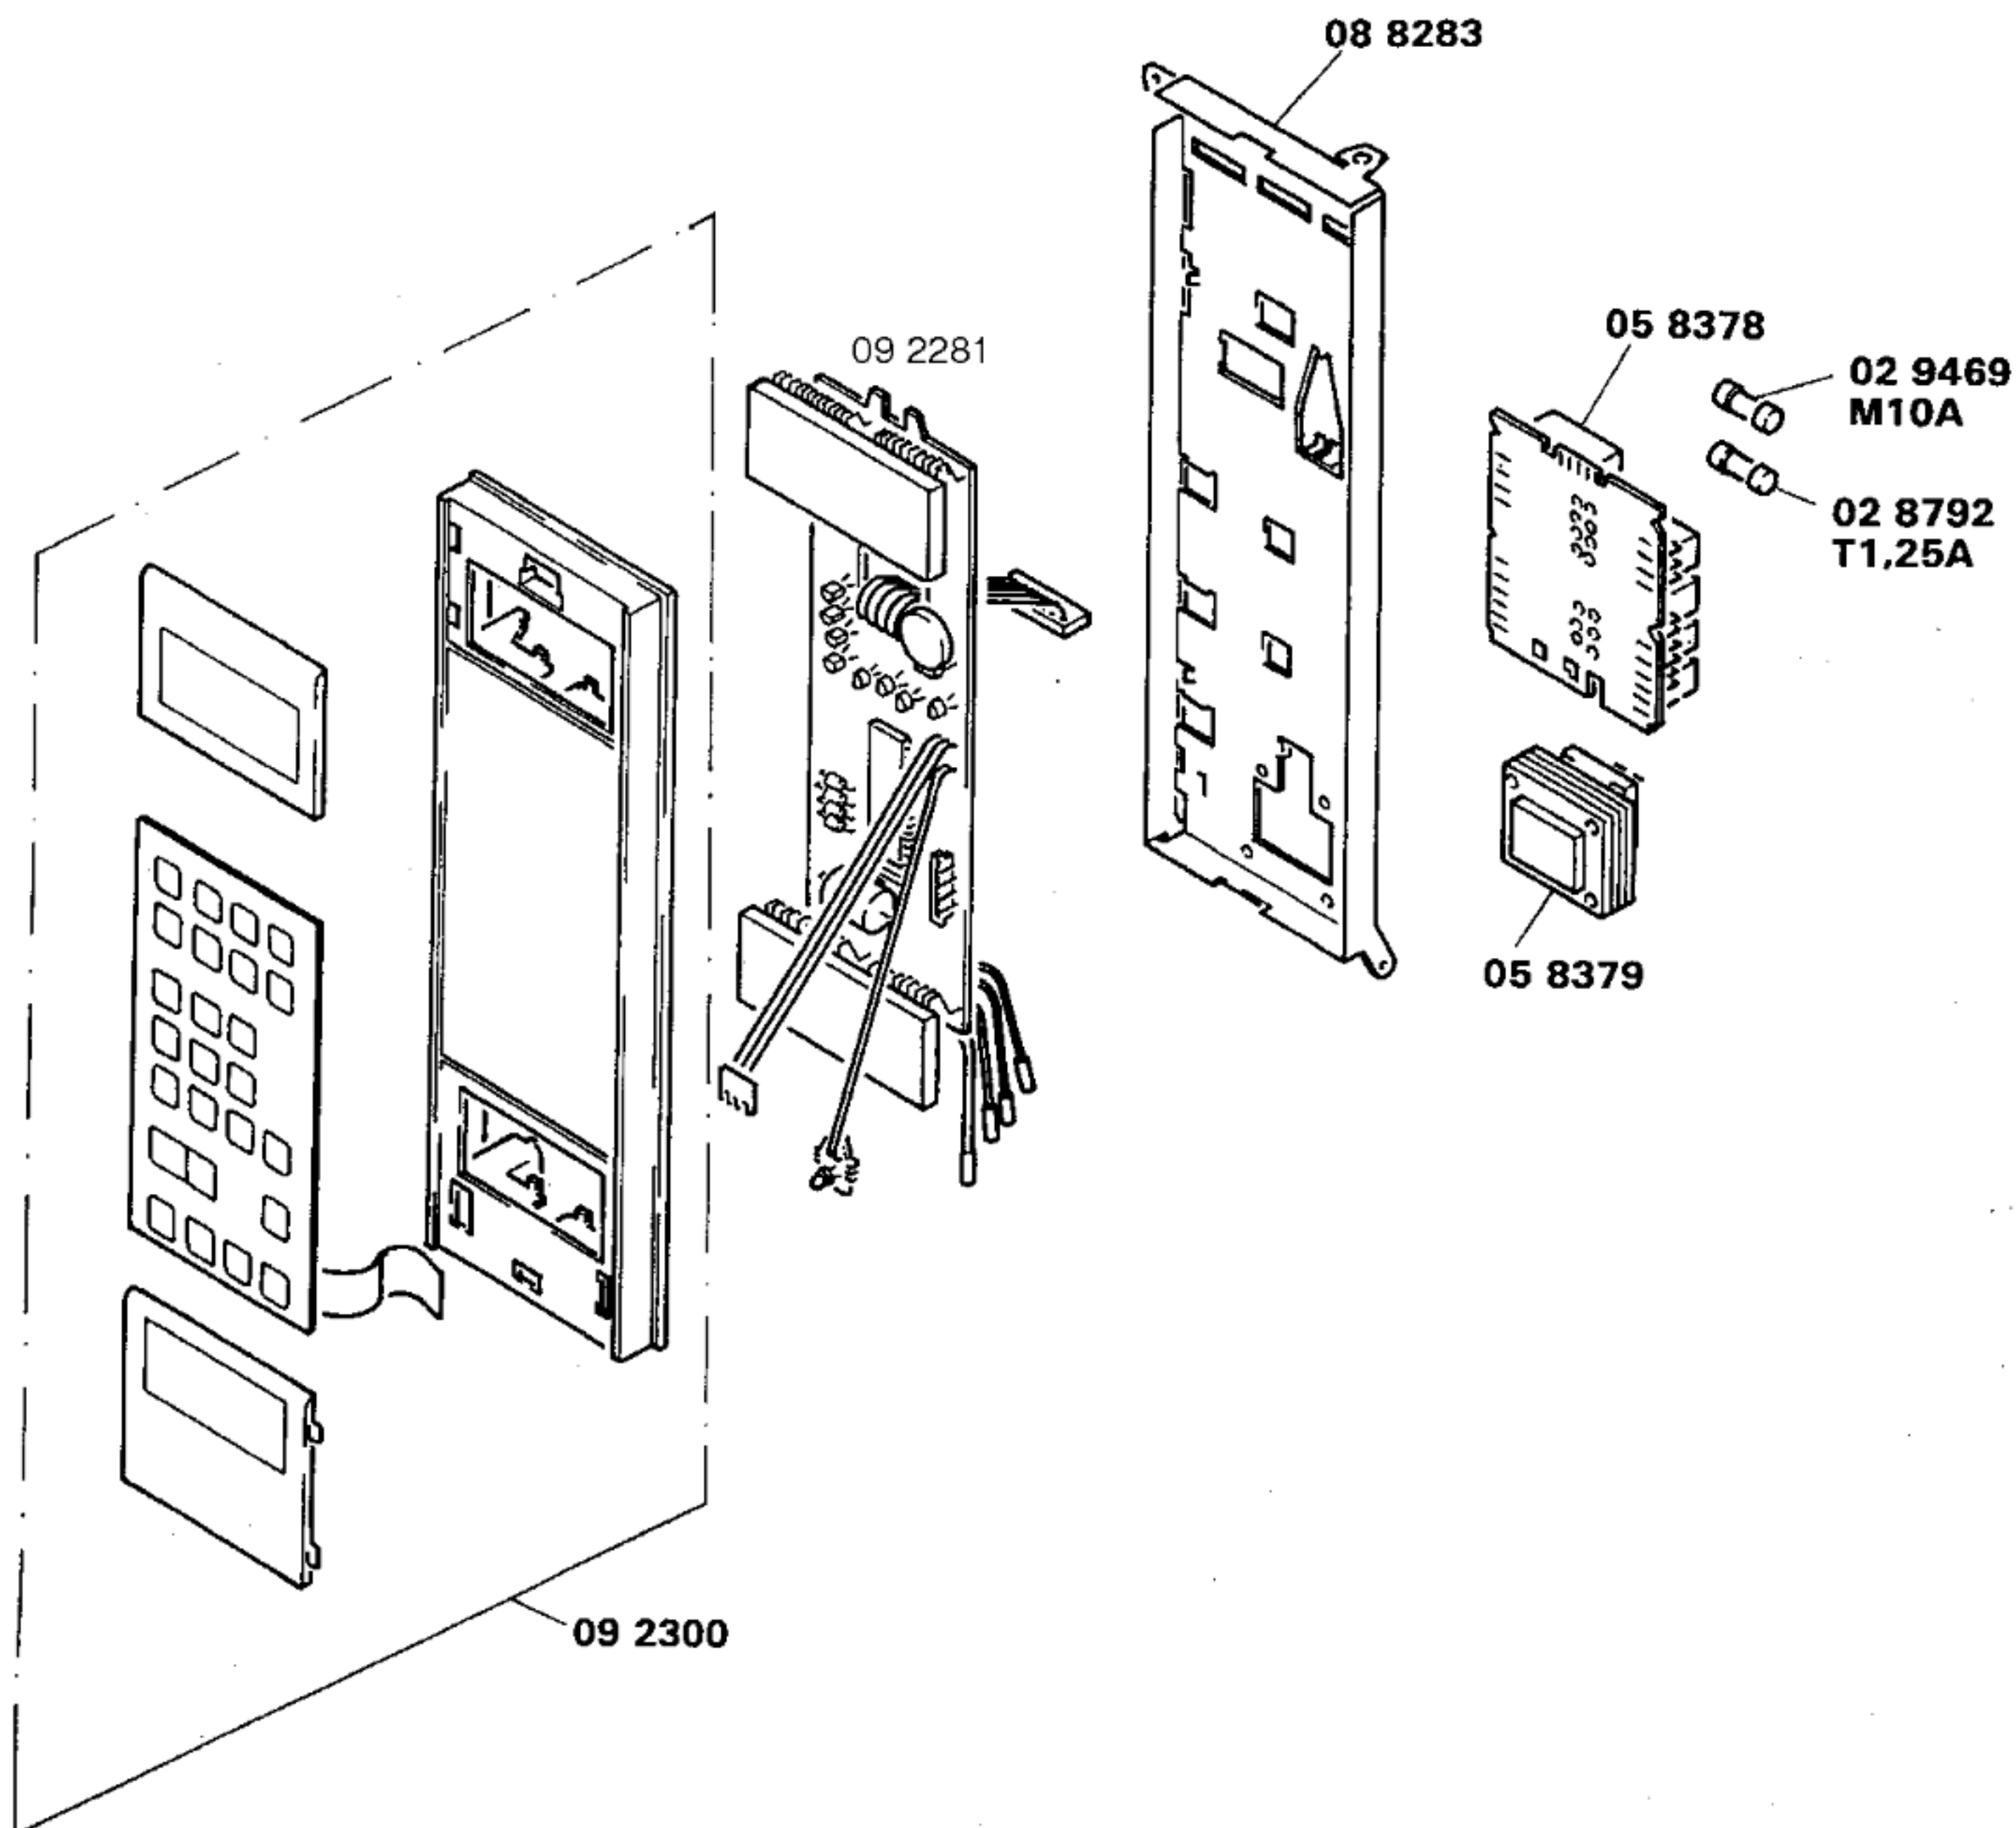

Gebrauchsanweisung

51 5596

F1

(D,F,GB,NL)

51 5602

D1

(D,F,GB,I,NL,E)

Tips und Rezepte

51 5601

F1

(F)

51 4999

D1

(D)

Zubehör:

Einbaurahmen

 
Z6180W1

Alu-Backblech

Z6380X0

Glaspfanne

Z6290X0

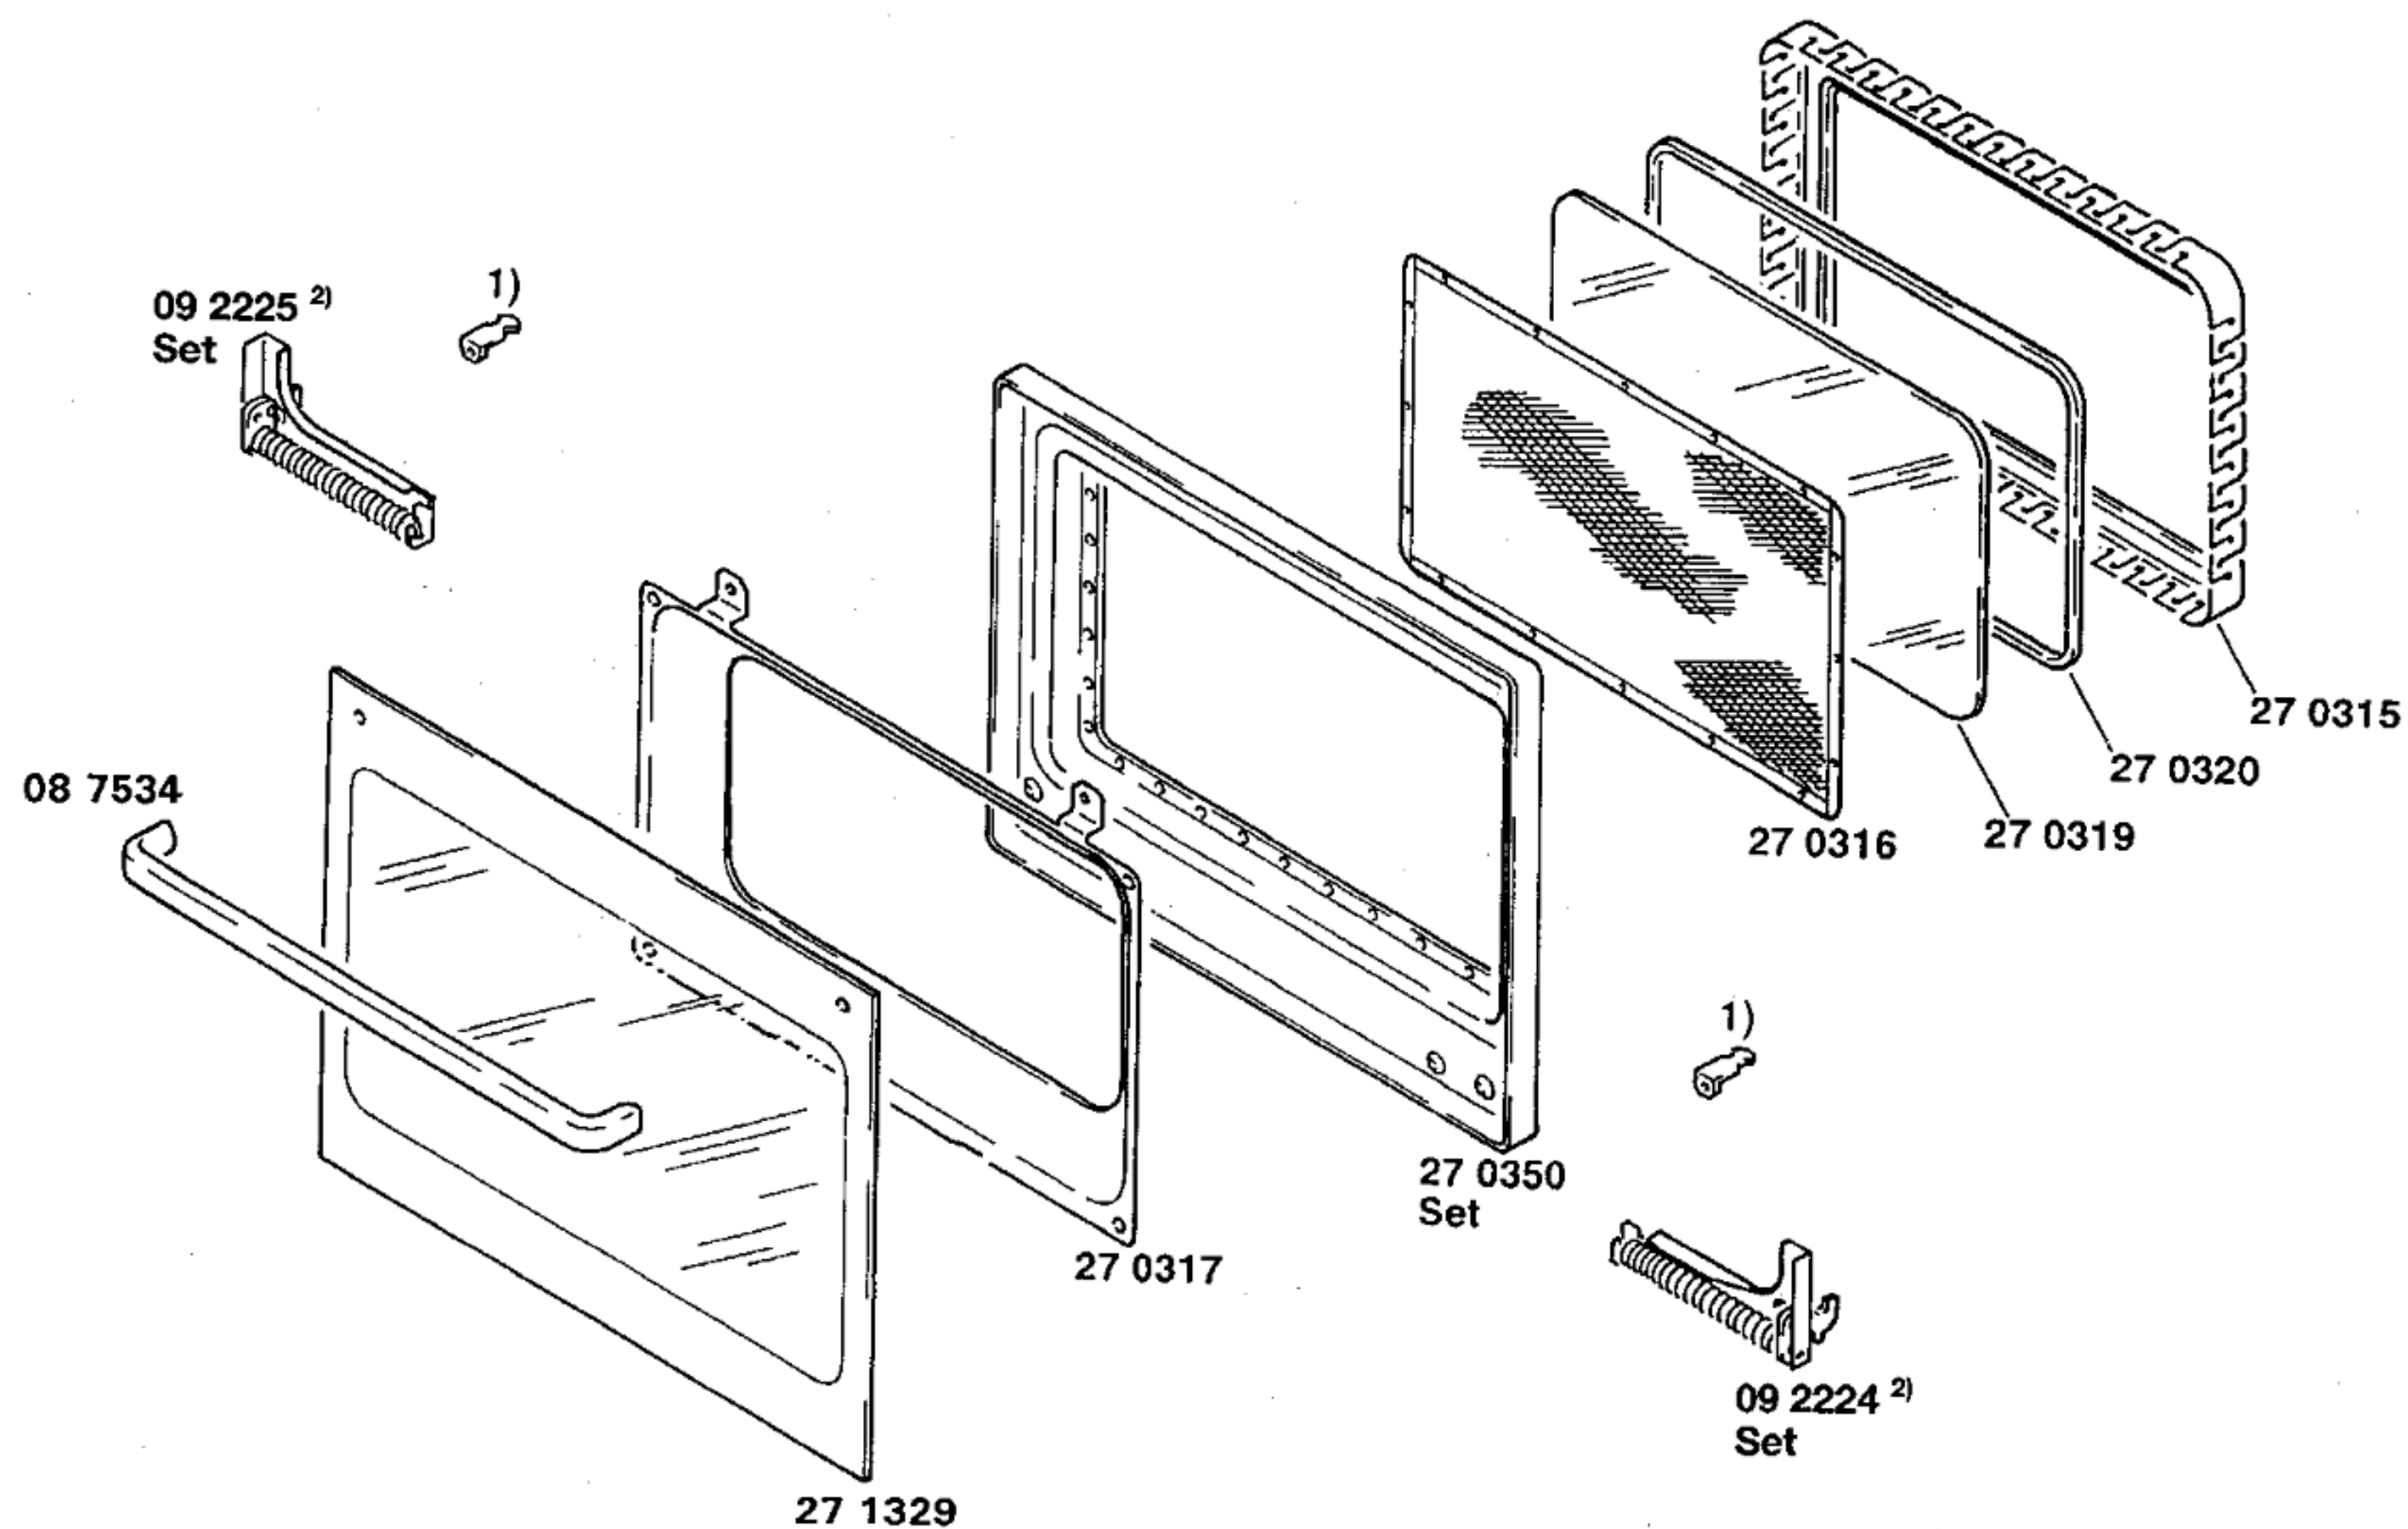

- 1) 03 0671
2) 03 0813
Arretierstift

