

**BOSCH**GSD3516/01-V01
GSD3516/02-V02KÜHL-,GEFRIERGERÄTE
Gefrierschränke, Stand

07 4445

11 5294

20 3108

11 8381

20 8282

02 6826

10 3102

05 0734

09 3275

09 2421

09 3110

06 5644

23 3043

5)

5)

5)

5)

5)

5)

5)

6)

02 0053

02 8793

28 4725

02 8809

06 8296

09 3004

03 1029

02 6817

02 6827

08 5191

1)

2)

05 5792

08 7284

05 4258

3)

06 9058

4)

7)

7)

7)

7)

7)

7)

8)

3)

9)

06 8293

3)

9)

08 5716

11 4677

27 0866

27 0736

28 4728

3)

4)

7)

7)

7)

7)

7)

7)

8)

3)

9)

08 6469

02 9978

02 9969

02 1895

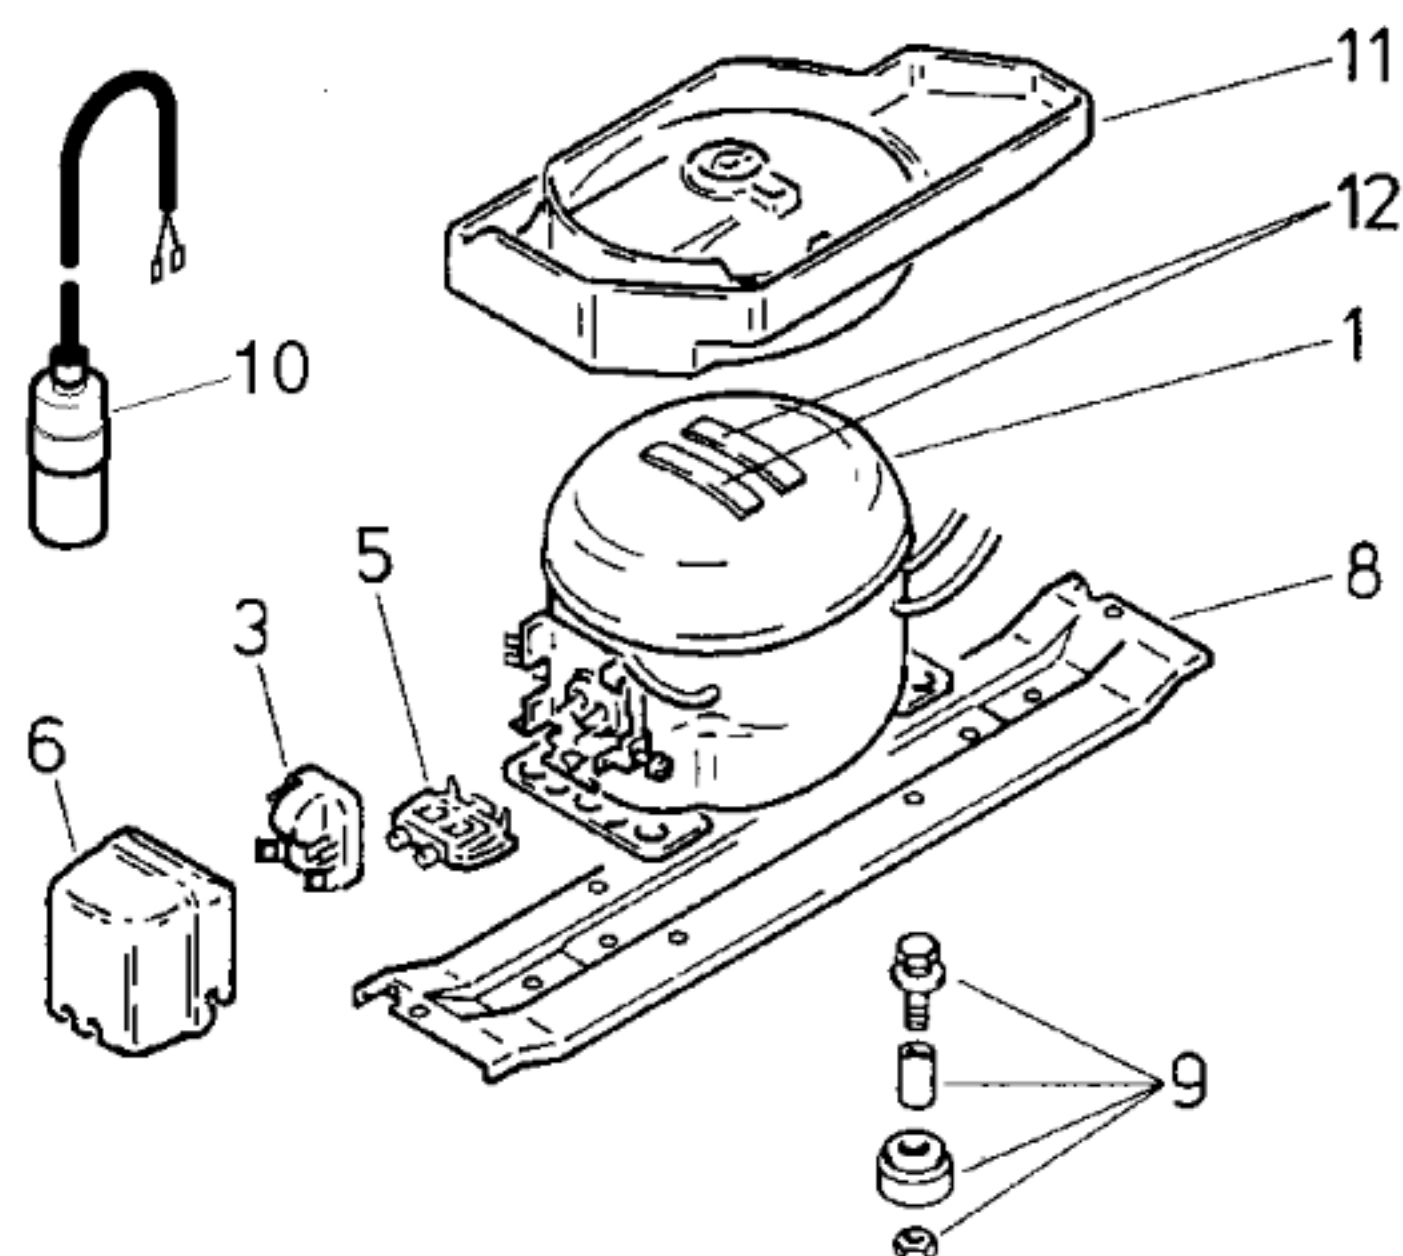
05 6874

23 0741

23 2602

Mat. - Nr. - Konstante
3740Gebrauchsanweisungen
51 6980
(D,GB,F,I,NL,P,E)
51 6981
(S,DK,SF,N)

- 1) 02 6816
- 2) 026819
- 3) 02 7786
- 4) 02 6824
- 5) 06 8297
- 6) 06 8299
- 7) 06 8298
- 8) 06 8300
- 9) 06 8499

**BOSCH**GSD3516/01-V01
GSD3516/02-V02KÜHL-,GEFRIERGERÄTE
Gefrierschränke, StandMat. – Nr. – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE 15 K		
Förderleistung/Delivery/Débit		l/h	2637	
Anlaufstrom/Starting current/Cour de démarrage		A	11,4	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	10,7	
		Hi/aux Ω	13	
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		077B2157		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	-22	-14
Valeurs de commutation		„aus“	-32	-22
		(„abtauen“ od.) „alarm“	-17,5	-10
Füllmenge/Fill.quantity/Charge		R600a	g	95
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	Danfoss		
	NLE 15 K		
1	14 1311		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	11 1567		
9	05 0166		
10			
11			
12			