 


**BOSCH**

V 454-V45438/00-ZA1
V 454-V45438/01-ZA2

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

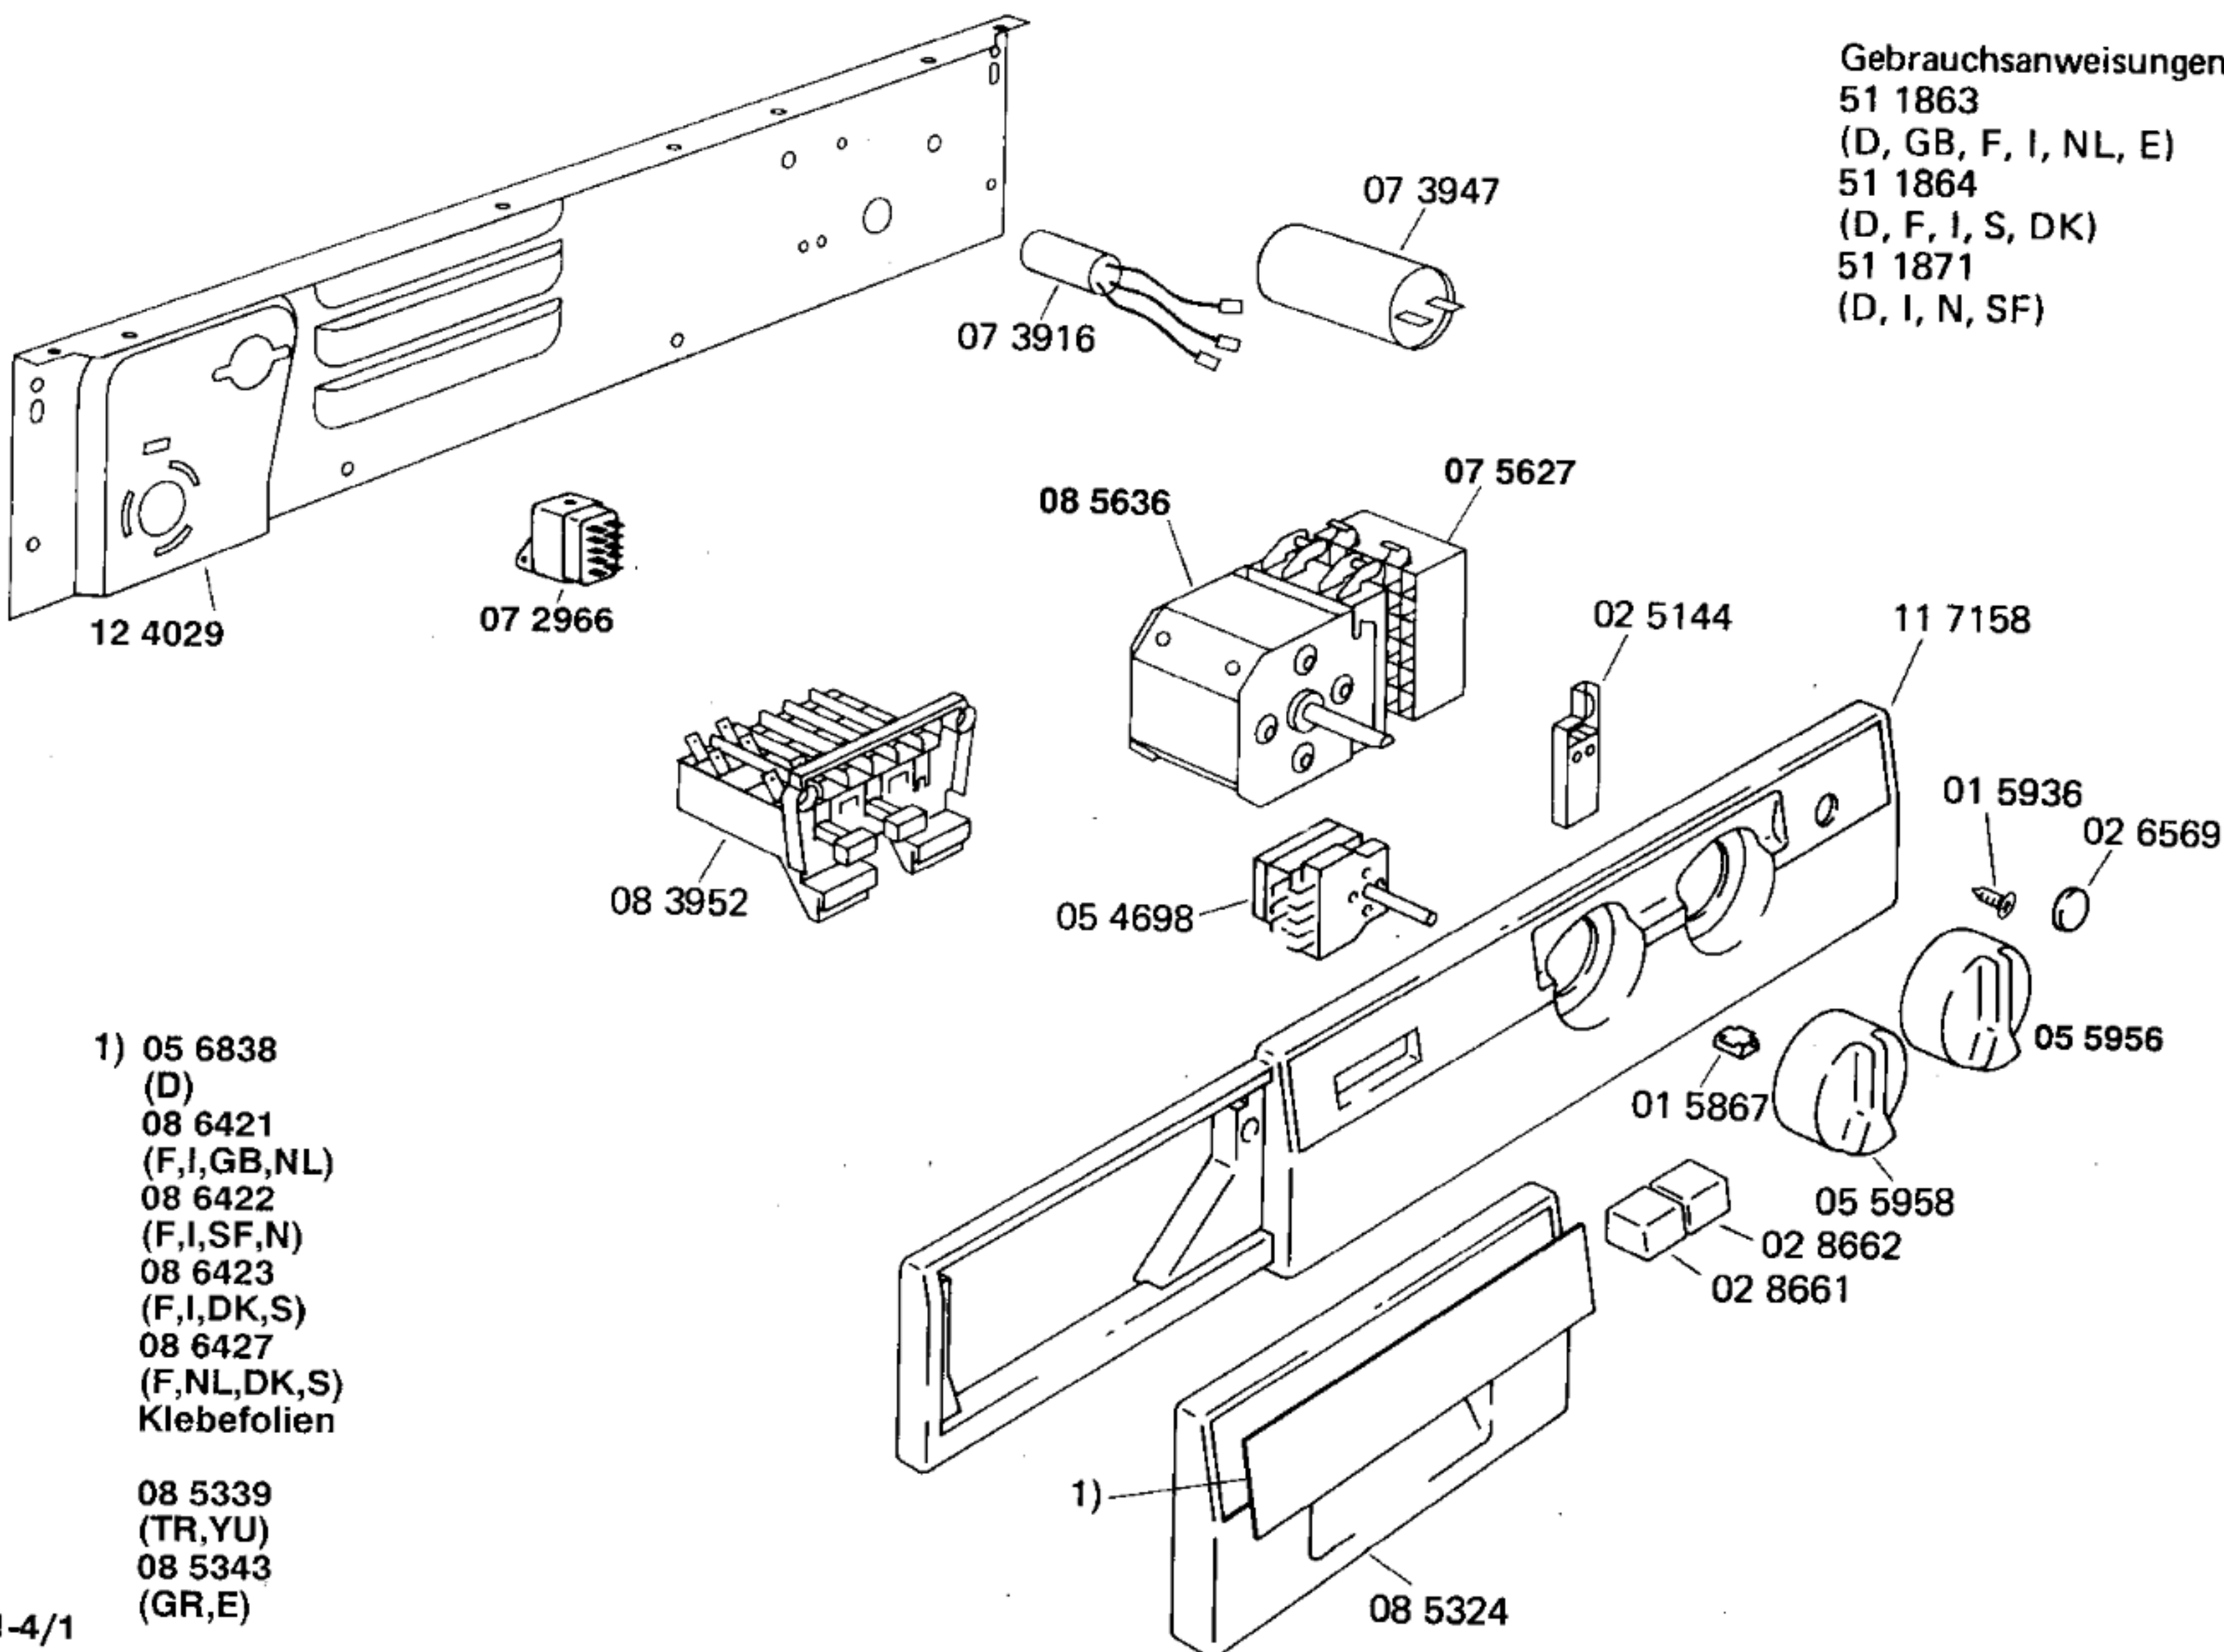

Gebrauchsanweisungen
51 1863
(D, GB, F, I, NL, E)
51 1864
(D, F, I, S, DK)
51 1871
(D, I, N, SF)

Aufstellanweisungen
51 1820
(D, GB, F, I, NL, E, P)
51 2223
(D, F, I, S, DK)
51 1868
(D, I, N, SF)
51 1934
(GB) GB1, IRL1
Programmtabellen
51 2945
(D, GB, F, I, NL, E)
51 2946
(D, I, N, SF)
51 2947
(D, F, I, S, DK)
51 1935
(GB) GB1, IRL1

1) 05 6838
(D)
08 6421
(F, I, GB, NL)
08 6422
(F, I, SF, N)
08 6423
(F, I, DK, S)
08 6427
(F, NL, DK, S)
Klebefolien

08 5339
(TR, YU)
08 5343
(GR, E)

1) bis FD 6711
08 5330
(D, Symbole)
08 5325
(F, I)
08 5326
(NL, GB)
08 5327
(SF, N)
08 5328
(S, DK)
08 5329
GB1, IRL1

 
ab FD 6712
05 6843
Symbole
(Einlage vollst.)

 
**BOSCH**

V 454-V45438/00-ZA1
V 454-V45438/01-ZA2

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

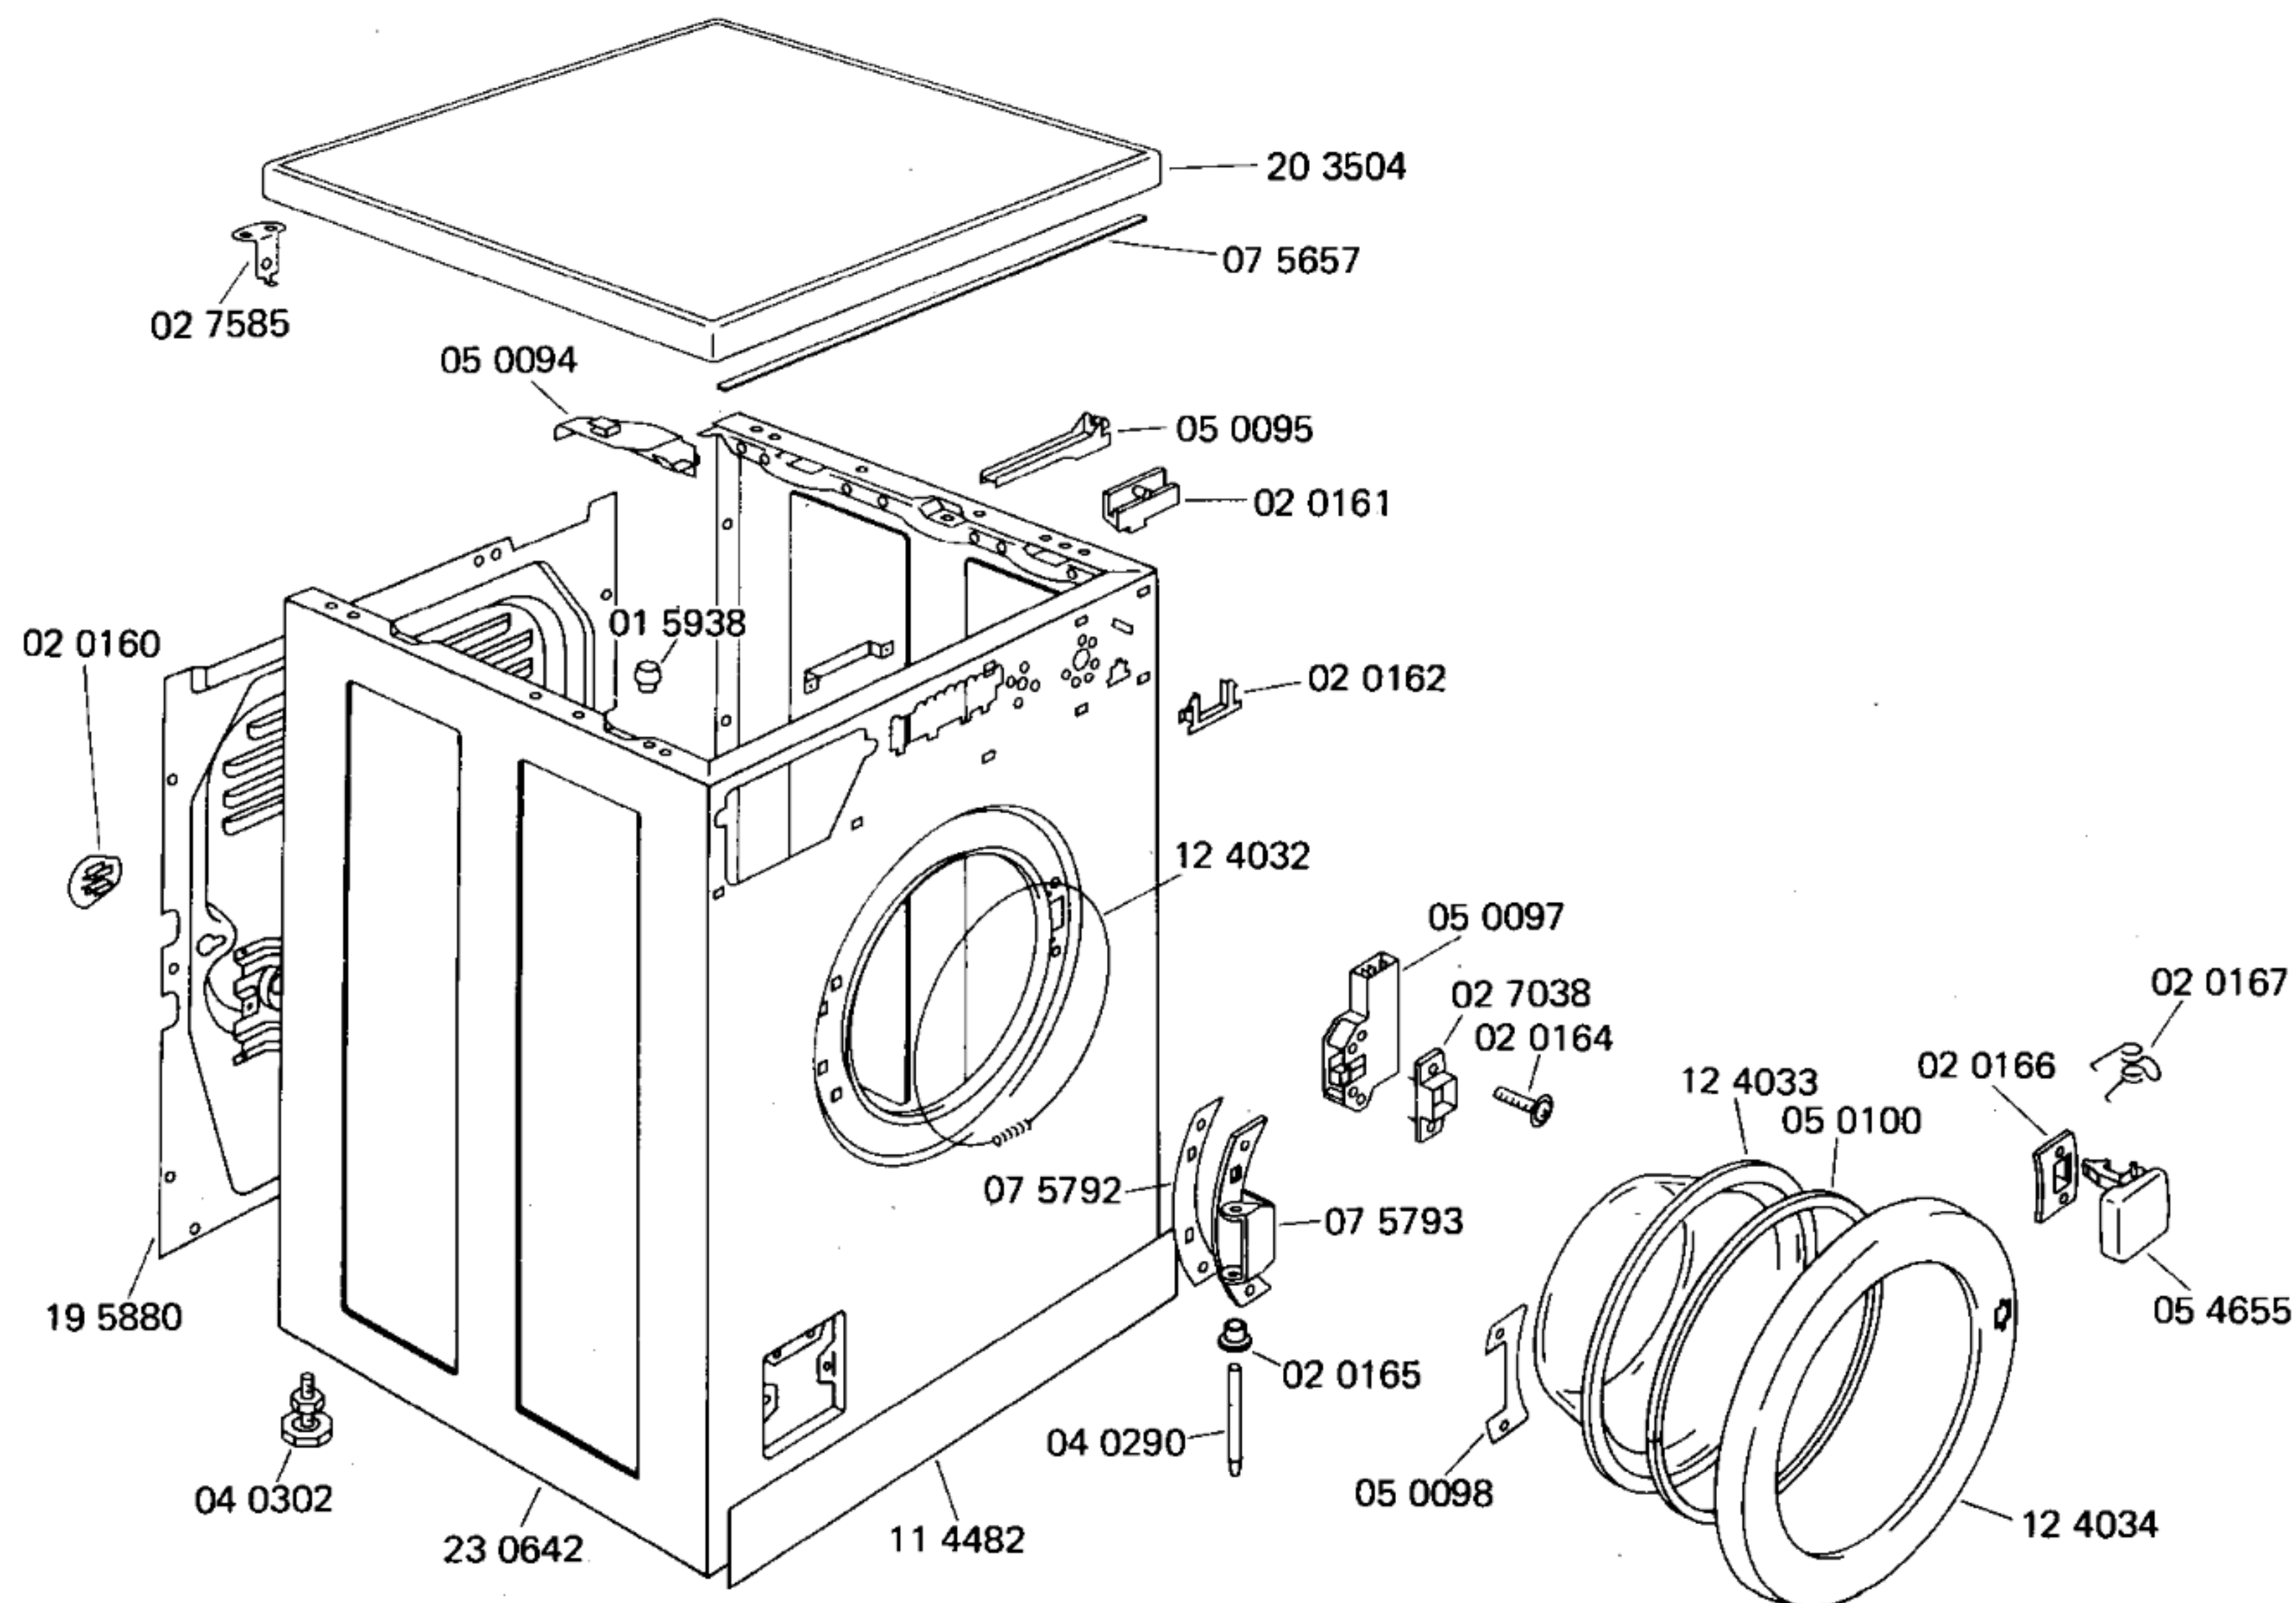

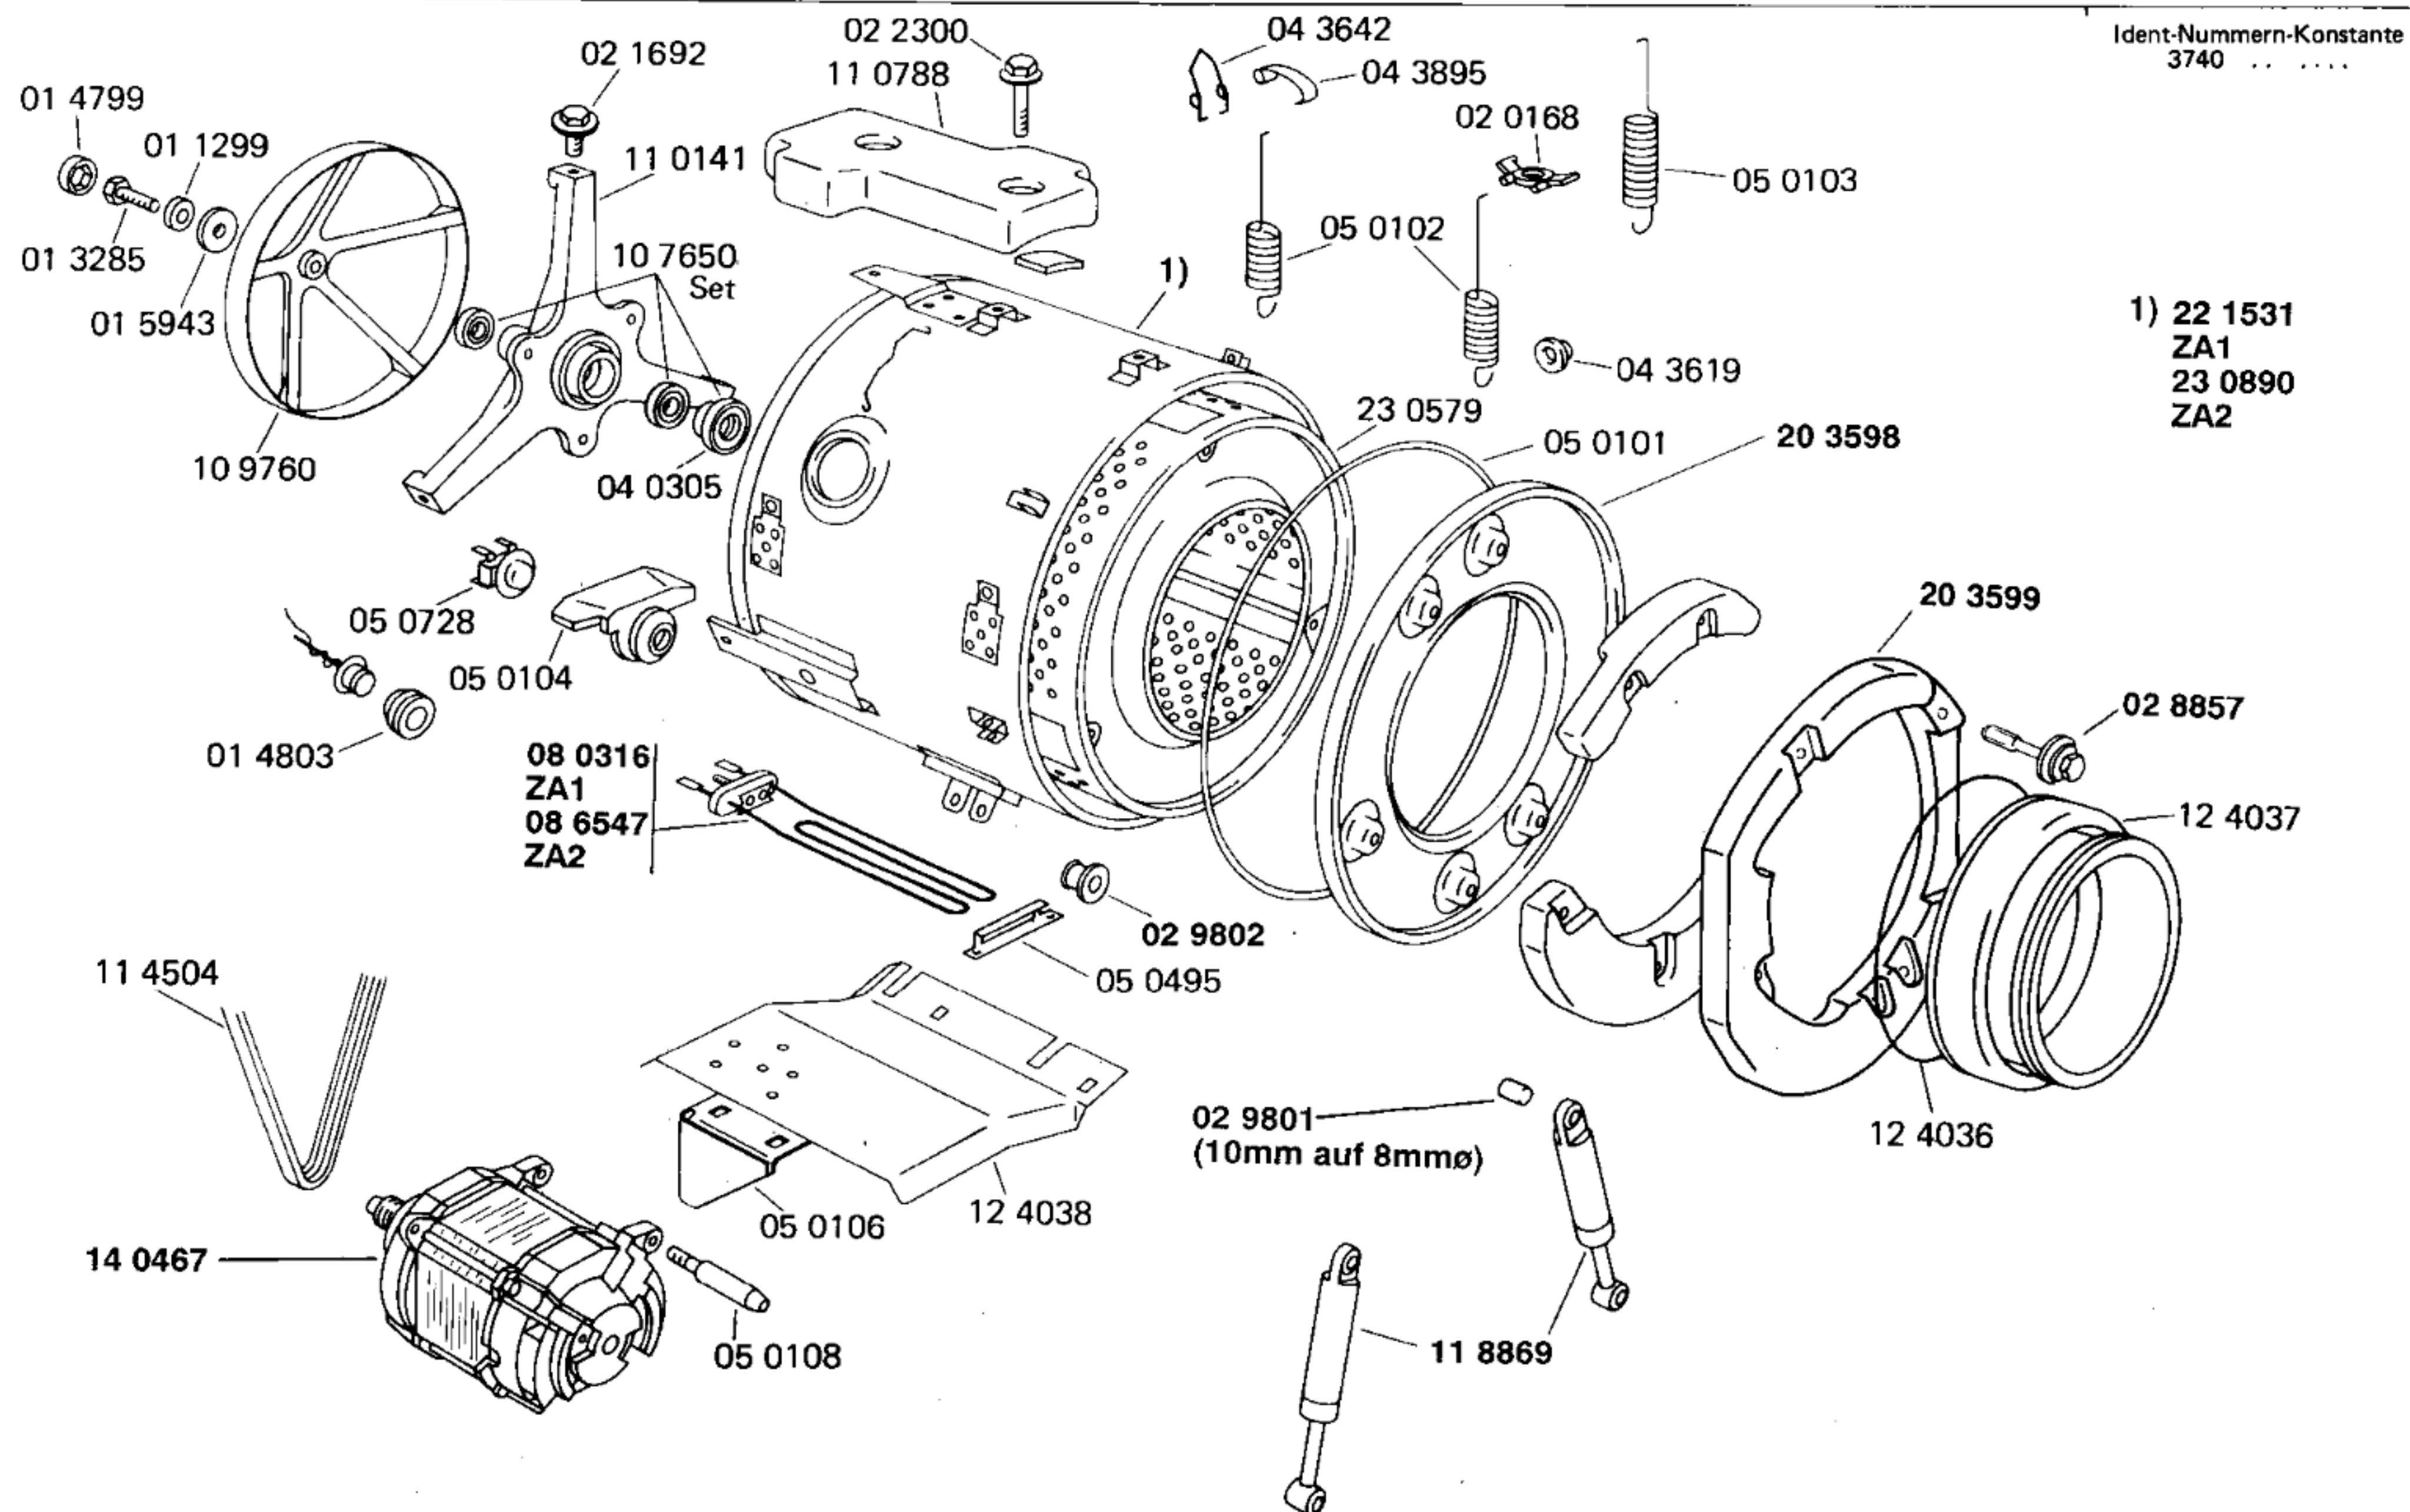

**BOSCH**

V 454-V45438/00-ZA1
V 454-V45438/01-ZA2

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

