 
 
 


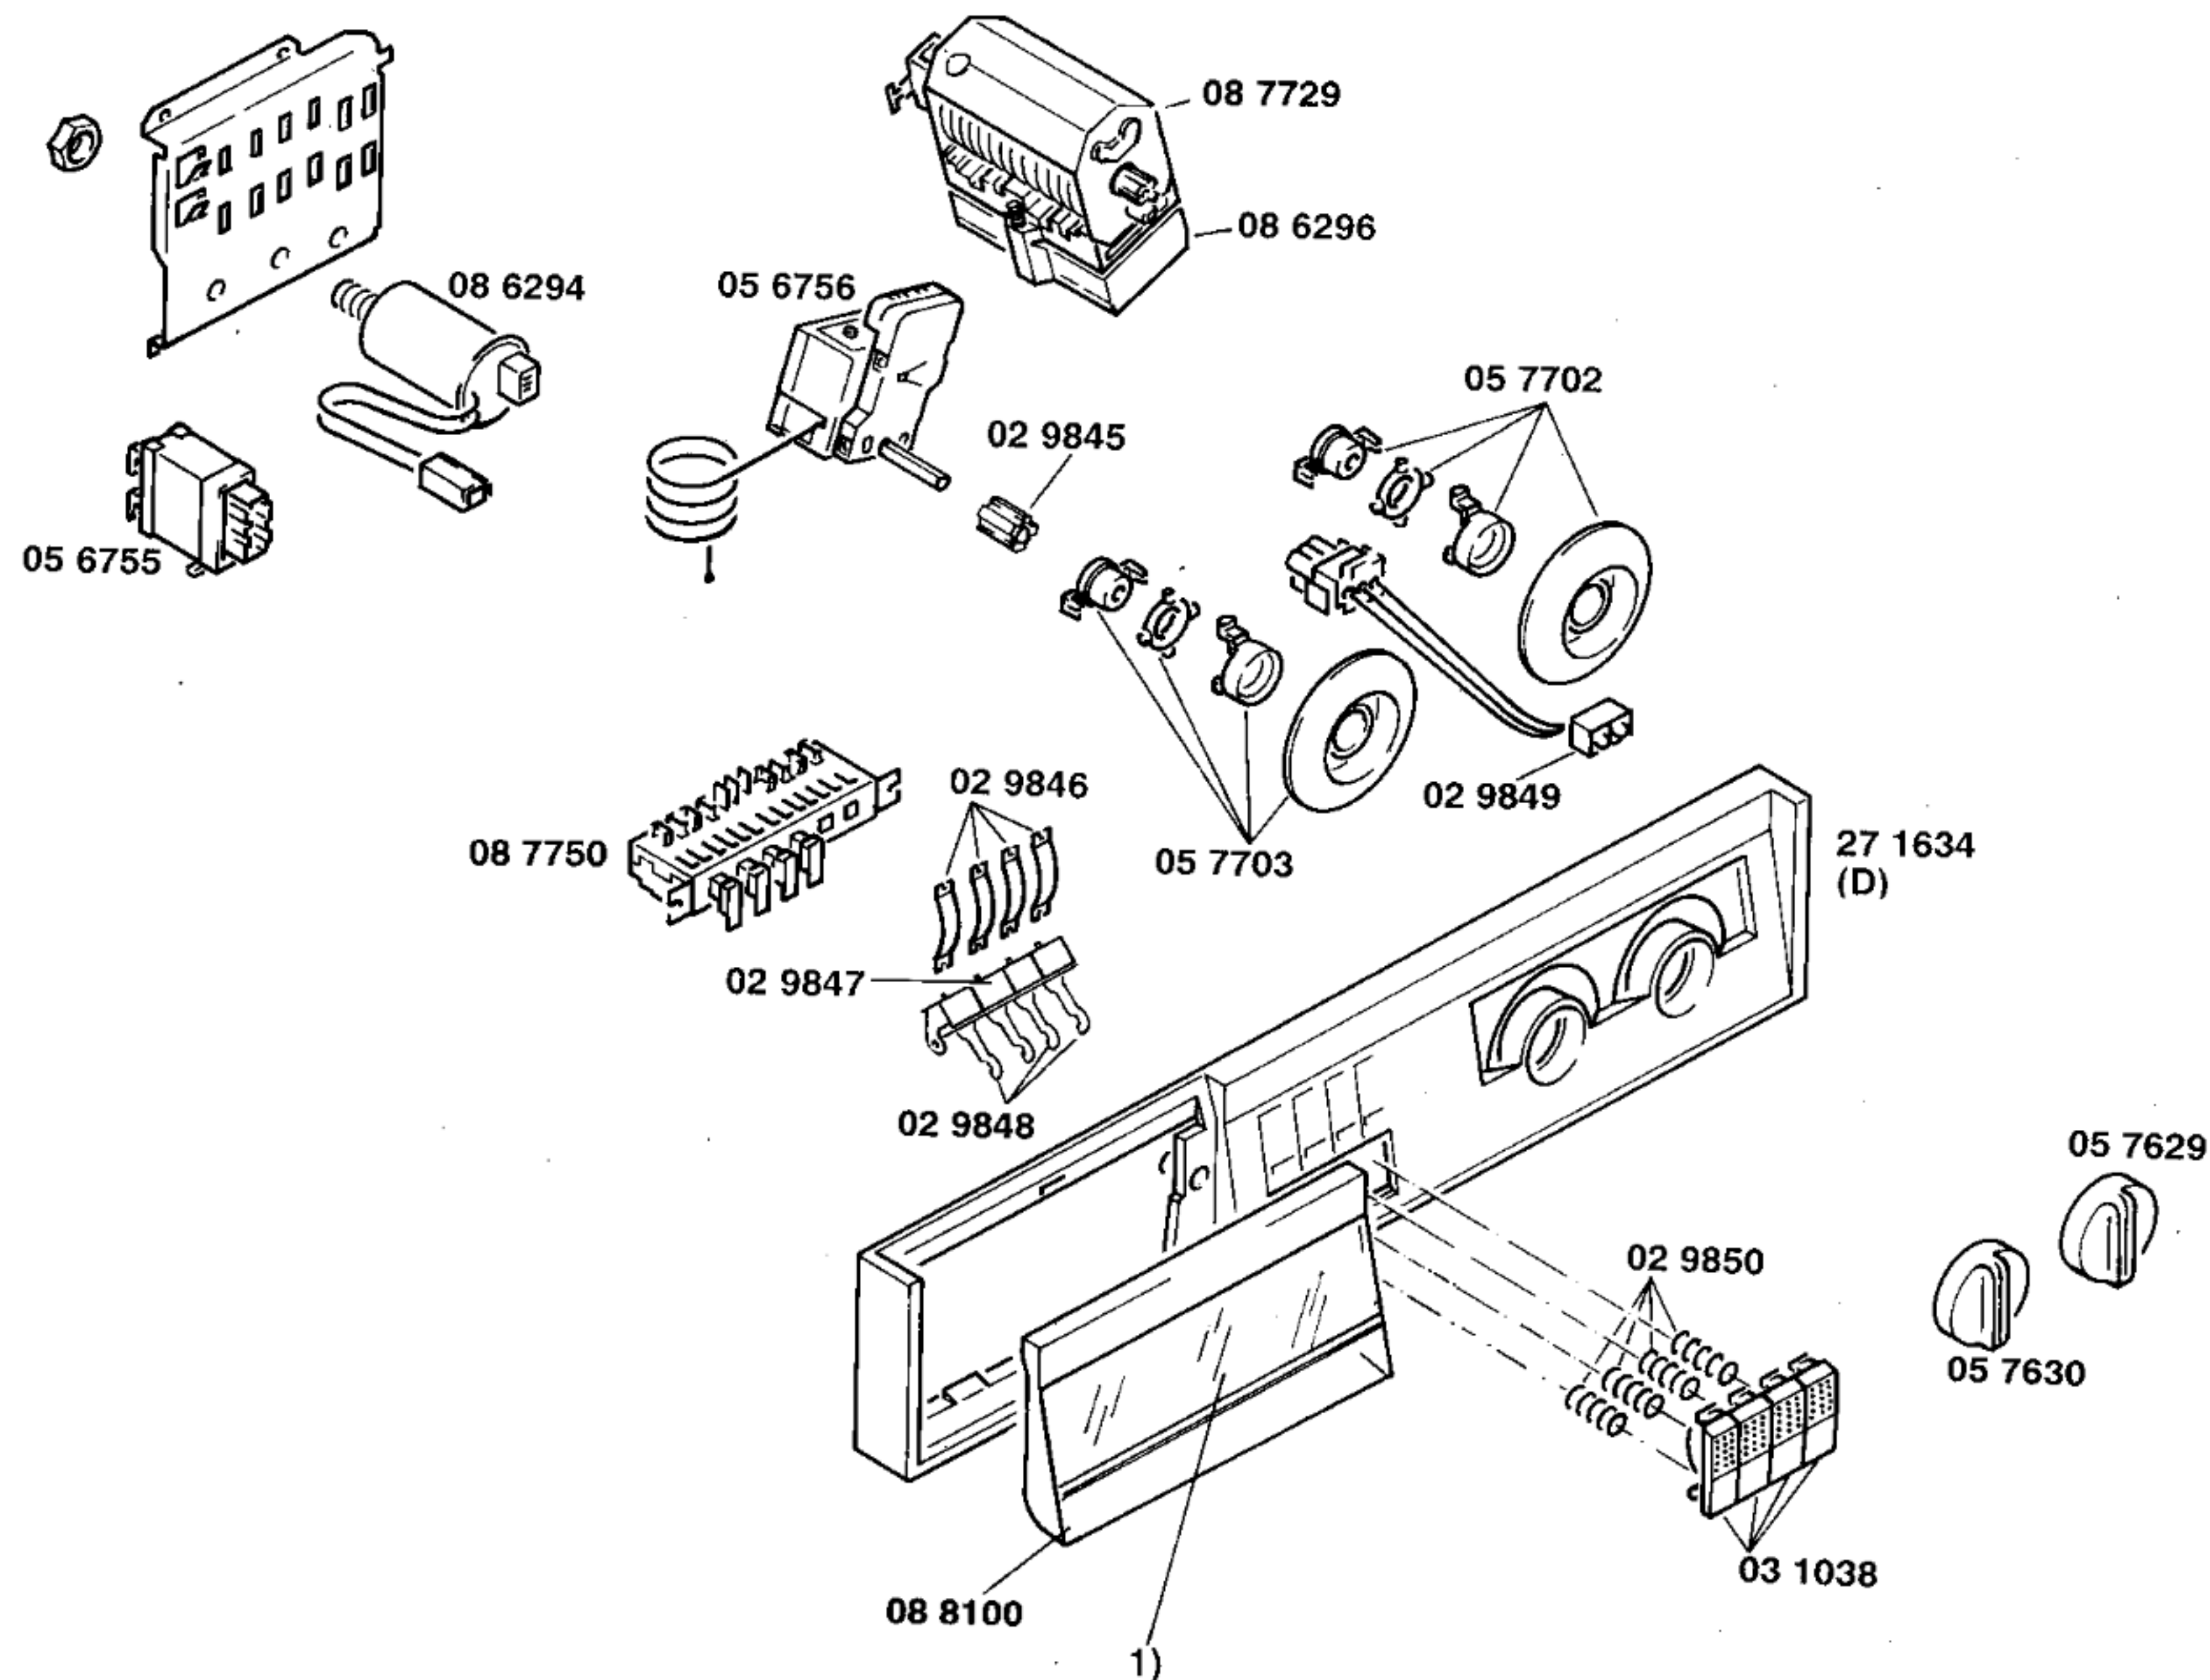

- 1) 08 8176
(D,I)
08 8722
(GB)
08 8723
(N,SF)
08 8724
(S,DK)
08 8725
(NL,F)
08 8726
(YU,TR)
08 8727
(E,GB)

Gebrauchsanweisungen:
51 3964
(D)
Programmtabellen:
51 3552
(D)
Aufstellanweisungen:
51 3965
(D)

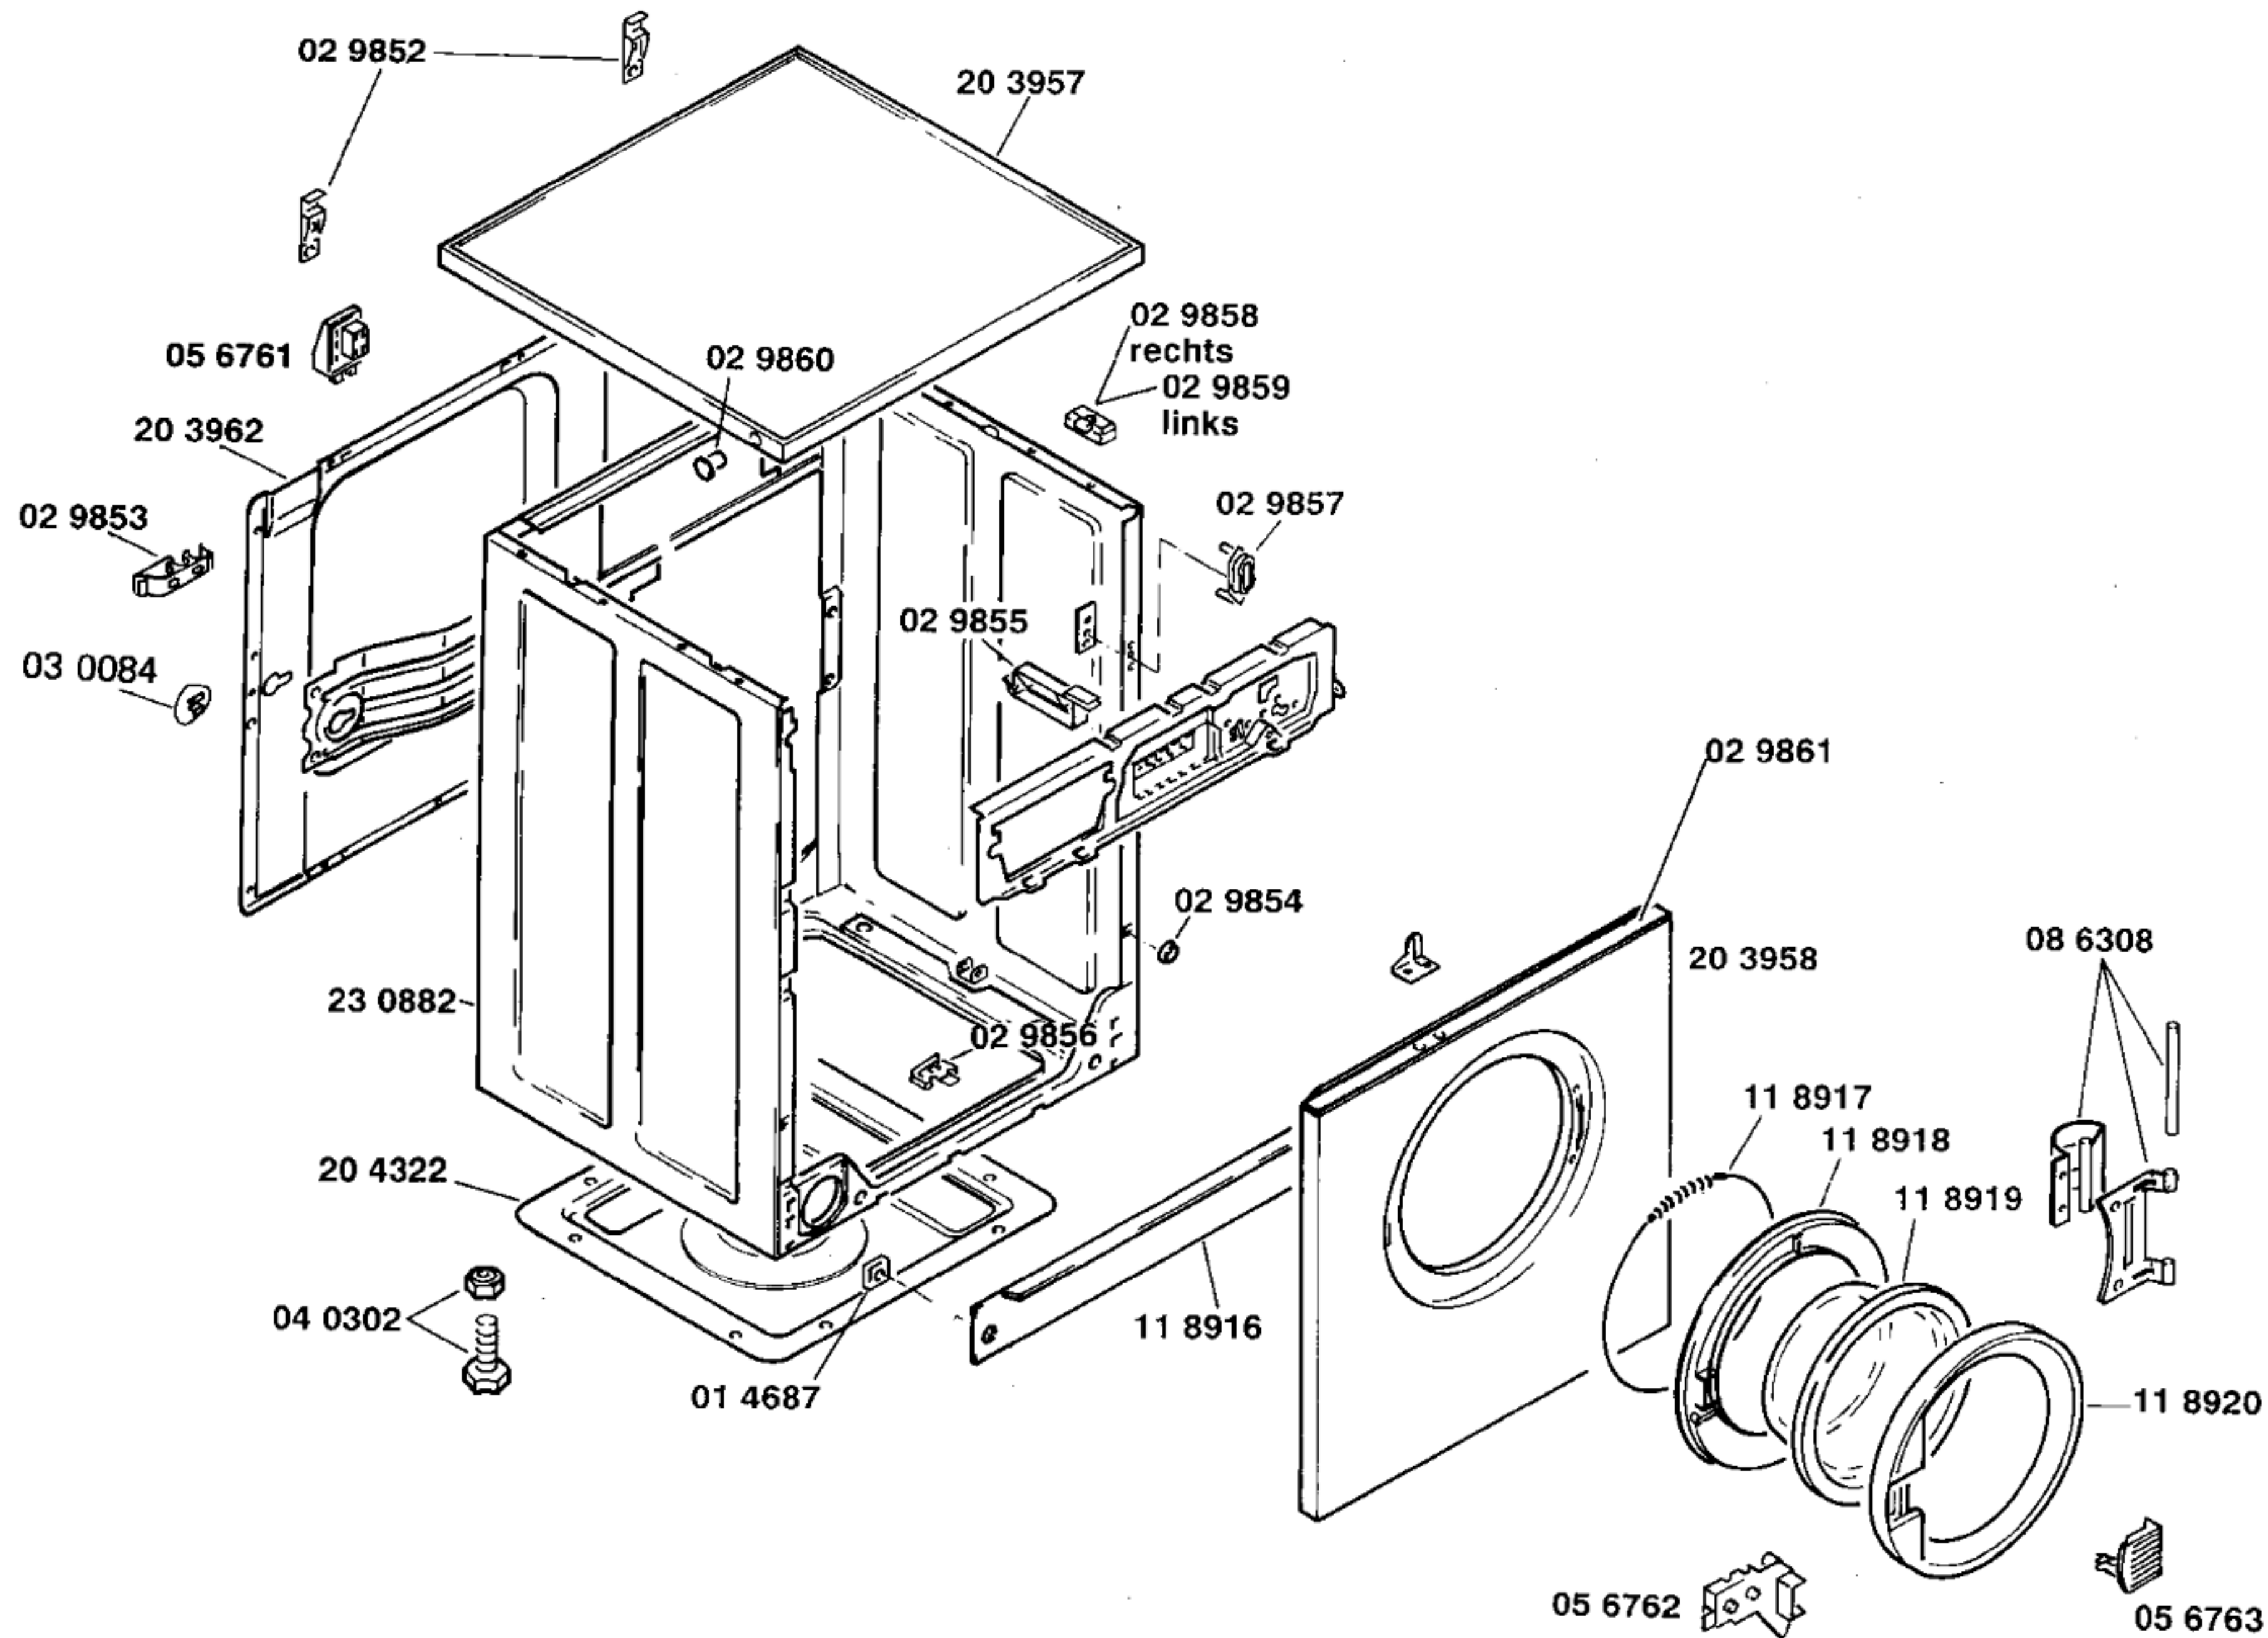

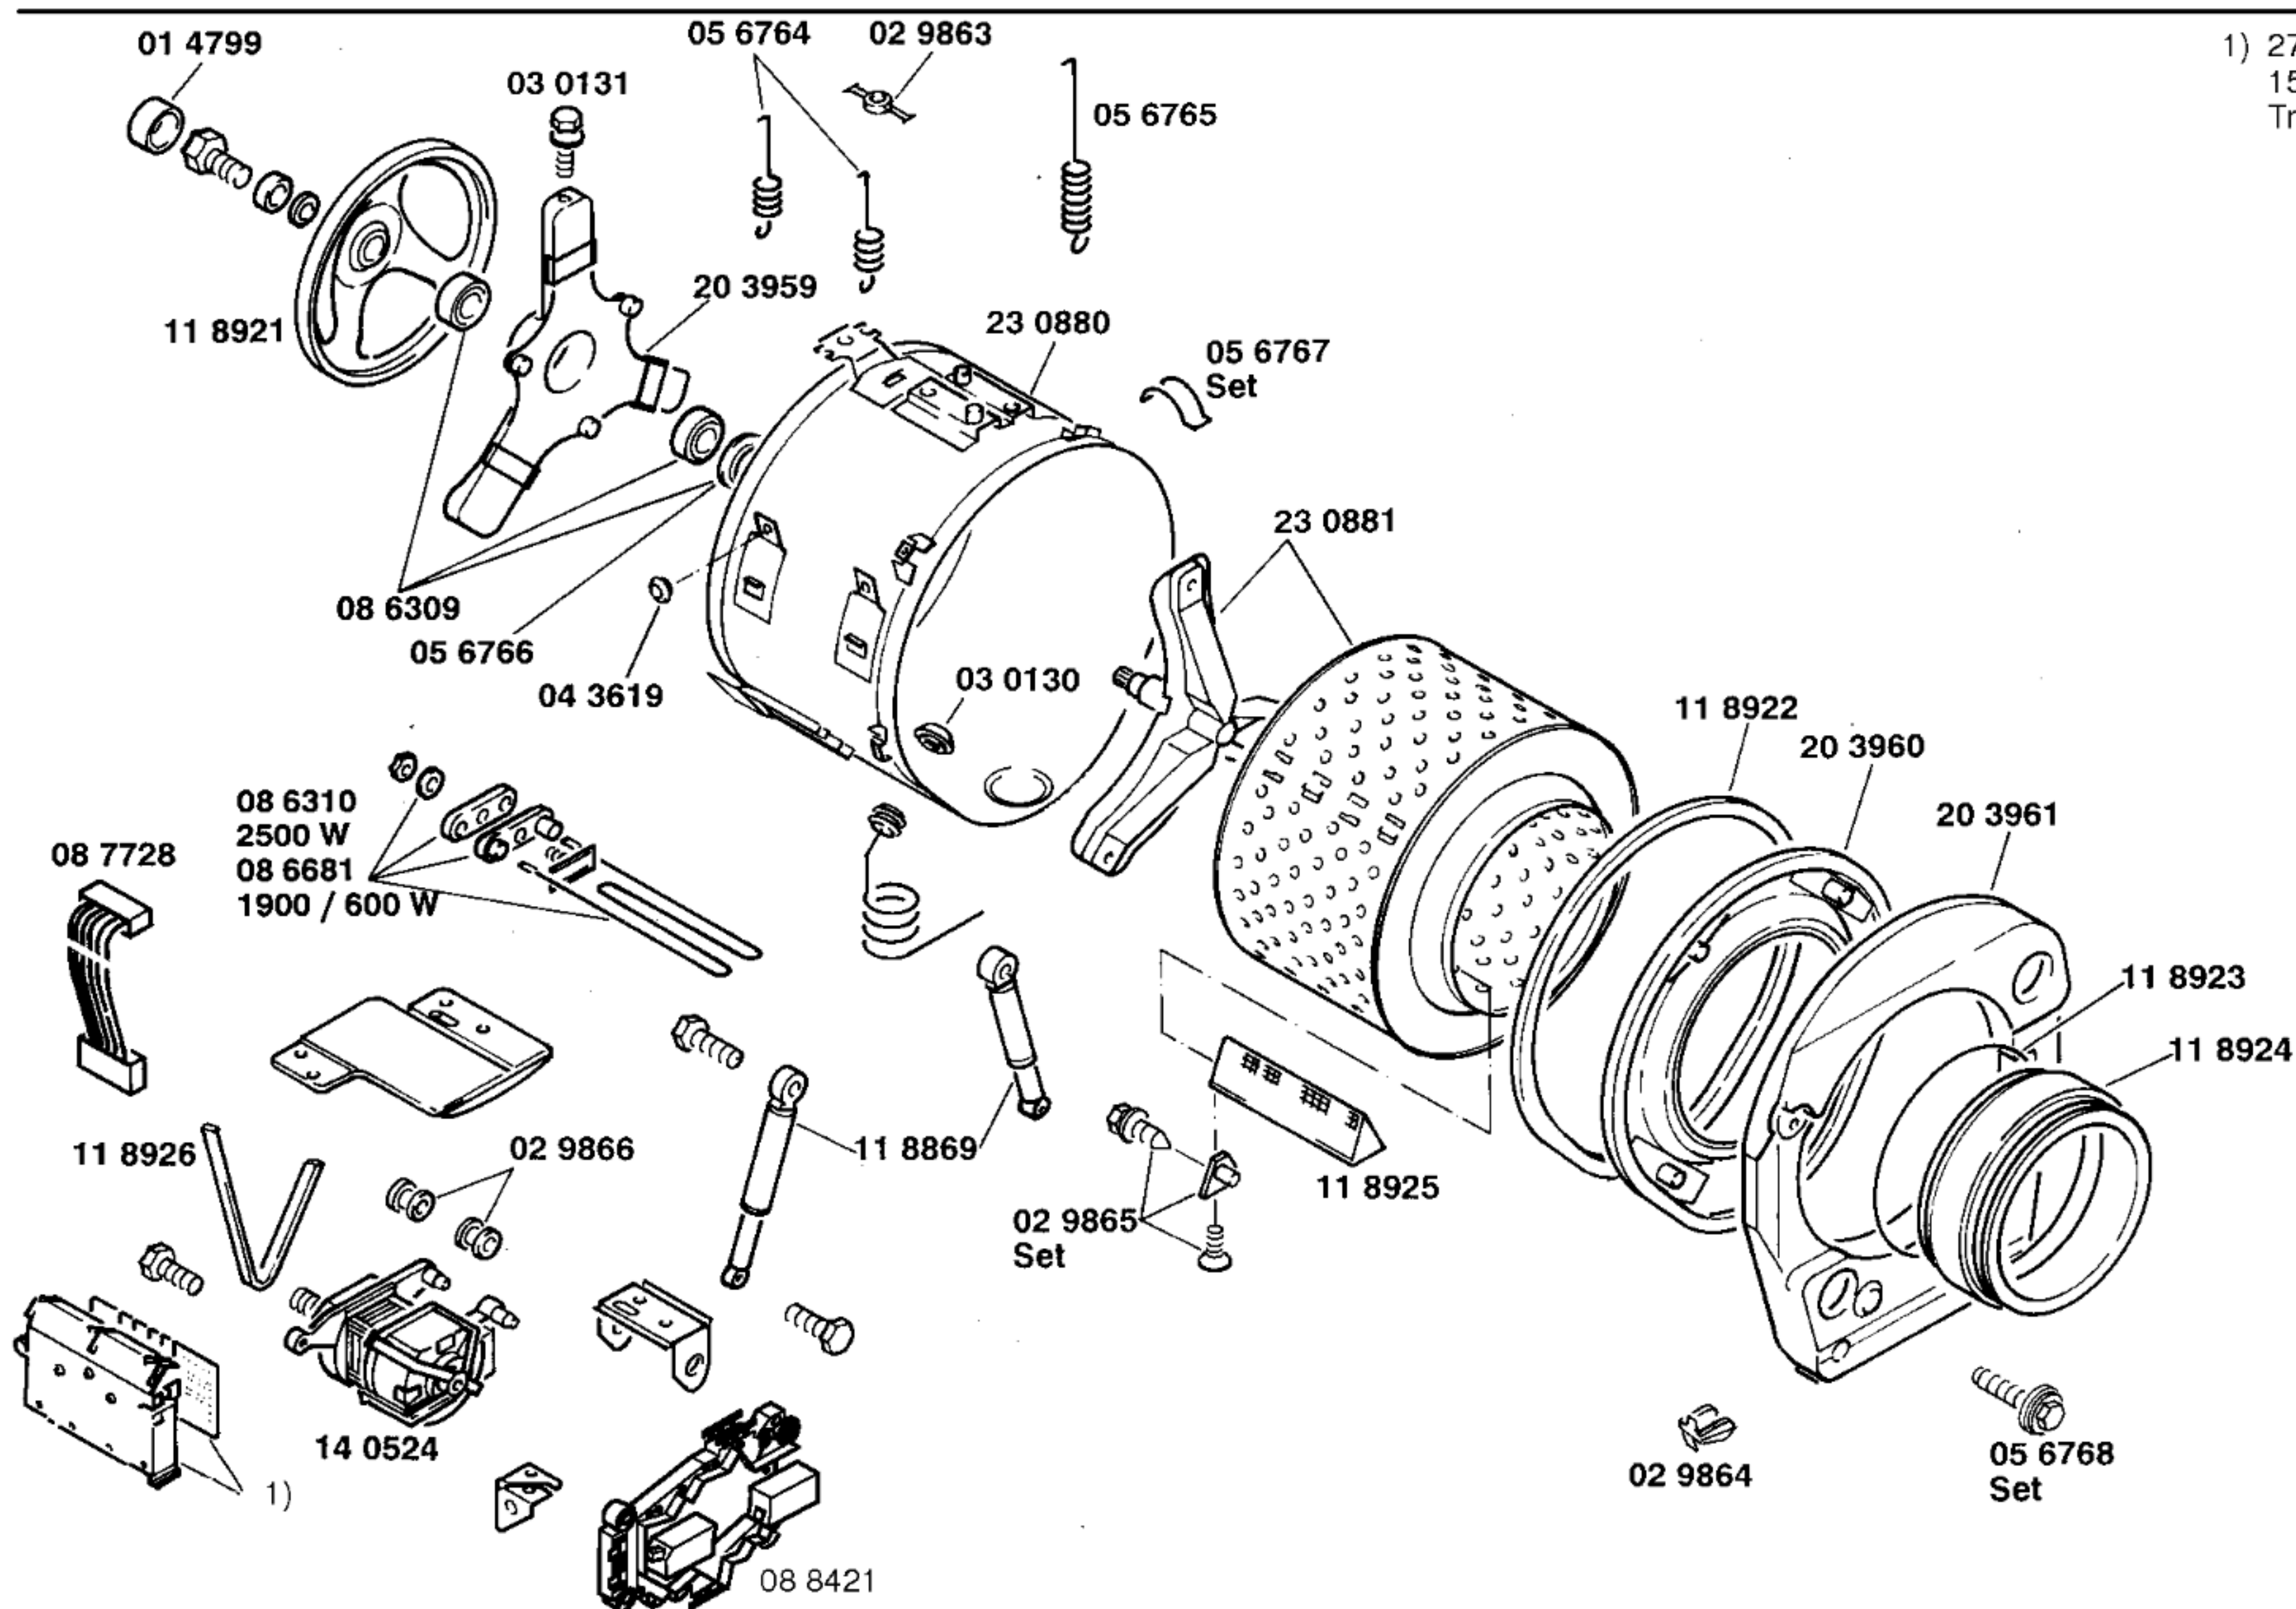

1) 27 1716
15 5272
Triac-Motorleistung

