


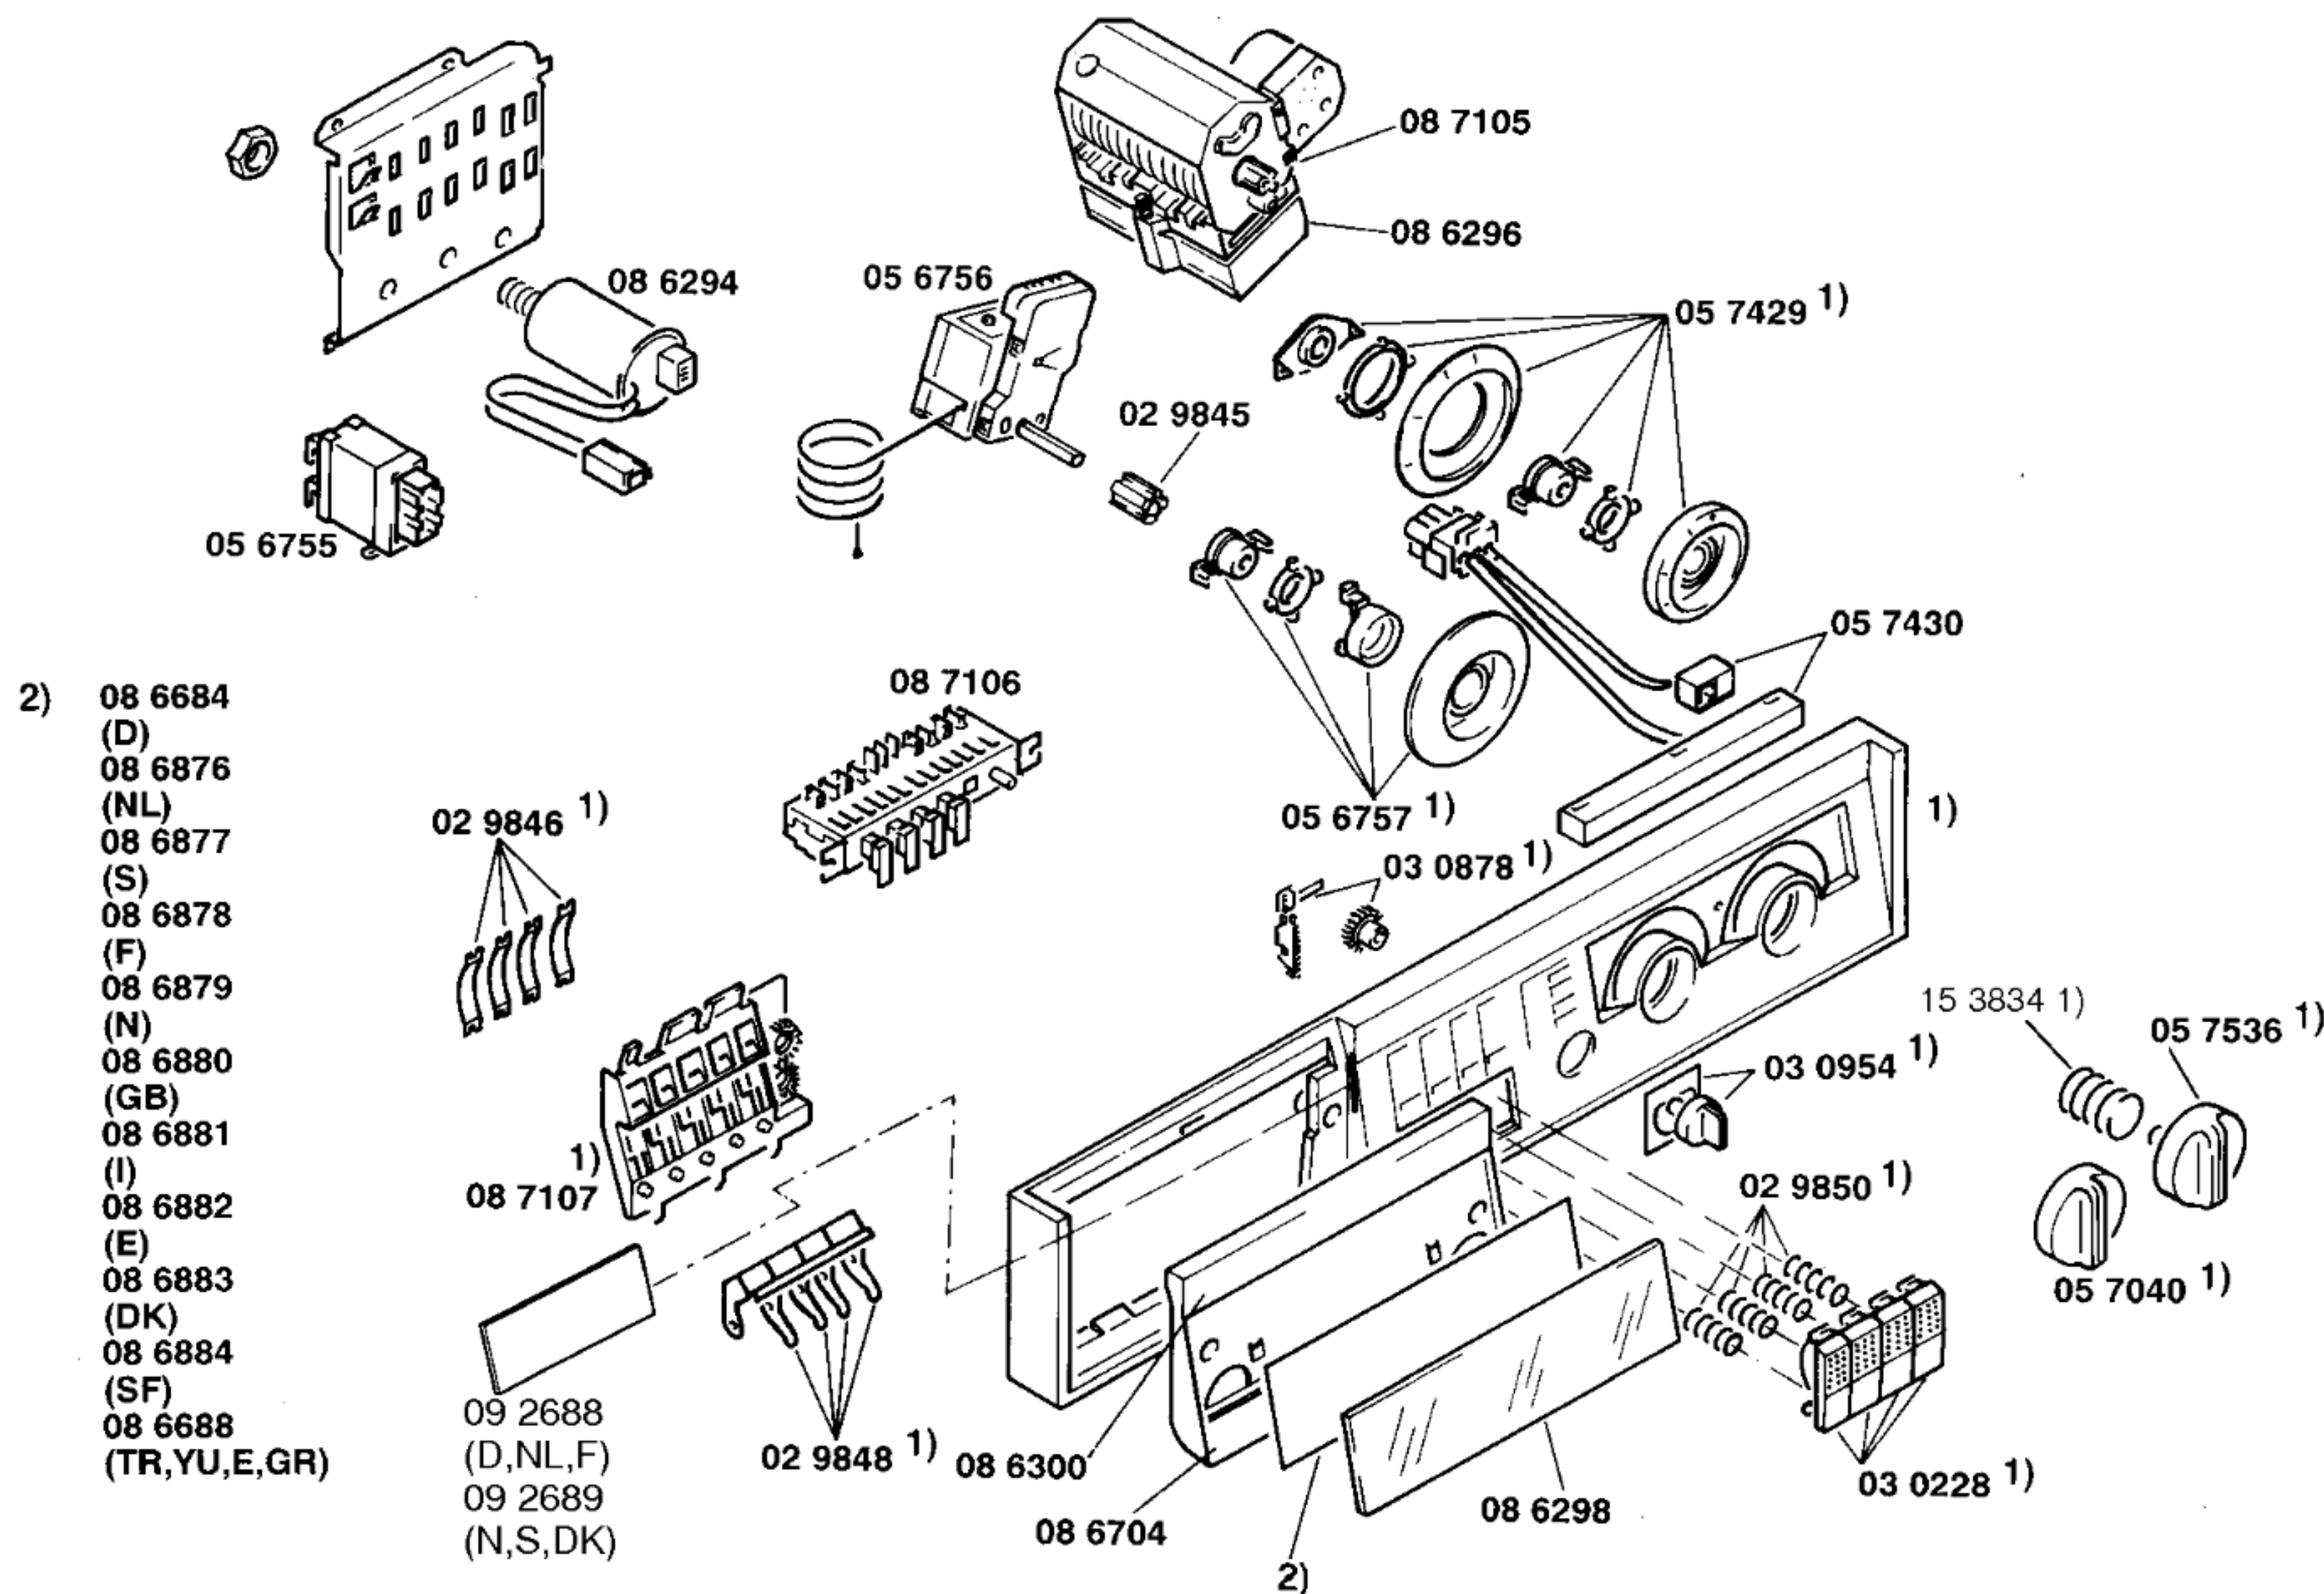

Aufstellanweisungen:


51 3556 (D,I,S,N,SF)
51 3557 (S,DK)
51 3558 (NL,F,E,GB)

Gebrauchsanweisungen:

51 3991 (D)
51 3992 (NL,F,E,GB)
51 3993 (S,DK)
51 3994 (D,F,I)
51 3995 (D,I,SF,S,N)

Programmtabellen:

51 3996 (D)
51 3997 (NL)
51 3998 (F)
51 3999 (E)
51 4000 (GB)
51 4001 (I)
51 4002 (N)
51 4003 (SF)
51 4004 (S)

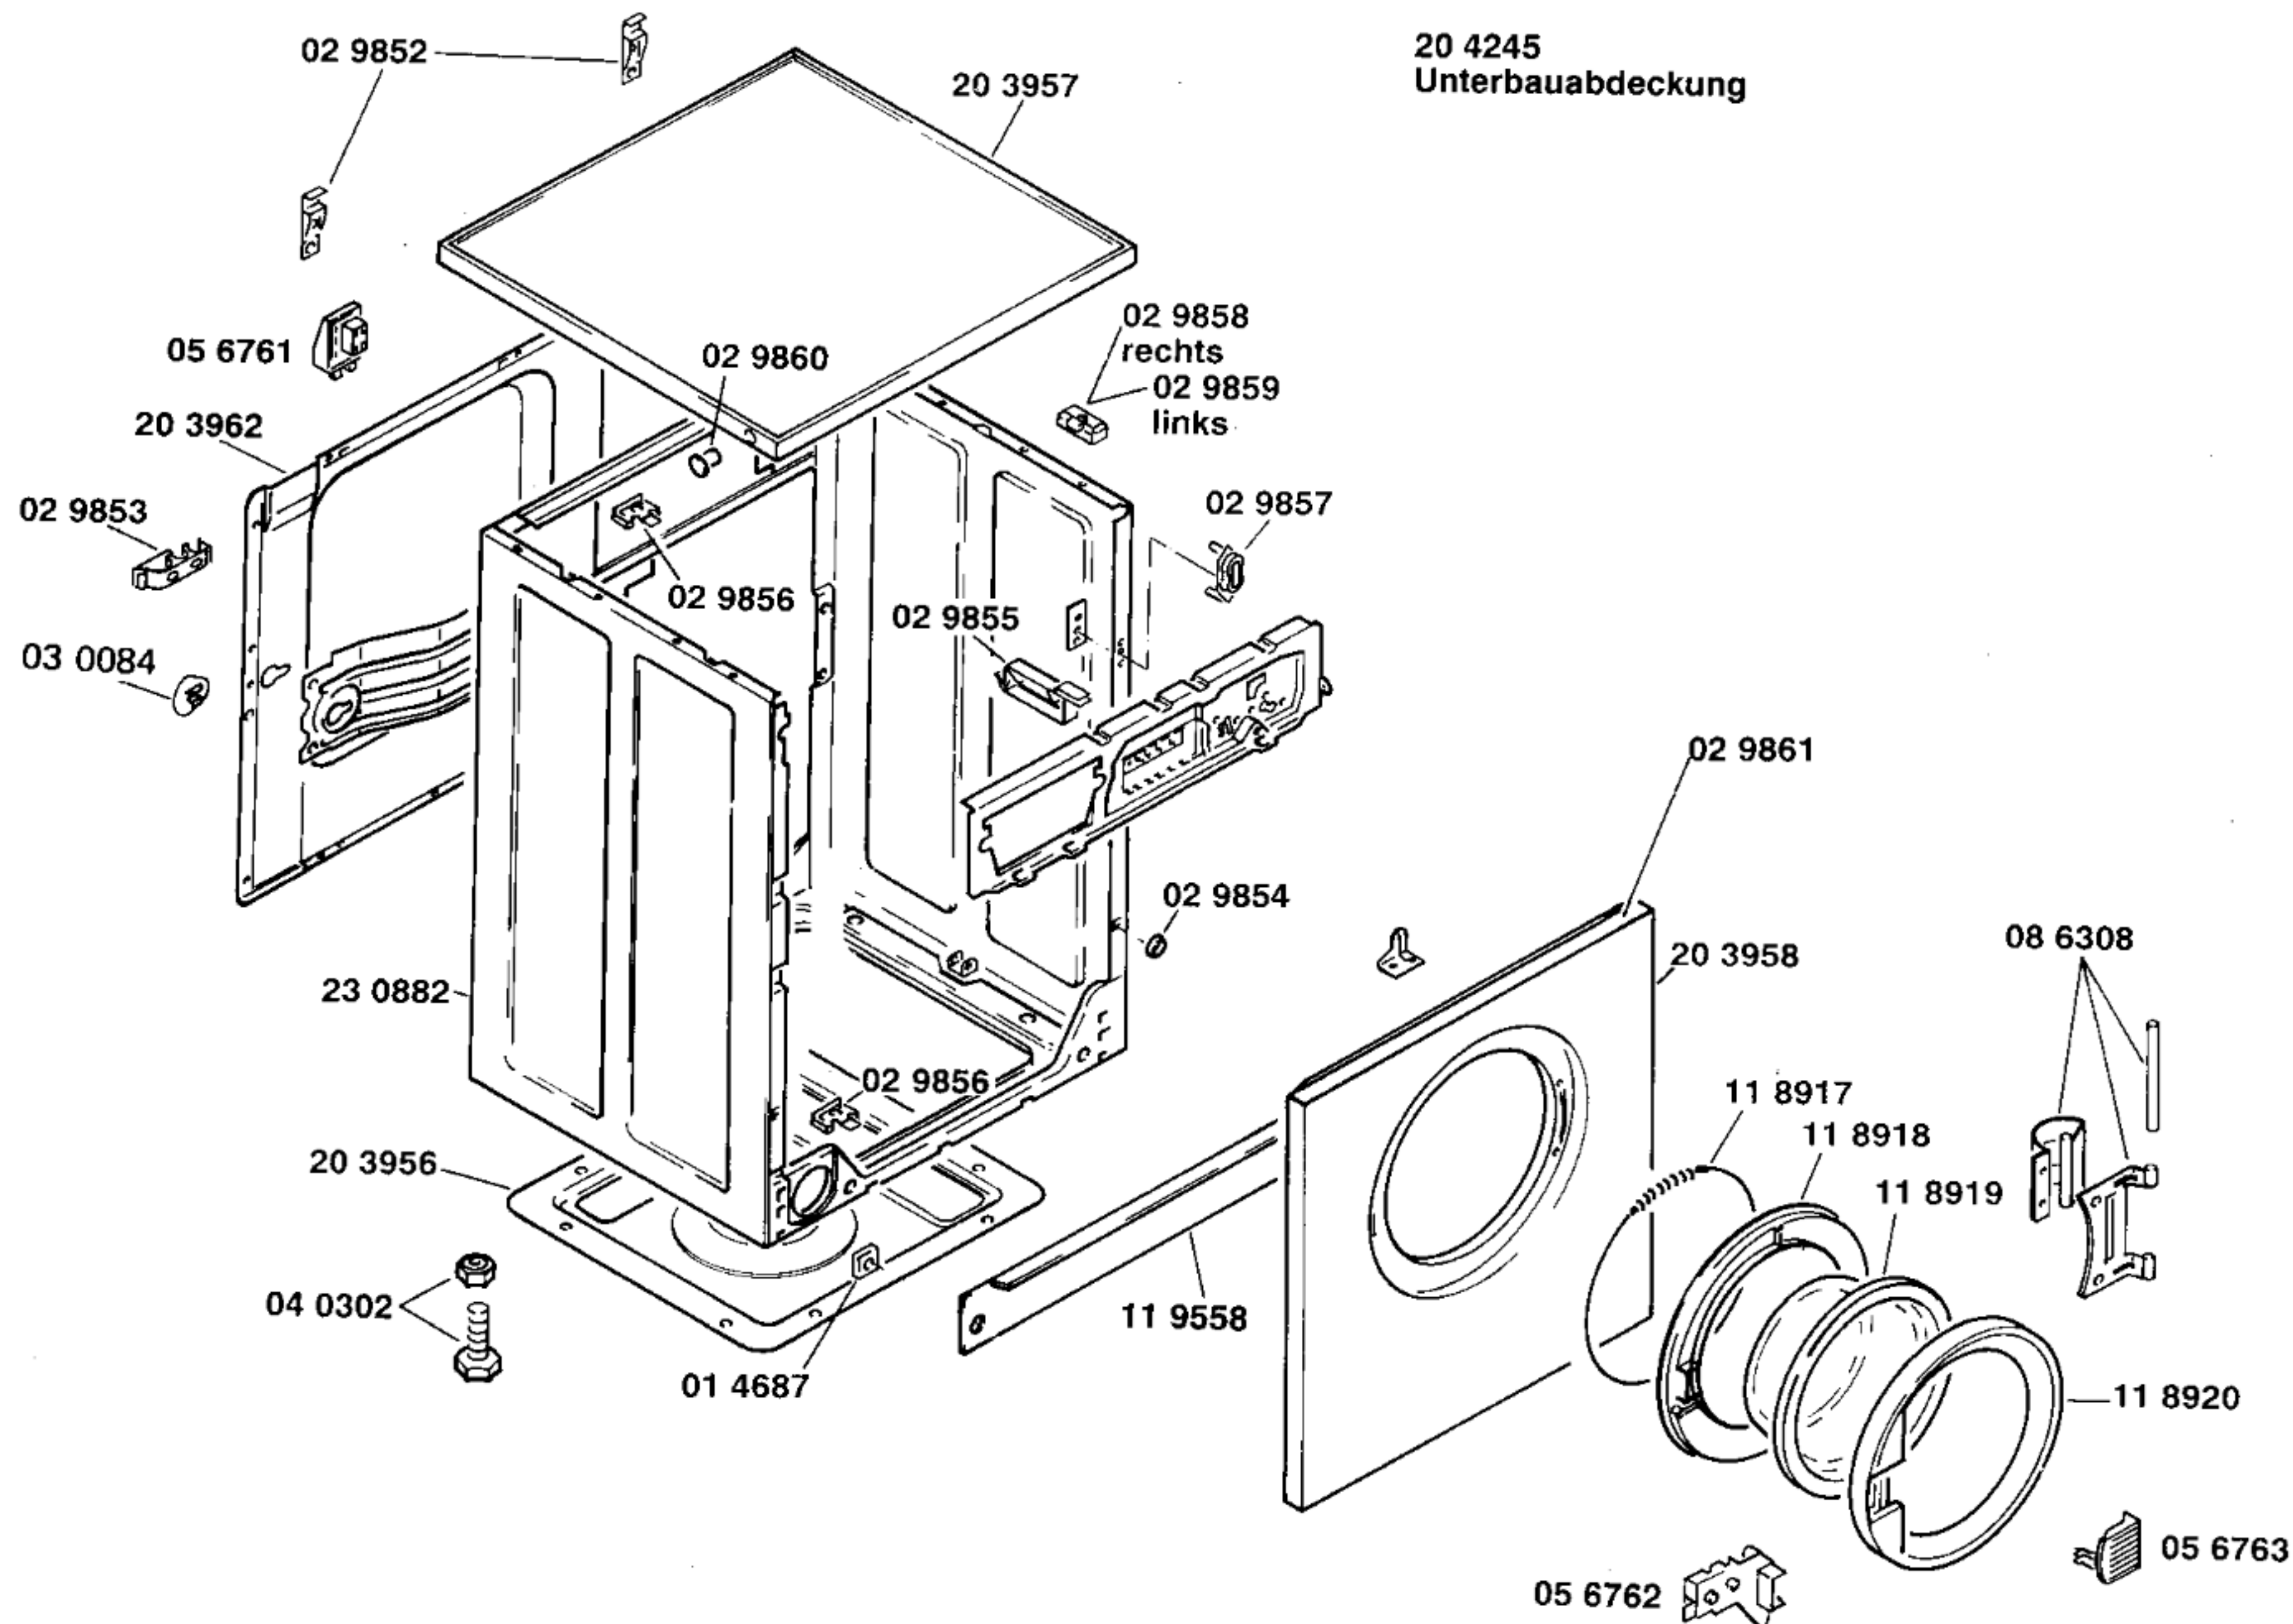

1) 27 0443
15 5272
Triac-Motorleistung

