


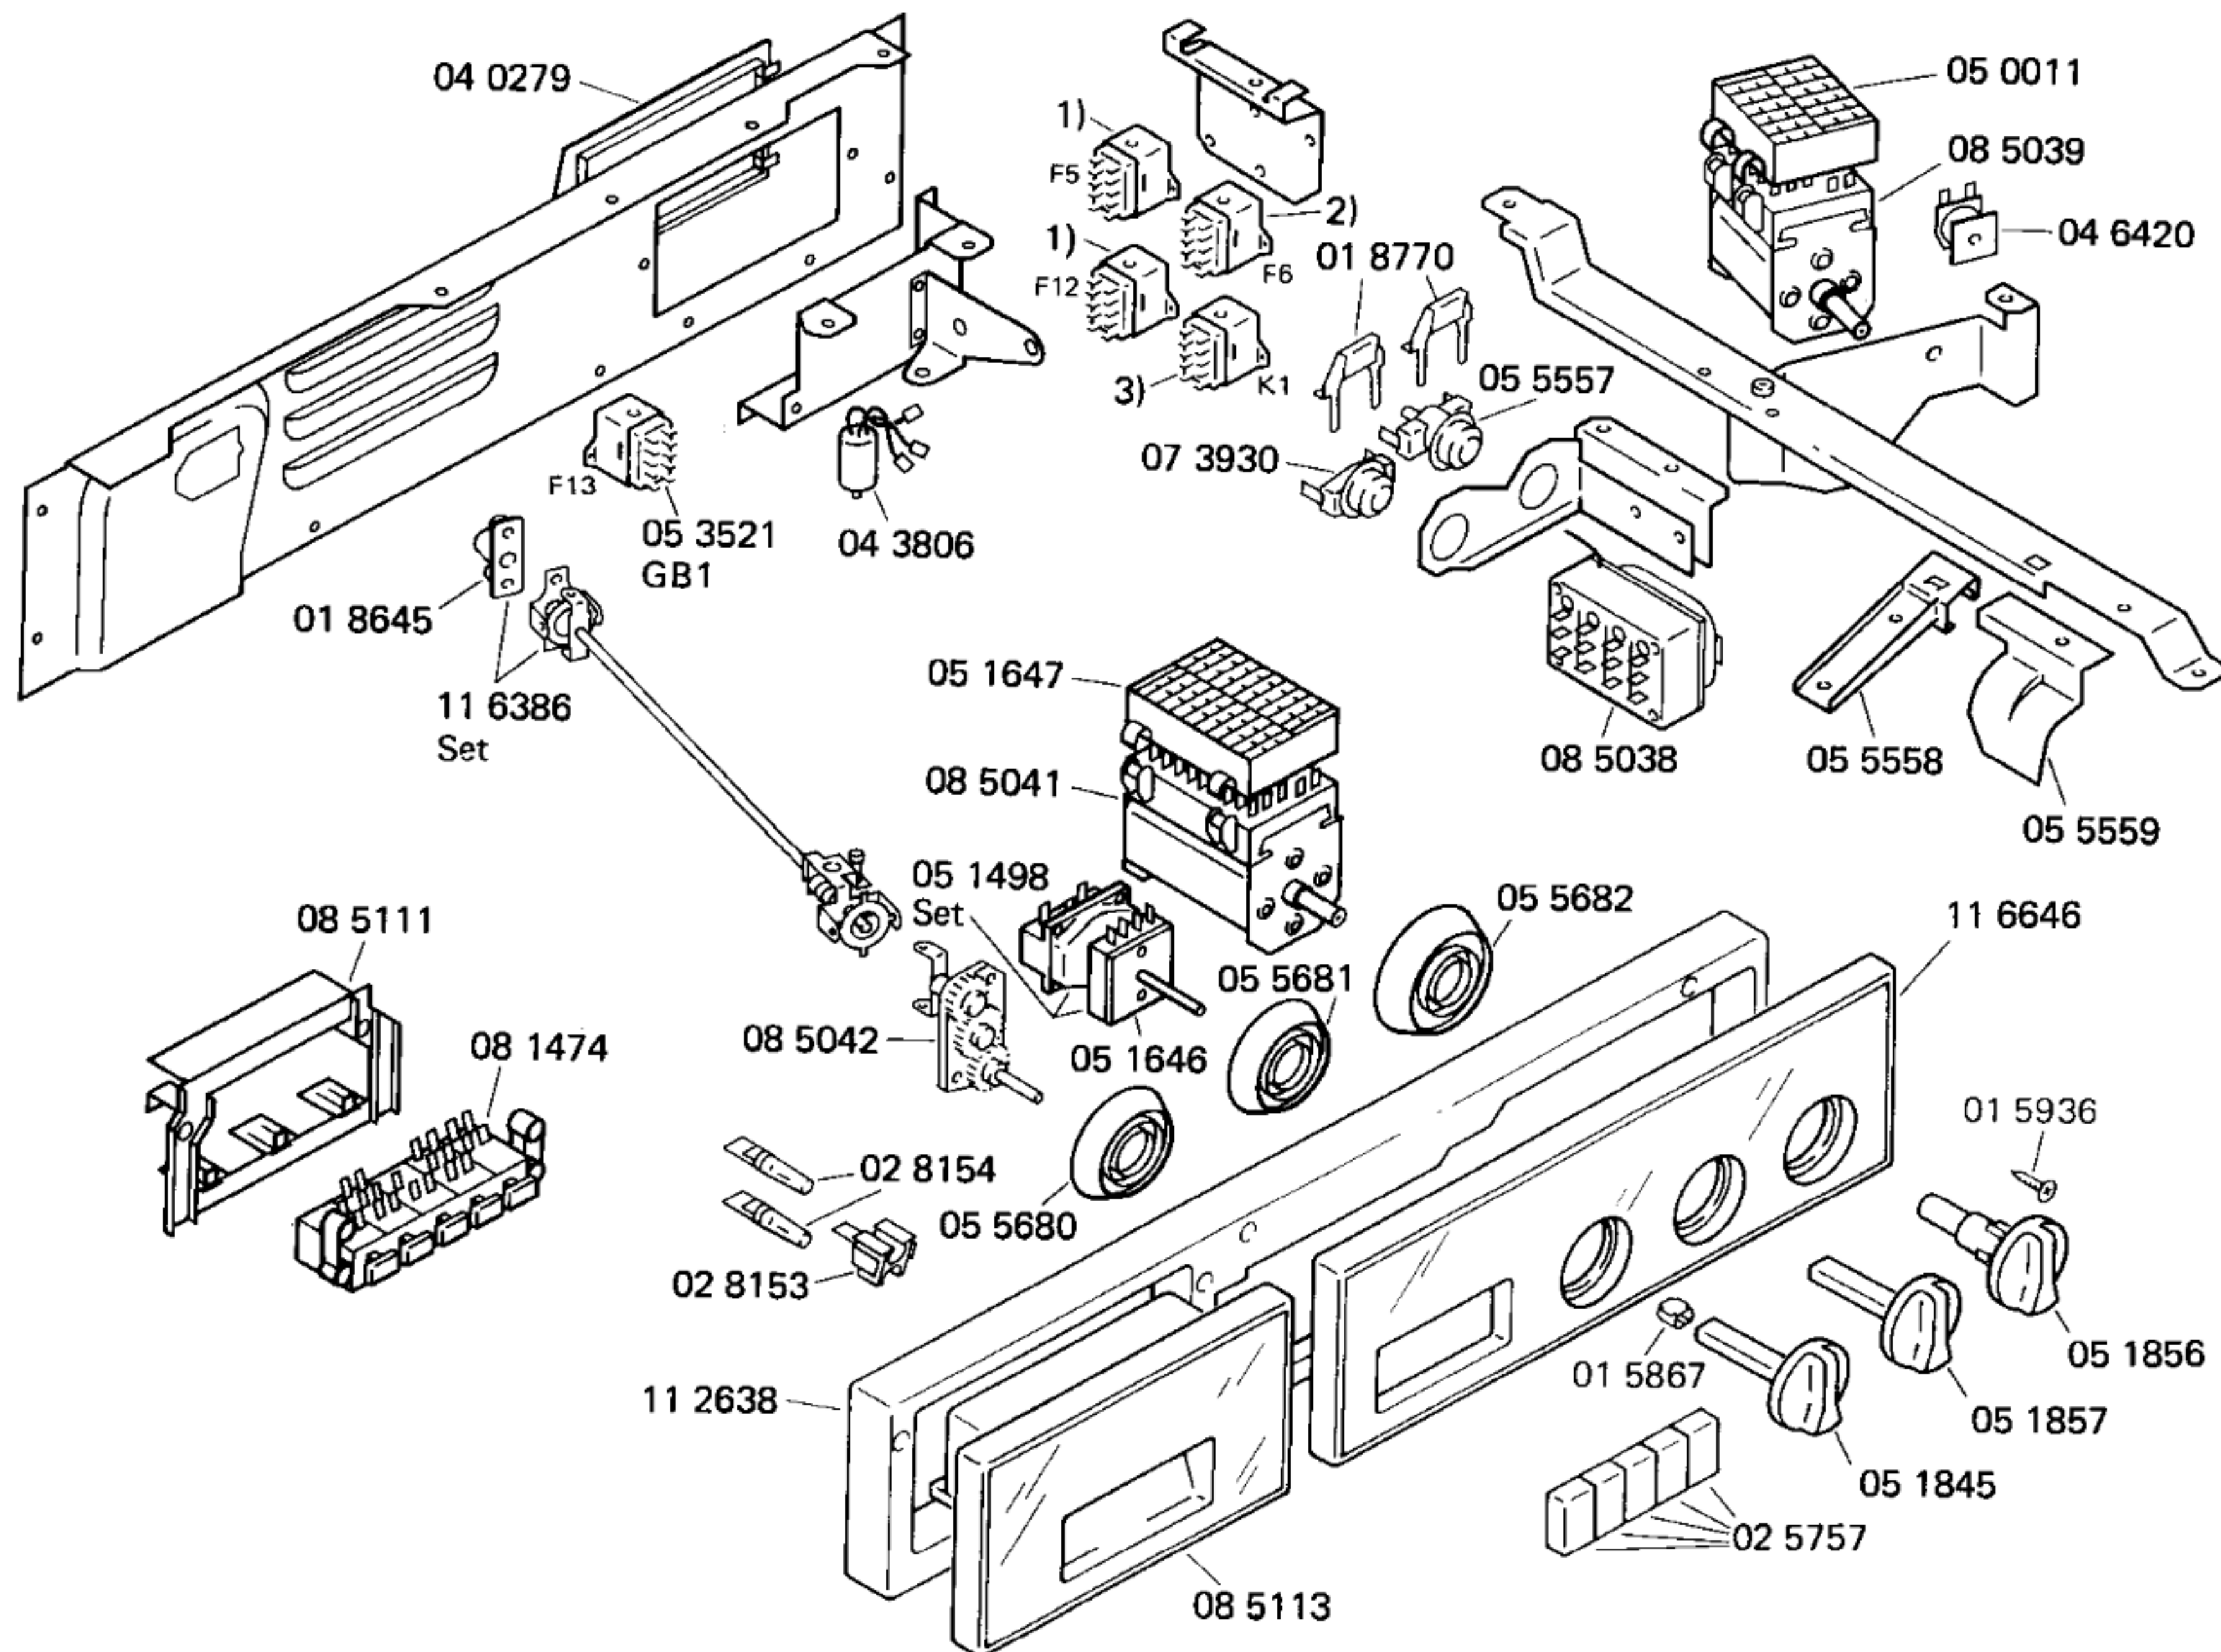

Aufstellanweisung
51 1712
(D,F,I,NL,GB,E)


Gebrauchsanweisung
51 2765
(D,F,I,NL,GB)


Programmtabelle
51 2695
(D,F,I,NL,GB)


1) 05 3520
D1,F1
05 3521
GB1

2) 07 2966
D1,F1
05 5621
GB1

3) 05 3521
GB1

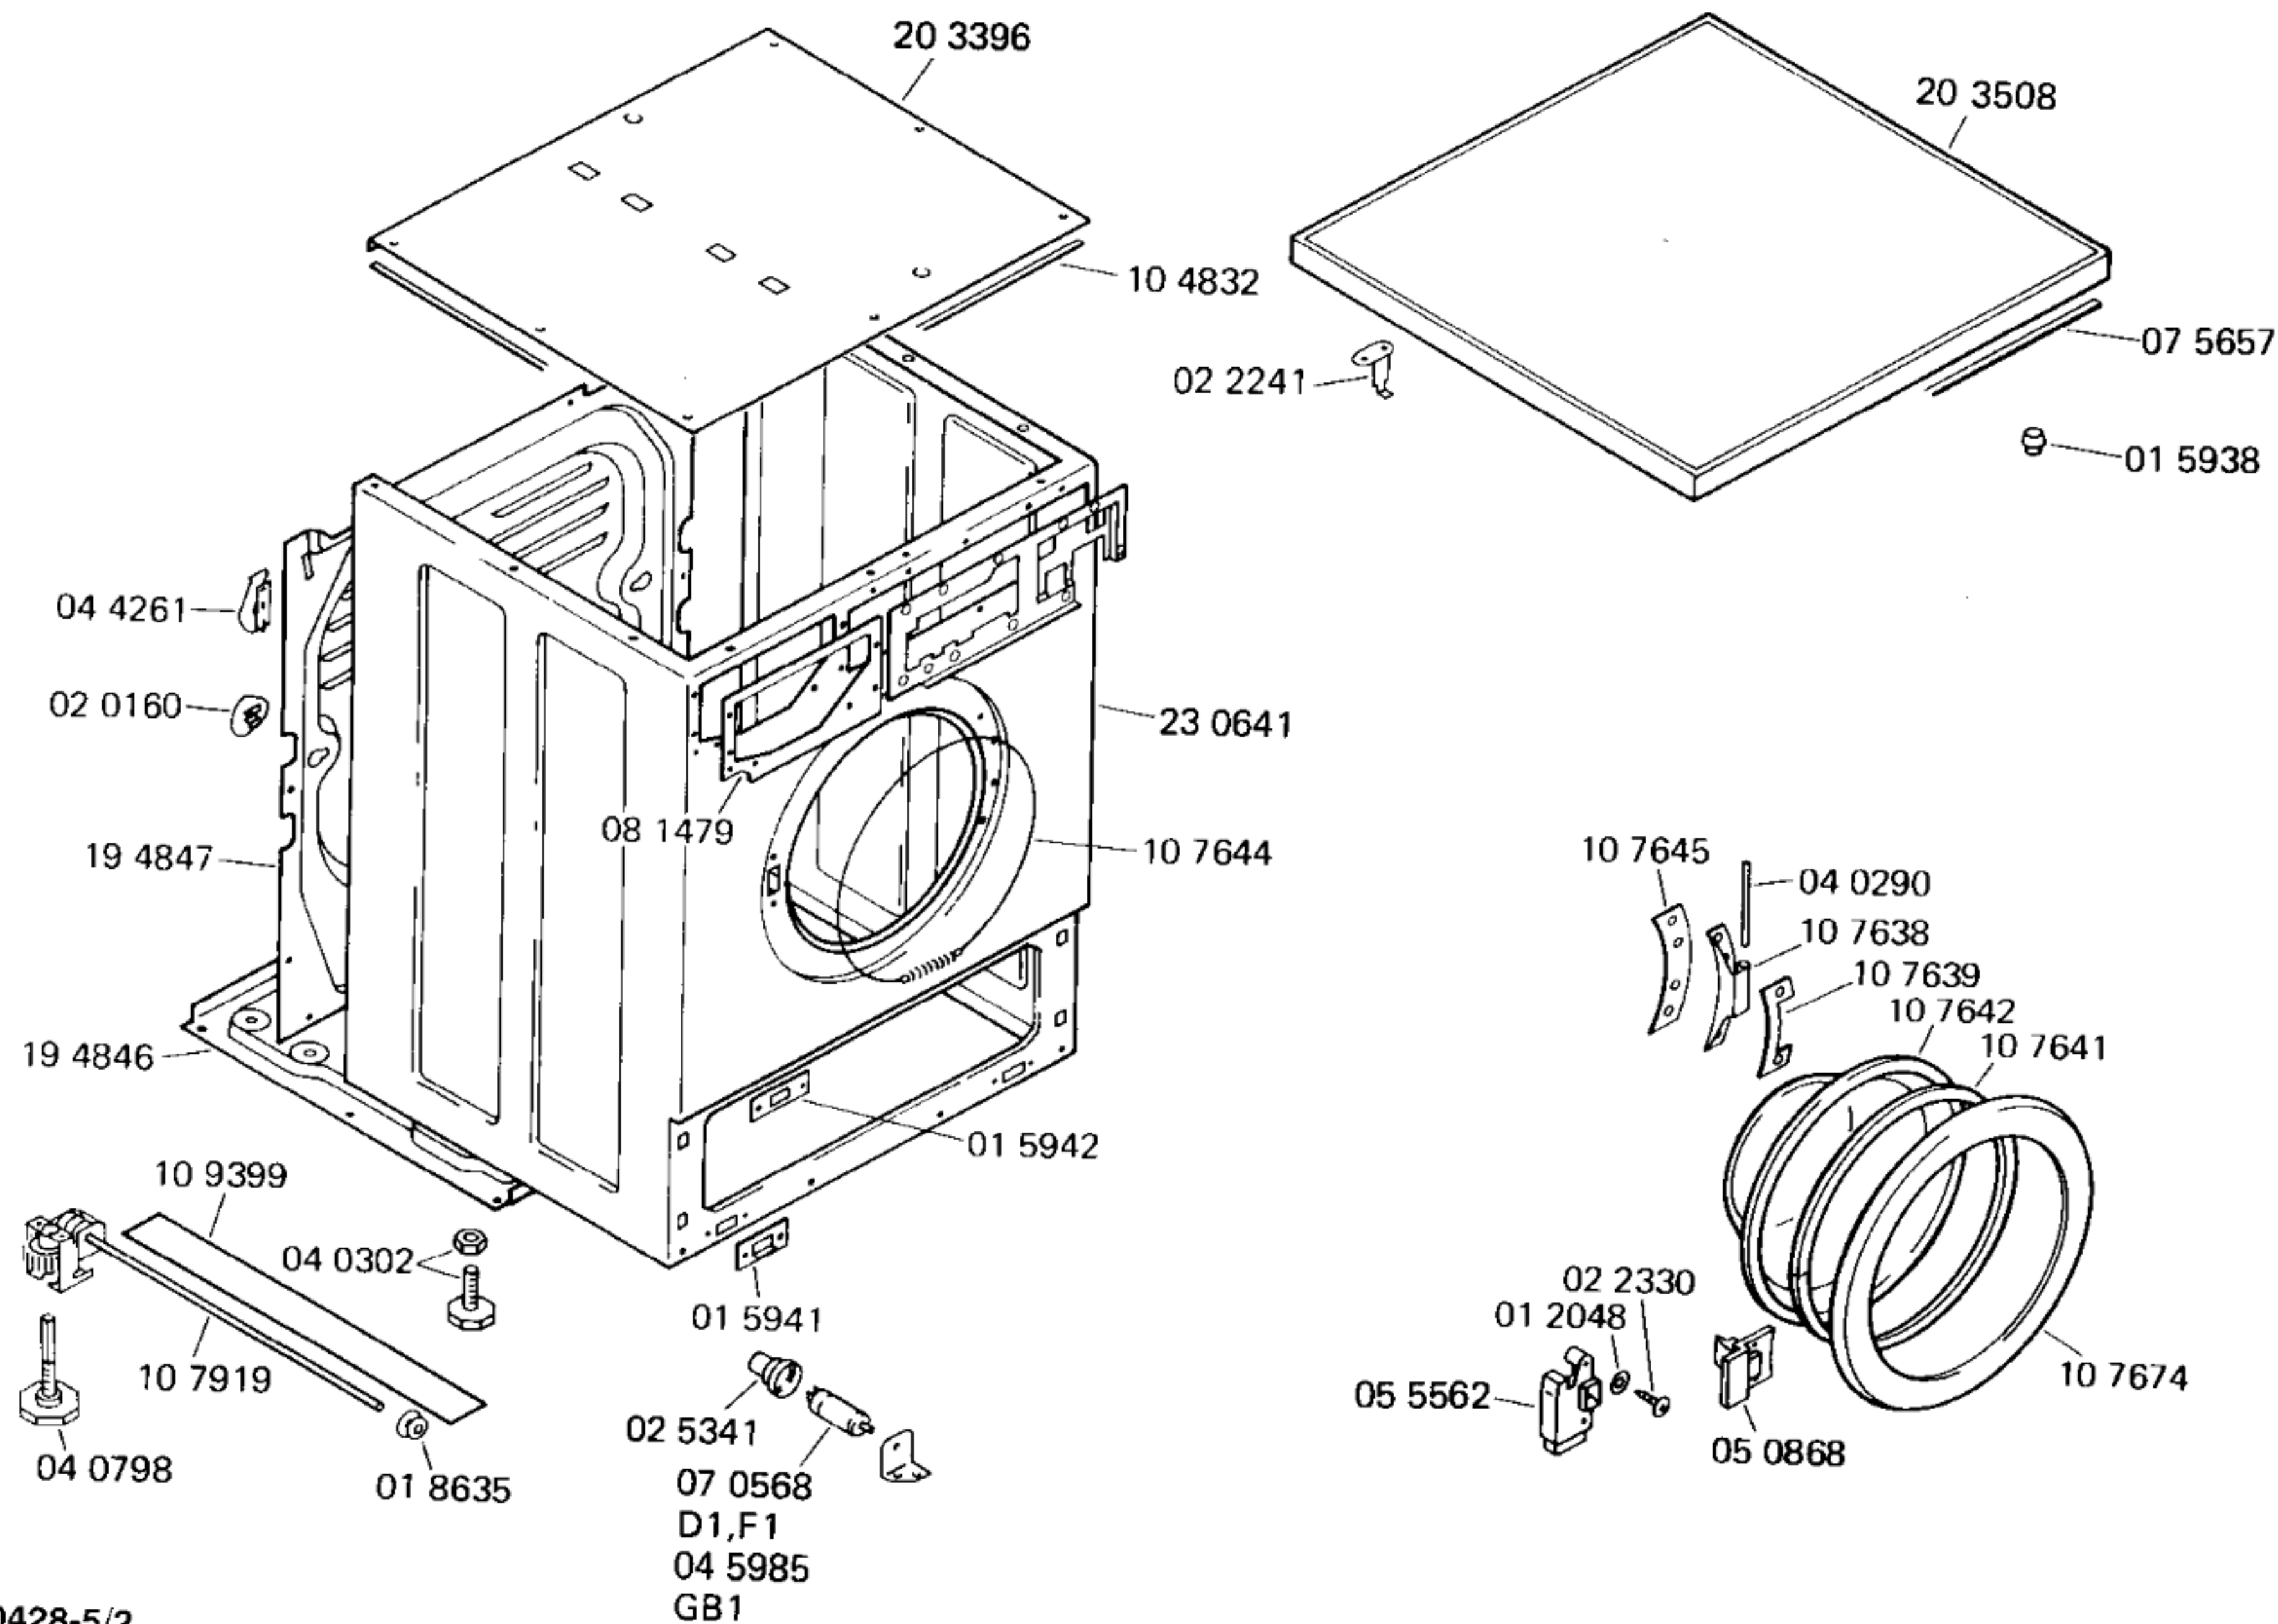

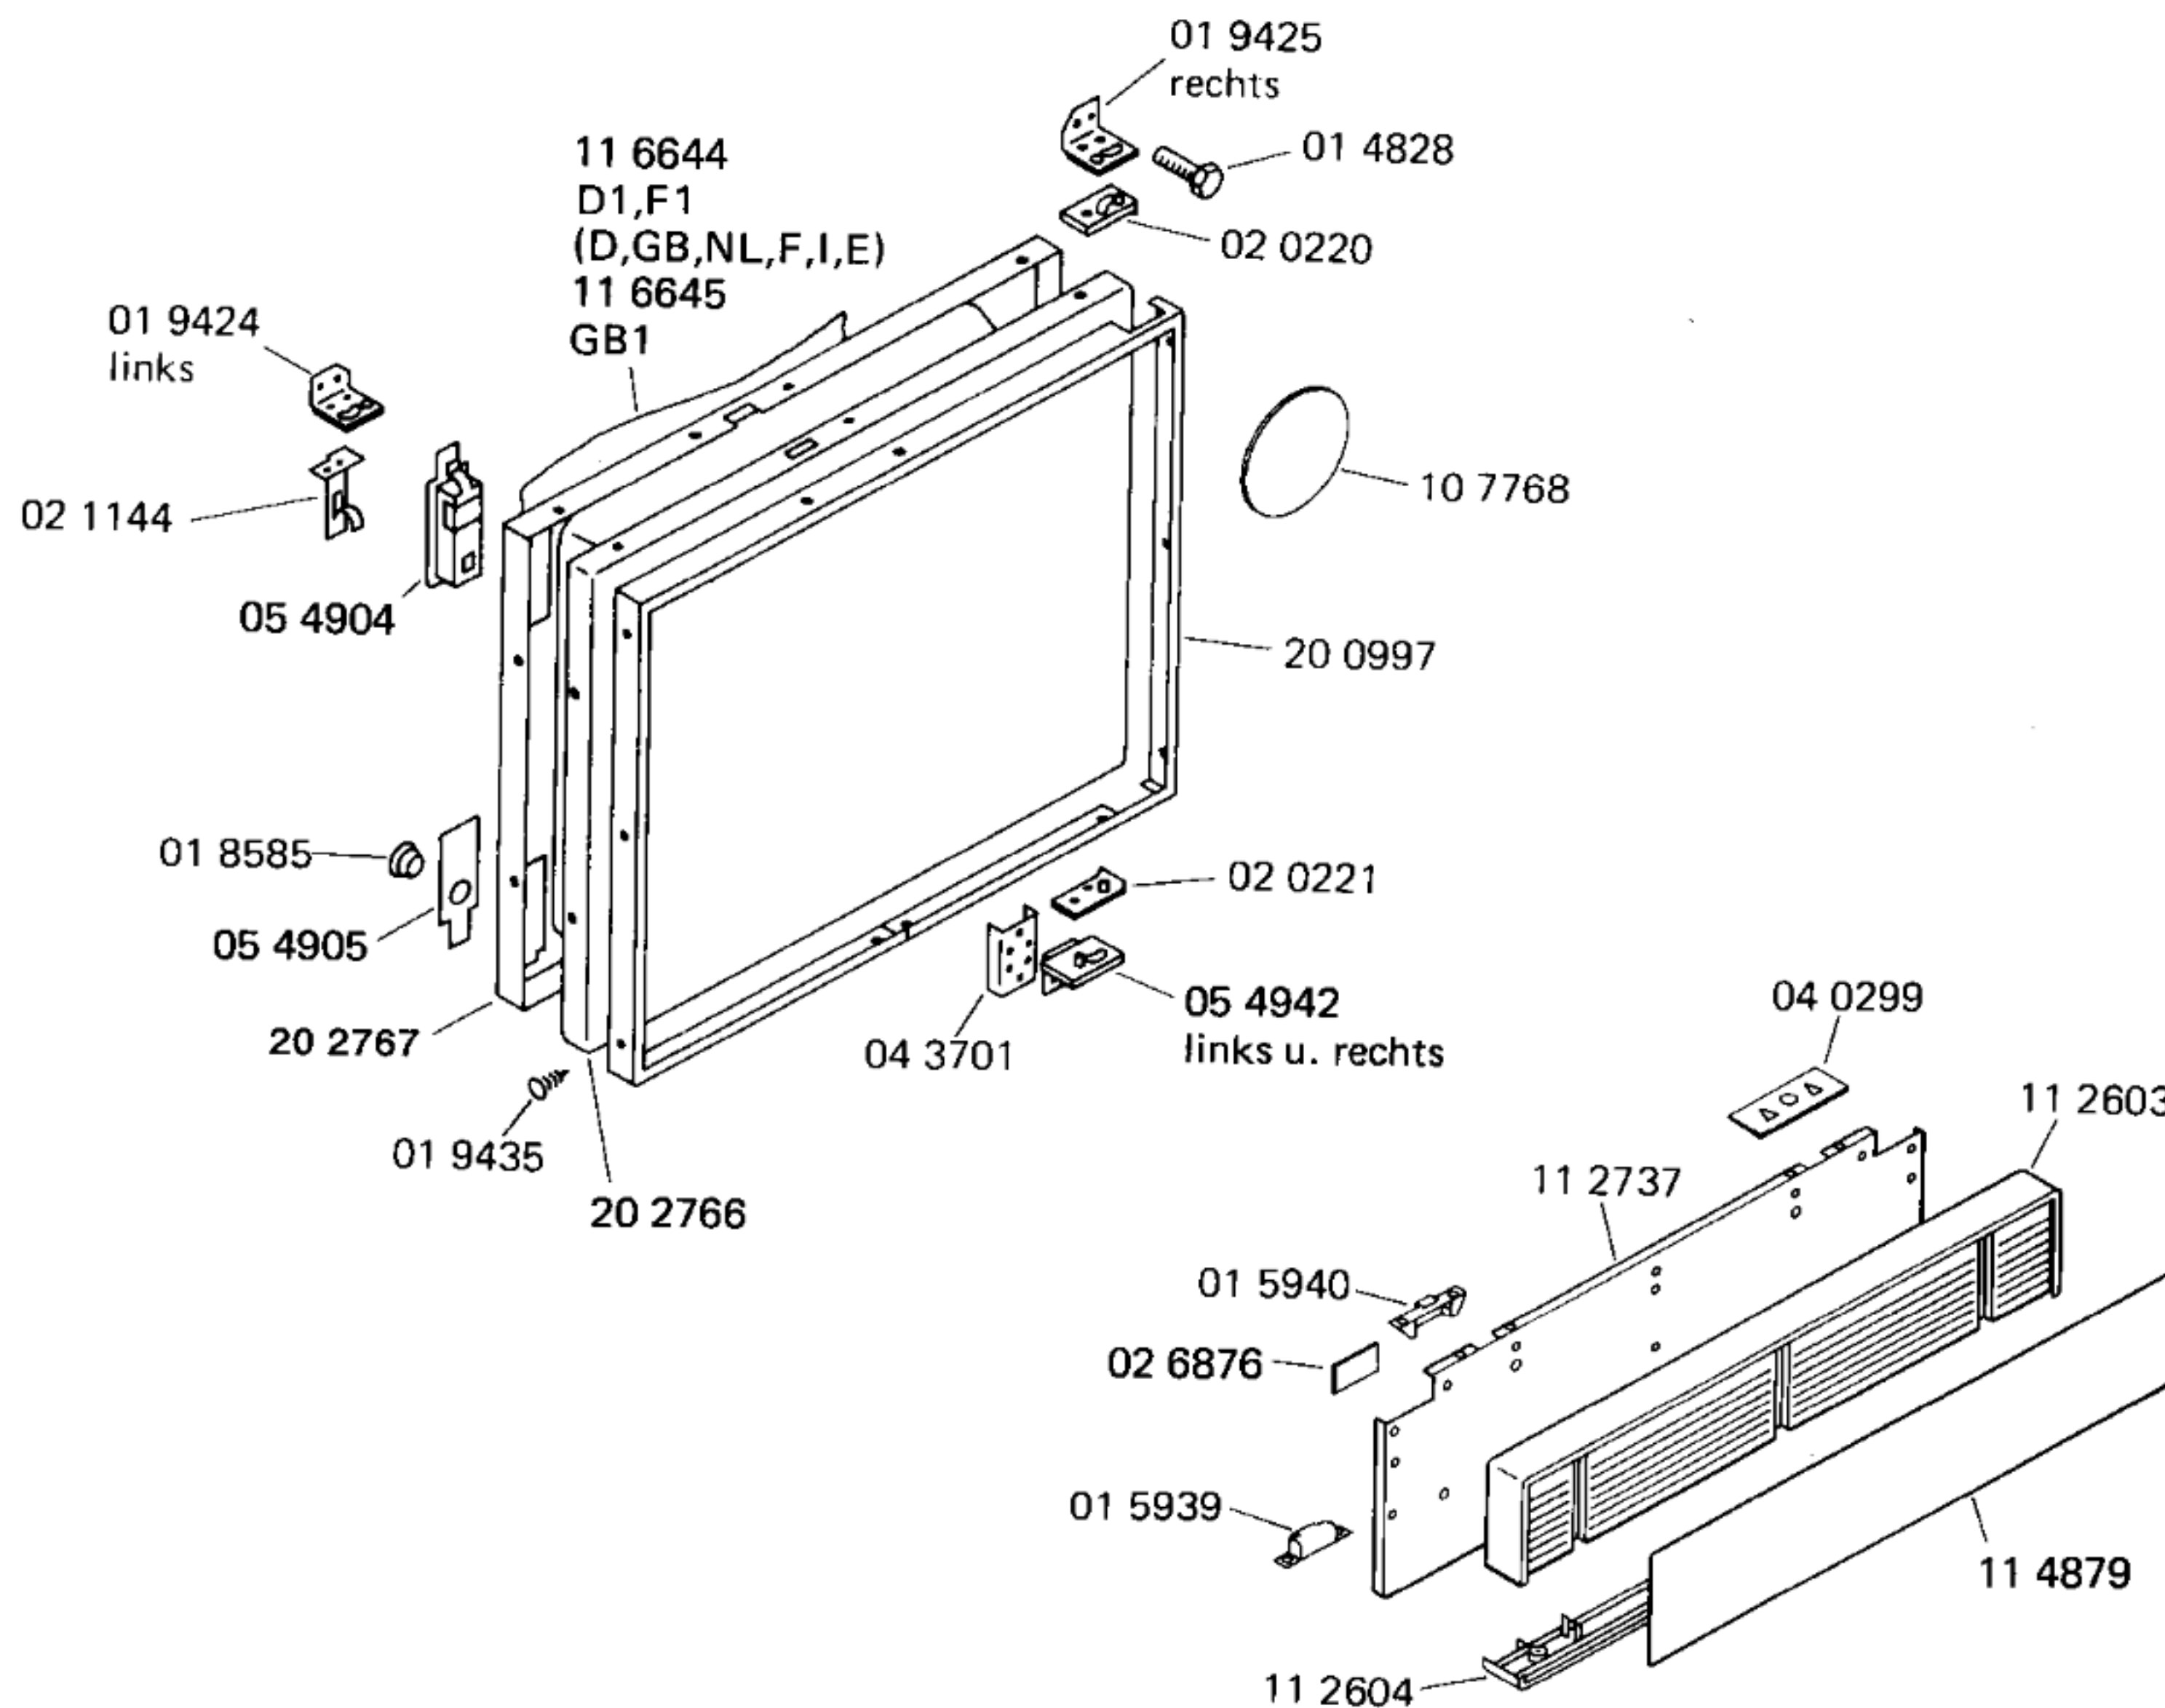

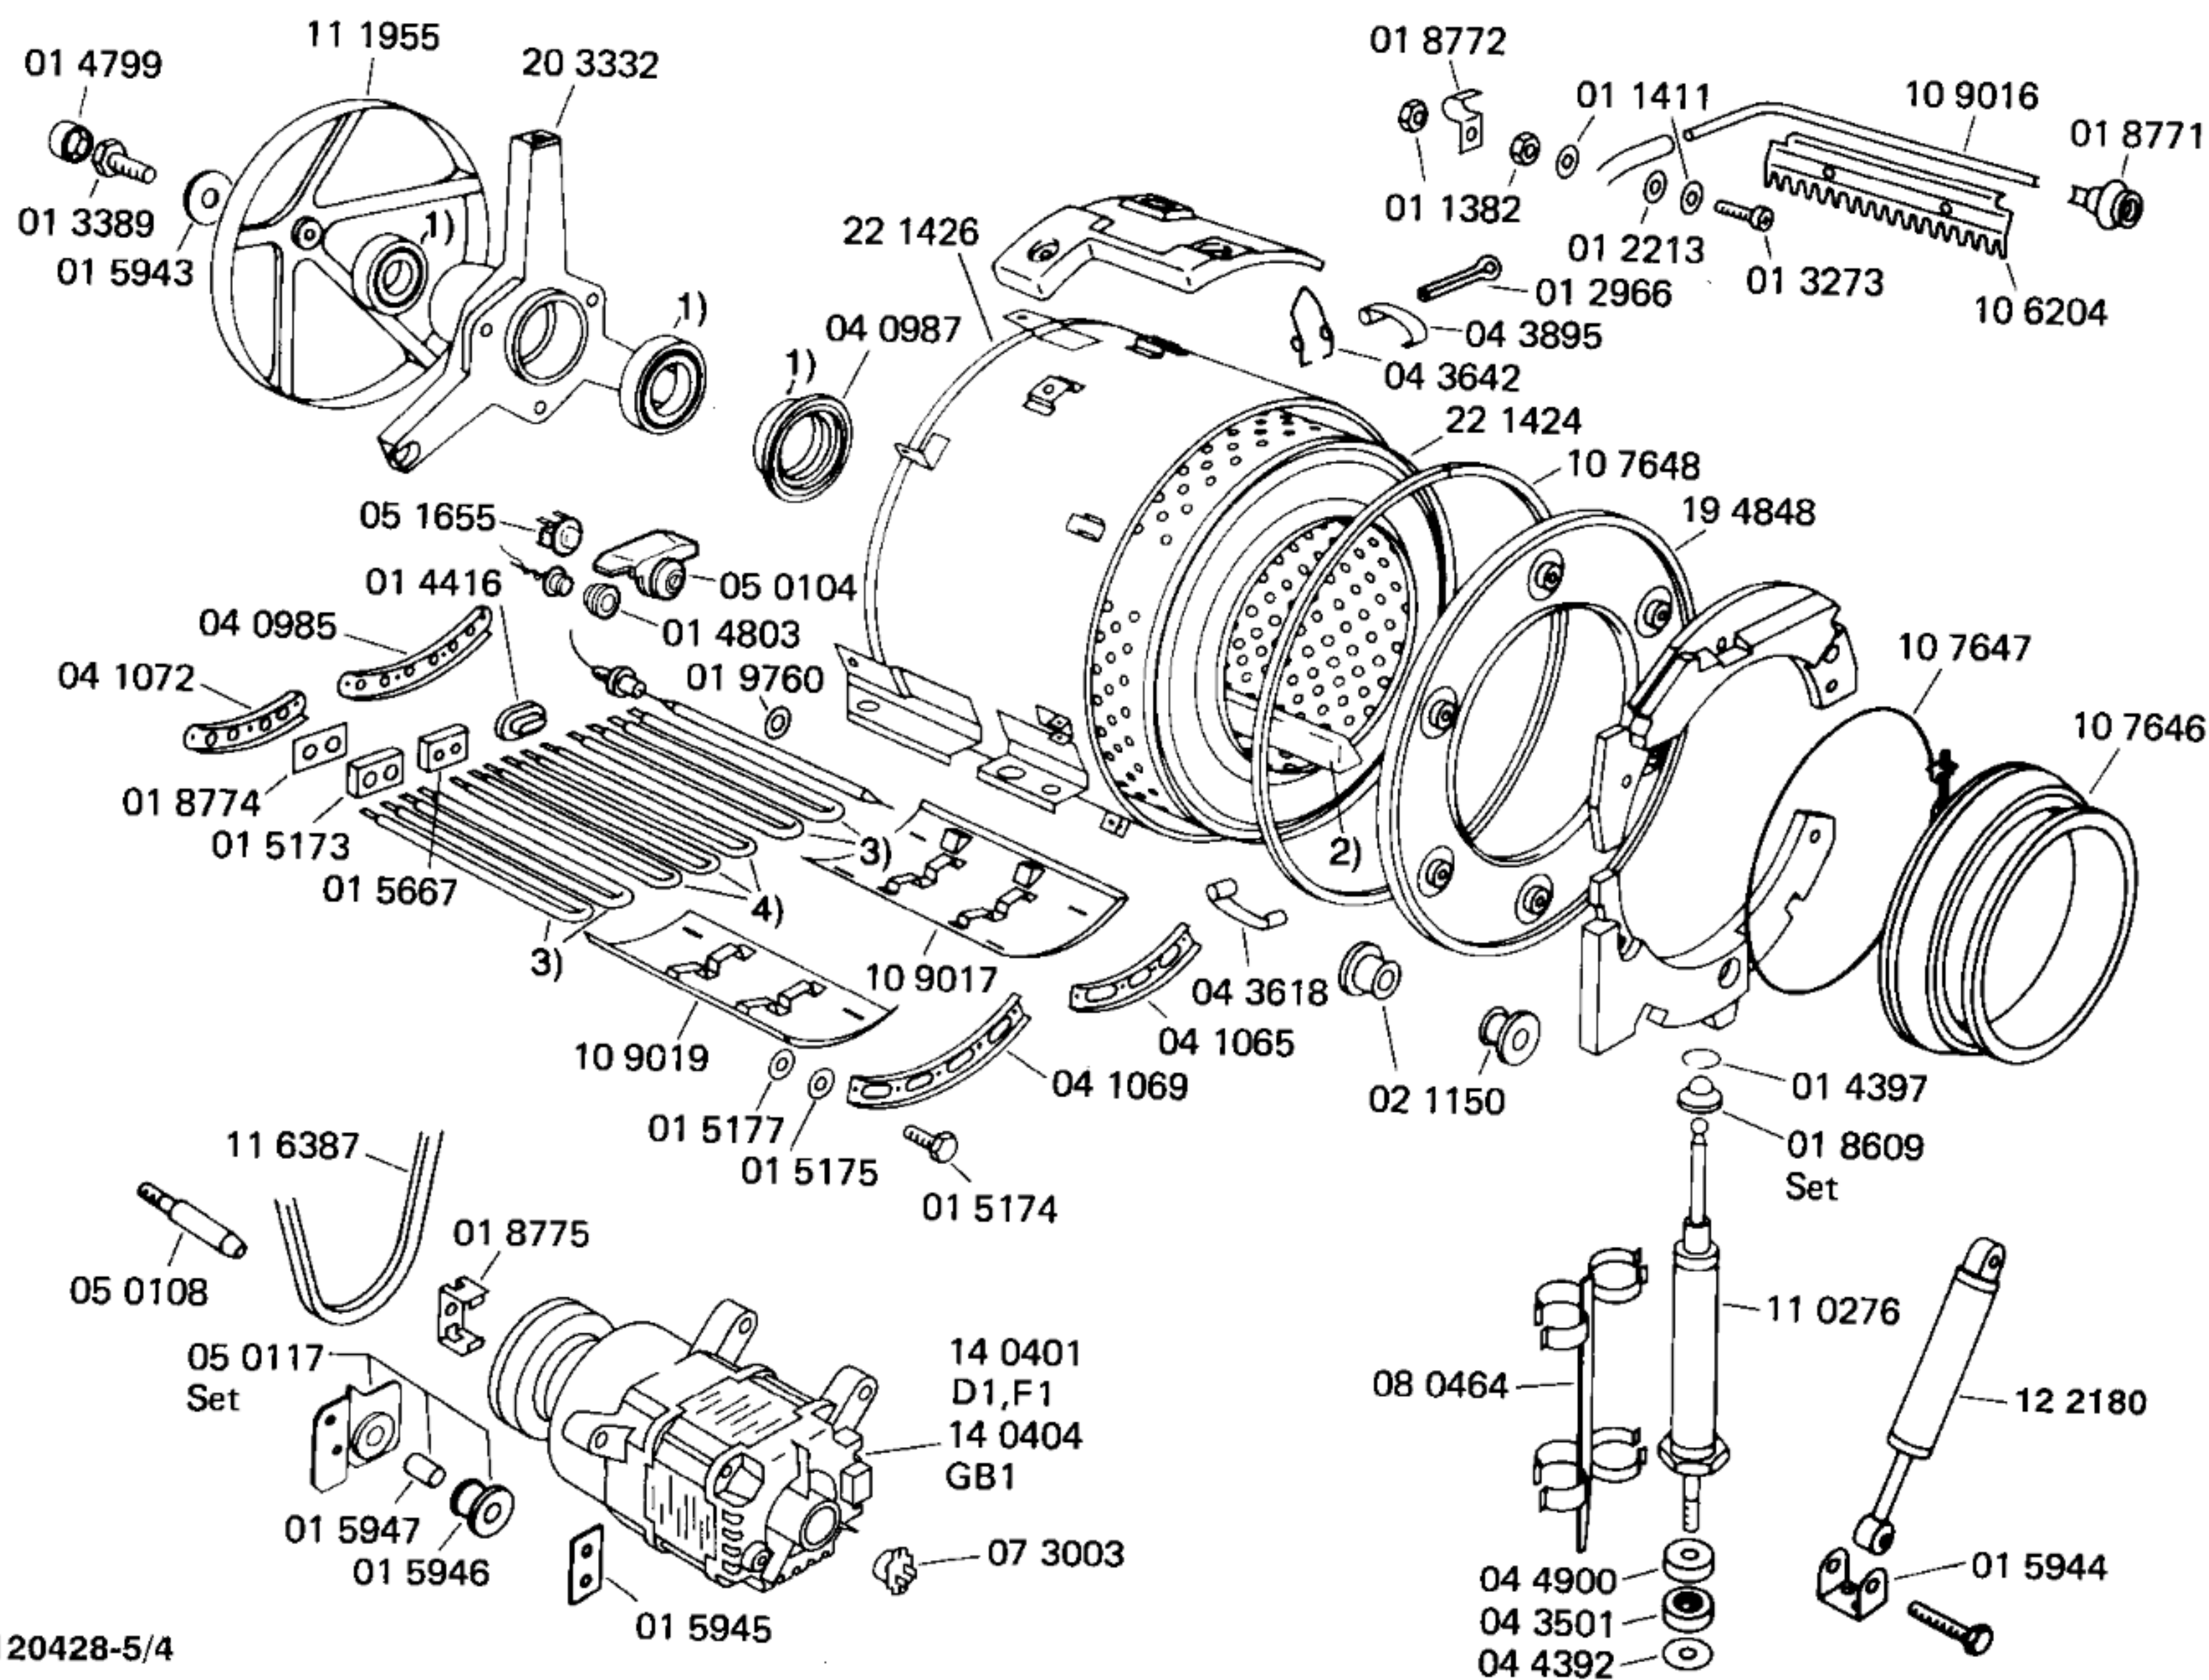

- 1) 10 8898
Set
- 2) 10 8892
- 3) 07 3925
110 V
07 5317
120 V
- 4) 08 1601
220 V
08 2898
240 V

