


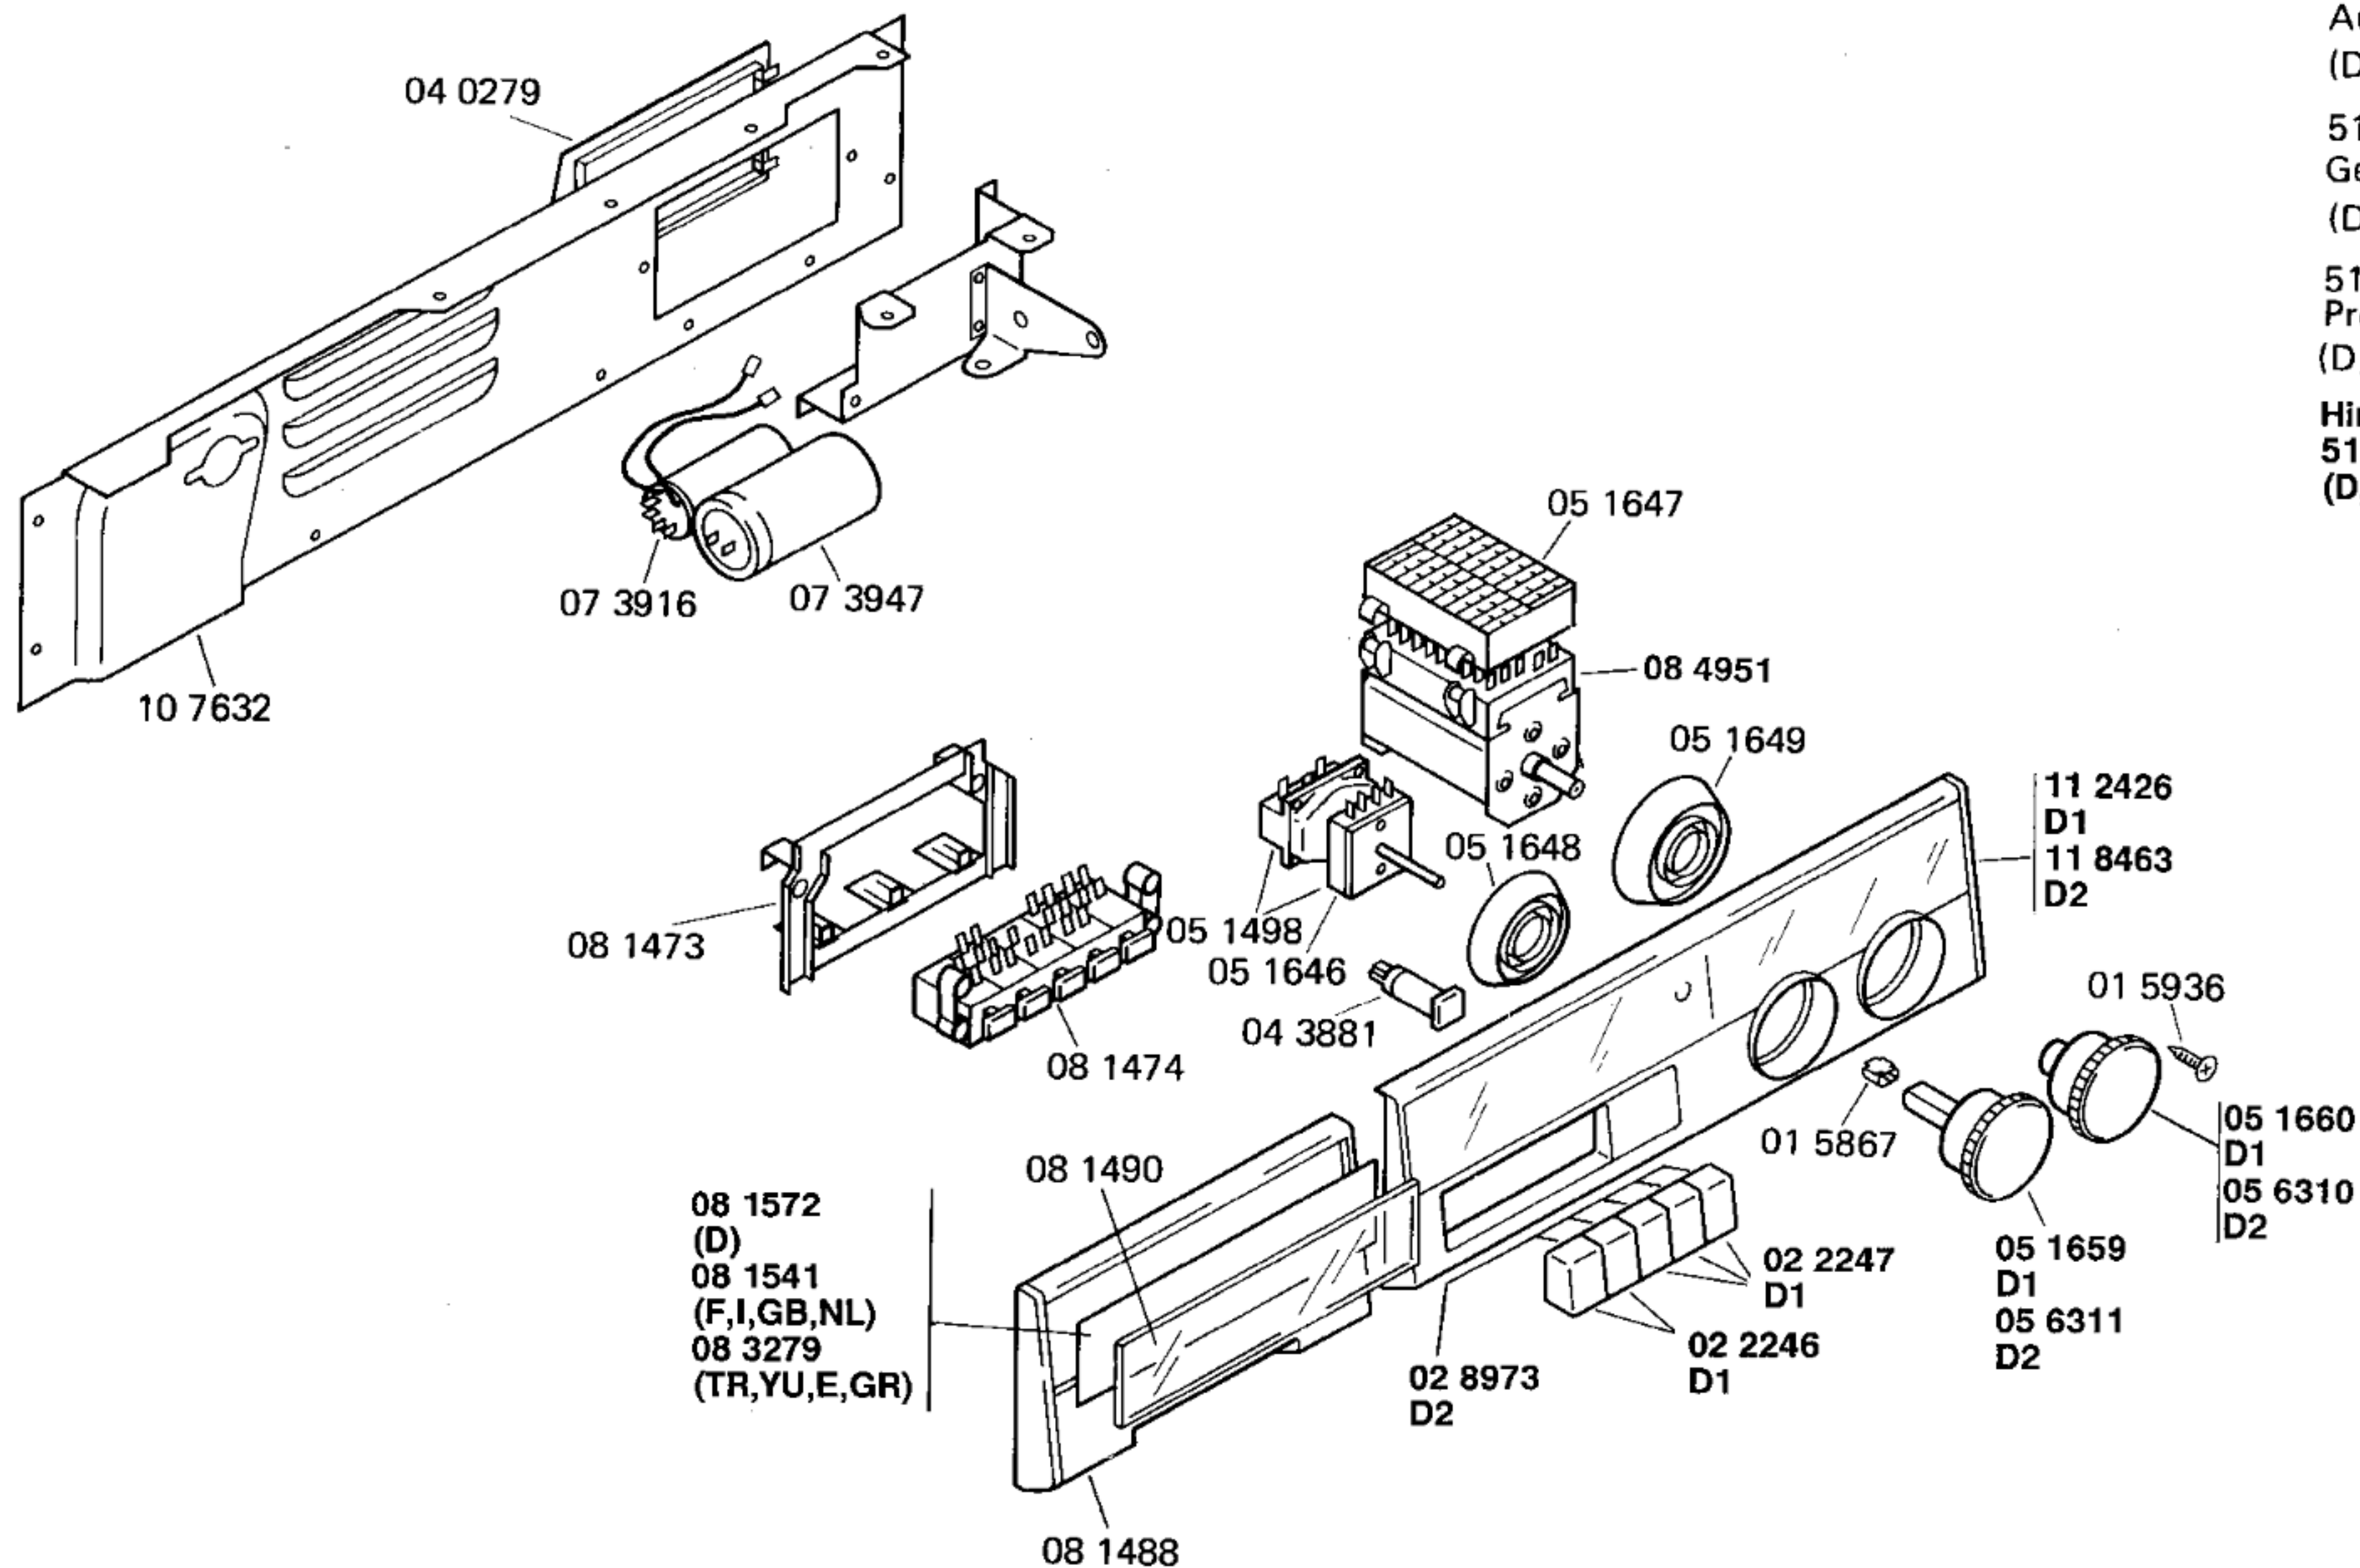



51 1221
Aufst.-Anweisung
(D,F,I,NL,GB,E)

51 1238
Gebr.-Anweisung
(D,F,I,NL,GB,E)

51 1223
Programmtabelle
(D,F,I,NL,GB,E)

Hinweis Aqua Stop
51 3028
(D,F,I,NL,GB,S,DK,E)

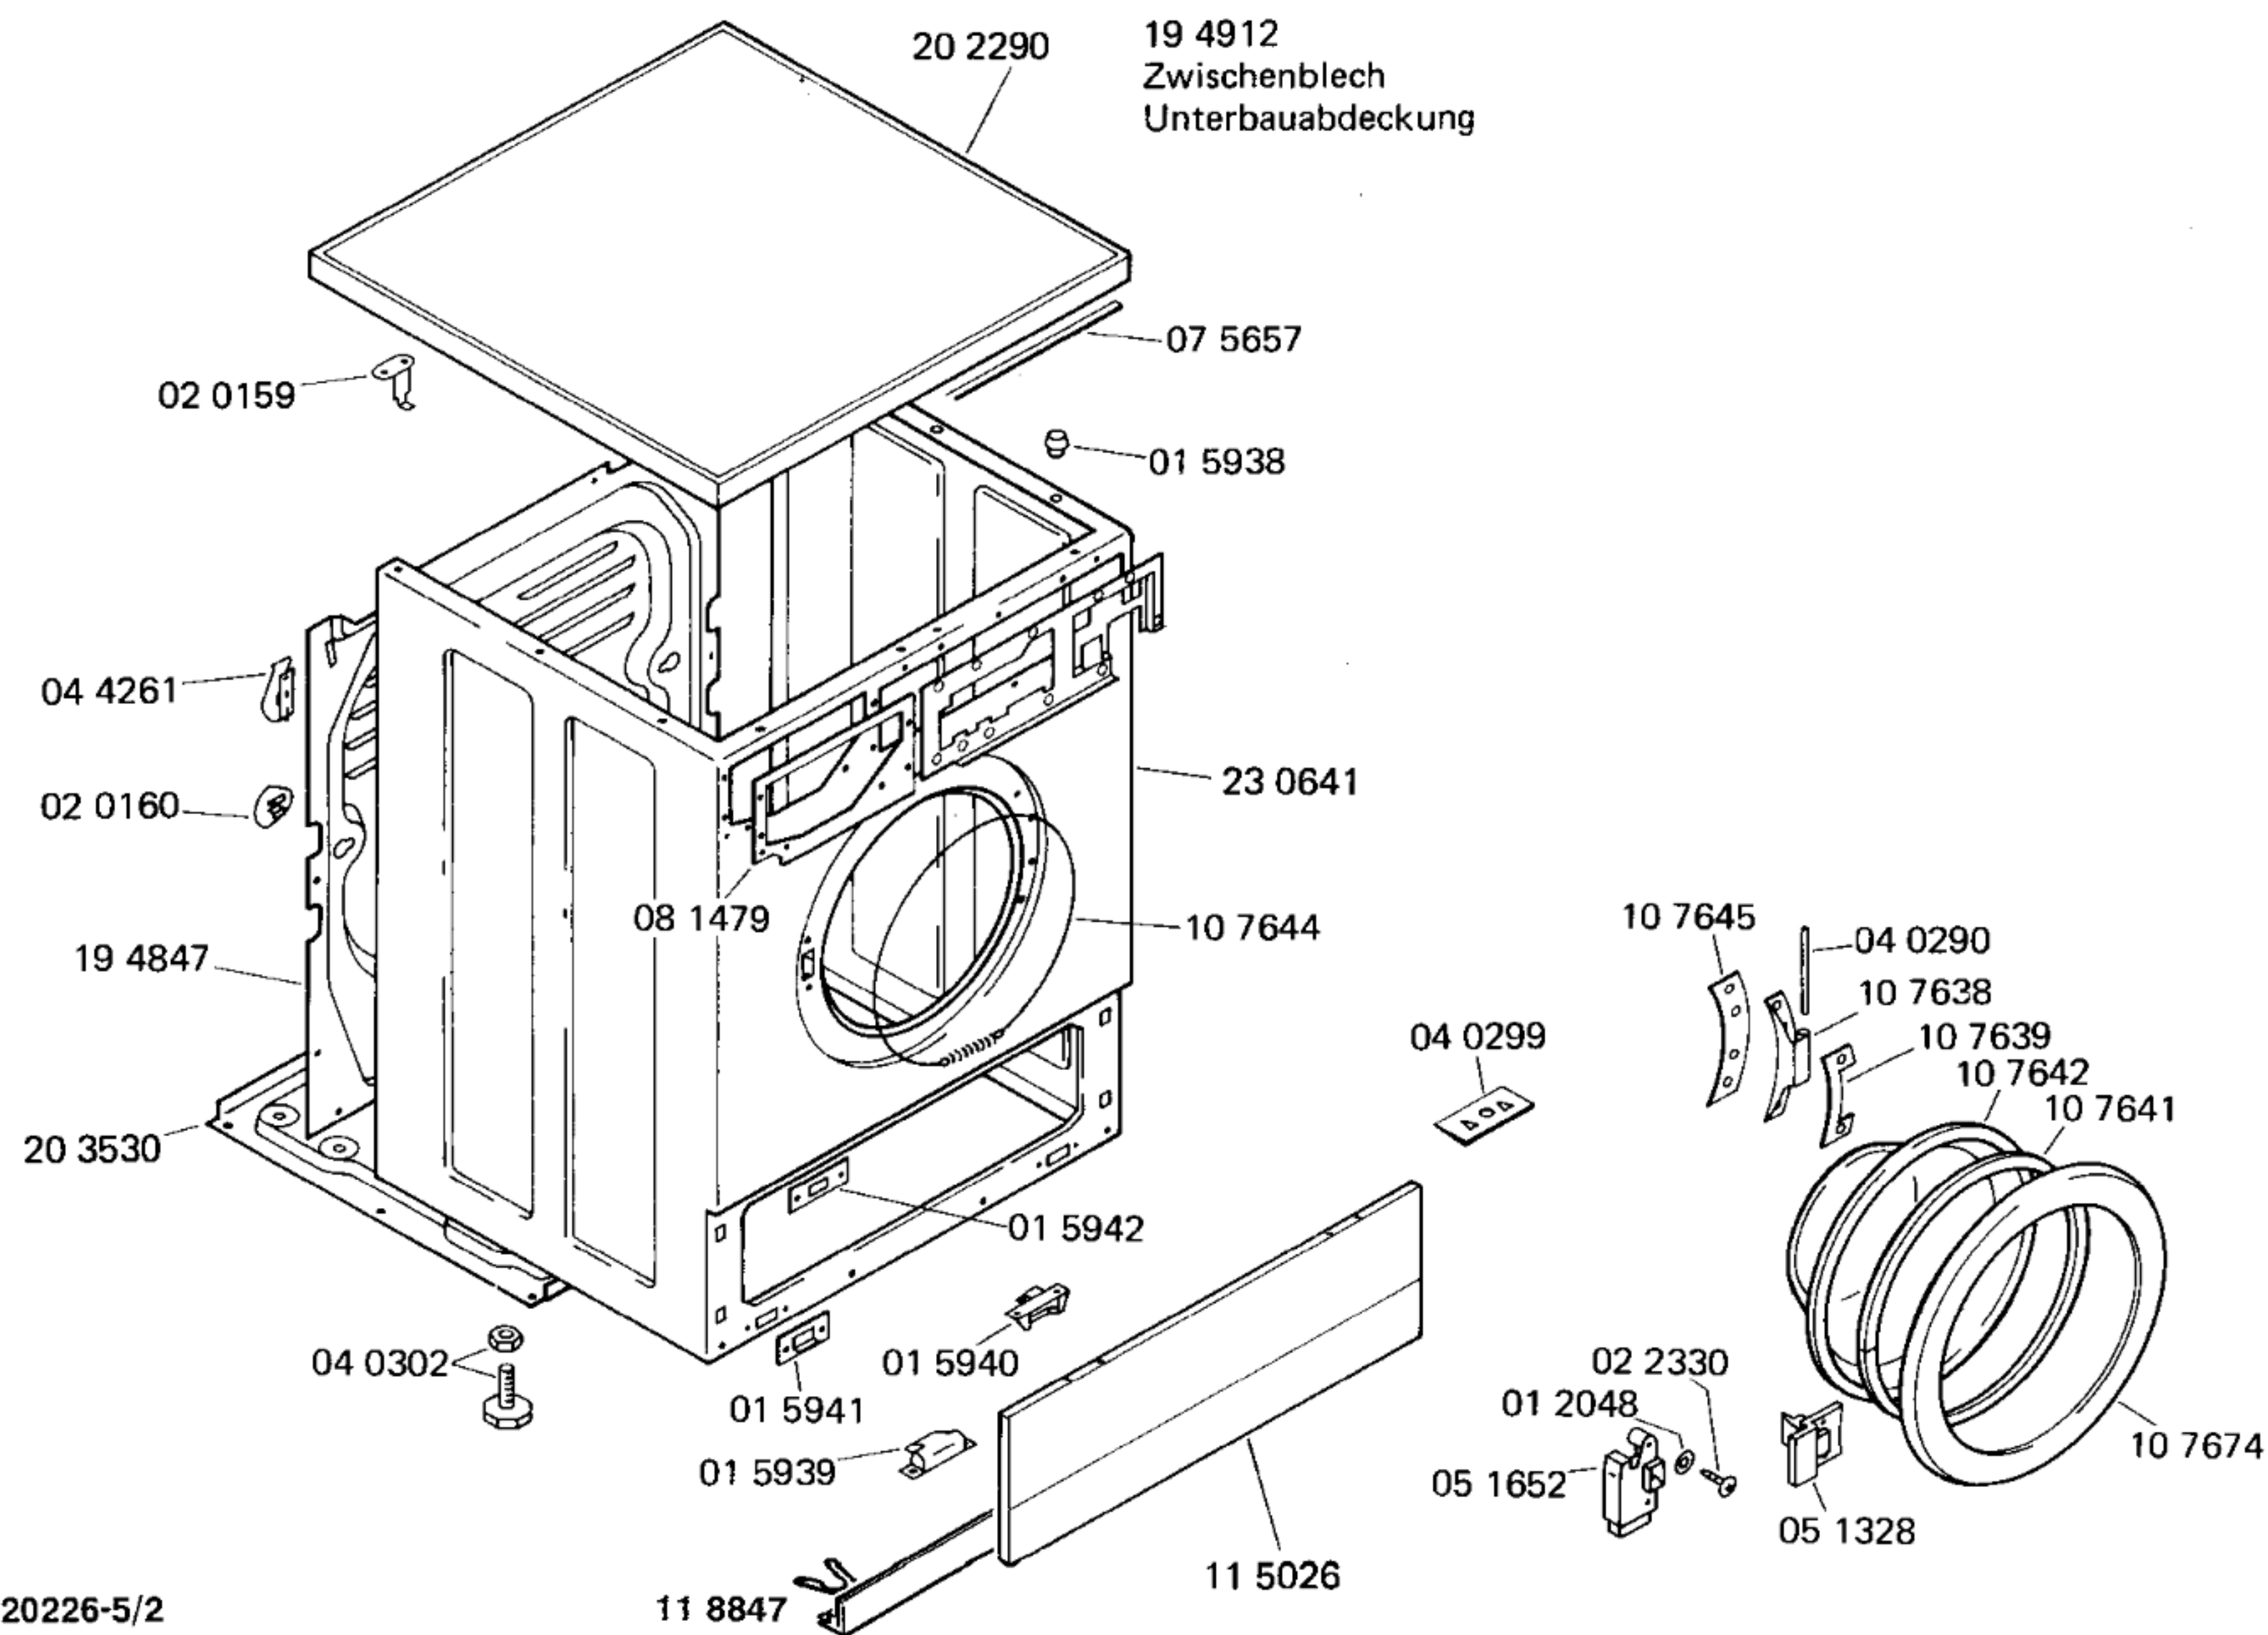

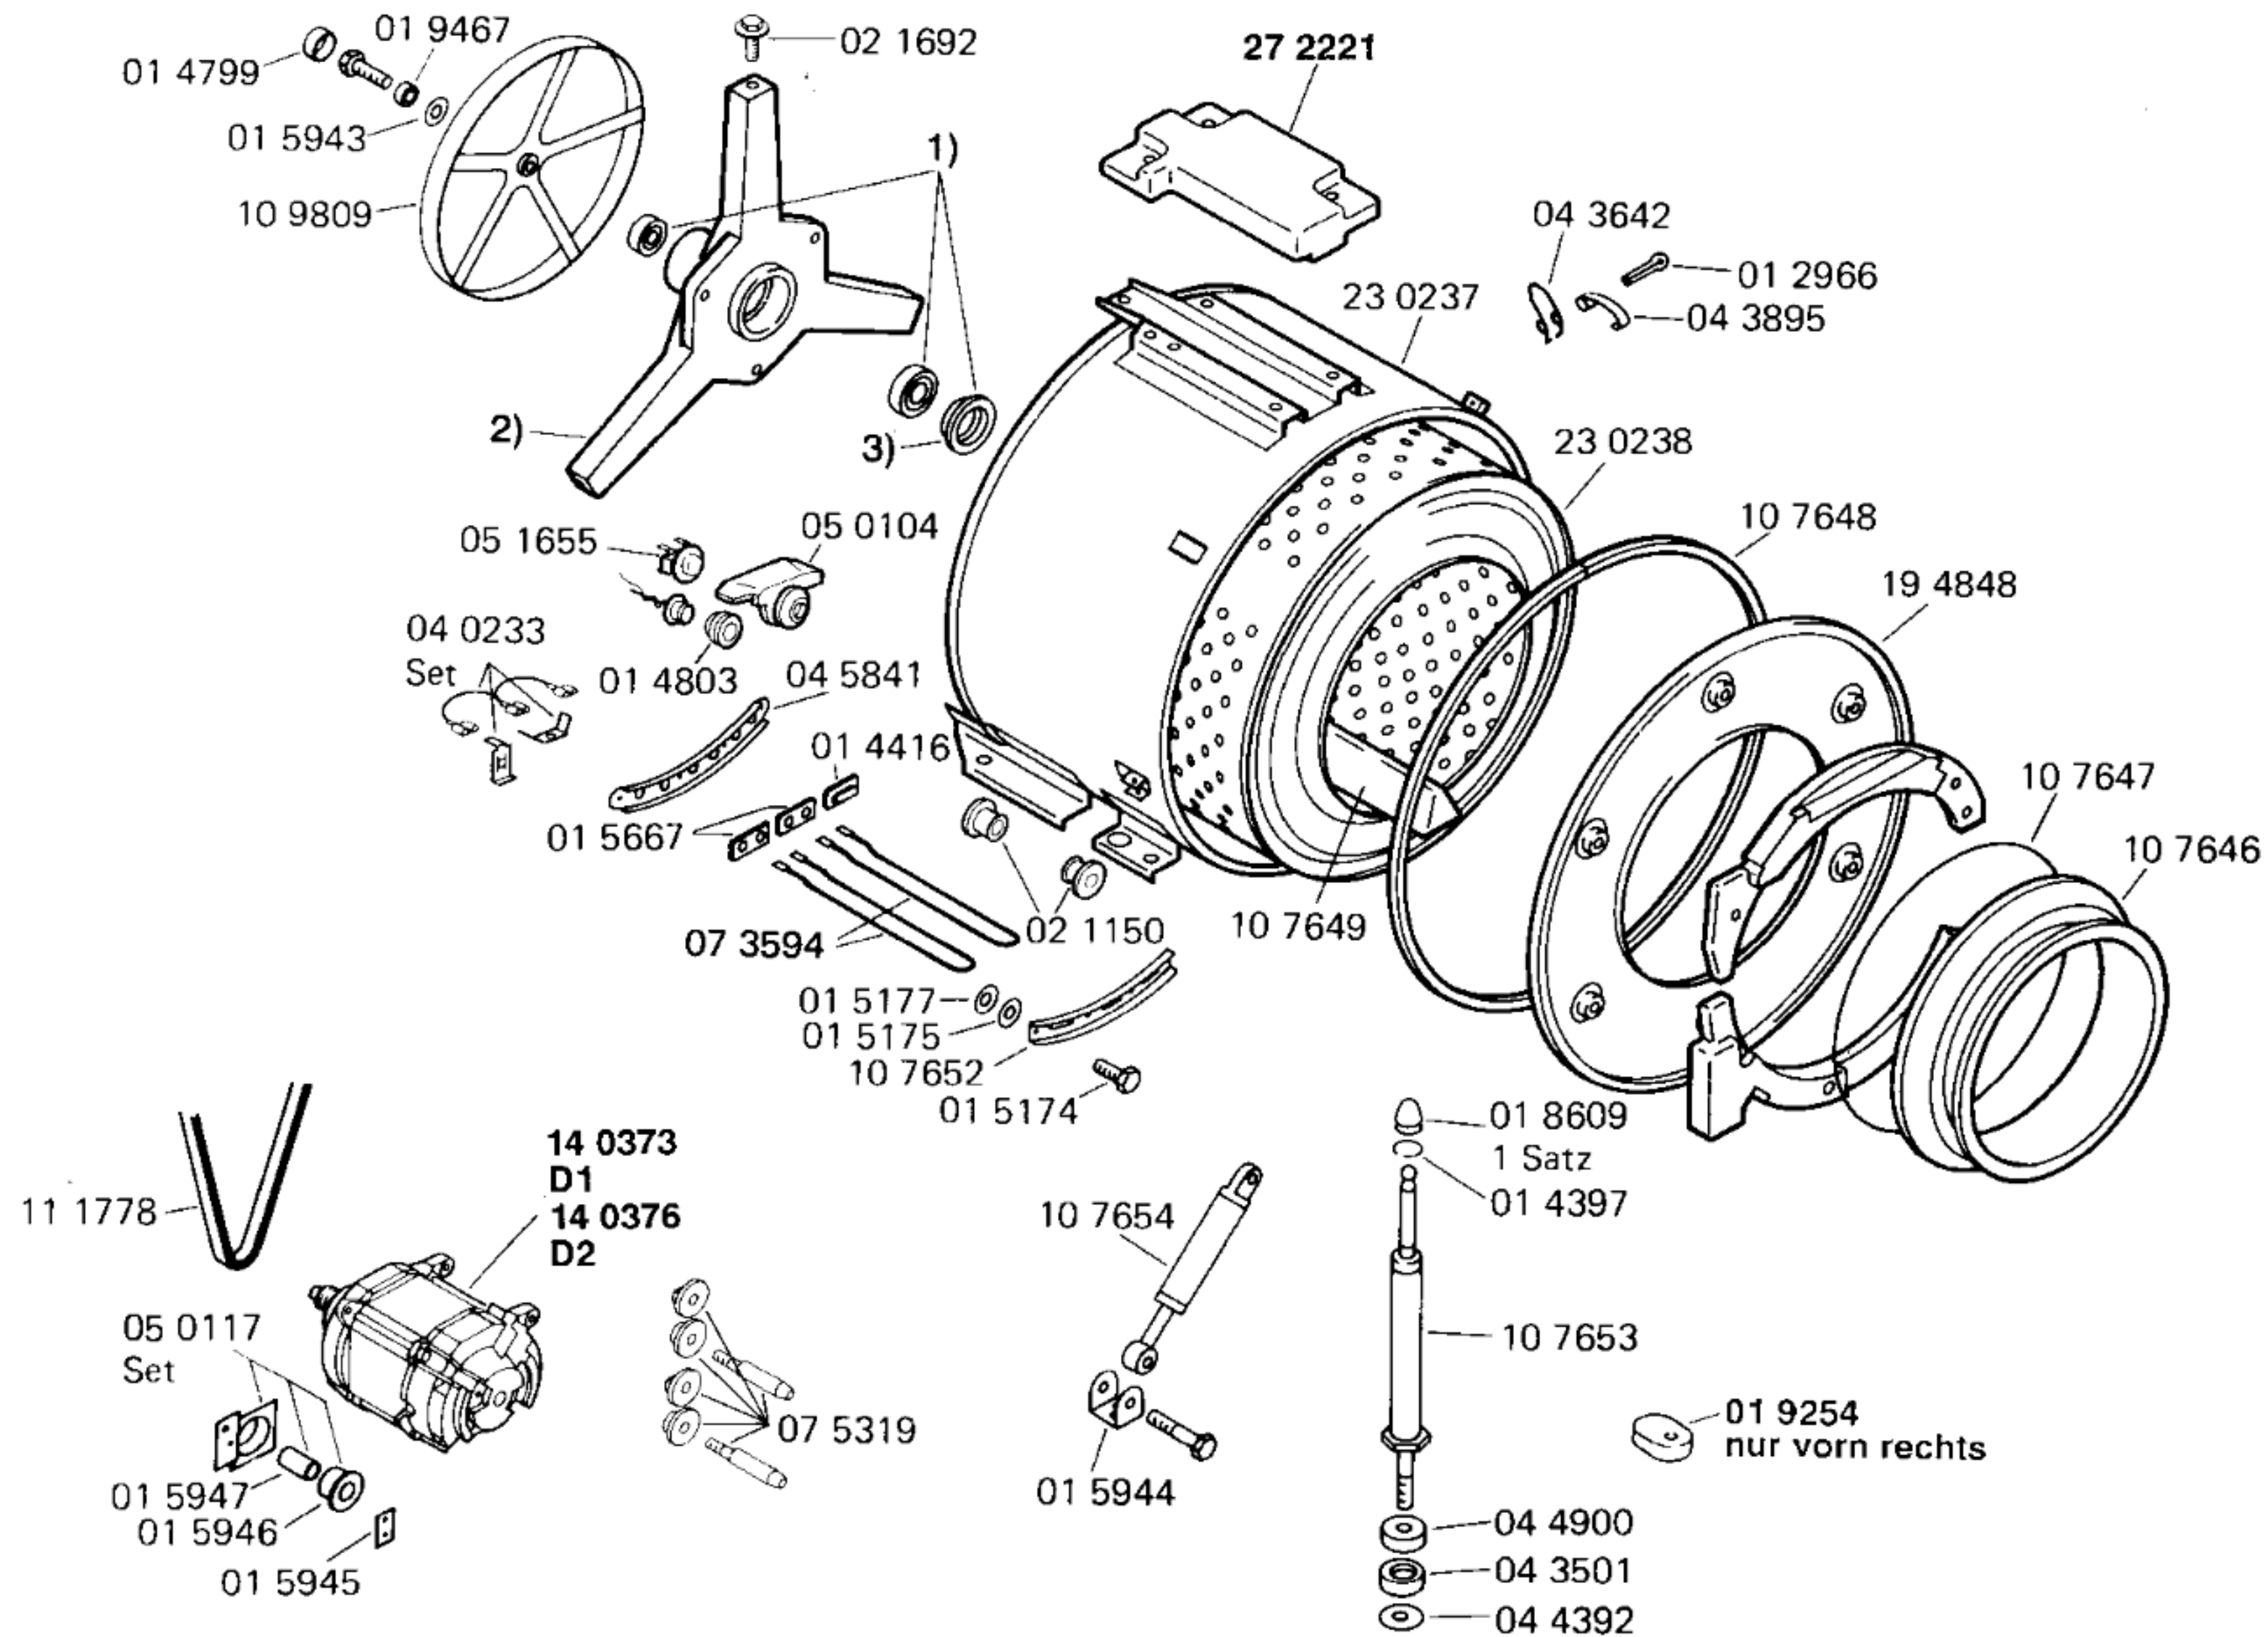

- 1) 10 7650
Set - D1
08 1480
Set - D2
- 2) 20 0050
D1
20 0987
D2
- 3) 04 0305
D1
05 1653
D2

