

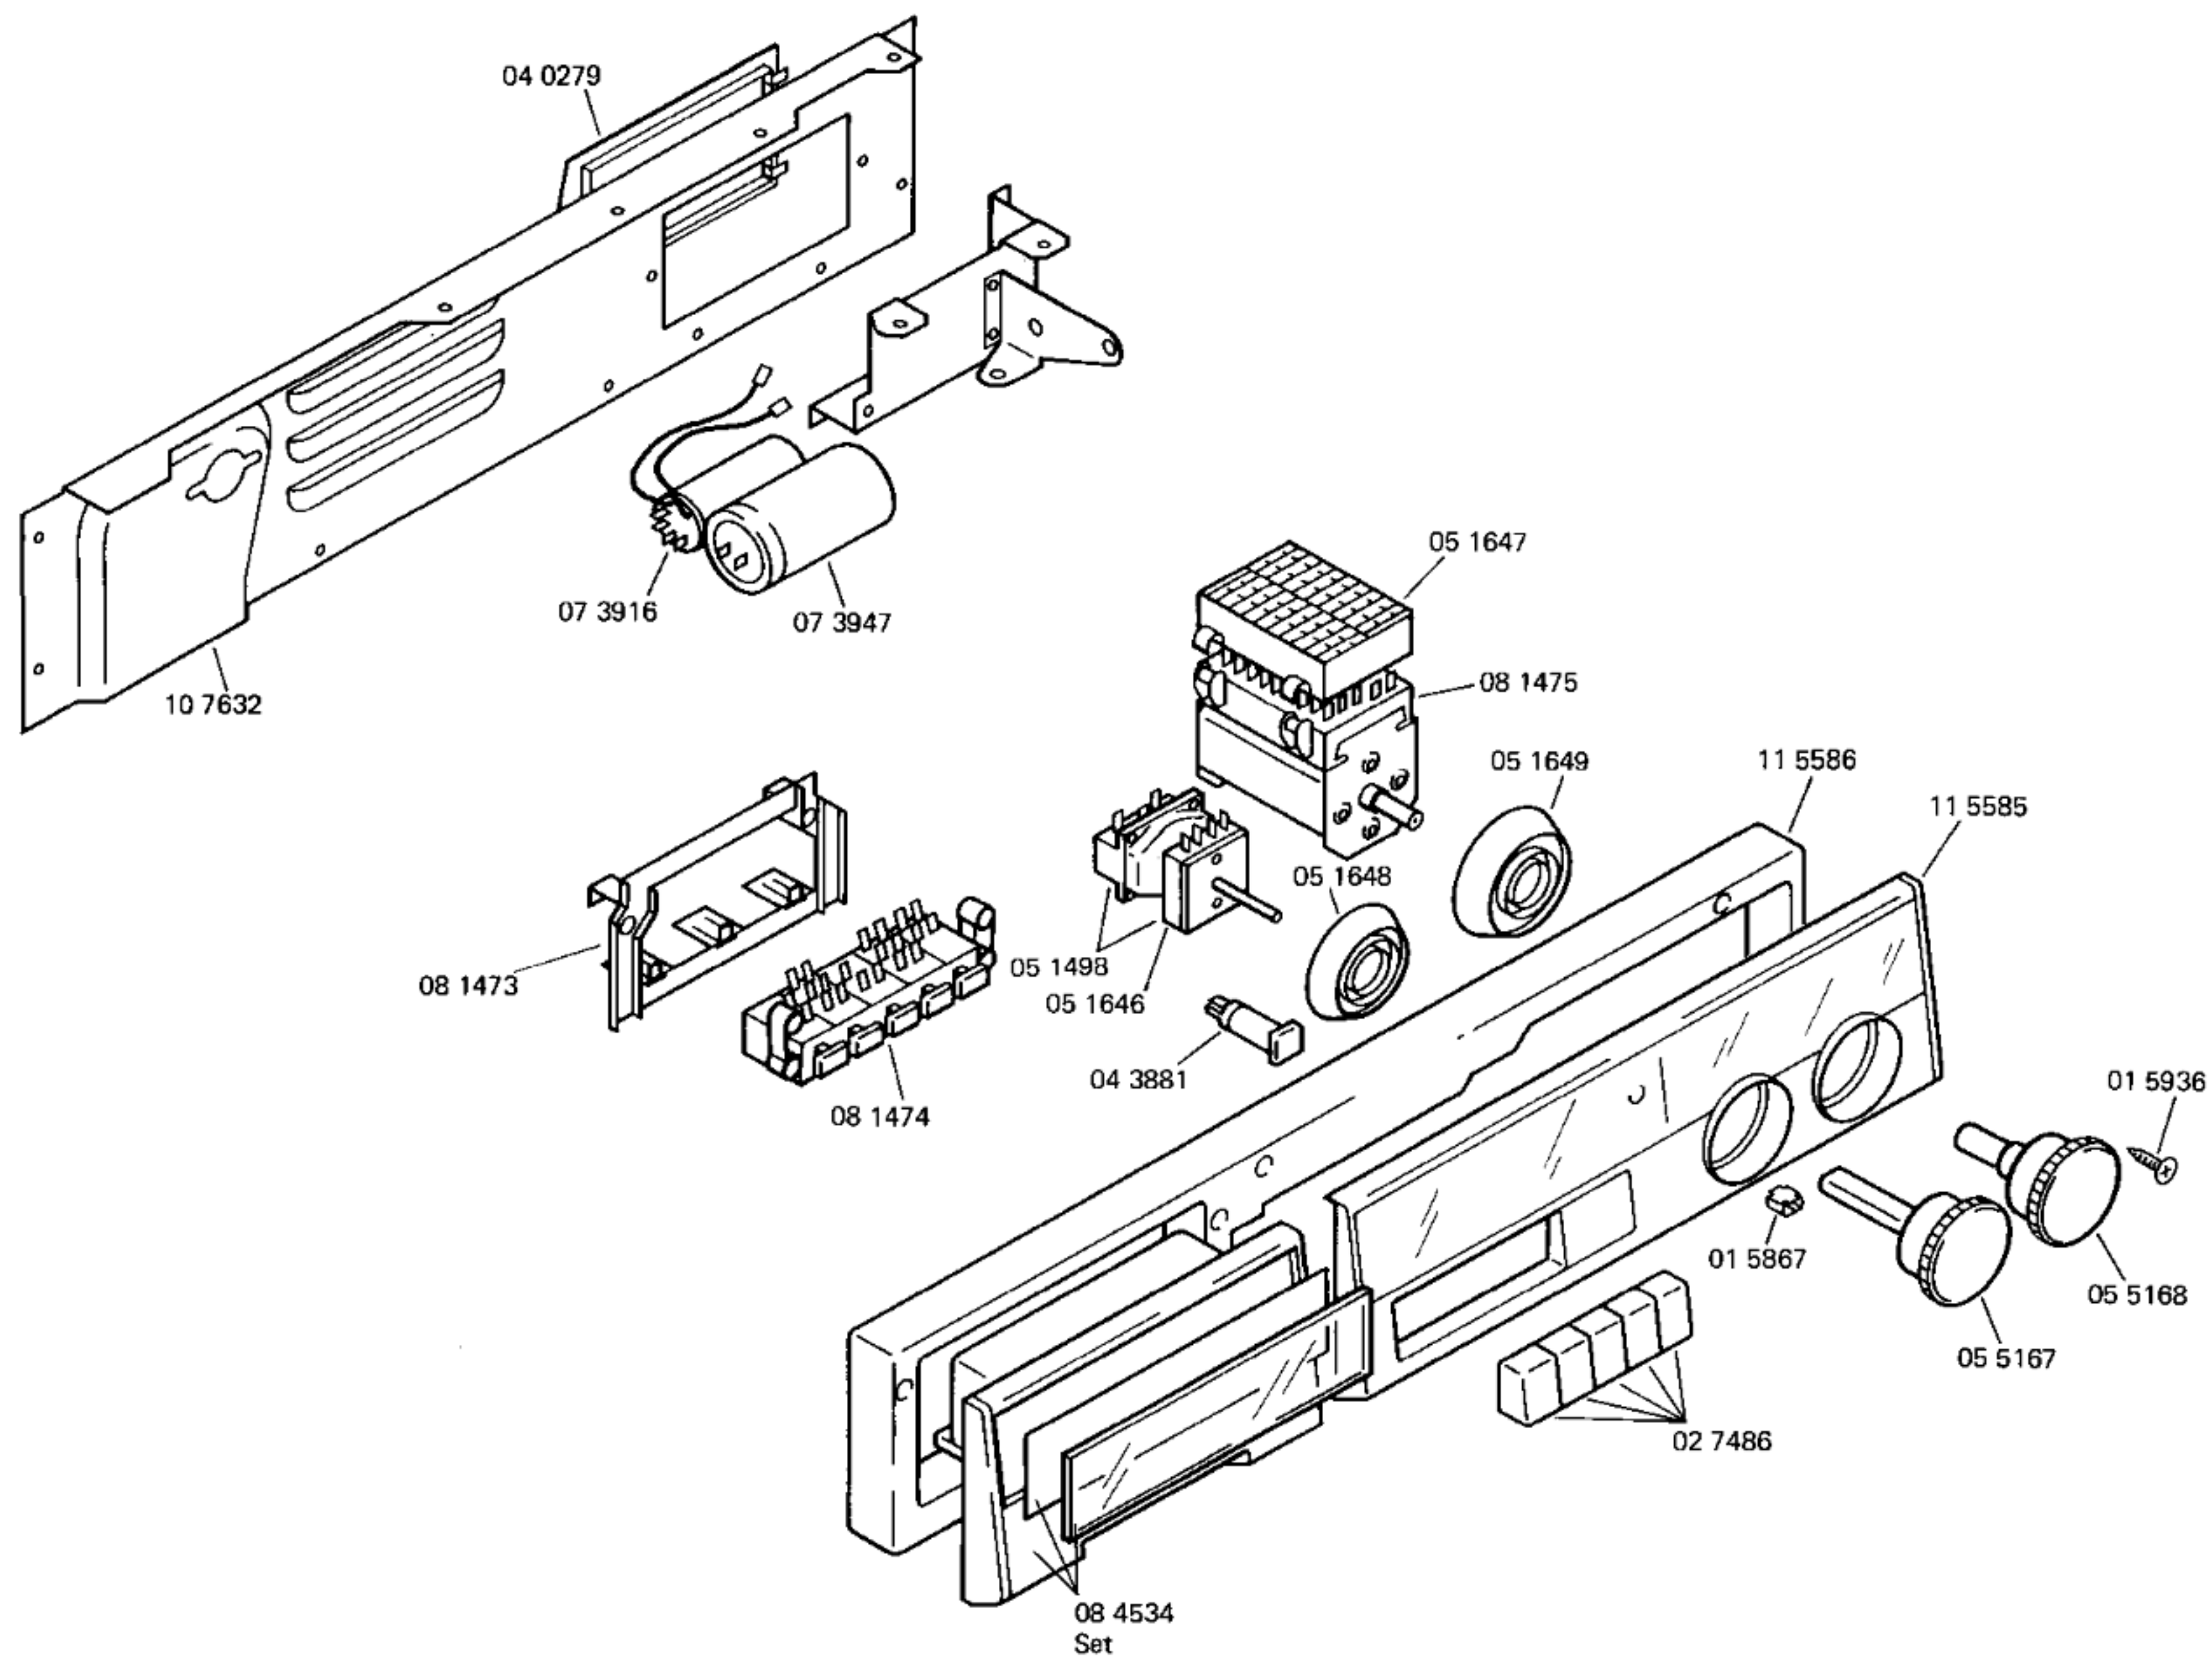


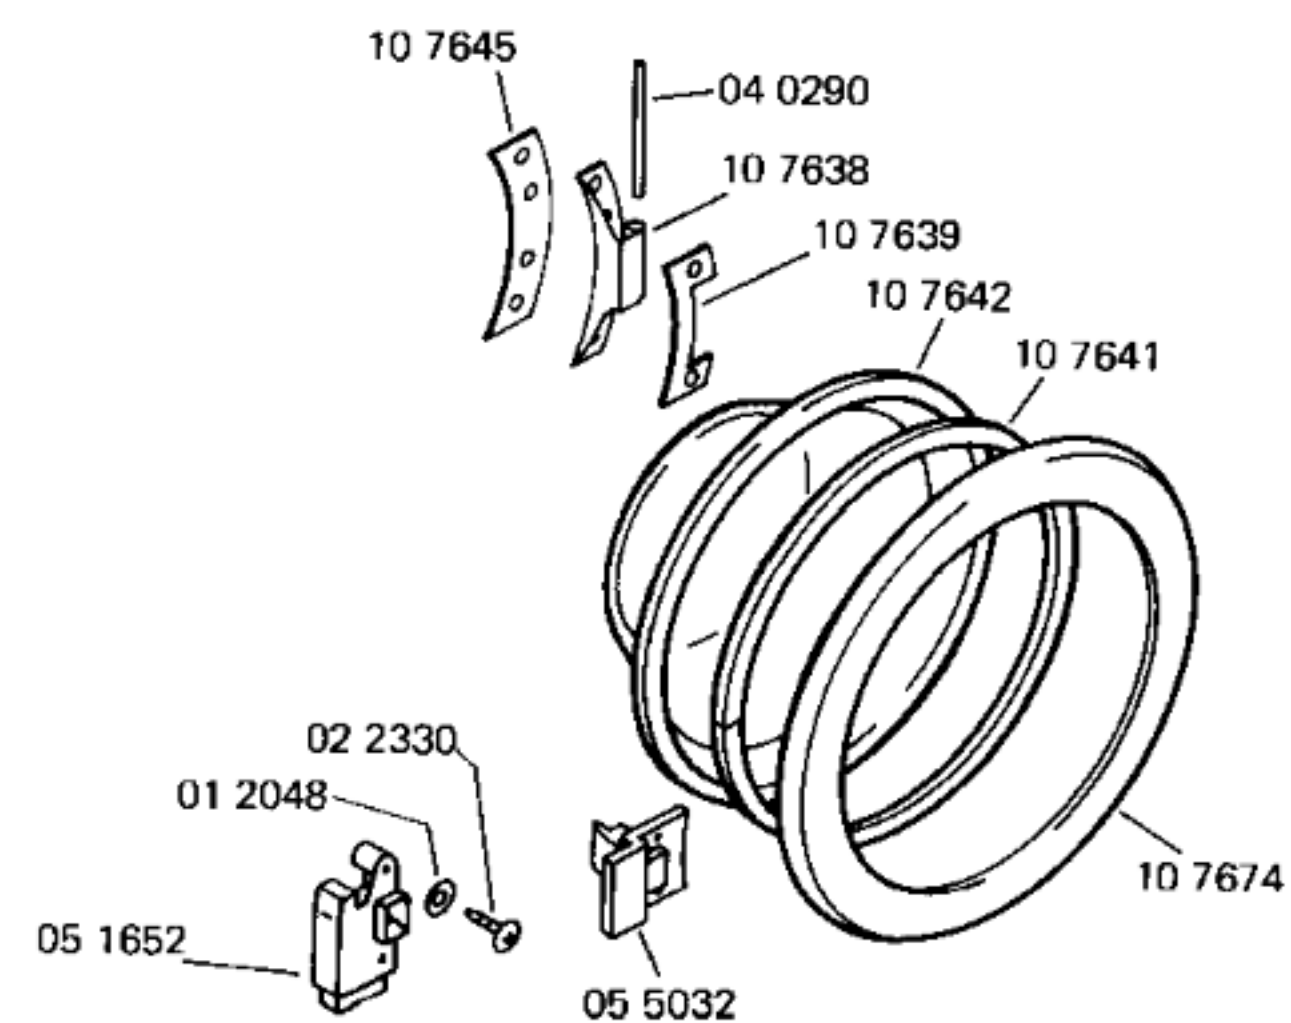



51 1221
Aufstellanweisung
(D,F,I,NL,GB,E)

51 2321
Gebrauchsanweisung
(D, F, I, NL, GB, E)

51 1223
Programmtabelle
(D,F,I,NL,GB,E)

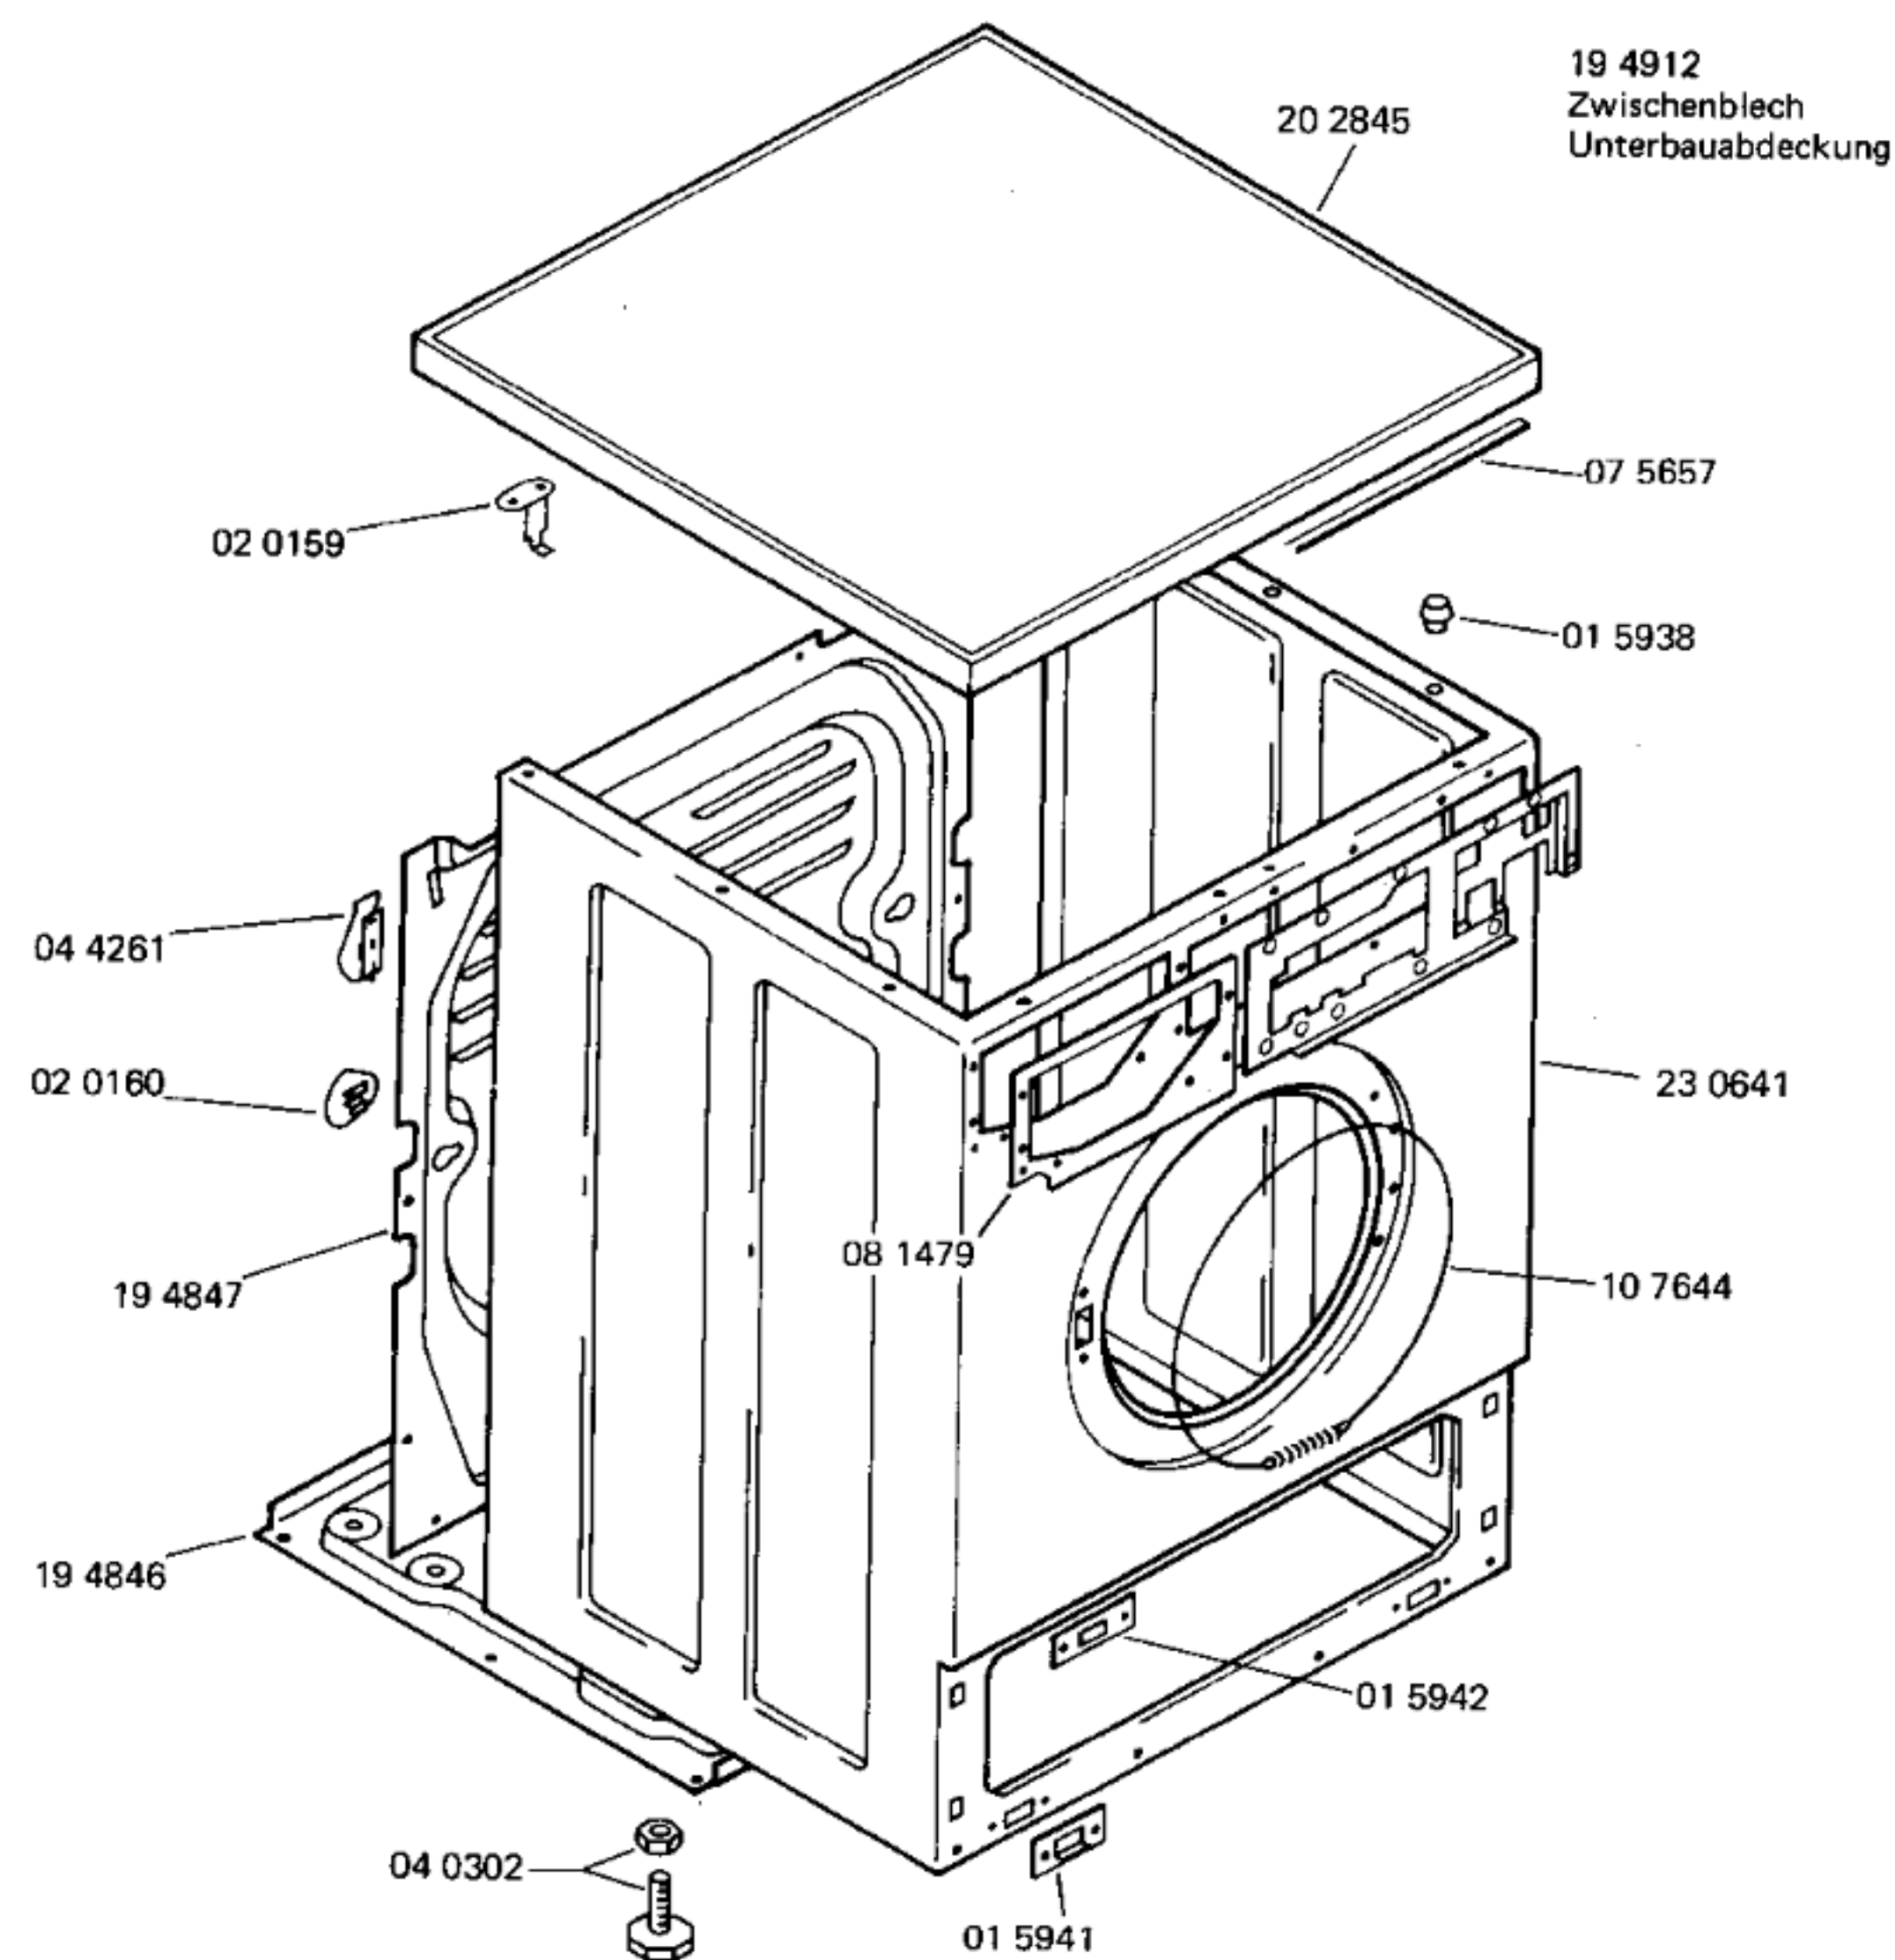

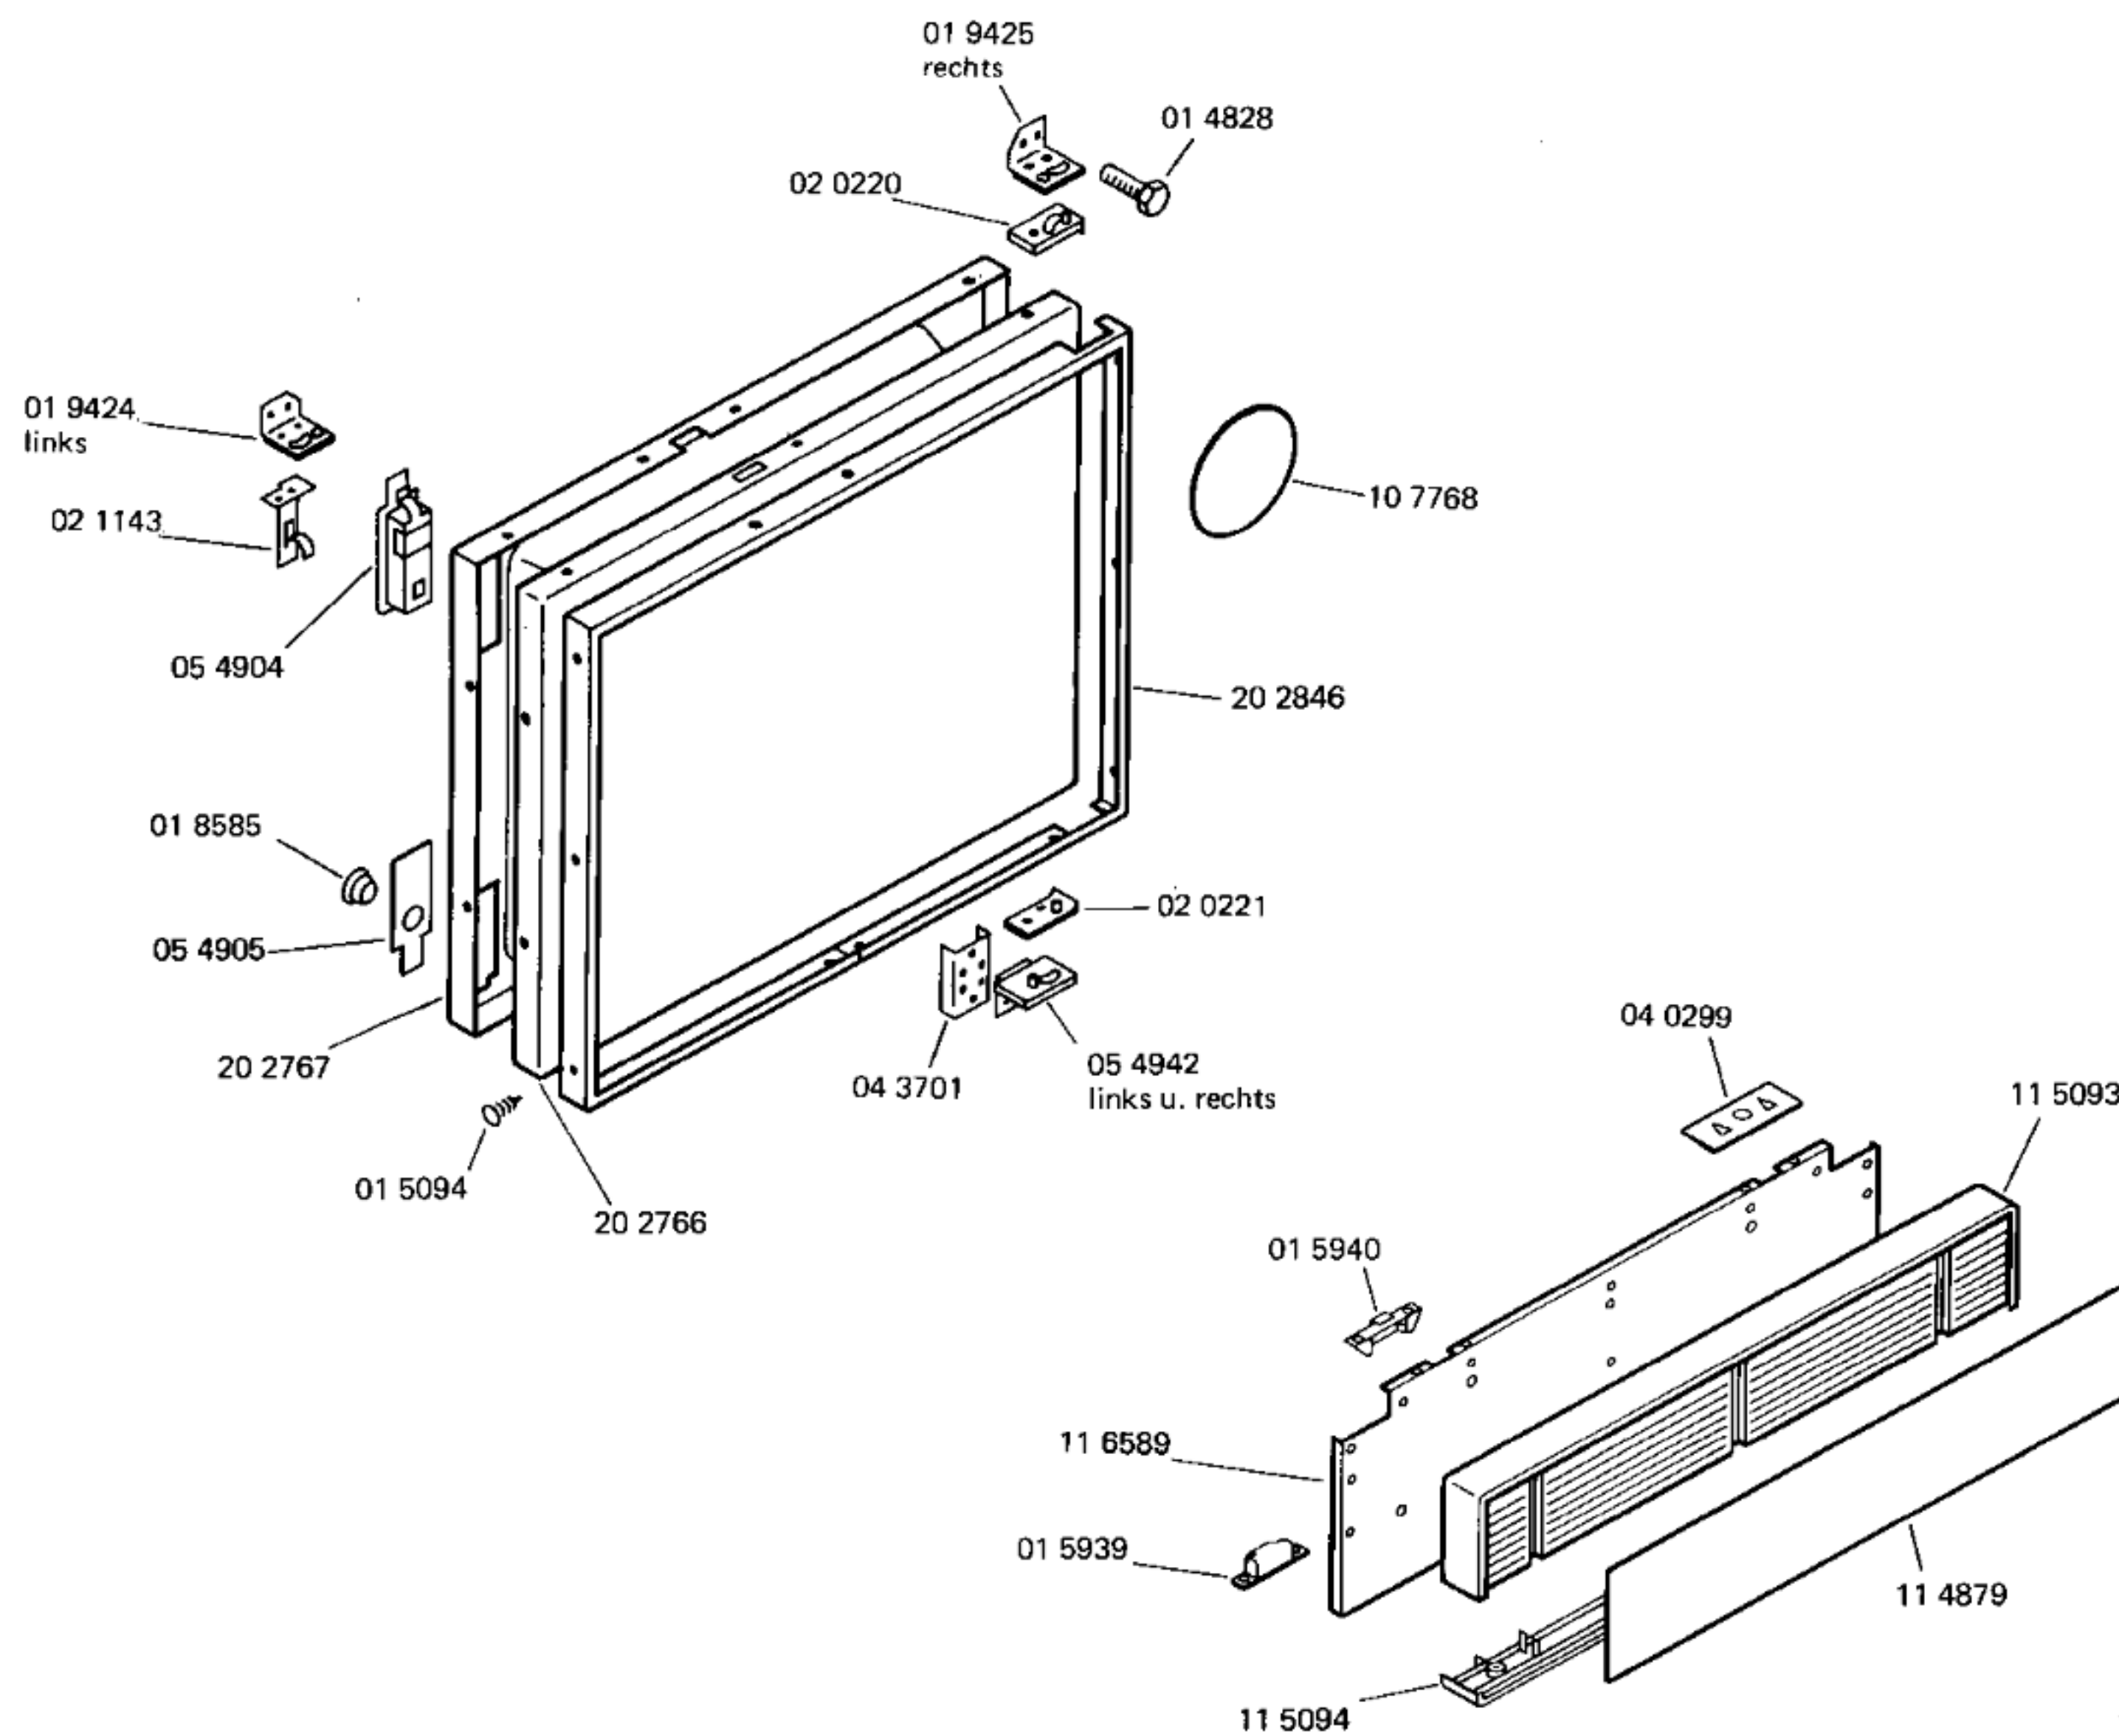

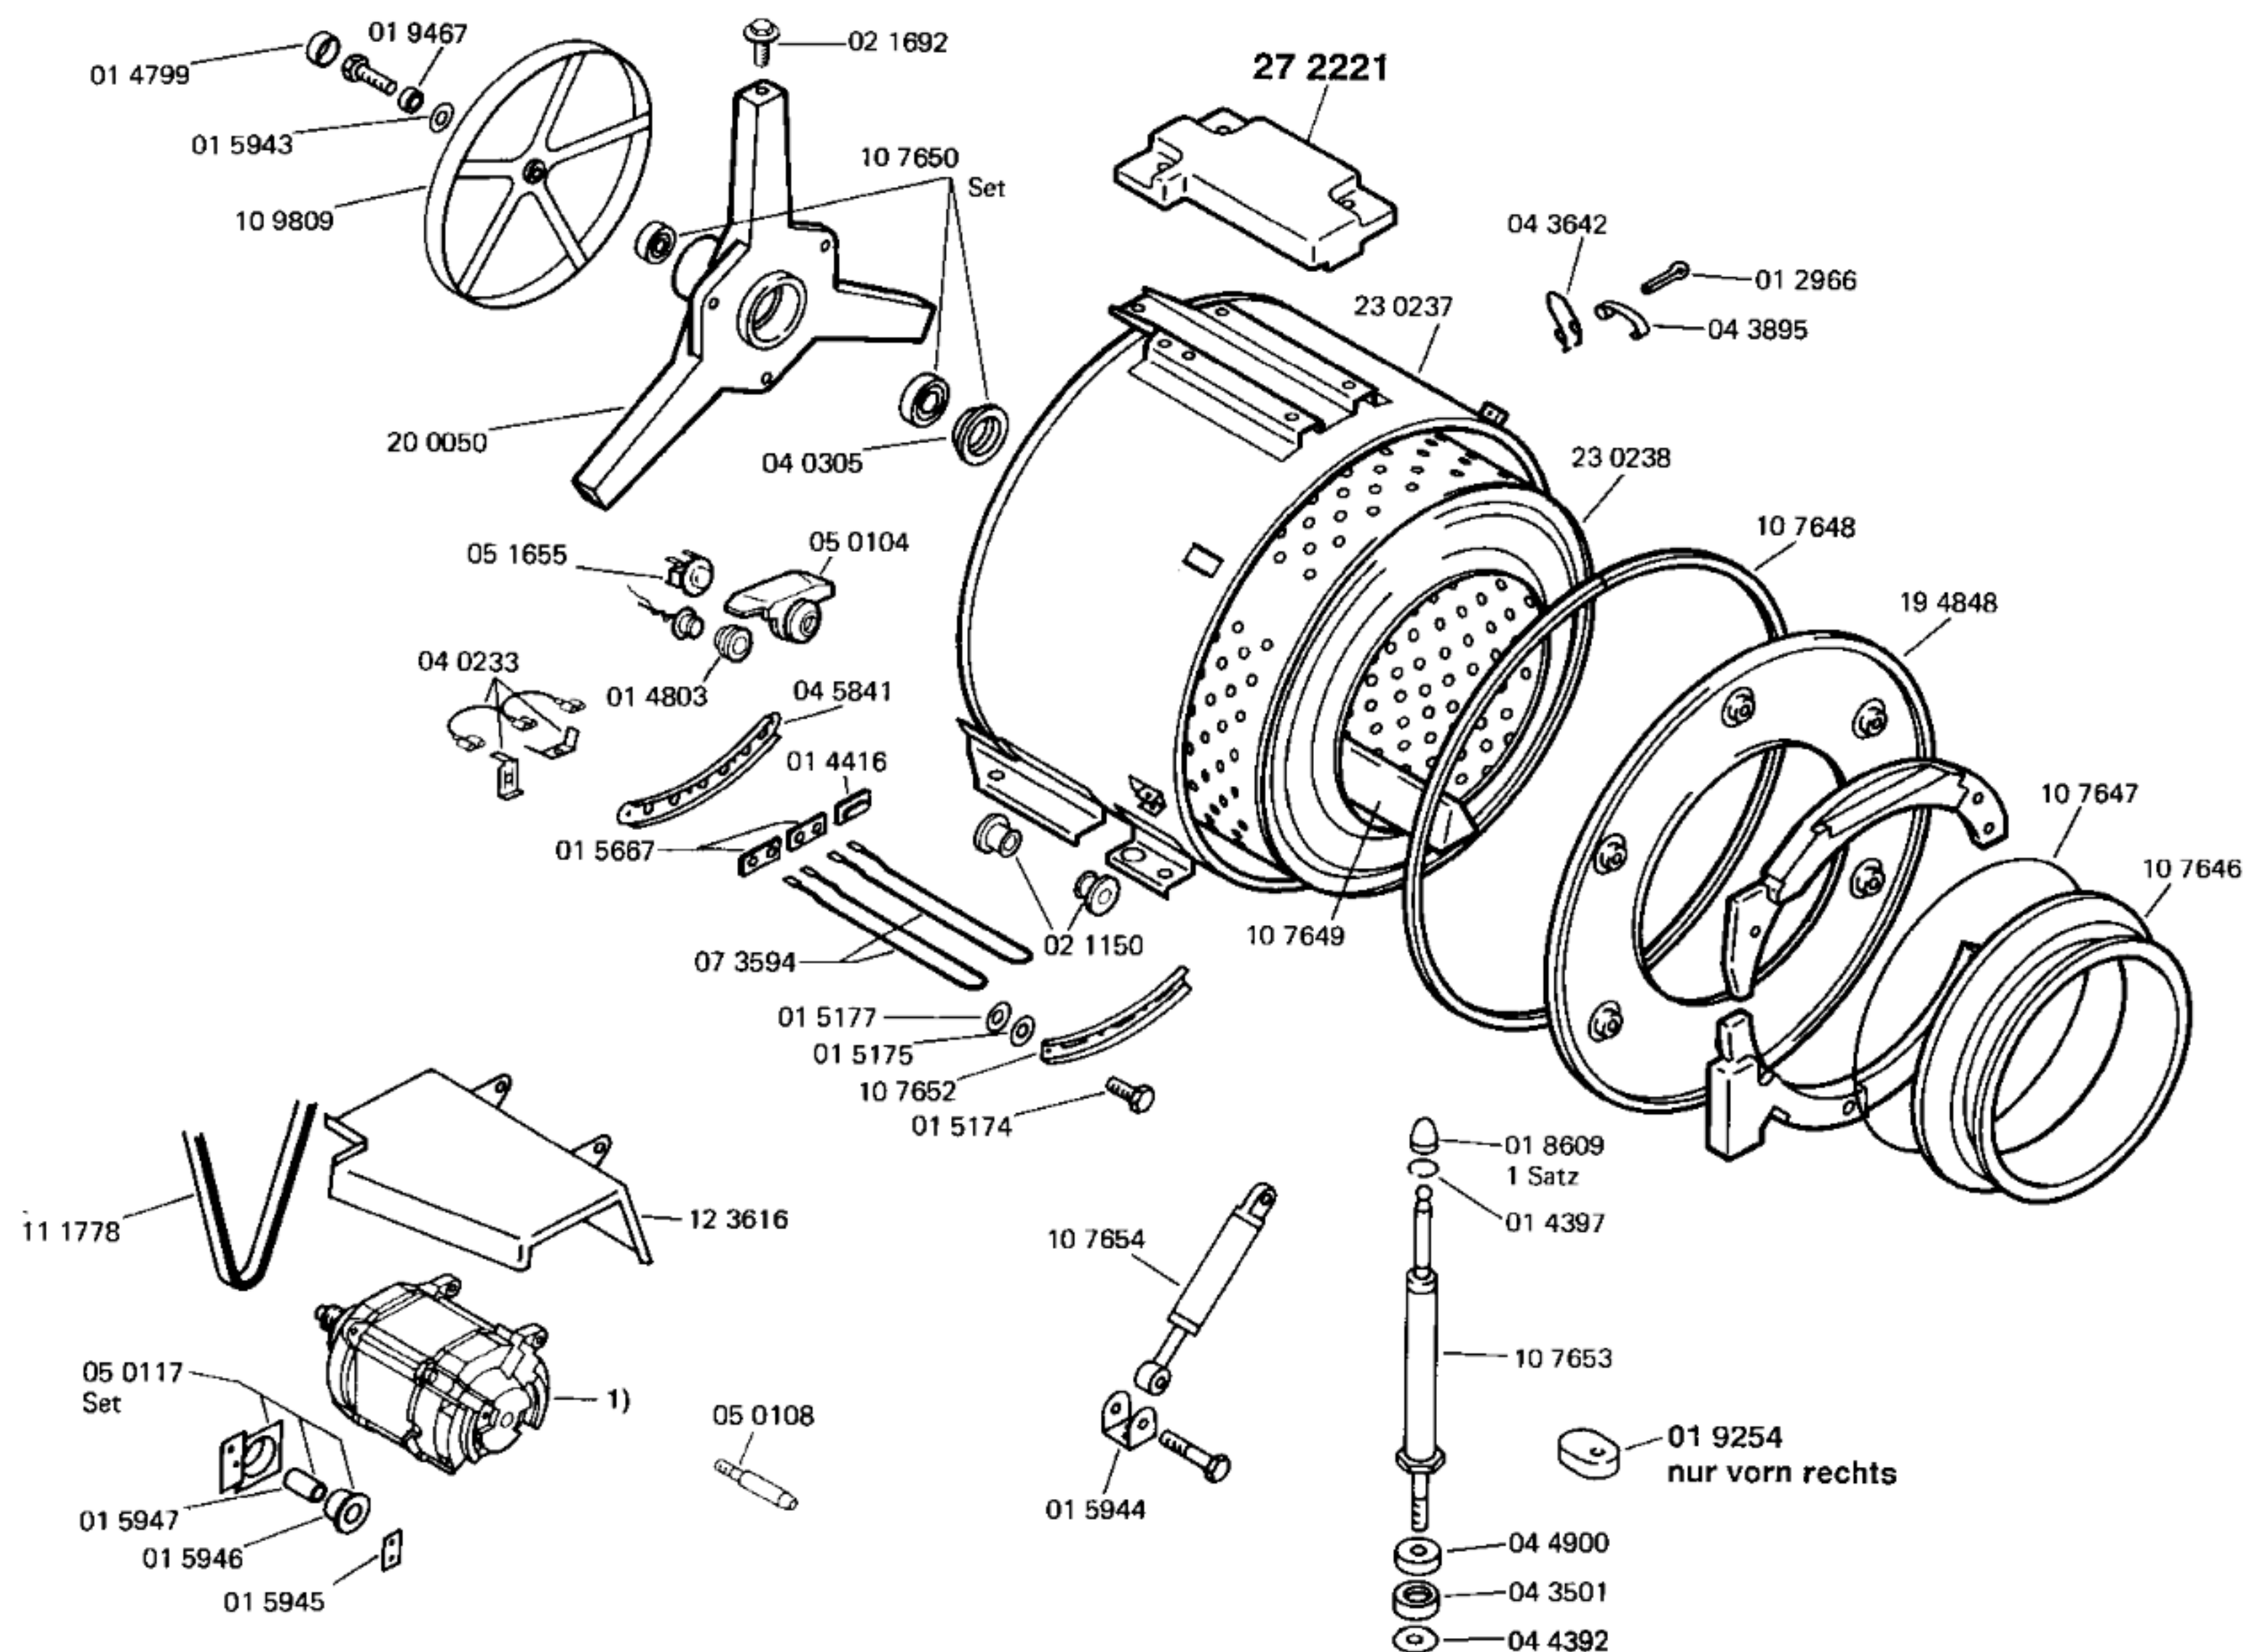

1) 14 0159 *
bis FD 6510
14 0373
ab FD 6511
*05 0117
bis FD 6409
mitbestellen

