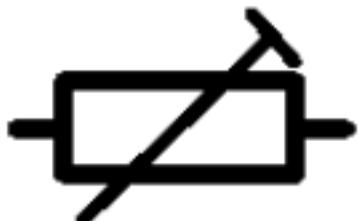


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		GEHÄUSETEILE	CABINET PARTS PIECES DE BOITIER
	78 2185	Gehäusefront	front cabinet
	78 2186	Gehäuseoberteil	cabinet upper part ebenisterie partie superieure
	73 6088	Türführung	door guide guidage porte
	75 5648	Fenster – Display	window – display fenetre – indication
	75 5649	Fenster – Funktion	window – function fenetre – fonction
	75 5650	Fenster – Fach	window – door fenetre – porte
		Knöpfe	knobs/boutons
	73 5936	Display	
	73 5937	– Kipp, F	
	73 5938	– Kipp, B	
	73 5939	Search, F	
	73 5940	Search, B	
	73 5941	Play	
	73 5942	Stop	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		ELEKTRISCHE TEILE	ELECTRICAL PARTS PIECES ELECTRIQUES
			
IC101	73 5945	CX20109	
IC101	73 8012	XB 087 A0 (Stand II)	
IC102	73 5943	YM3805	
IC103	73 5947	TC5517/MSM5128	
IC104	73 5944	YM3015	
IC106,...	73 5948	NJM2068/UPC4570	
	73 7336	Eprom Single CD	
IC107	73 5620	NJM78L06A/TA78L006AP	
IC110	73 5619	TA7256P	
IC111	73 5946	TA75393S/LA6393S	
IC112	73 5619	TA7256P	
IC3001	73 5622	LC6520H	
			
Q304	73 5896	SA733Y	
Q601	73 5949	SA931Y	
Q604	73 5580	SD733Y	
Q804	73 5949	SA931Y	
Q3001	73 5897	SC945Y	
			
	72 9193	1SS53/1N4148	
D202	73 3324	Varicap SVC211SP	
D600	70 8179	1N4001	
D602	71 2591	Zener UZP8.2	
D603	73 4545	Zener RD5.6/UZP5.6	
D604	73 1749	3N246	
			
VR302, 402	73 5611	10K	
VR101, 301, 401	73 5612	100K	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
	73 5588	Netzschalter	power/secteur
	73 5590	Blattschalter Schraube rechts	leaf/lame–screw right/à droite
	73 5591	Blattschalter Schraube links	leaf/lame–screw left/à gauche
	73 5908	Berührungsschalter	switch tact interrupteur de touche
			
L104	73 5951	Spule – Oszi	coil – Osc
X3001	73 5952	Schwingkreis	ceramic resonator
X	73 5953	8.6436 MHz	
X101	71 4943		
X102	73 7499		
			
	75 5569	Netztrafo 48X18	power transfo

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
F3001		DIVERSE TEILE	DIVERSES PARTS PIECES DIVERSE
	75 7262	CD–Laufwerk CMS33N (2–achsiger Laser HOP–M3)	CD–deck
	75 5453	CD–Deck bis Fabr. Nr. 10977 (1–achsiger Laser MLP9)	CD–mechanism
	73 5592 75 6181	Laseroptik bis Fabr. Nr. 10977 Laseroptik ab Fabr. Nr. 10977	optical pick up (MLP–9) optical pick up (HOP–M3)
	73 5593	Motor RF510T12620 – Feed	
	73 5594	Motor NBS4R – Plattenteller	
	73 6089	Hebel "Power"	lever "power" levier "power"
	73 6084	Buchse RCA	jack/douille
	73 6028	Feder – Druck	spring – touch resort
	73 6090	Feder – power	spring – power resort
	73 6029	Siebensegment – LED LC204MB–2	seven segment indication
	78 2340	Platteneinschub	lifter disc holder caisson–disque
	73 6898	4 Kugeln (4 mm)	4 balls/billes
	53 0520	Gebrauchsanweisung	instructions for use mode d'emploi
	53 5279	Service–Druckschrift	service booklet brochure service