


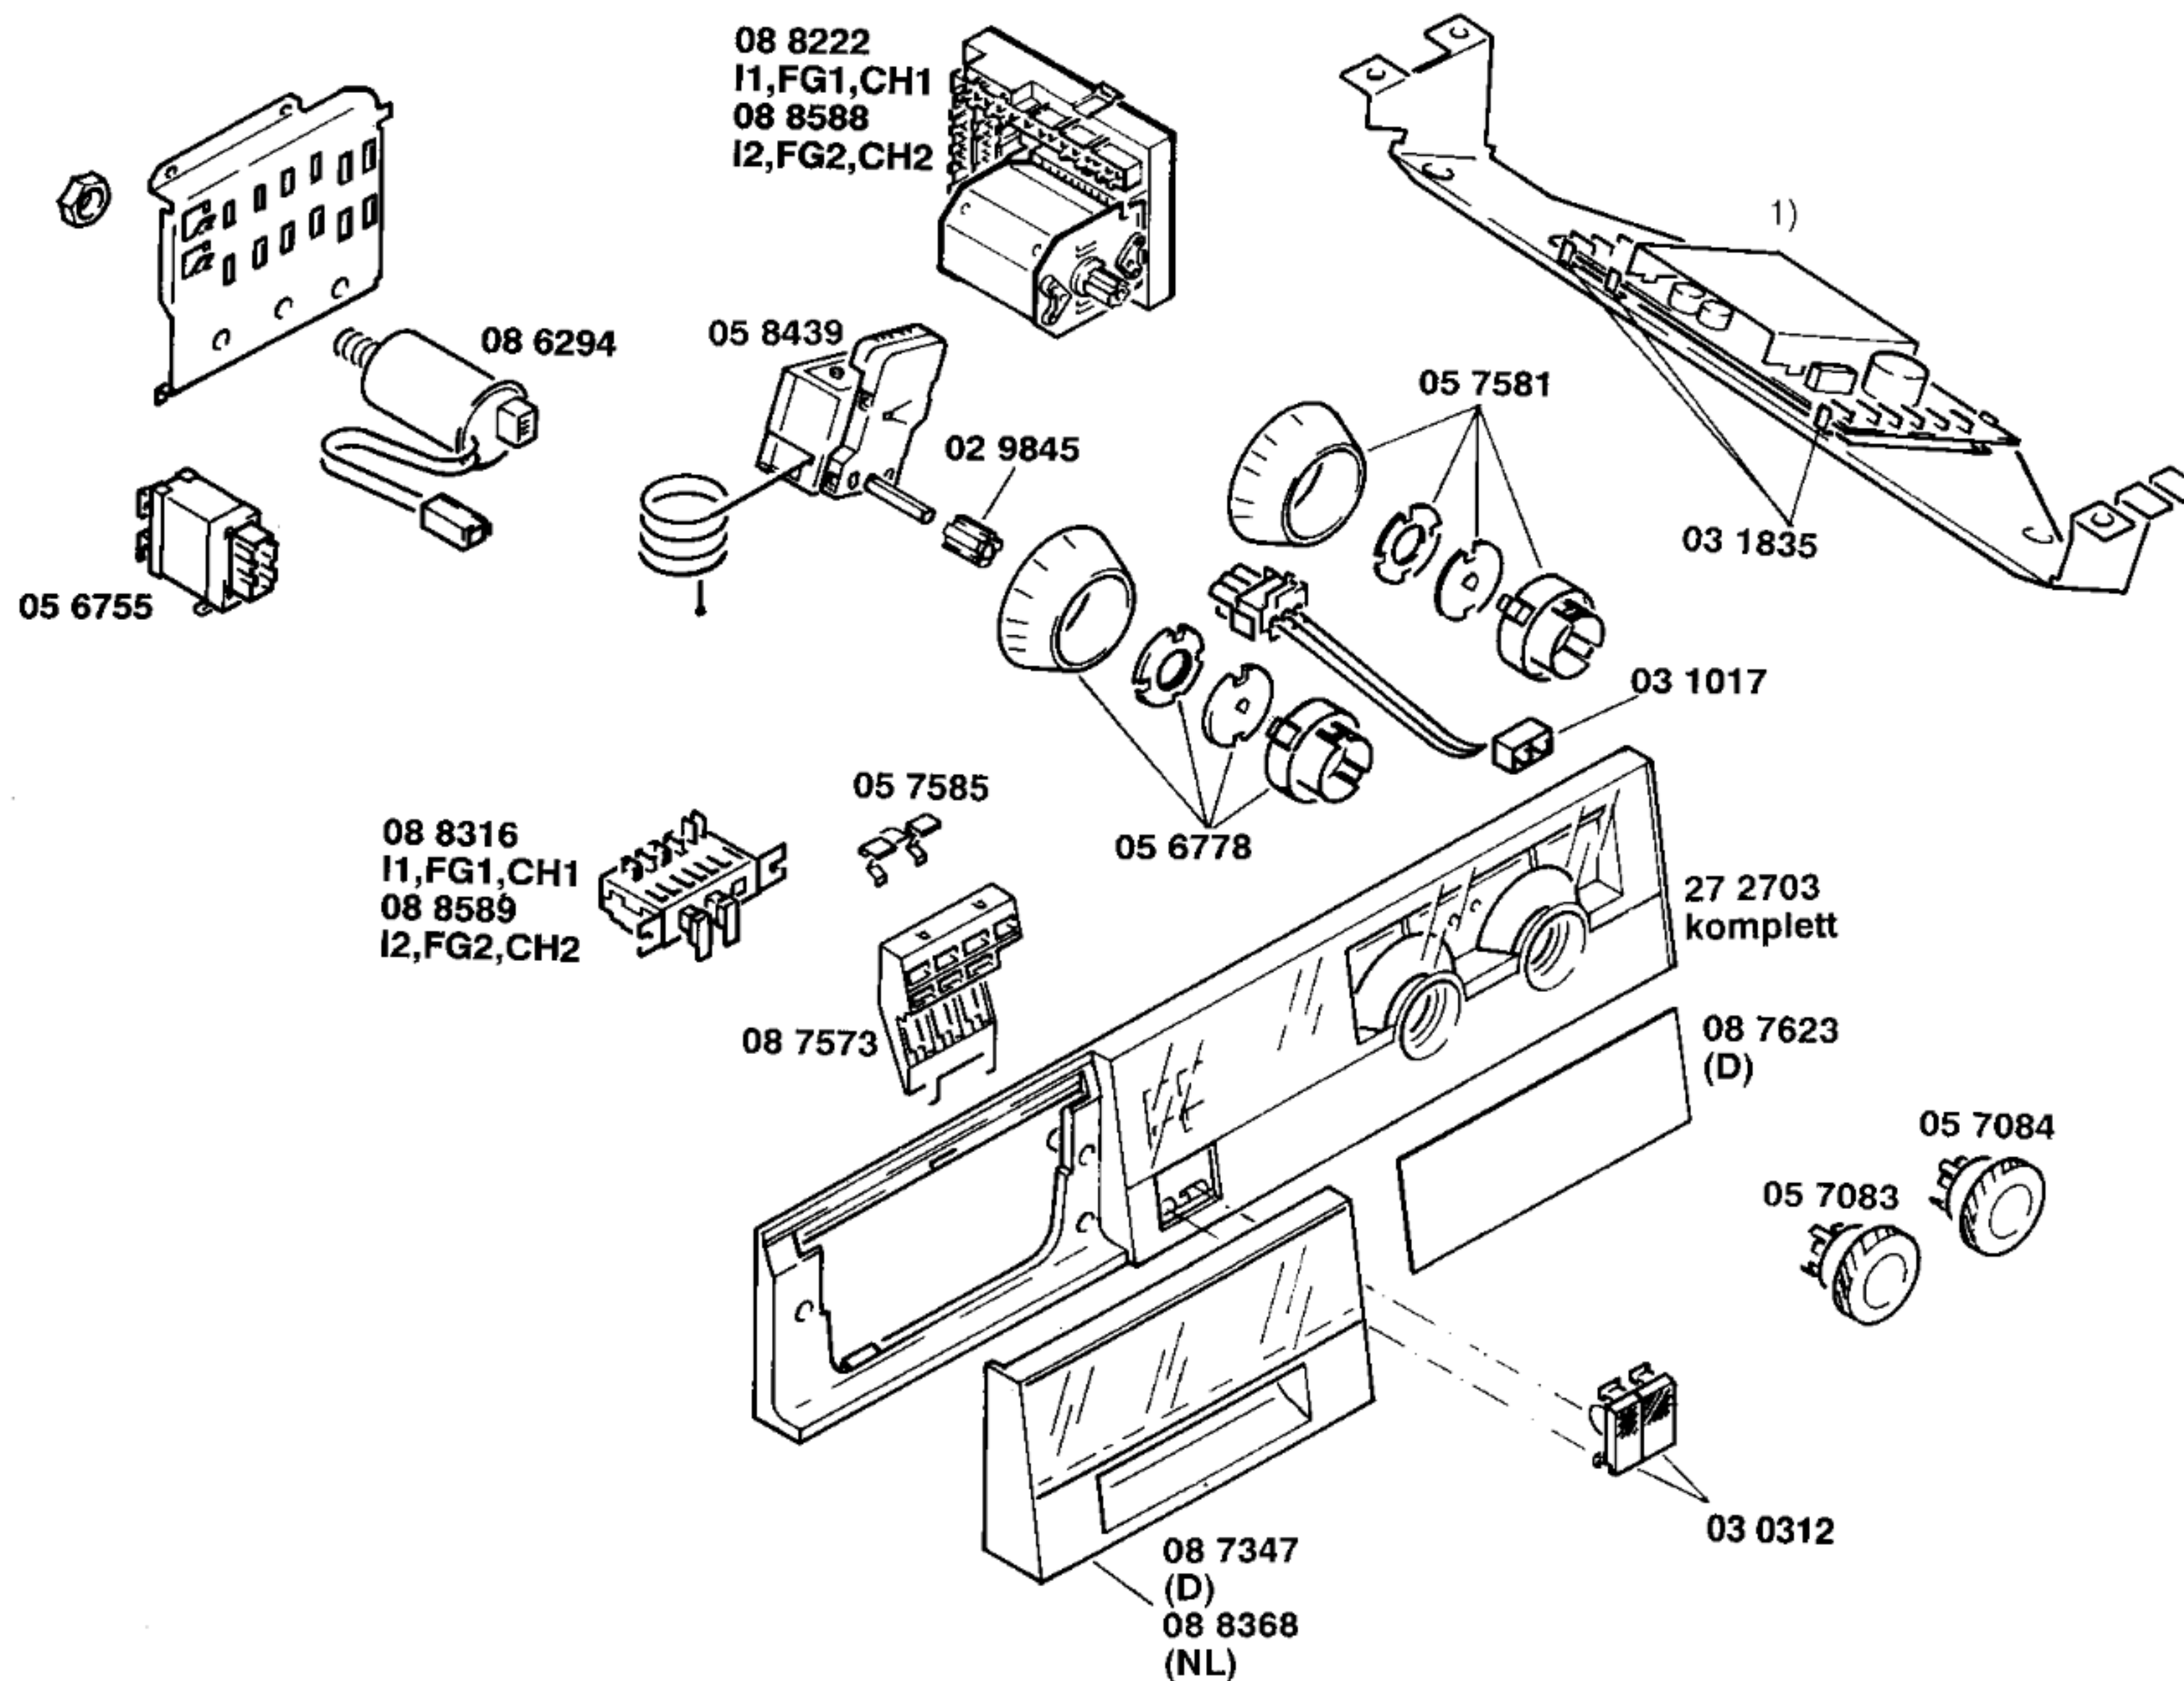

Gebrauchsanweisungen:

51 4415

(D,F,I)

Programmtabellen:

51 4419

(D)

51 4422

(F,I)

Aufstellanweisungen:

51 4274

(D,I)

51 3558

(NL,F,E,GB)

1) 08 8223

15 5272

Triac-Motorleistung

