 


 
Seite Page	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
		Inhaltsangabe	
	75 6089	Fernbedienung kpl.	remote control cpl. télécommande cpl.
16/2-16/7	78 2337	Chassisplatte FM622Q4	chassis board
16/2-16/7	78 2460	Chassisplatte FM622H4	c. i. principal
16/8	78 2333	Bedienteil	keyboard unit unite de commande
16/9-16/10	75 5430	Netzteil	power supply PCB.
16/11	75 4490	Video-Kopfverstärker	PRE-AMP. PCB.
	78 2458	Tuner-Modulatorplatte	Tuner-Modulatorplate tuner-modulat. pl.
16/12-16/15		Explosionszeichnungen	exploded view
16/16		Gebrauchsanweisung Service Manual	instruction manual

SIEMENS**FM622Q4
FM622H4****VIDEOGERÄTE
VIDEO-CASS-RECORDER**
Video Equipments
Video cartridge recorder
Equipements Video
Enregistreur cassette video

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
CP-1 CP-1	78 2337 78 2460	Chassisplatte FM622Q4 Chassisplatte FM622H4	chassis board c. i. principal
	73 5472	Lithium-Batterie CR 2032	lithium-battery
	73 4368	Verzögerungsleitung 	delay line/ligne a retard
F353	73 5485		
F355	73 5075		
F360	73 5328		
F385,390	73 2204		
F410	73 4955		
F625	73 3126		
F652	73 5332		
F880	73 3128		
F902	73 4957		
F930	73 2204		
F970	73 0294		
C145	73 5492	 4.5 ...20PF	
C518 C905	73 4950 73 4949	 0.01µF/100V 62pF 2%	
Q145 Q250 Q925 Q1520	72 7701 73 1712 72 7719 73 3632	 32.768KHz 12.0MHz 4.433619MHz 13.875MHz	

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
VP-1	75 4490	Video-Kopfverstärker	PRE-AMP. PCB.
CD1191	73 4364	 RLS135R-Ohm	
IC1130	73 1085	 AN3313	
CT1115, 1118	73 5486	 SMDBC818-40	
CT1140, 1155	73 6910	SMDBC848	
CT1157	73 6905	SMDBC858	
CT1165	73 6910	SMDBC848	
CT1170	73 6905	SMDBC858	
CT1172	73 2288	SMDBFS20	
CT1176	73 6910	SMDBC848	
CT1185	73 6905	SMDBC858	
T1193	71 1947	SMDBC338-40	
CT1200	73 2288	SMDBFS20	
CT1227	73 6910	SMDBC848	

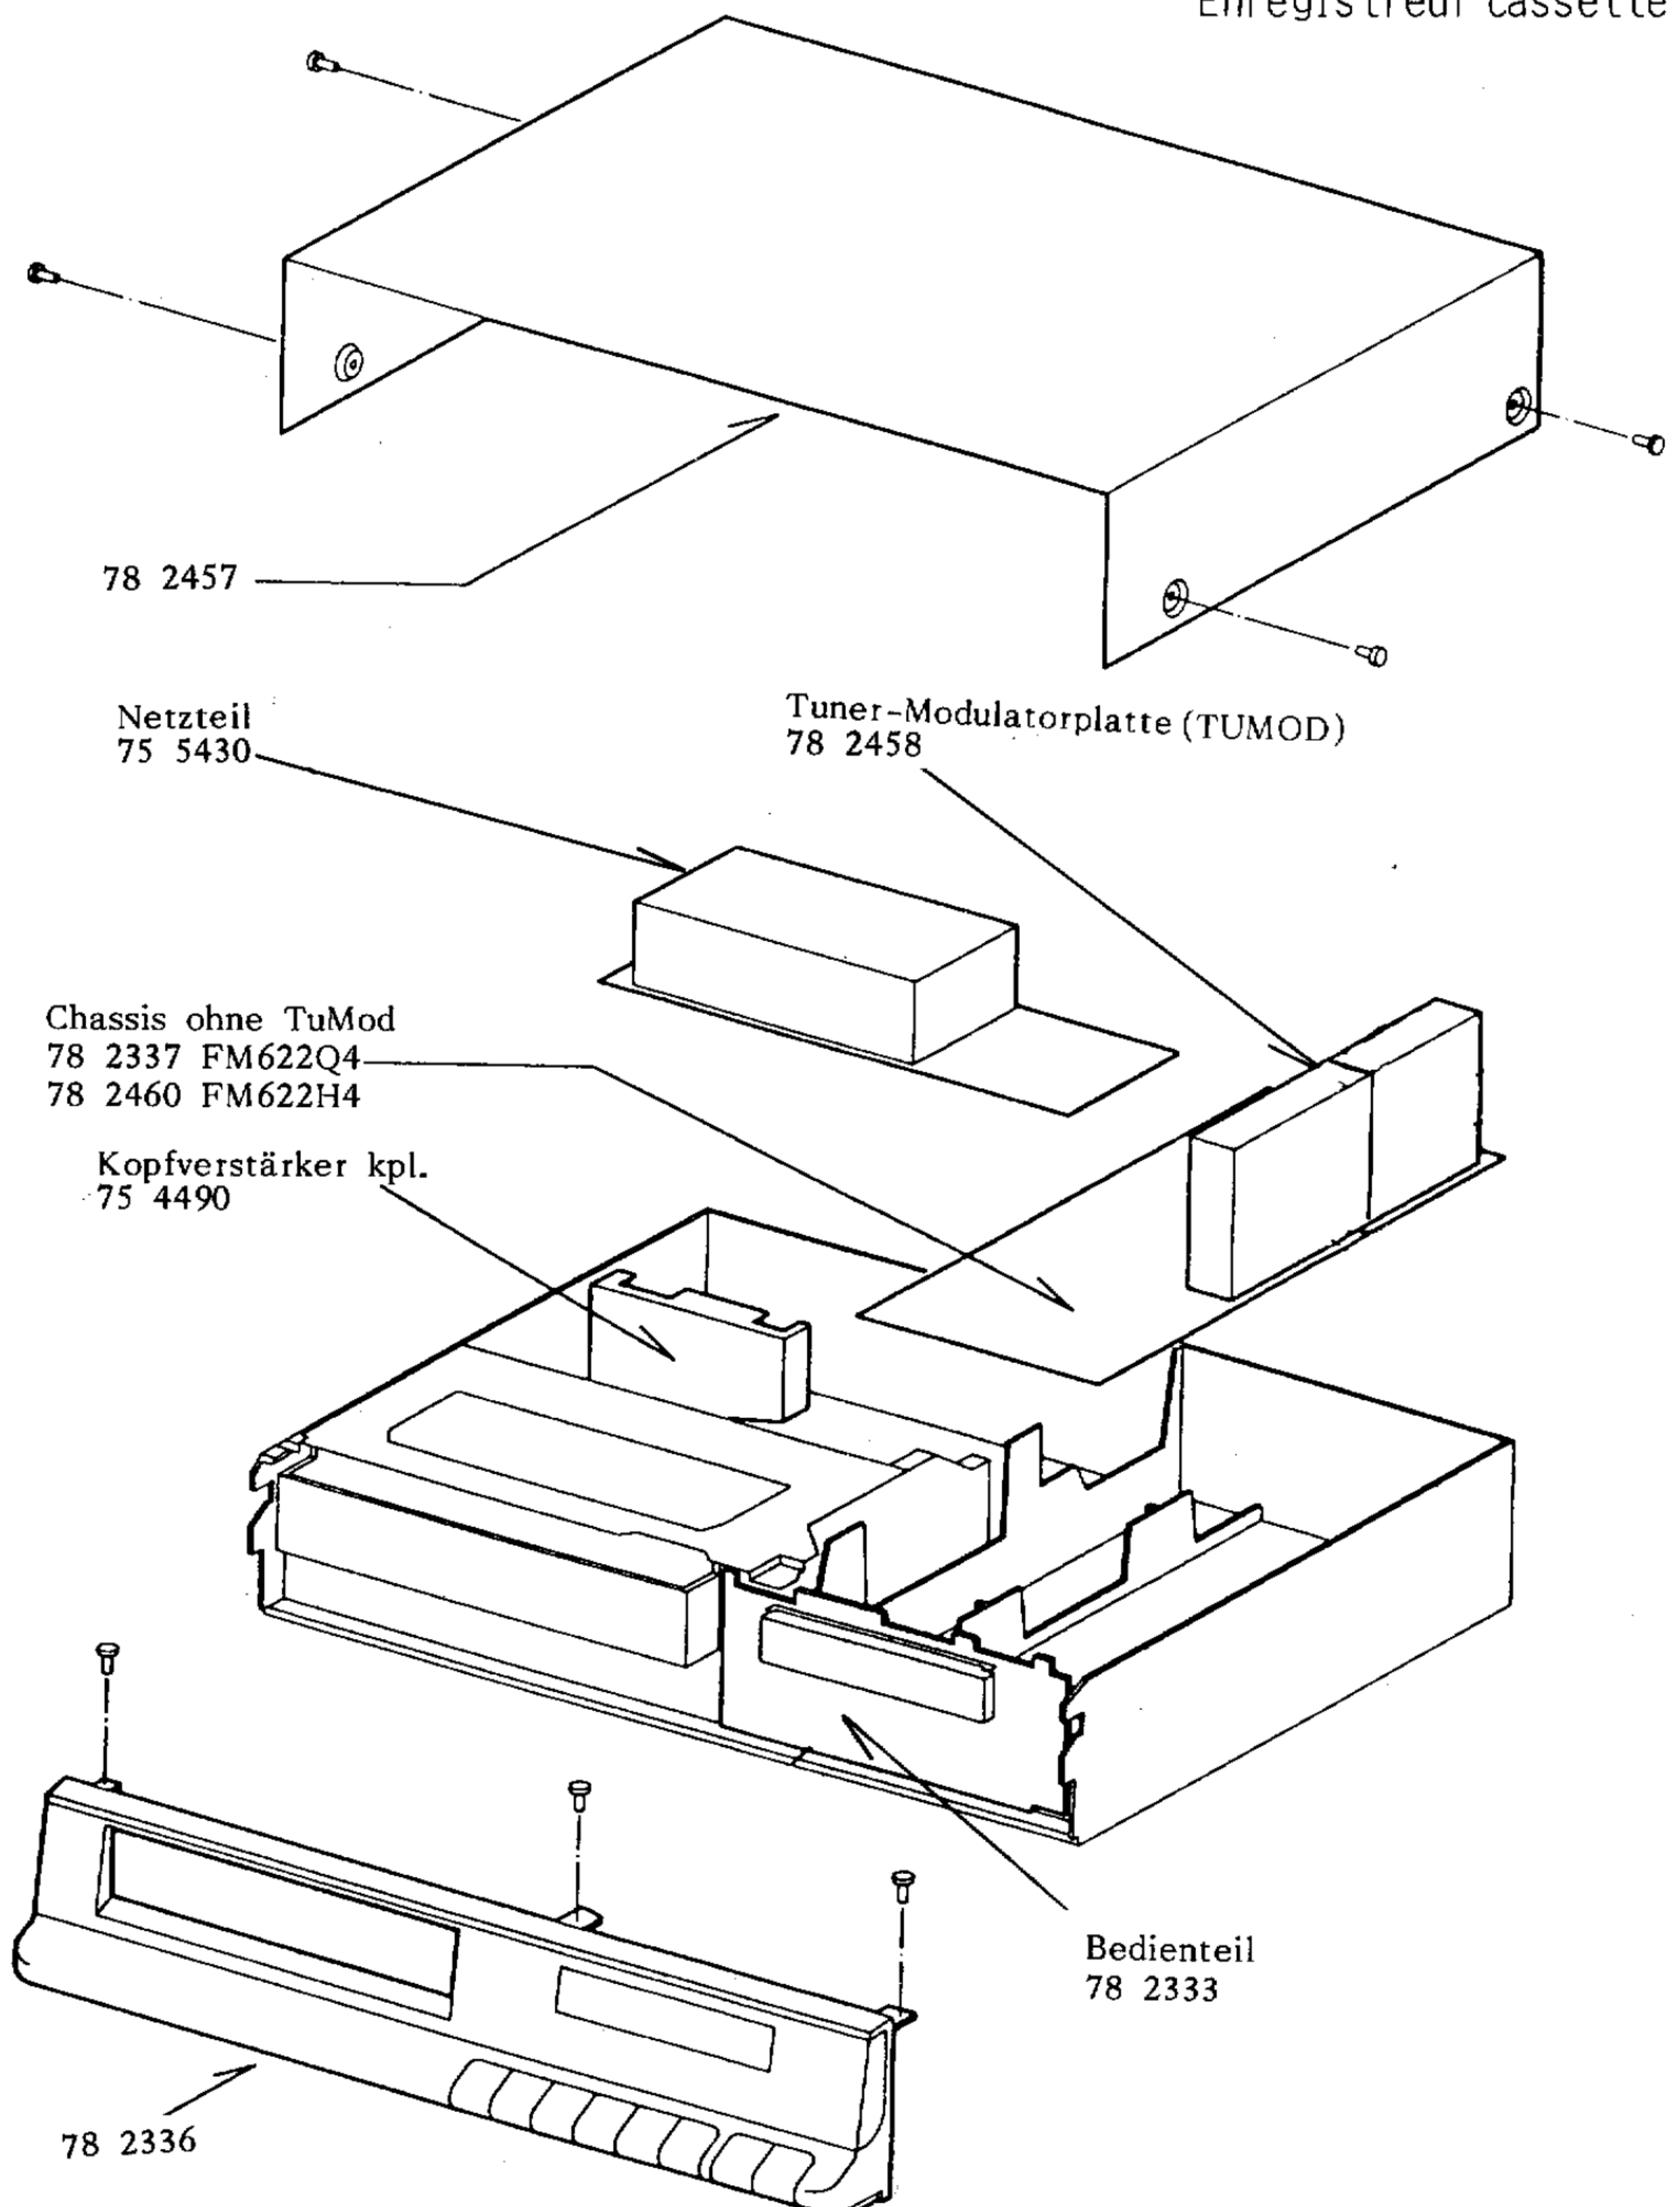

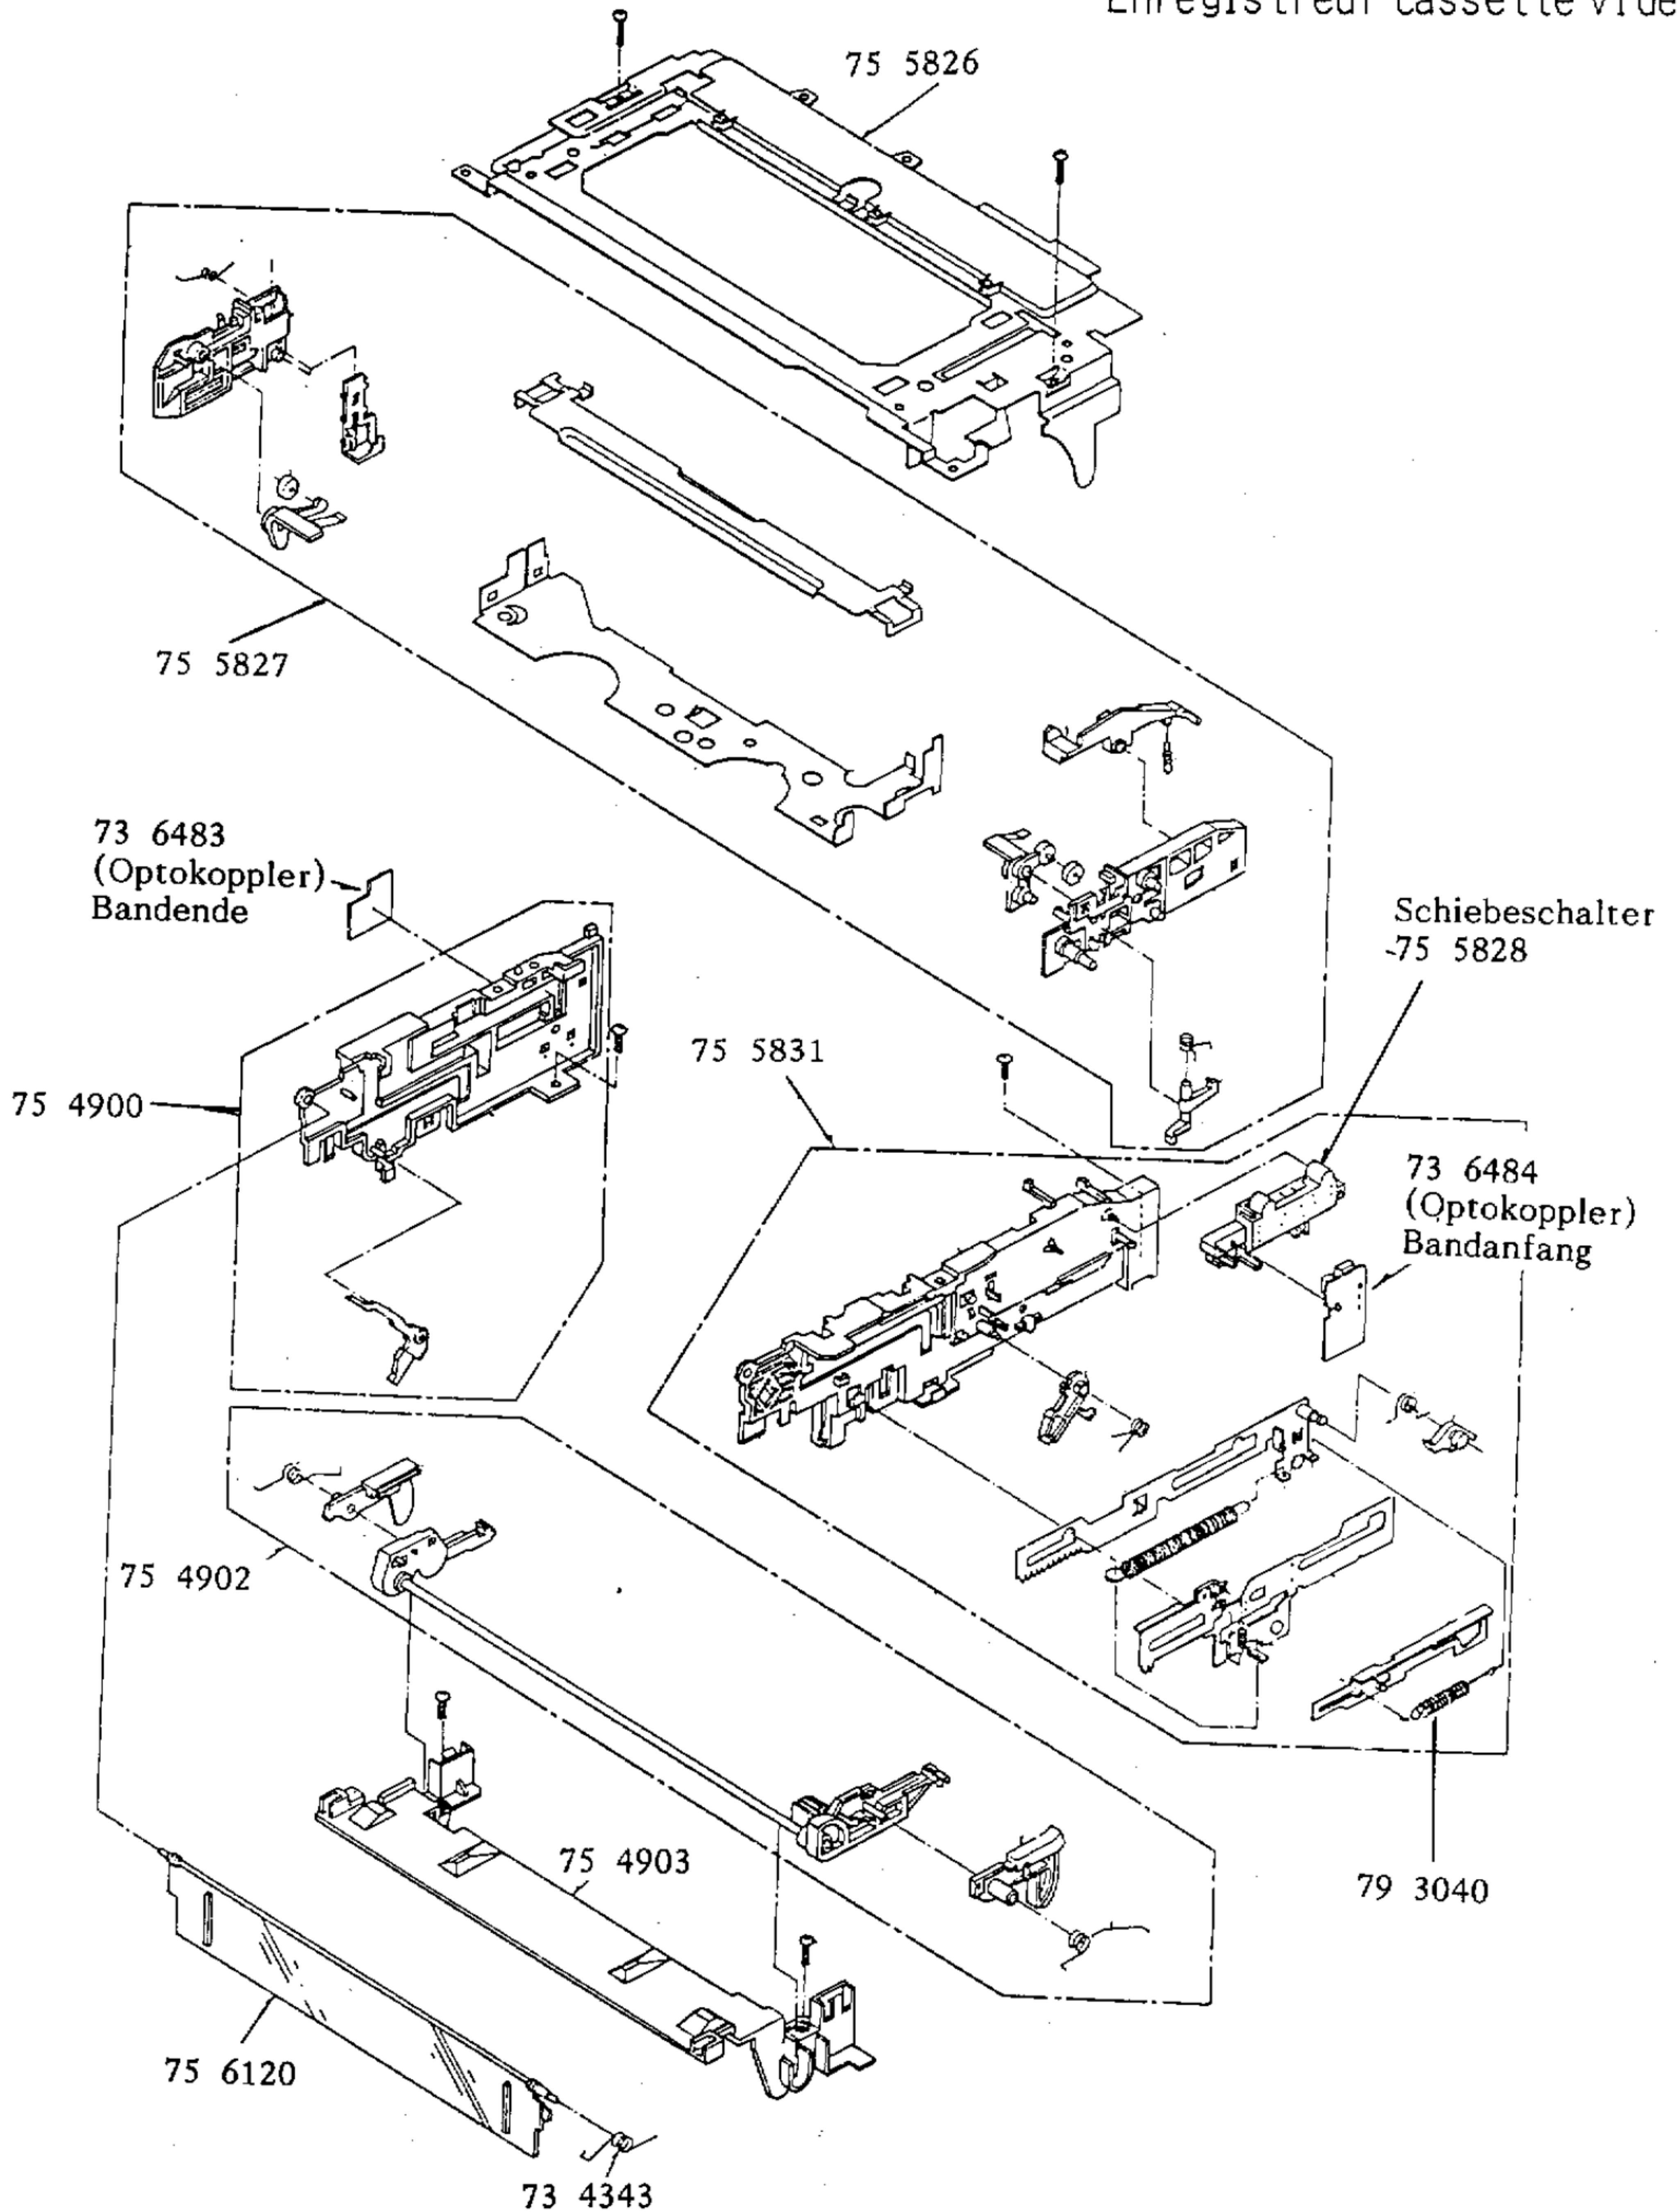 


 
°) 73 4314/02 Satz Federn
set springs
jeu ressorts

*) Unterlegscheiben:

 
 
73 5496 0,13 mm
73 5323 0,25 mm
73 4942 0,50 mm

+) Massefeder
(Funktionsblockade)
73 6330

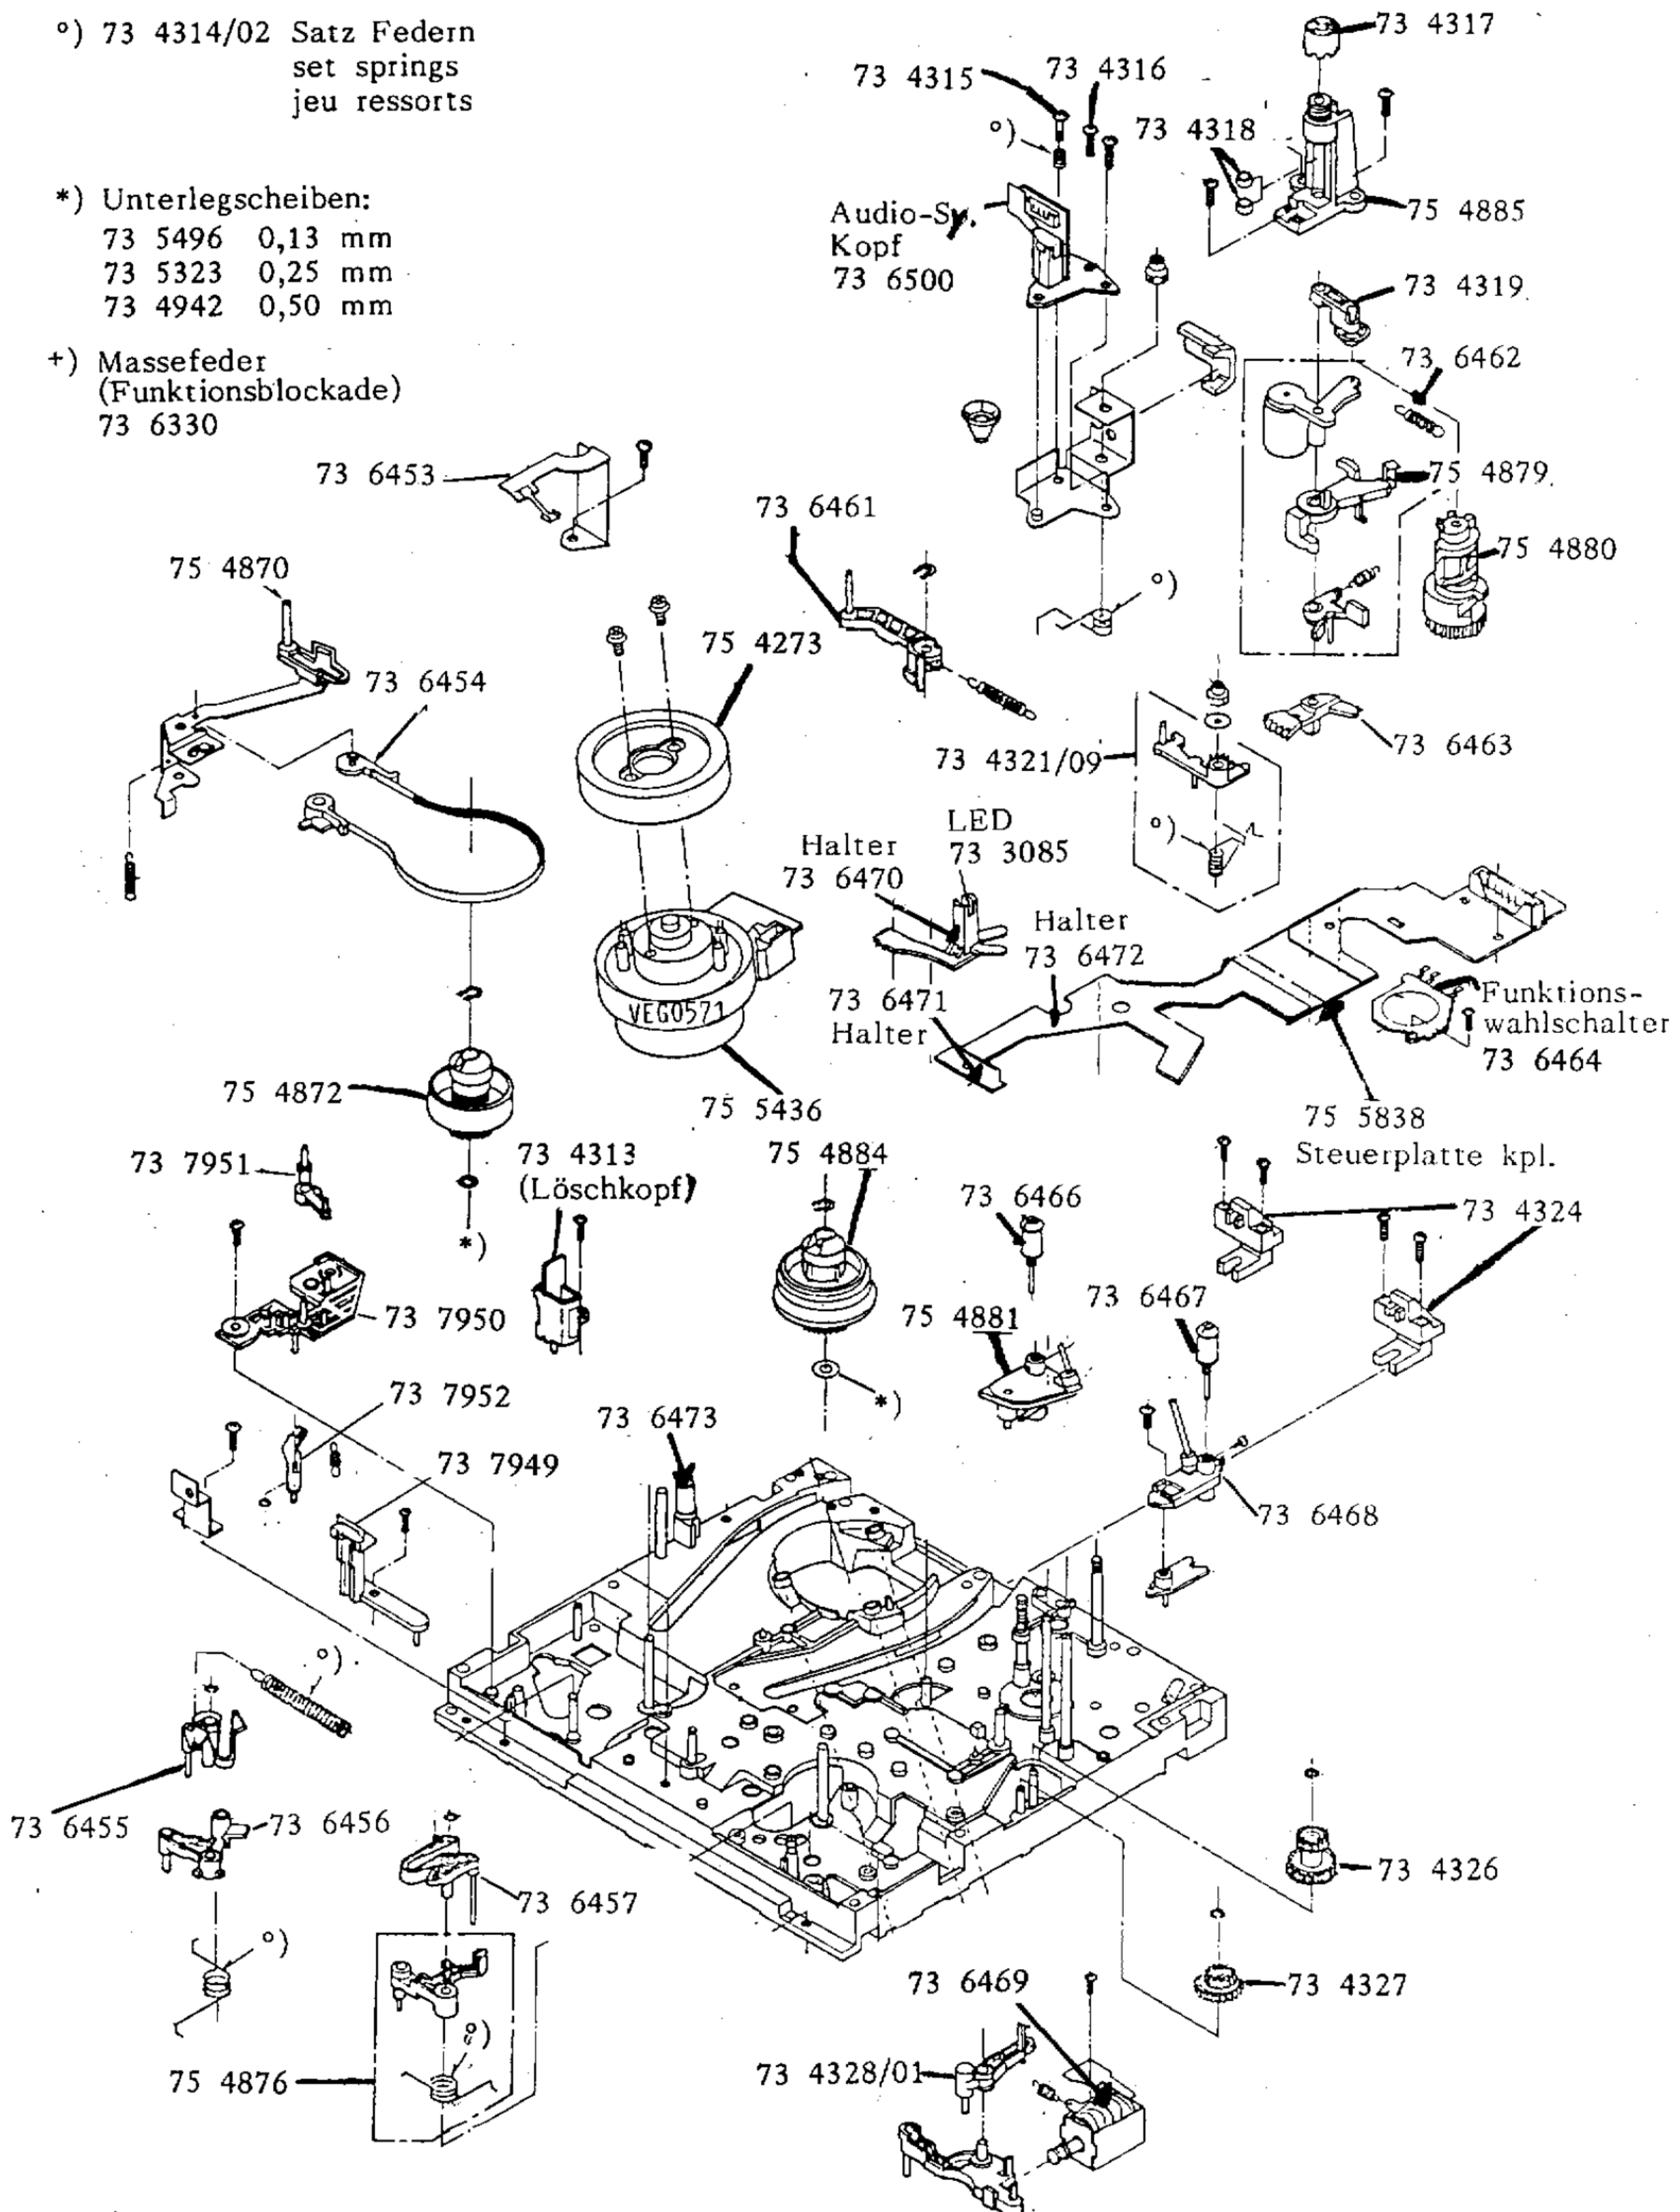

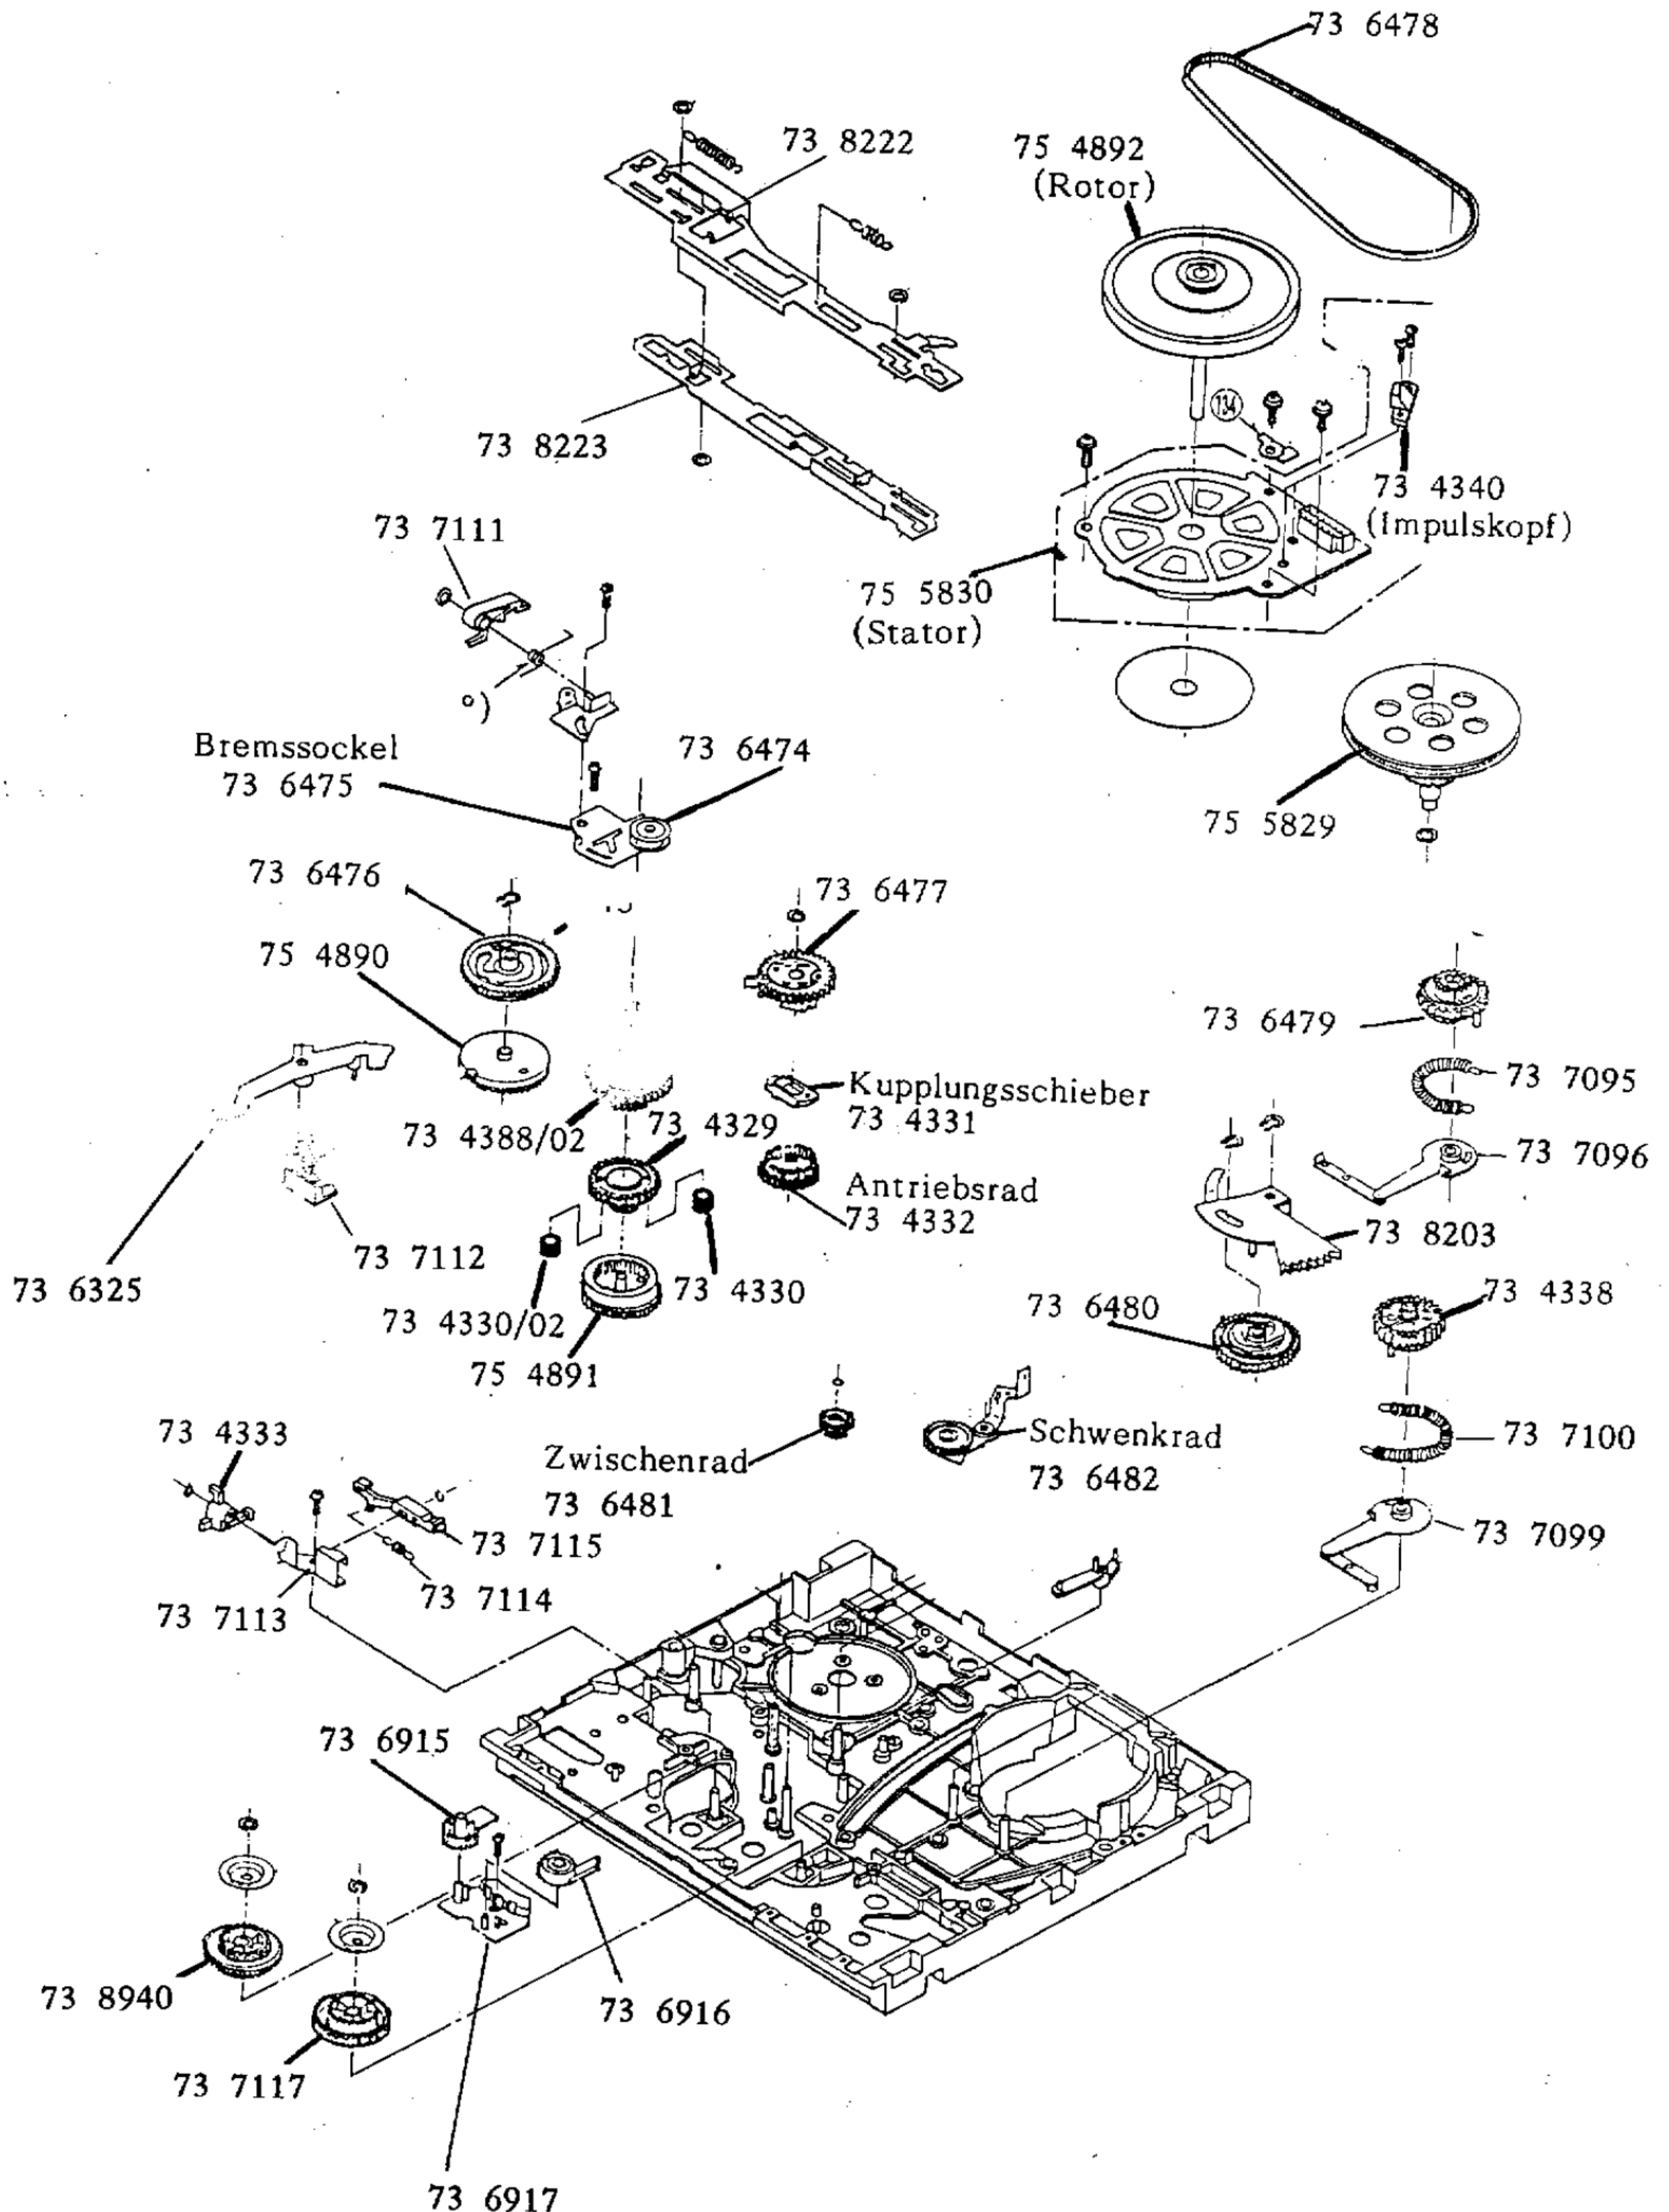

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
	53 0591	Gebrauchsanweisung FM622Q4	instruction manual
	53 0633	Gebrauchsanweisung FM622H4	instruction d'emploi
	53 5321	Service-Druckschrift	service-booklet brochure service
		Service Mittel	service tools
	34 0129	Referenzplatte	tension post adj. plate
	34 0118	Einstellplatte	postadj. plate
	34 0119	Höhenmeßuhr	dial high gauge
	34 0128	Höhenlehre	high gauge
	34 0120	Teutelometer	back tension meter
	75 6290	Kontaktor (0,5N - 5N)	tension gauge
	34 0107	Schraubendreher	screw driver
	34 0218	Kopfscheibenabzieher	drum removal
	34 0186	Adapter (503)	adapter (VP-1)
	34 0155	Multi Testcassette	multi tape

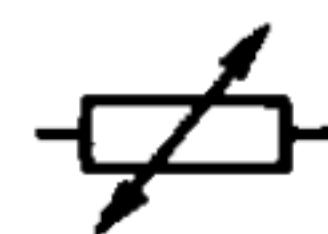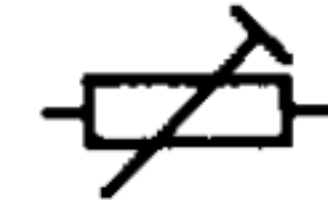Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
L143 L205 L365 L385 L410 L415 L490 L510 L520 L712 L713 L725 L740,742, 745,747 L902 L905 L915 L940	72 8230 72 8230 73 5494 73 5495 73 5494 73 5497 72 2973 73 4954 73 3919 73 5498 73 5499 73 5500 72 7746 73 5501 72 4908 72 7708 72 2973	 6,8μH	
R278	73 4951	 PTC 1.8Ohm	
R285	73 4381	 47Ohm	
R377 R445	73 3165 73 6660	 4.7KOhm Kanaleinstellung (47KOhm)	f. Chanel
R503 R605 R660 R695 R735 R752 R765 R770 R785,790 R795 R800,865 R900 R920 R987	73 1582 73 3165 73 3164 73 3132 73 3165 73 3132 73 3164 73 3131 73 3165 73 3132 73 3131 73 3165 73 3133 73 3132	100K Ohm 4.7K Ohm 1K Ohm 10K Ohm 4.7K Ohm 10K Ohm 1K Ohm 2.2K Ohm 4.7K Ohm 10K Ohm 2.2K Ohm 4.7K Ohm 500K Ohm 10K Ohm	

SIEMENSFM622Q4
FM622H4VIDEOGERÄTE
VIDEO-CASS-RECORDER
Video Equipments
Video cartridge recorder
Equipements Video
Enregistreur cassette video

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
			
CD122, 124, 125	73 3234	LL101A,B,C or BAS85	
CD130, 131, 135, 146, 148, 170, 175, 176	73 4365	RLS4148 or M4148	
D280	70 8179	1N4001	
CD351	73 5830	30C 0,5W	
D445	73 5832	ZTK 9.0	
D578	70 9863	1N4004	
CD611	73 4366	RSL245	
CD615	73 4364	RSL135	
CD744, 864, 914	73 4366	RLS245	

SIEMENS**FM622Q4
FM622H4****VIDEOGERÄTE
VIDEO-CASS-RECORDER**
Video Equipments
Video cartridge recorder
Equipements Video
Enregistreur cassette video

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
			
CIC130	73 5474	M74LS373	
IC145	73 4361	PCF8583	
IC165	72 3039	TL082	
IC180	73 5475	SDA5642	
IC200	73 6913	27128-250NSFM622Q4/H4	
CIC230	73 3137	SDA2087	
IC305	73 5477	AN3824K	
IC322	73 5478	PU42C26	
IC340, 2901	73 4384	AN3814K	
IC360	73 5074	TDA2440-3	
IC390	73 4170	TBA120T	
IC445	73 5832	ZTK9.0	
IC480	73 4372	TDA5652	
CIC570	73 5479	AN3231	
IC635	73 4554	MSM6965-3RS	
IC890	73 5480	TA8644	
IC980	73 5481	74HCOON	
IC1501, 1502	73 6459	ON2170	

 
SIEMENS**FM622Q4
FM622H4**
VIDEOGERÄTE
VIDEO-CASS-RECORDER
 Video Equipments
 Video cartridge recorder
 Equipements Video
 Enregistreur cassette video

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
			
T113	73 3231	BC369G	
T118	73 3231	BC369G	
T270	73 2803	BC875/877/879 SIE	
T435	73 3231	BC369G	
T506	72 3397	BC327-40	
T515	71 1566	BC327.25	
T578	72 4287	BC328-40	
T590	72 4287	BC328-40	
T745	72 4287	BC328-40	
			
CT115	73 6904	SMDBC848C	
CT120	73 6904	SMDBC848C	
CT153	73 6904	SMDBC848C	
CT170	73 6904	SMDBC848C	
CT226	73 6904	SMDBC848C	
CT230	73 6904	SMDBC848C	
CT245	73 6904	SMDBC848C	
CT255	73 6904	SMDBC848C	
CT258	73 6904	SMDBC848C	
CT285	73 6904	SMDBC848C	
CT330	73 6904	SMDBC848C	
CT333	73 6905	SMDBC858B	
CT372	73 6905	SMDBC858B	
CT420	73 6906	SMDBC848B	
CT440	73 6906	SMDBC848B	
CT455	73 6907	SMDBC850C	
CT498	73 6908	SMDBC857B	
CT500	73 5484	SMDBC817-25	
CT501	73 5484	SMDBC817-25	
CT505	73 6906	SMDBC848B	
CT553	73 6910	SMDBC848	
CT558	73 6910	SMDBC848	
CT575	73 6910	SMDBC848	
CT585	73 6910	SMDBC858	
CT588	73 6911	SMDBSV52	
CT593	73 6905	SMDBC858	
CT615	73 6910	SMDBC848	
CT650	73 6910	SMDBC848	
CT655	73 6905	SMDBC858	
CT720	73 6910	SMDBC848	
CT722	73 6905	SMDBC858	

SIEMENSFM622Q4
FM622H4VIDEOGERÄTE
VIDEO-CASS-RECORDER
Video Equipments
Video cartridge recorder
Equipements Video
Enregistreur cassette video

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
			
CT775	73 6910	SMDBC858	
CT780	73 6905	SMDBC848	
CT783	73 6905	SMDBC848	
CT865	73 6910	SMDBC858	
CT885	73 3239	SMDBFS20 ON4158	
CT887	73 6910	SMDBC848	
CT899	73 3239	SMDBFS20 ON4158	
CT914	73 6910	SMDBC848	
CT935	73 6910	SMDBC848	
CT940	73 6910	SMDBC848	

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
TM-1	78 2333	Bedieneinheit kpl.	keyboard unit cpl. unite de commande
	75 6087	Floureszenzanzeige	fluoresc. indic. panel affich. fluorescent.
	73 3142	Tipptaste (8 x)	push button touche
D3640- 3645	73 0304	 BAT42/43 or BAT85/86	
IC3617 IC3620	73 4306 79 0071	 SBX1494 UPD7537ACO43B600/1	

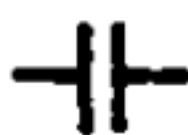Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
PW-1	75 5430	Netzteil	Power Supply PCB.
	73 4350	Optokoppler	optocoupler
			
TR-1	75 5431	Wandlertrafo	
DR1350	73 6243		
DR1355	72 4908		
L1408	72 8230	6,8µH	
L1420	72 8267	20µH	
			
C1350	73 5493		
C1352	72 5681		
C1353	72 5681		
C1355	73 5493		
C1365	72 5681		
C1363	73 6286	47µF 385V	
			
GL1360	73 2778	SKB380	
D1307, 1328	73 5488	BAT52D	
D1337, 1338, 1397, 1405, 1410	73 5489	BAT52M	
D1400	73 3147	ZD12	
D1415, 1425	73 5490	BYV28/200	
			
IC1315	73 5482	TDA4605	
IC1383	73 4353	TL431CLP	
IC1430	73 5483	L455	

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
T1335	73 5487	 BUZ80	
R1328, 1397, 1425 R1388 R1395 R1405	73 0296 73 3164 73 4227 72 7486	 4.7Ohm 5% 1KOhm 0.22Ohm 10% 10Ohm 10%	
SI1350	kein ET	 1.25A	