



51 0768/00
D1
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N)

51 2304/00
D1
Aufstellanleitung
(D, GB, F, E, NL,
DK, N, S, SF, P)

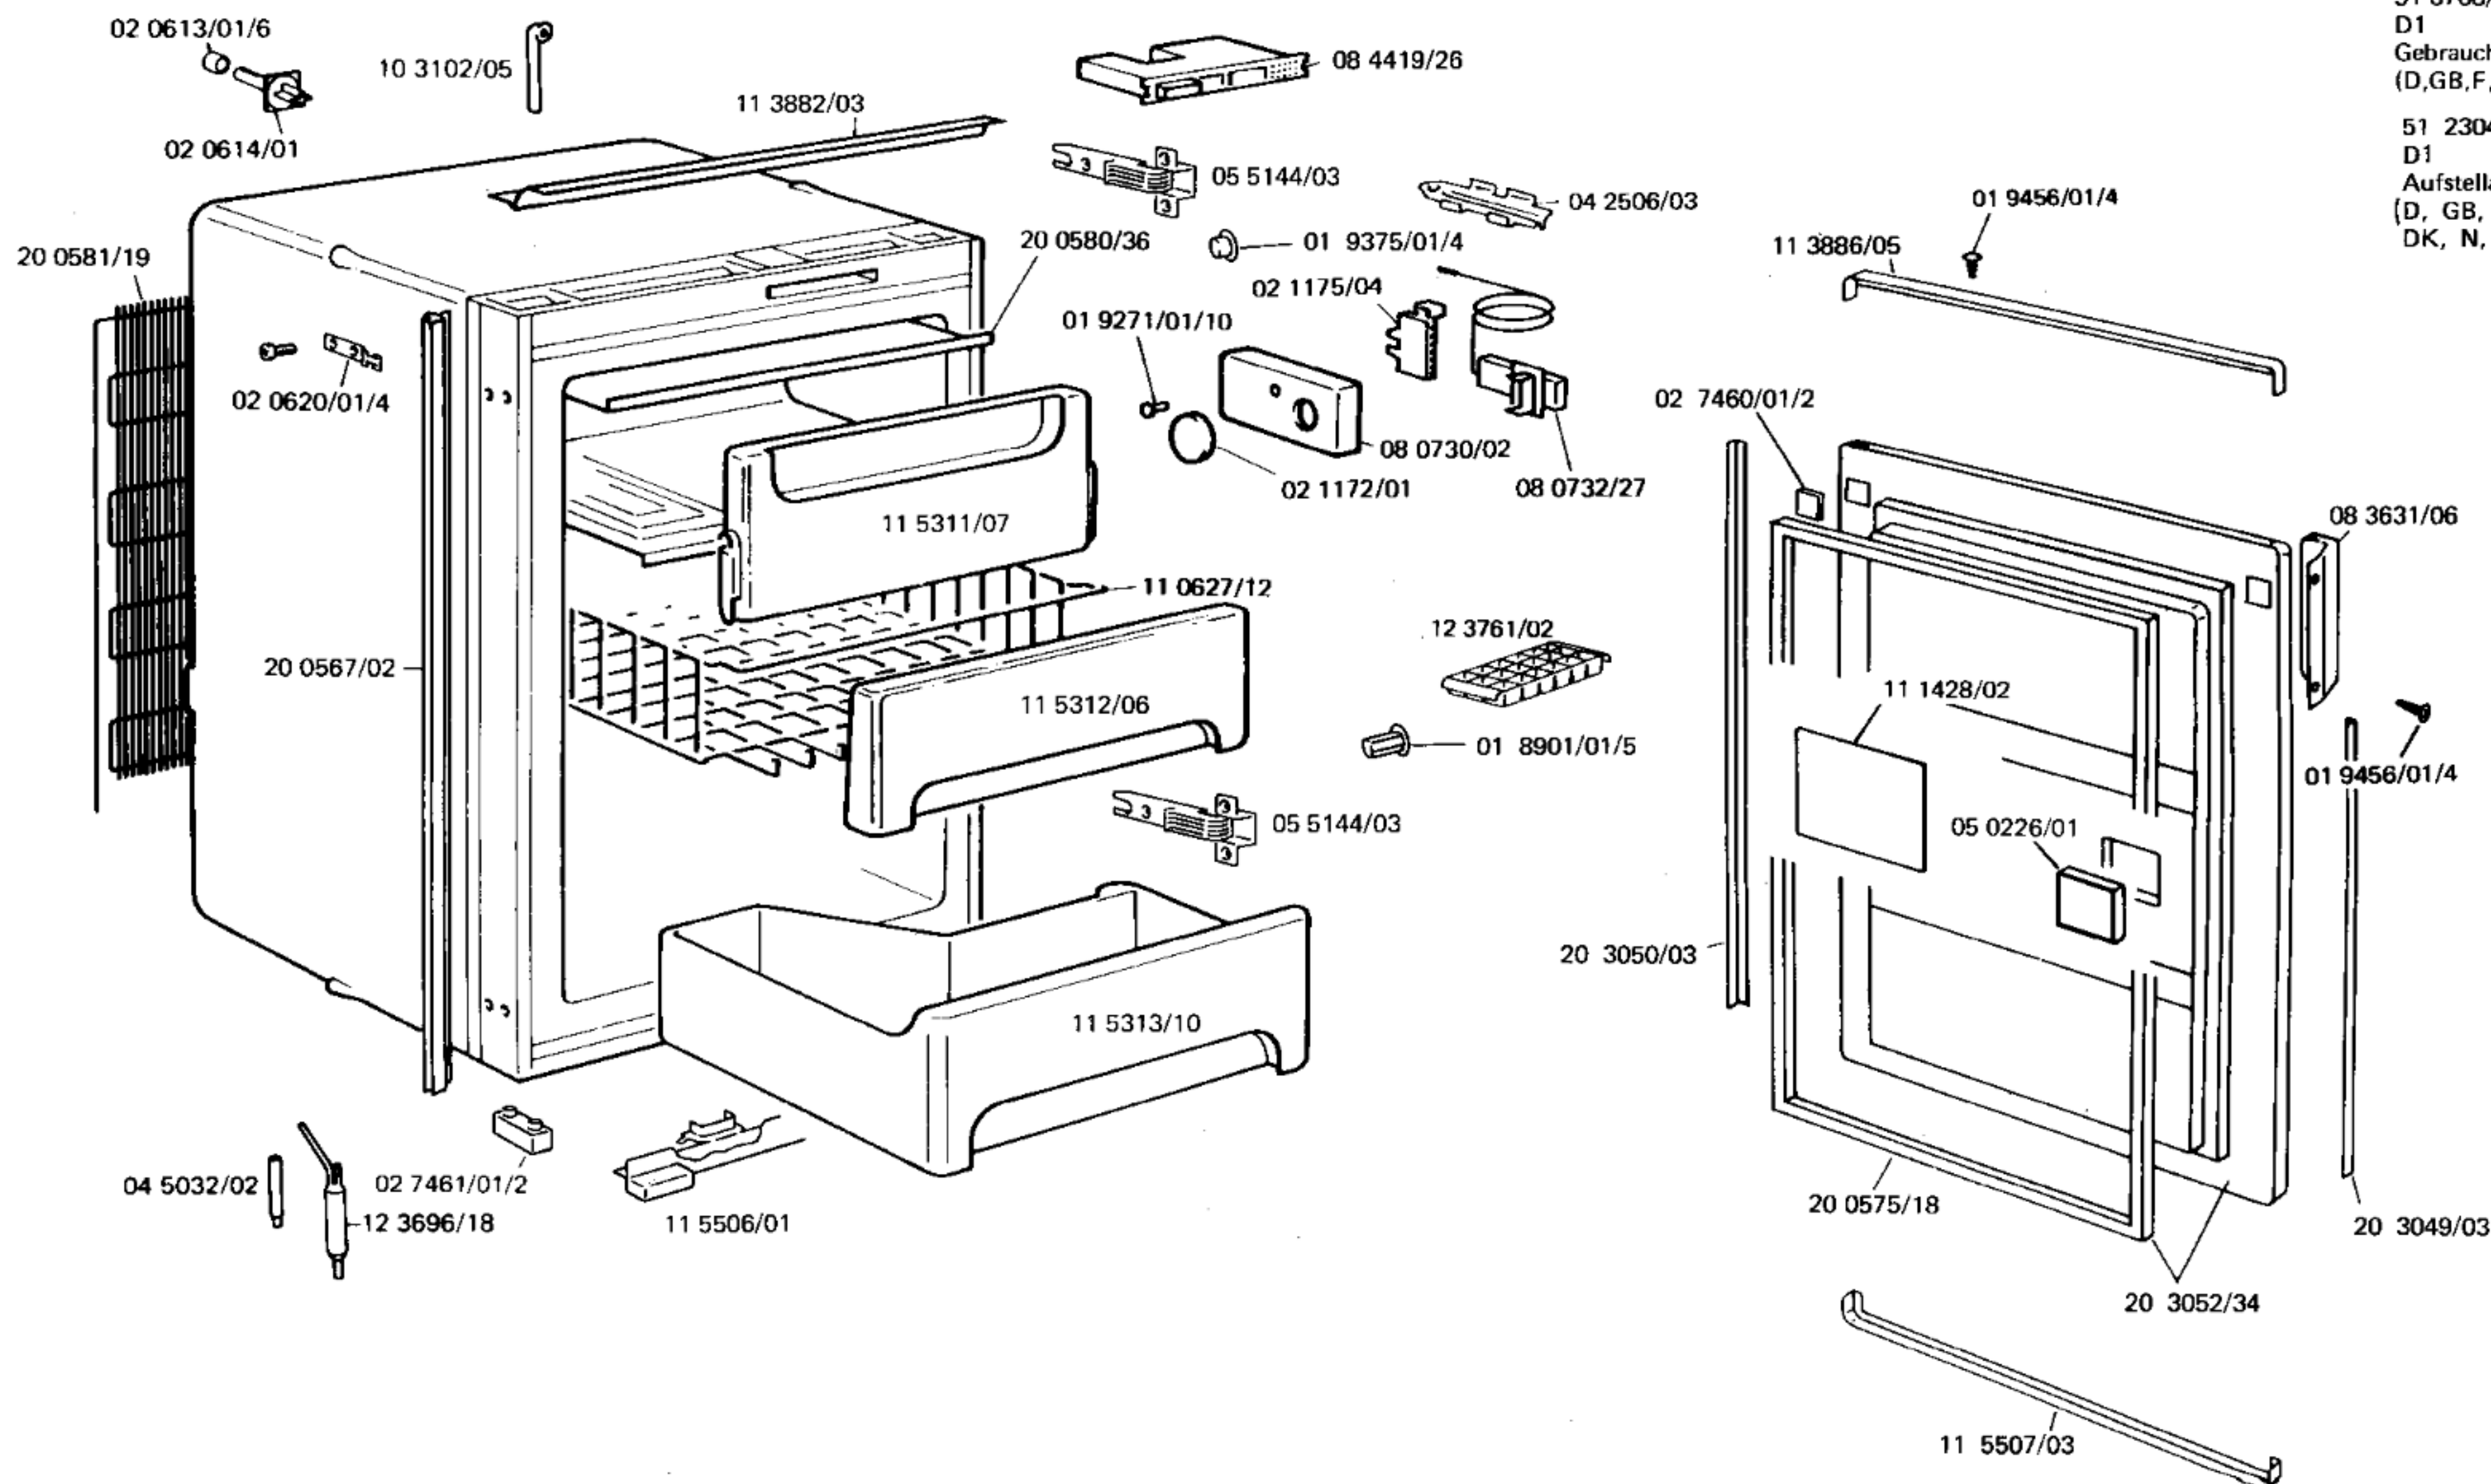

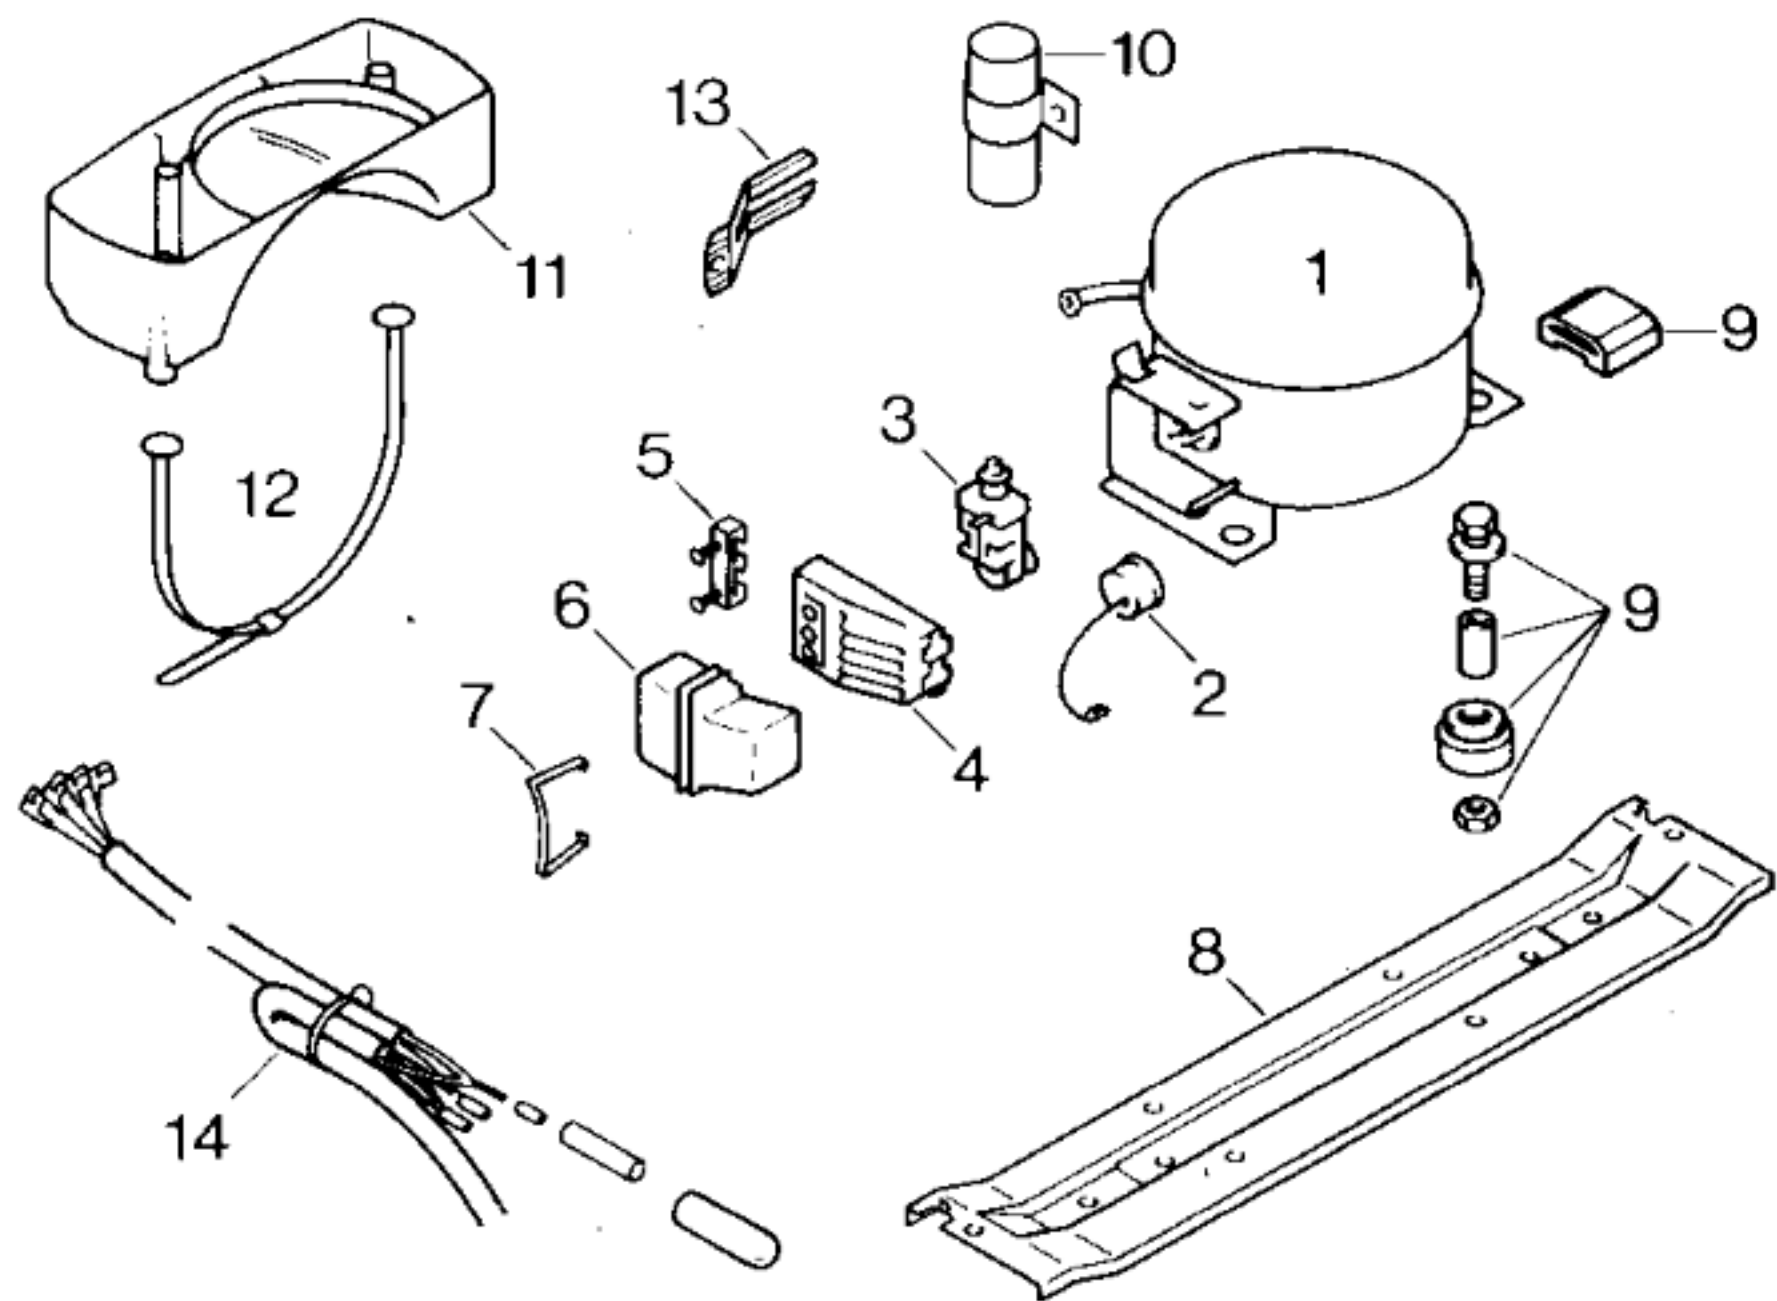

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit		V 702		
Anlaufstrom/Starting current/Cour. de démarrage		7,8		
Widerstand/Resistance/Résistance		23,8		
		19,7		
Temp.-Regler/Thermostat		M + J		
Typ/Type		TF 57 SF		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		- 28 - 19		
Valeurs de commutation		- 34 - 26		
(„abtauen“ od.)		- 20 - 15		
Füllmenge/Fill.quantity/Charge		R12	g	90
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	D1			
	Danfoss			
1	13 1064/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				