


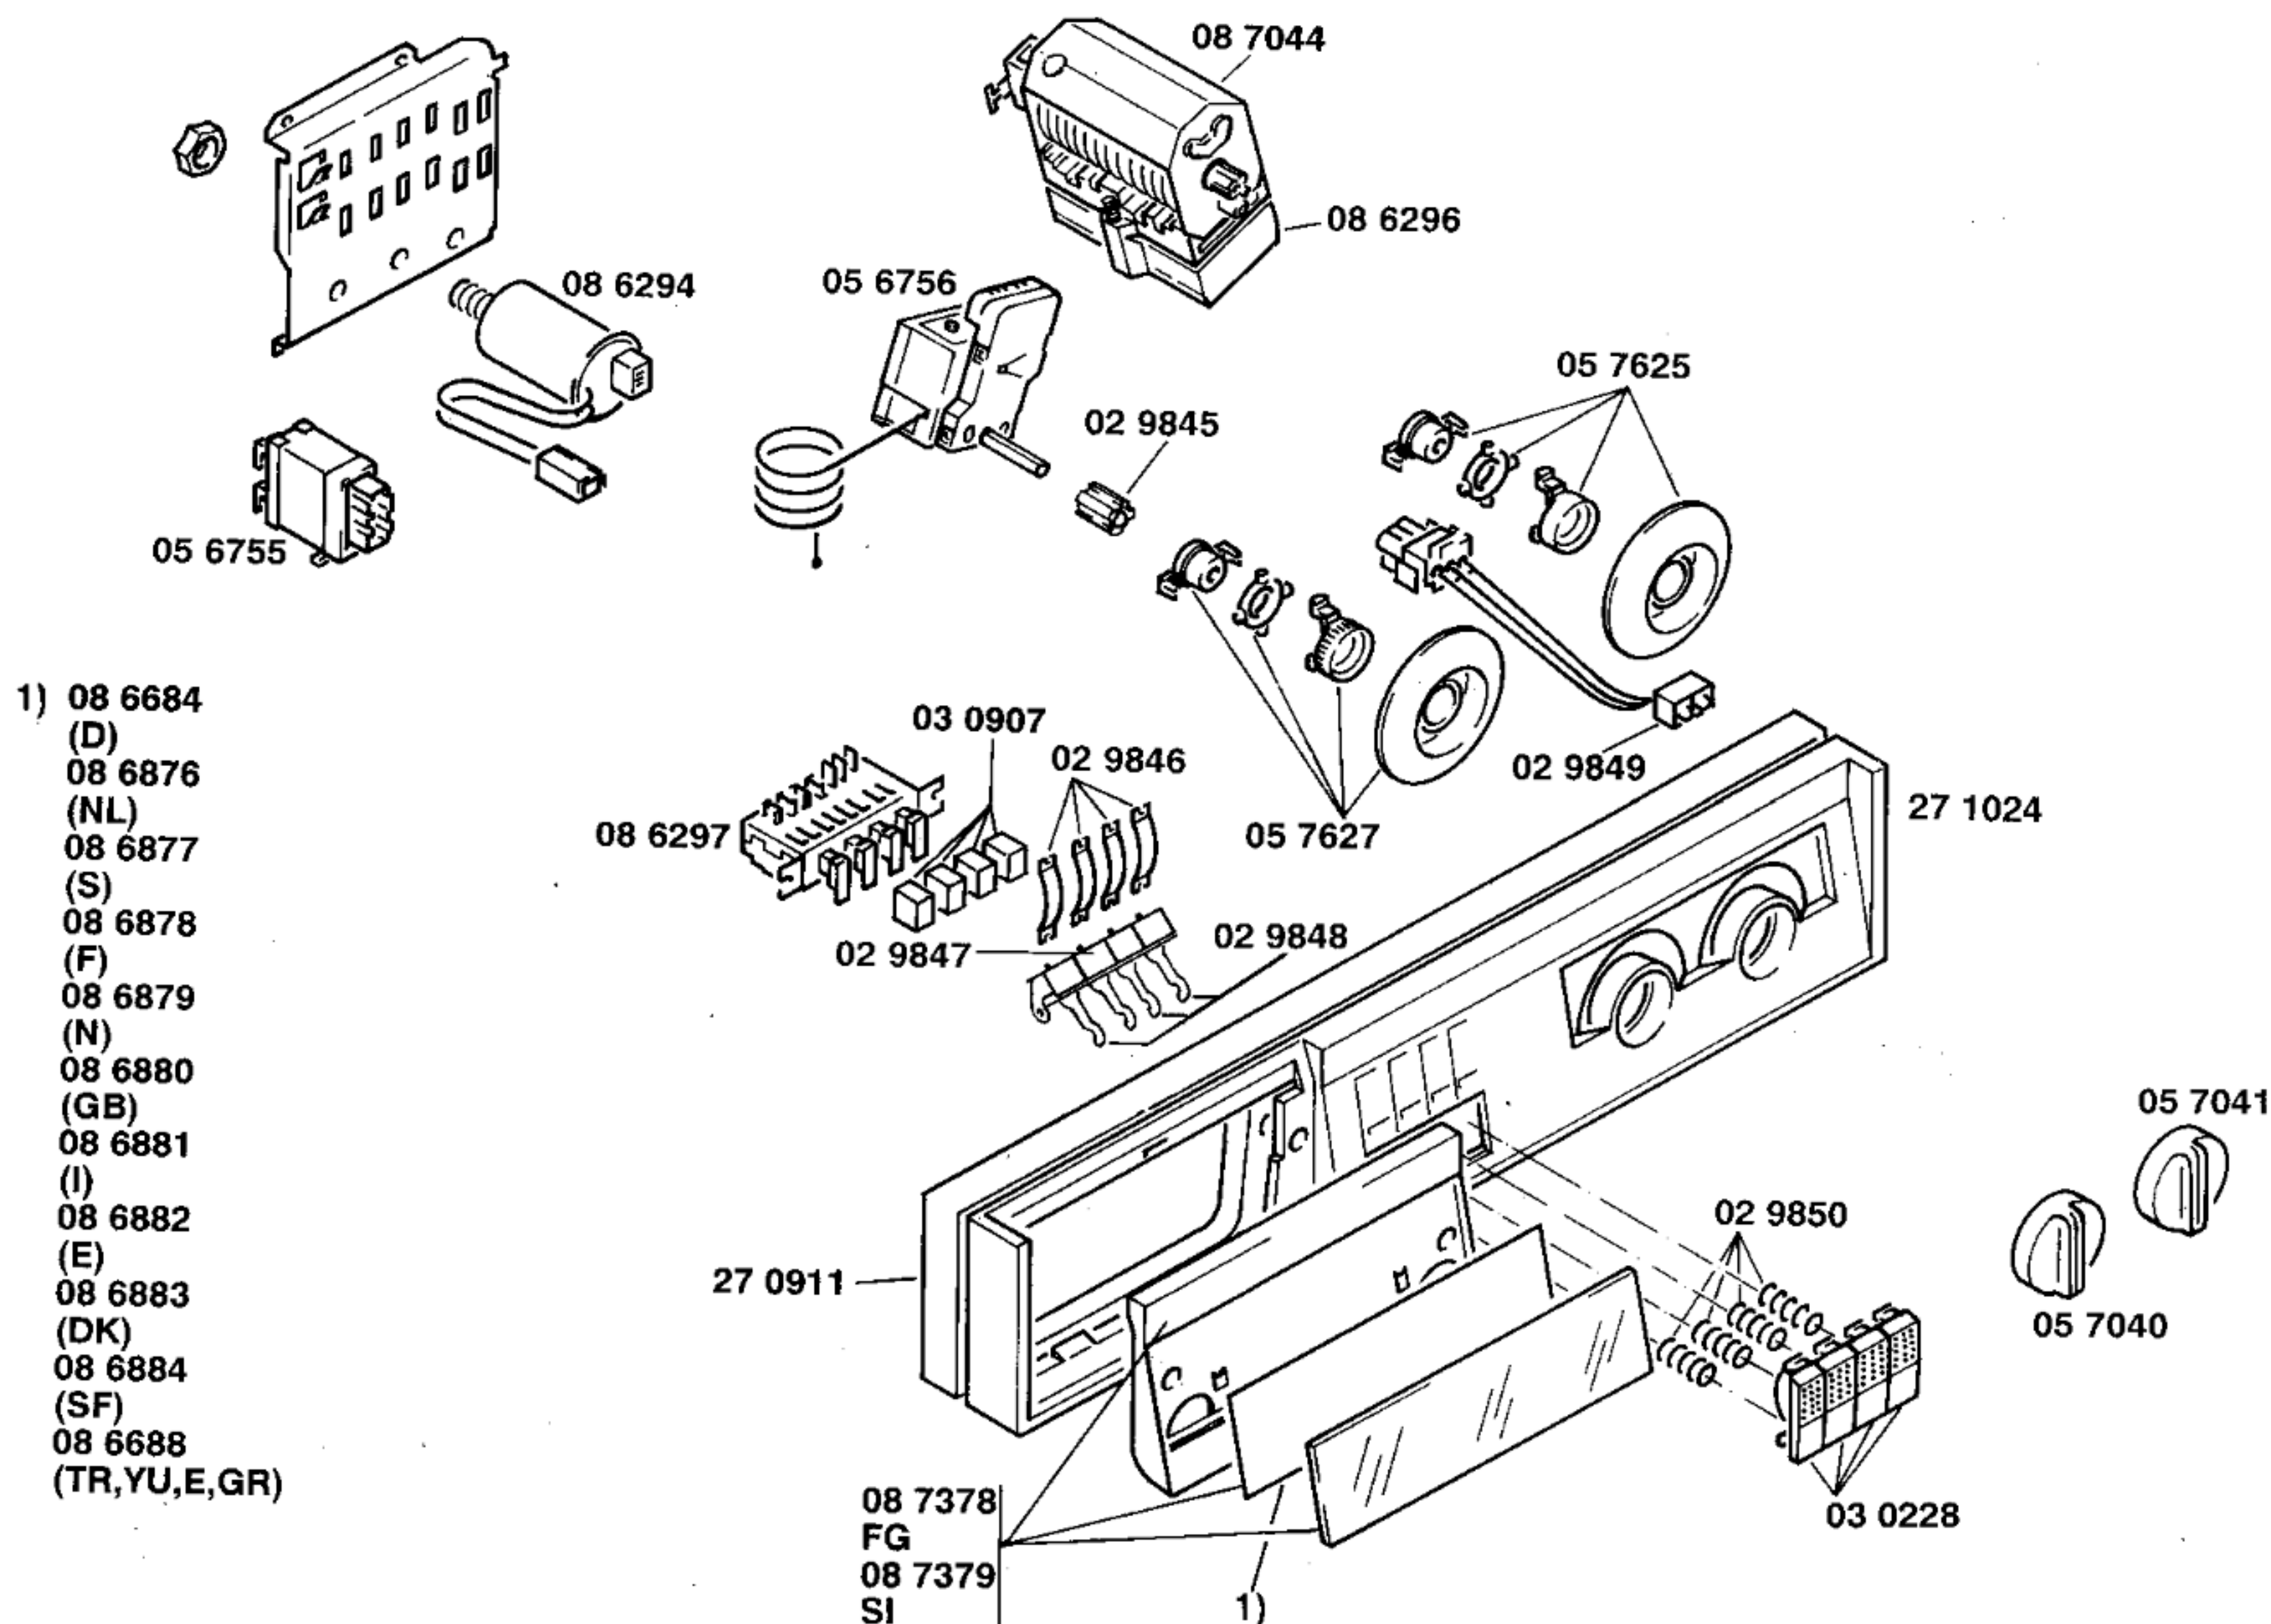

Gebrauchsanweisungen:


51 3549
(D,I,S,N,SF)
51 3550
(S,DK)
51 3551
(NL,F,E,GB)


Programmtabellen:

51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

Aufstellanweisungen:

51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

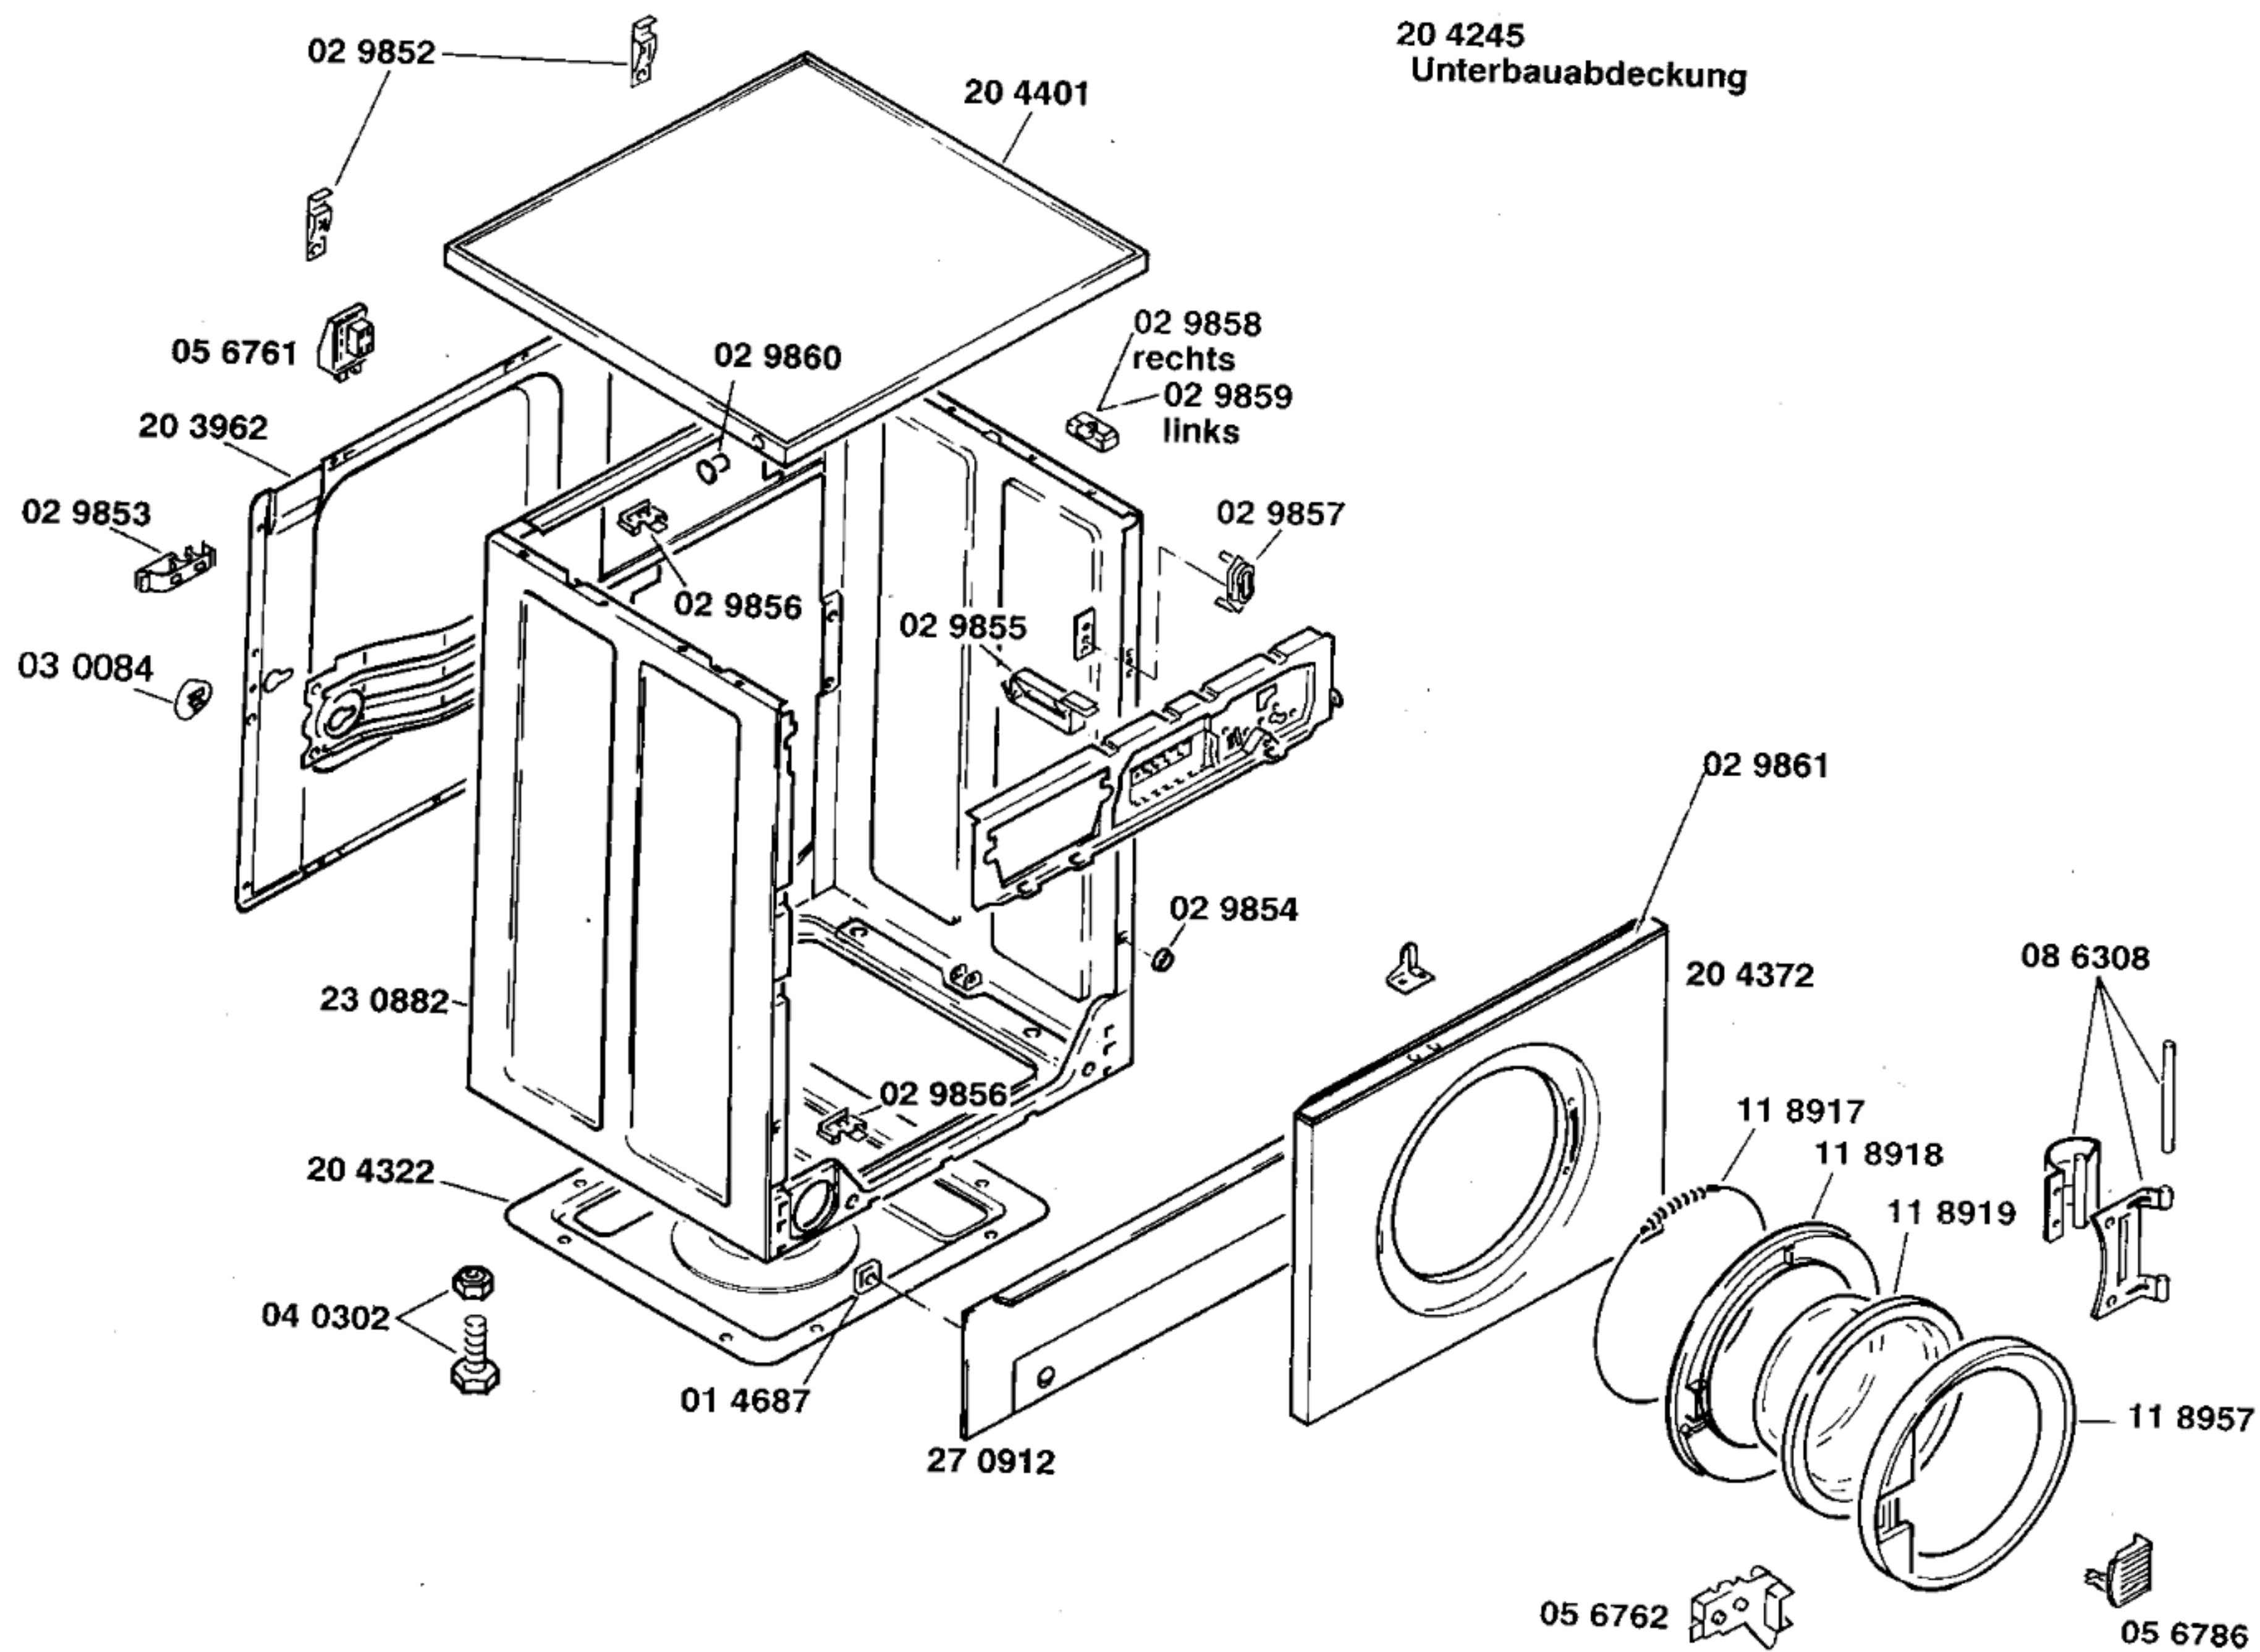

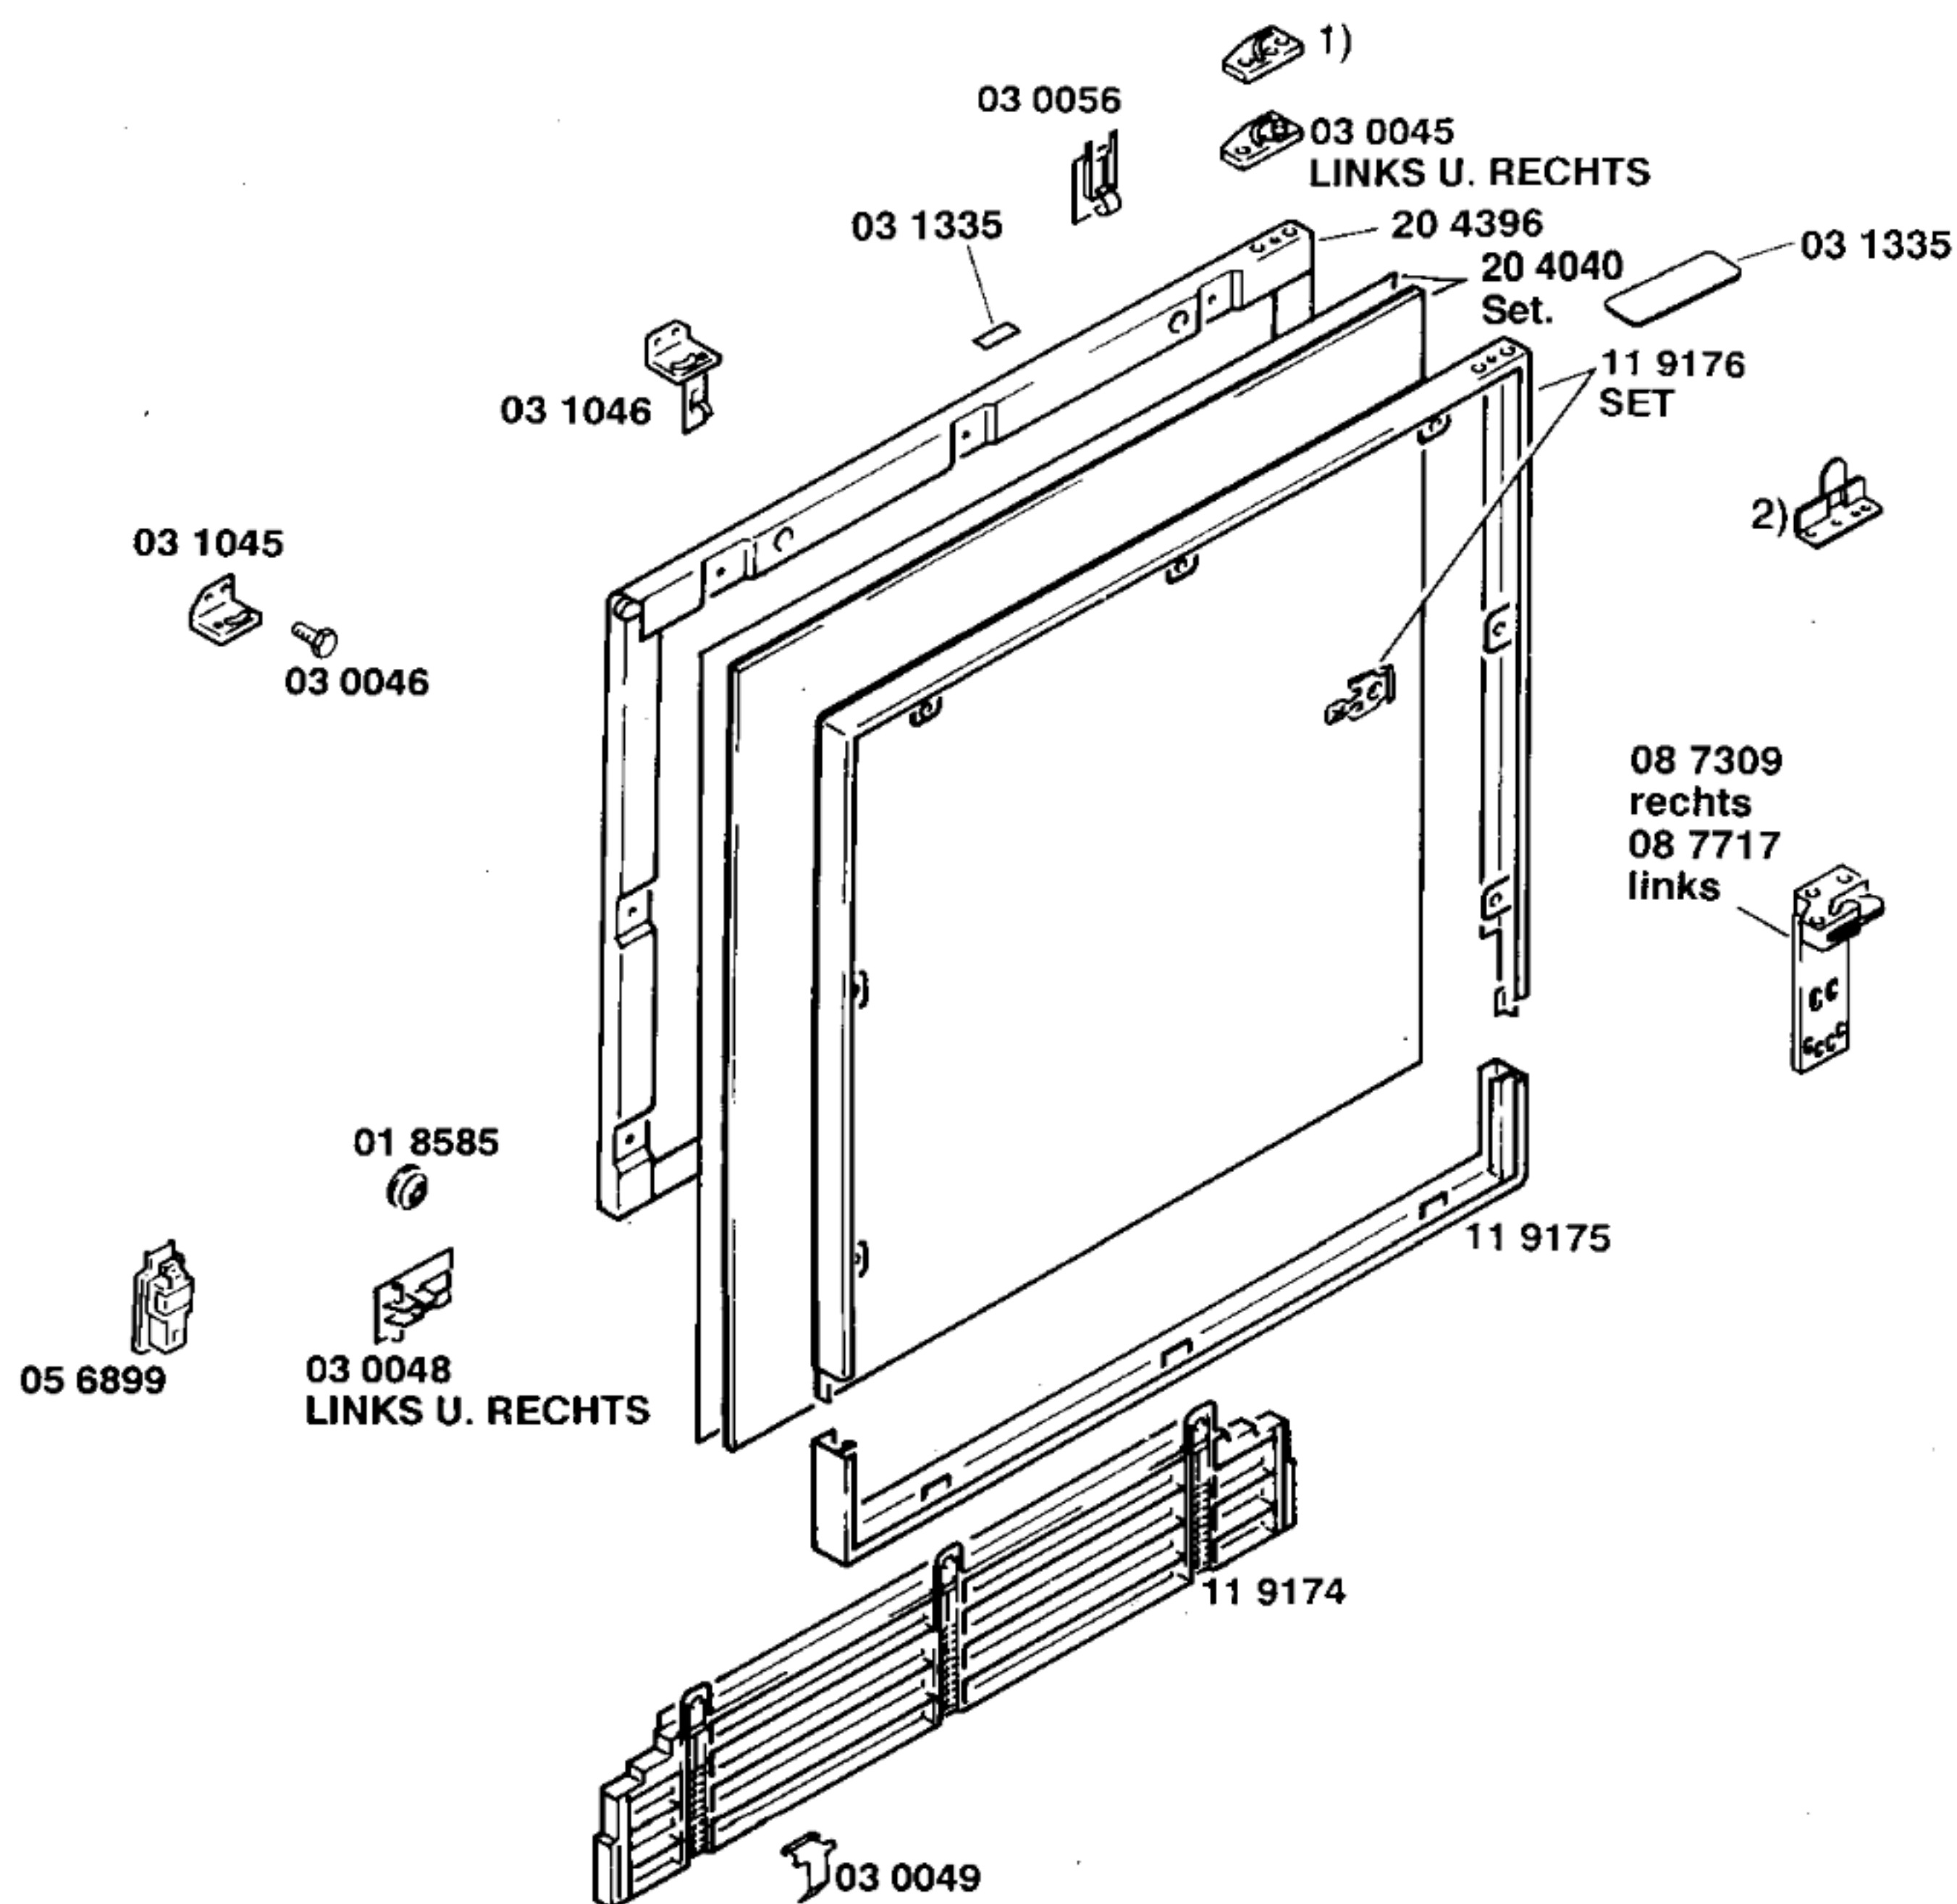

1) 03 0055
LINKS
03 0054
RECHTS

2) 03 0052
RECHTS
03 0051
LINKS

