 


 
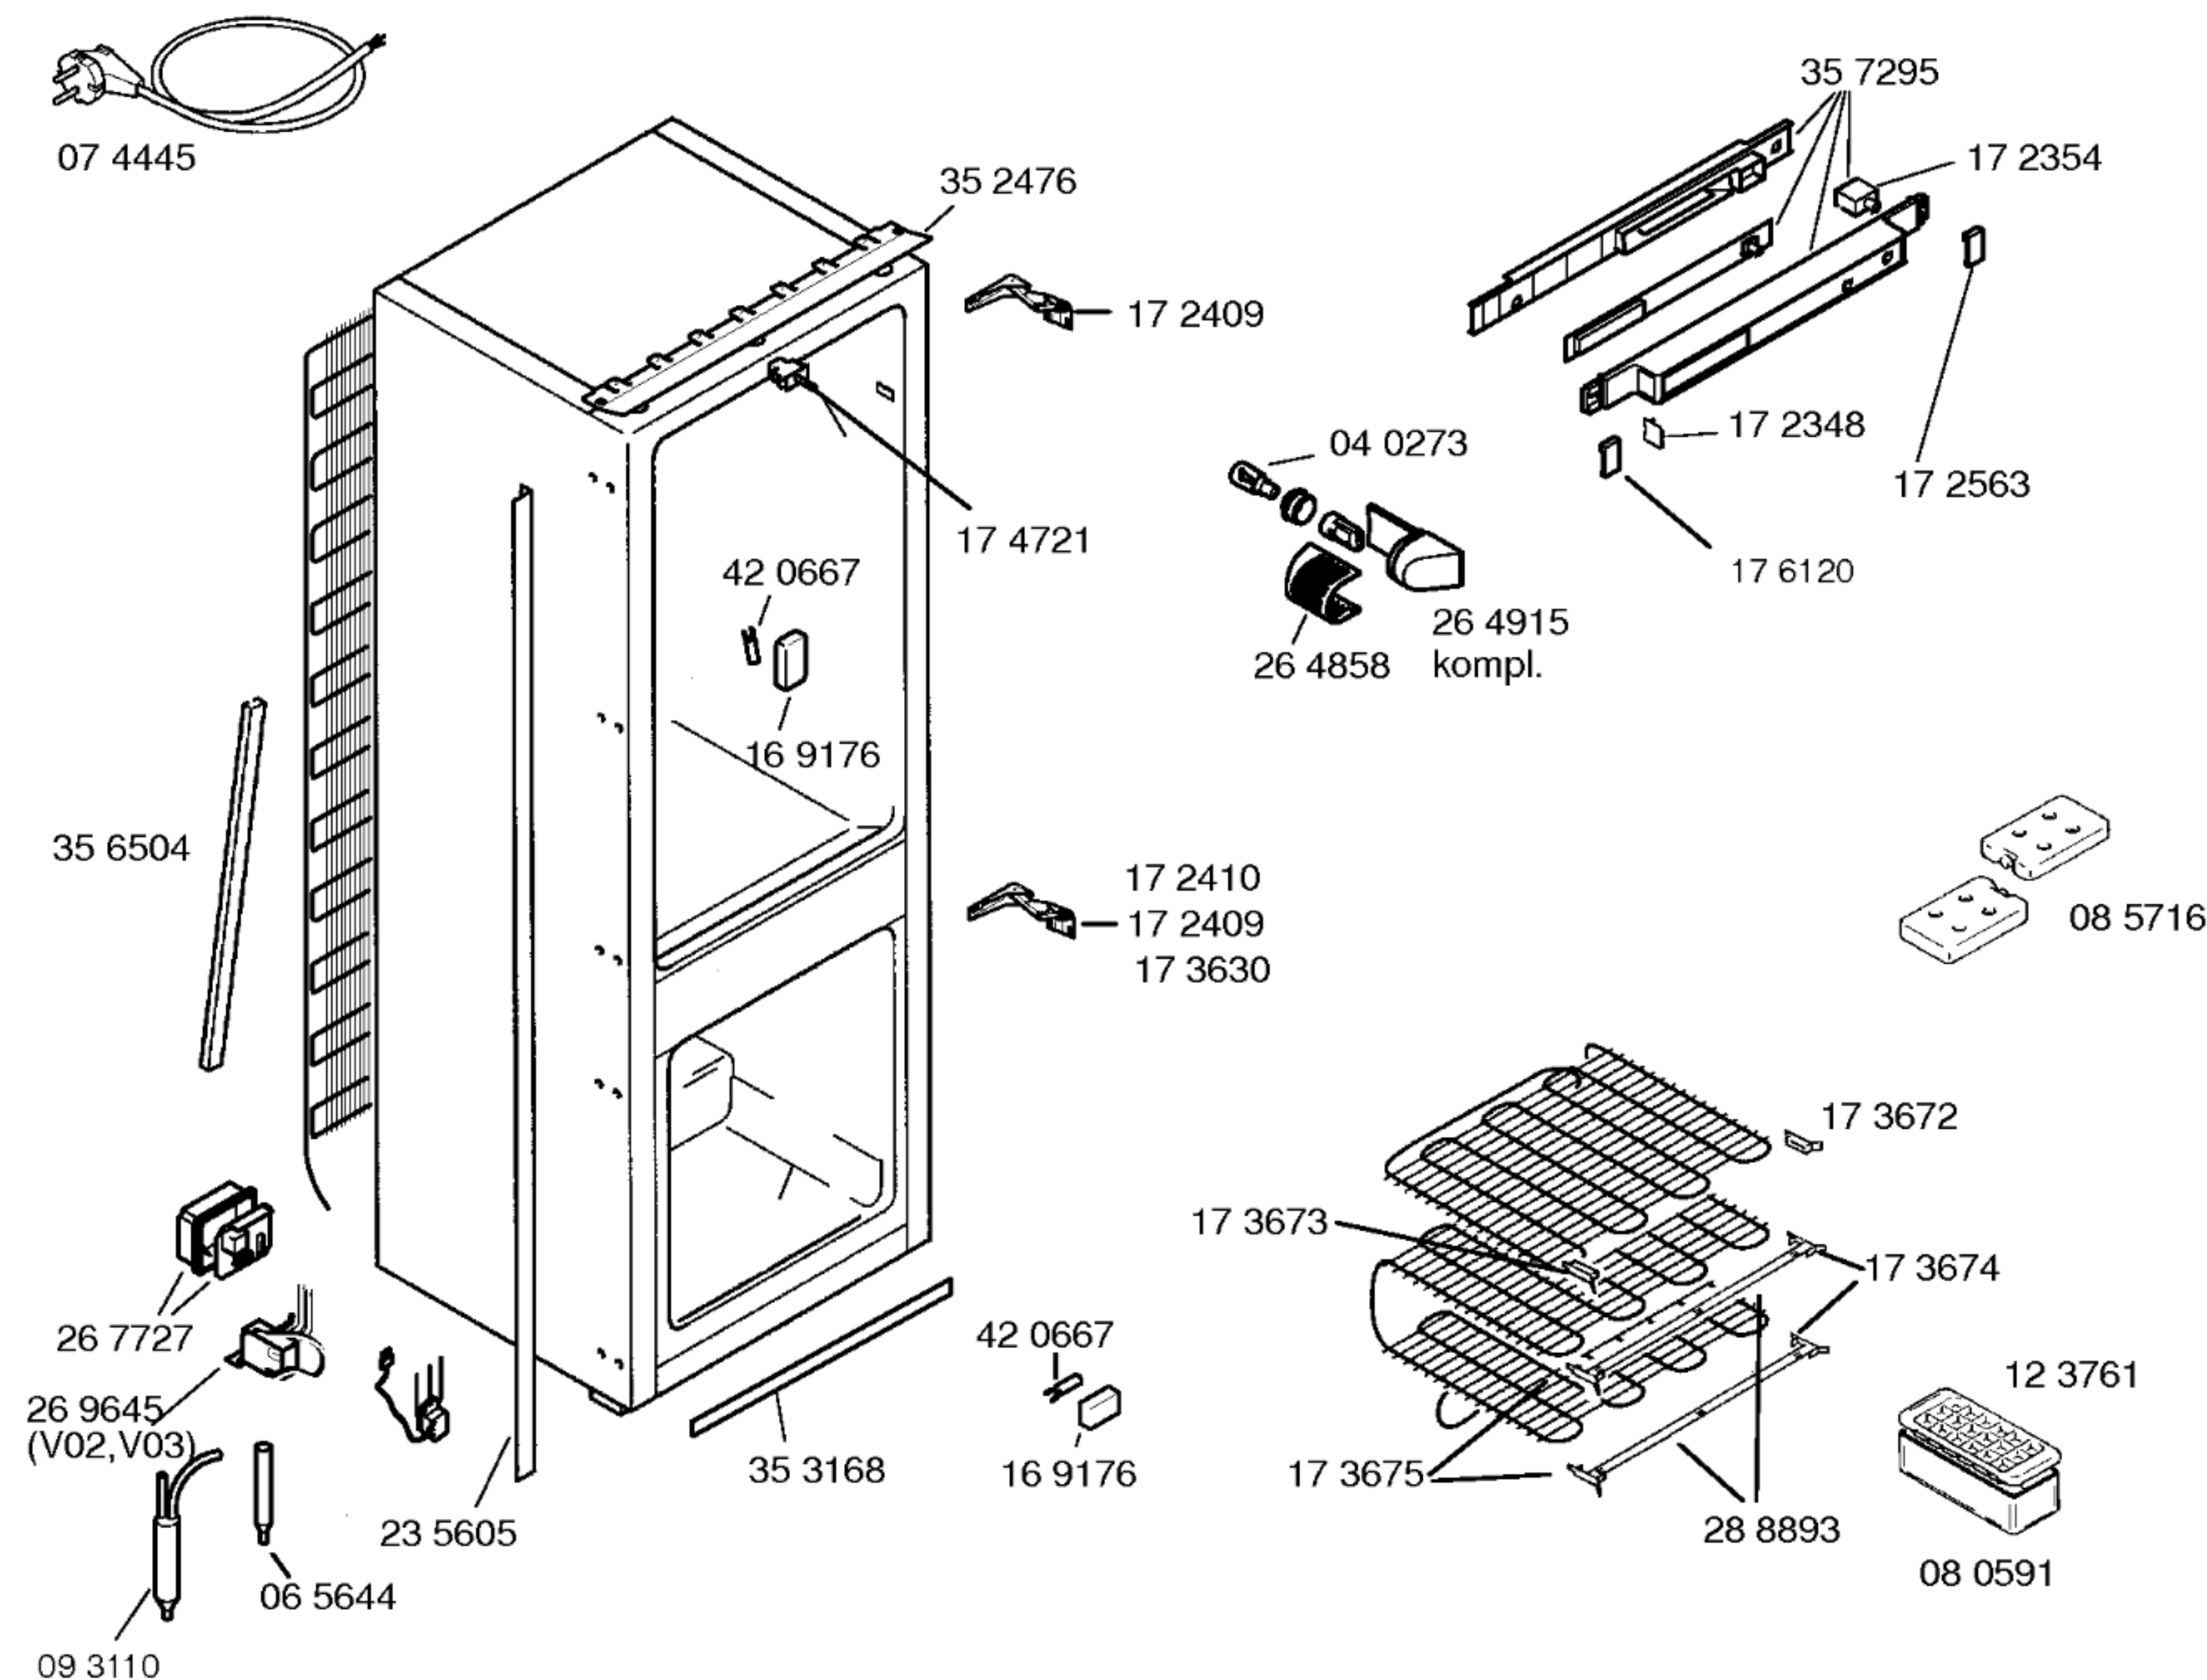 


 
Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 5109
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
(D,GB,F,I,NL,S,E,DK,N,,SF)
52 2494

Befestigungssatz
49 1365

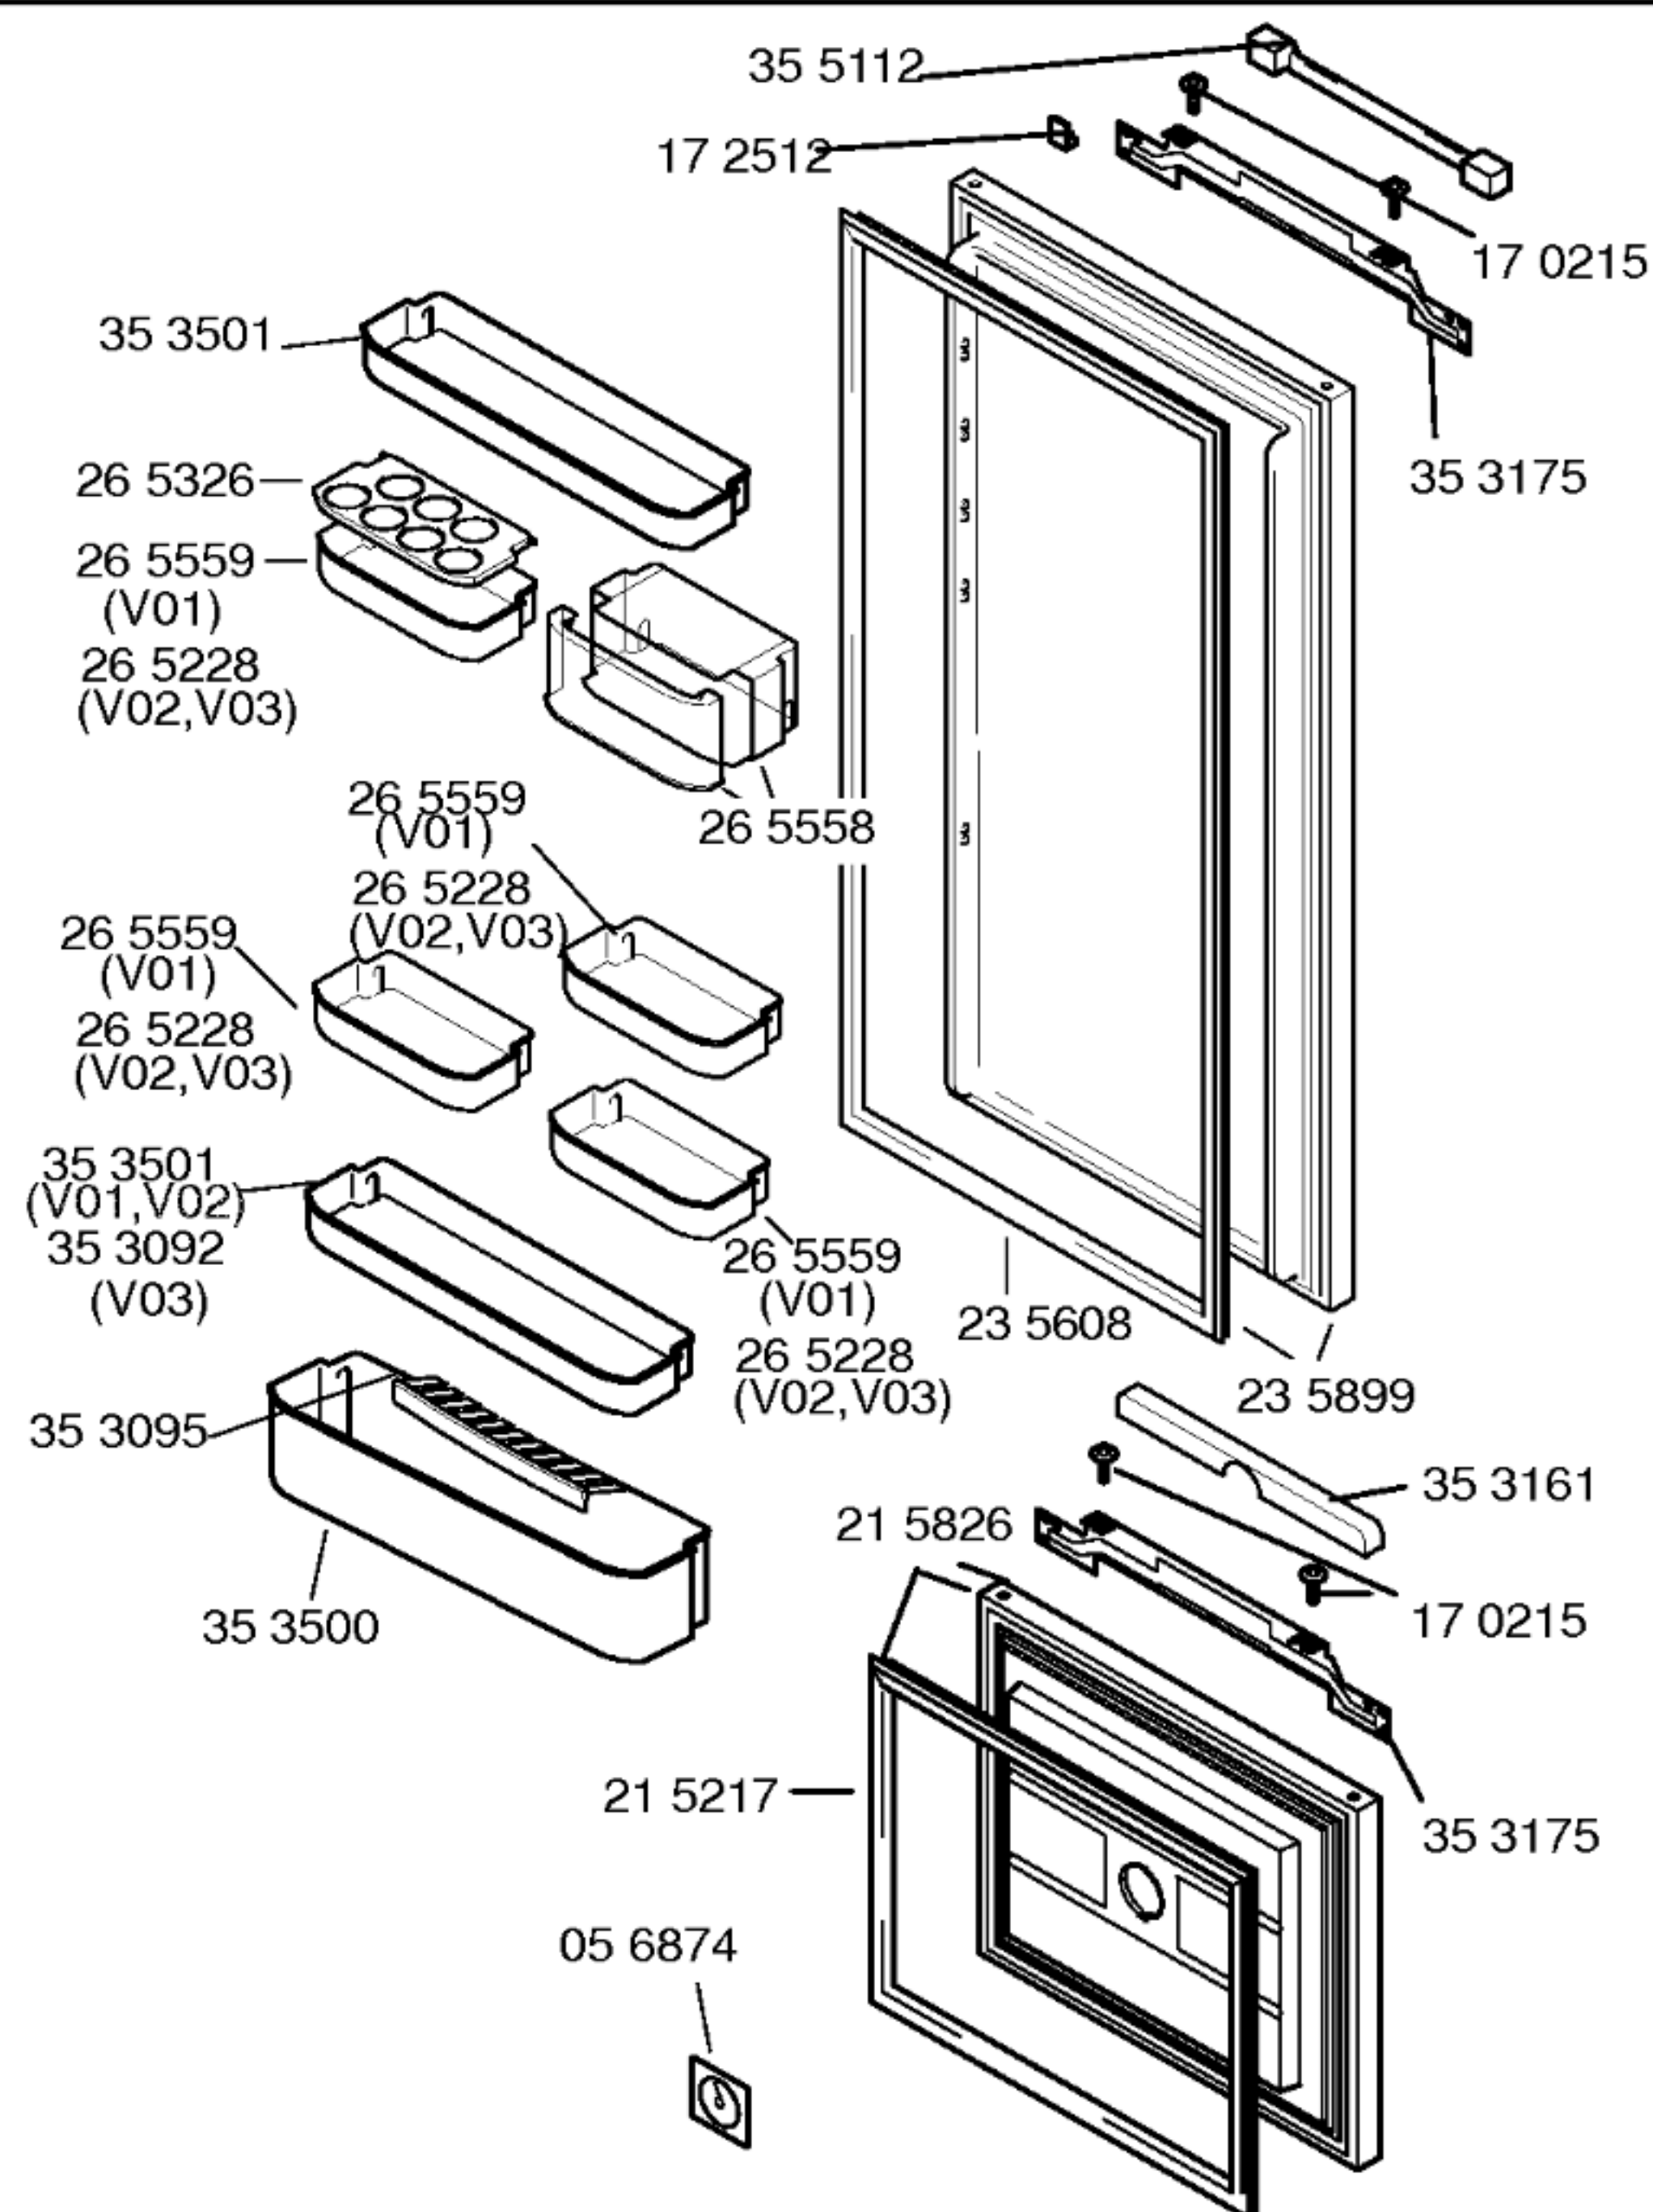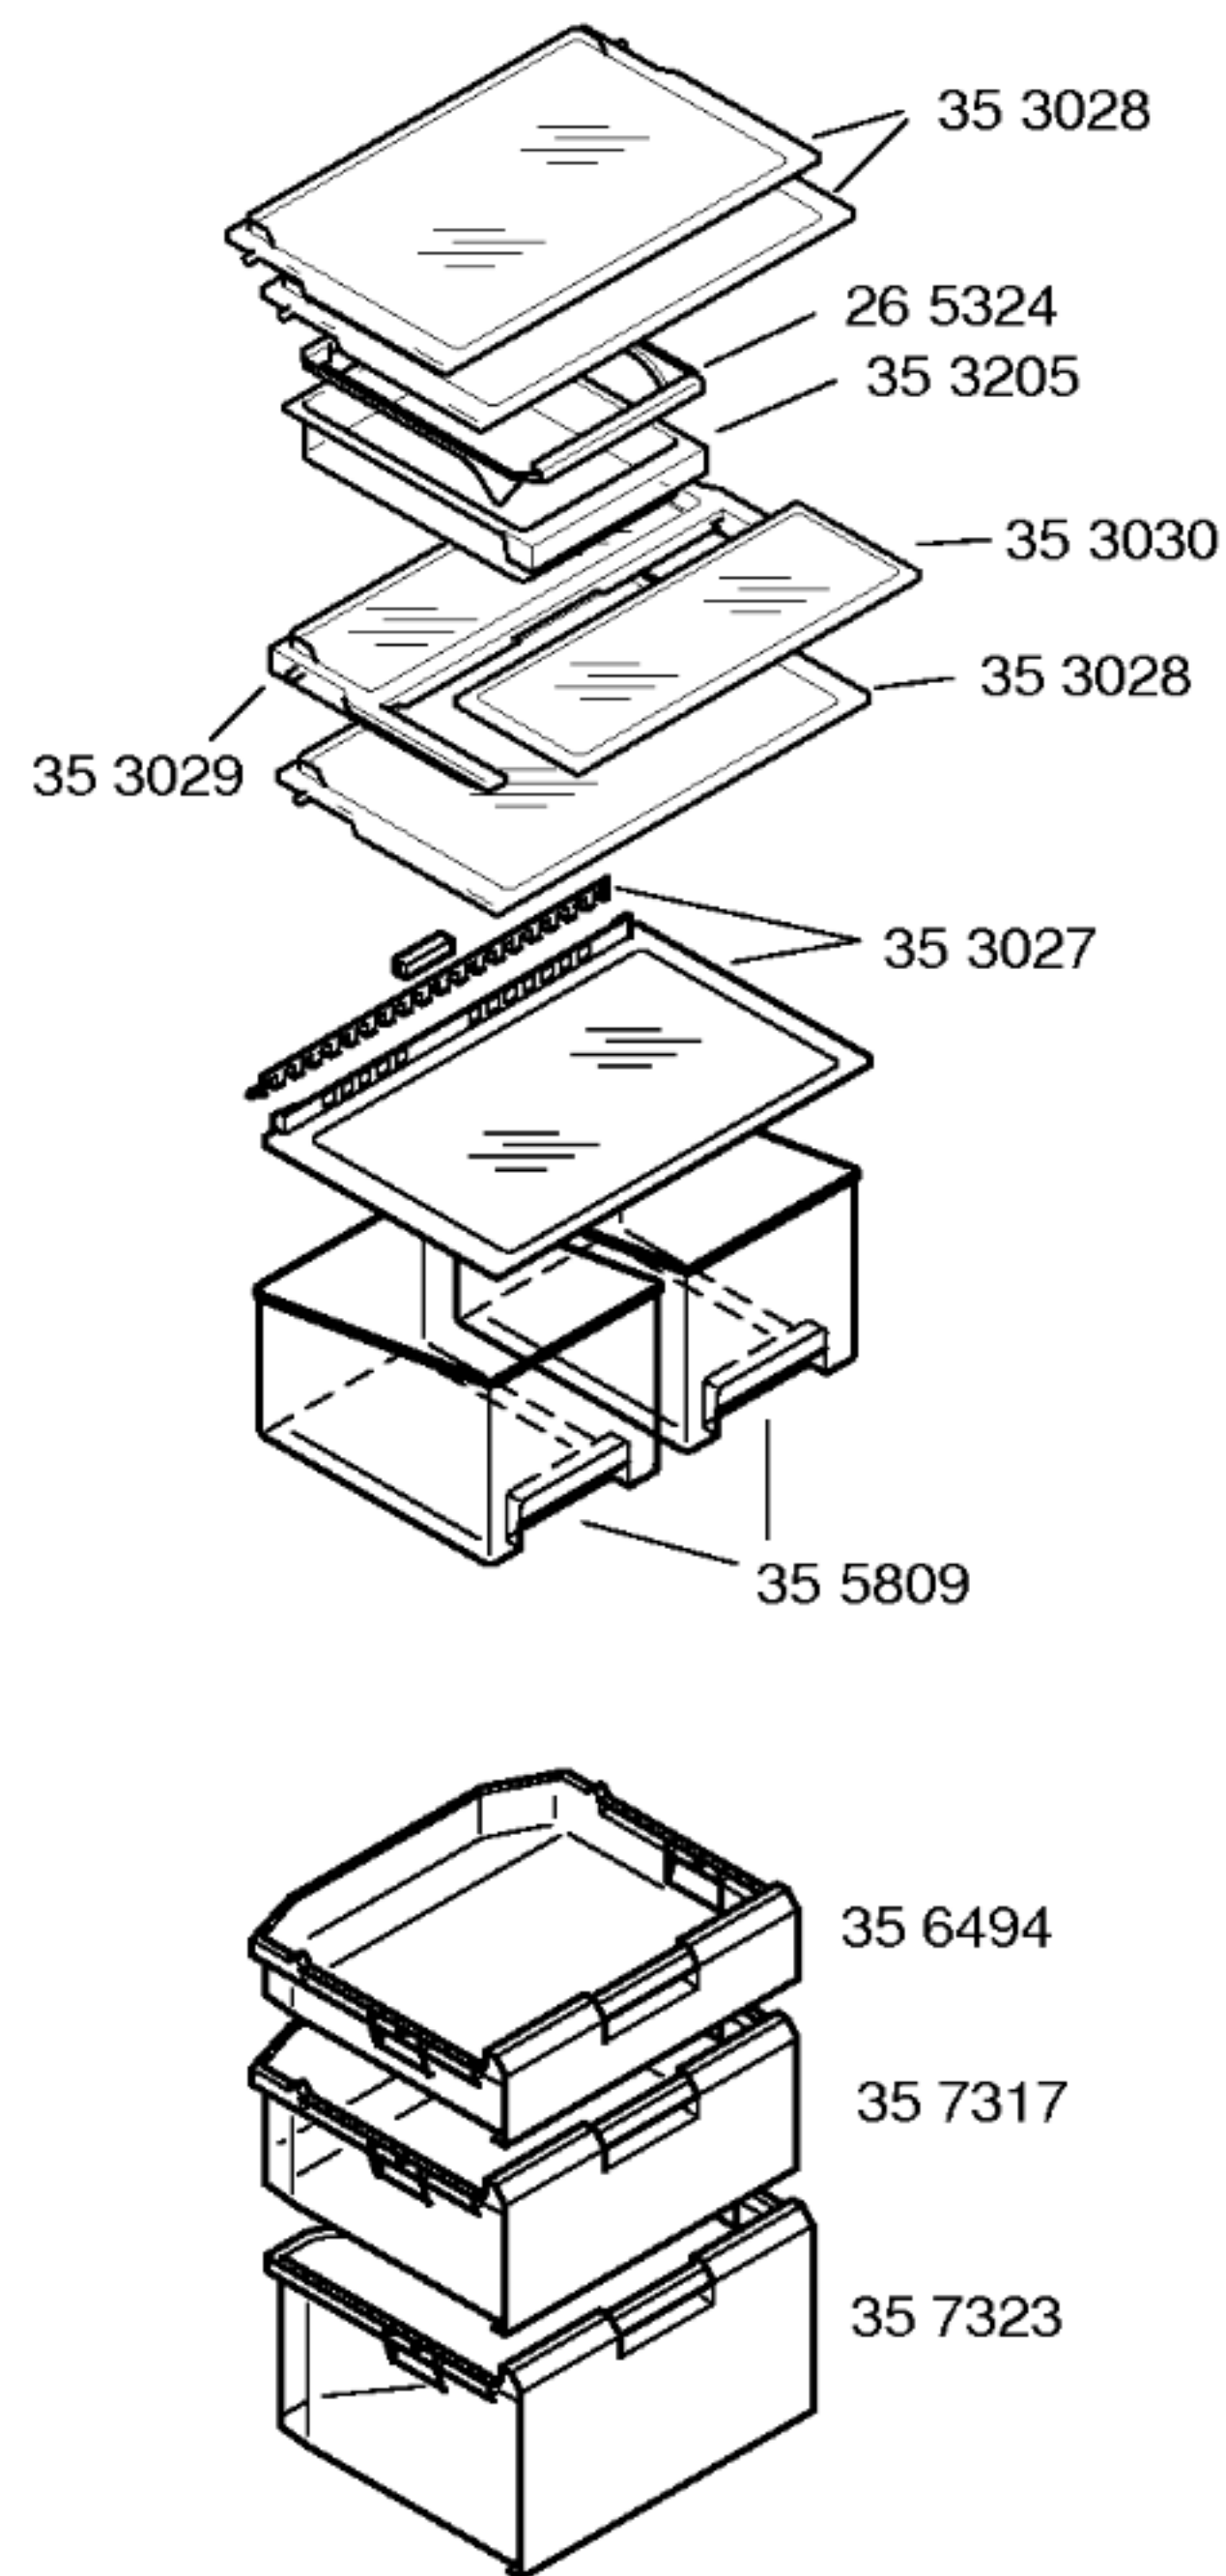

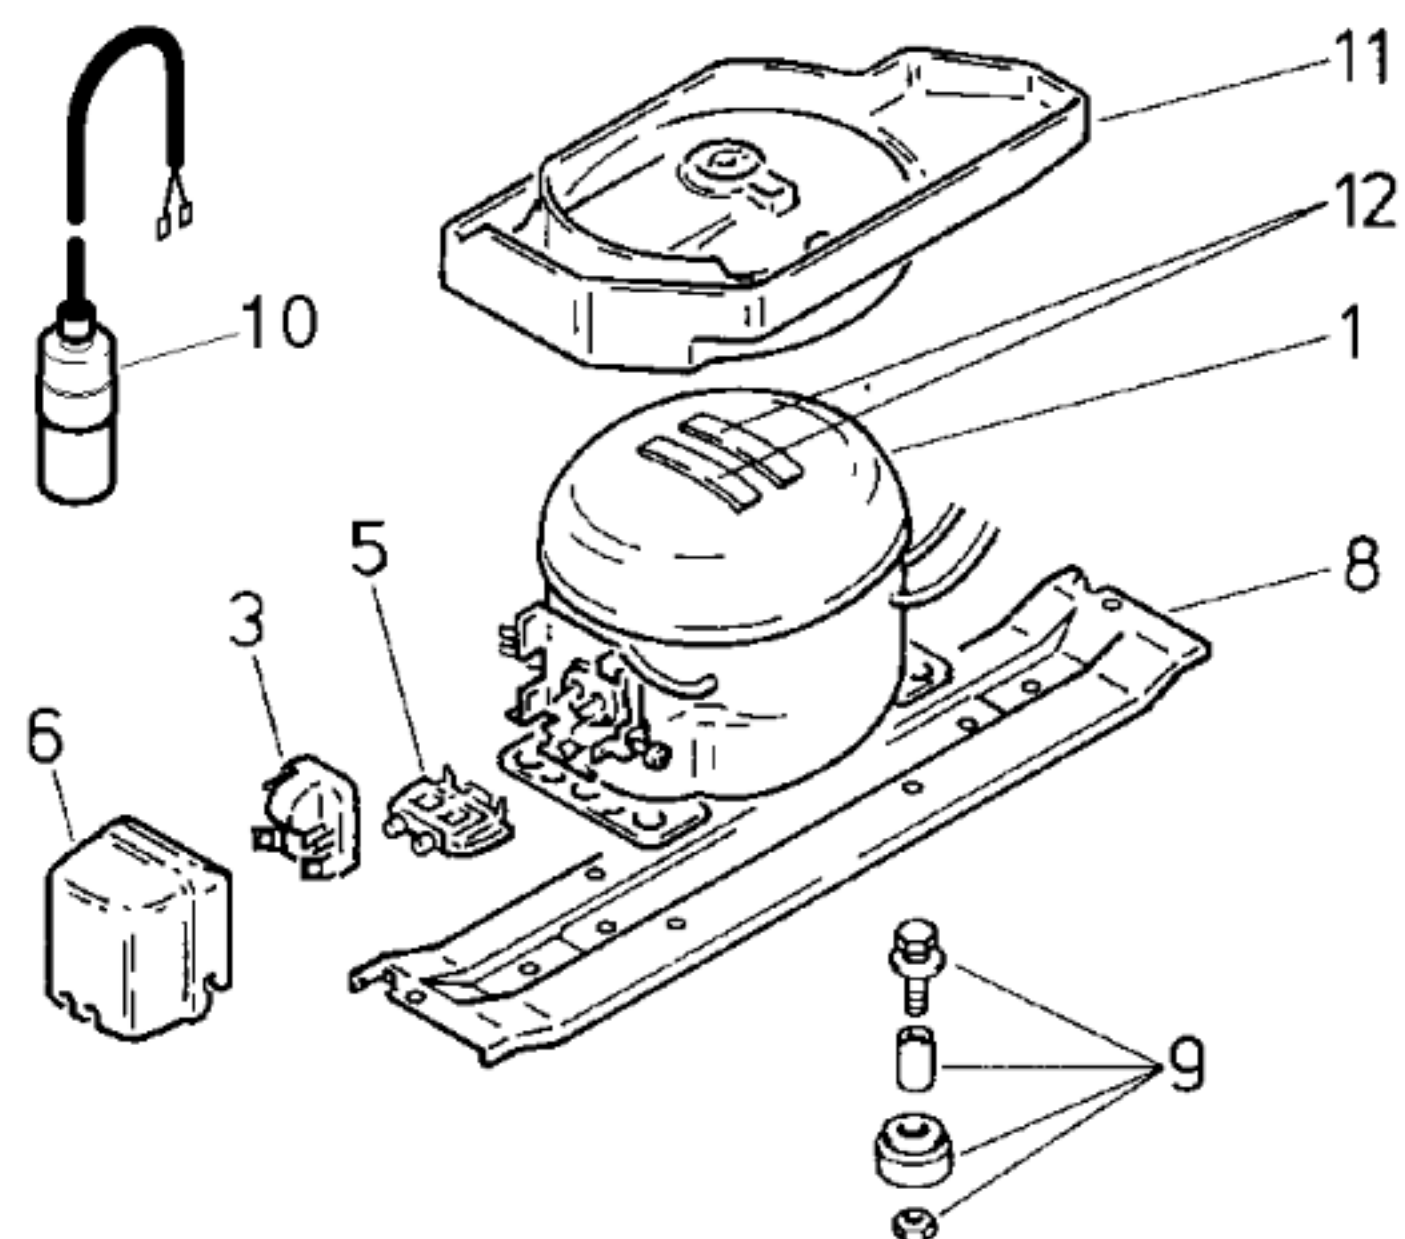Mat. – Nr. – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour. de démarrage Widerstand/Resistance/Résistance		Matsushita DC110E			
		l/h			
		A			
		Ha/main/prin.			
		Hi/aux			
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)		°C			
		„ein“			
		„aus“			
		„alarm“			
Füllmenge/Fill.quantity/Charge		R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée			W		
Heizung/Heater/Chauffage Widerstand/Resistance/Resistance Leistung/Power/Puissance			Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension			Ω V		
NTC-Fühler / Sensor		°C	kW	°C	kW
		+10	9,95 □ 0,18	-18	43,31 □ 1,10
		+5	12,70 □ 0,18	-22	54,66 □ 1,59
		0	16,33 □ 0,16	-26	69,42 □ 2,29

* siehe Typenschild

Pos.	V01	V02, V03	
	Matsushita	Matsushita	
	DC110 E	DC110 E	
1	14 1946		
2			
3	17 2671		
4			
5	16 2549		
6	16 6782		
7			
8	28 1825		
9	05 0166		
10		15 2222(V02)	
11	26 6624		
12	05 6008		