



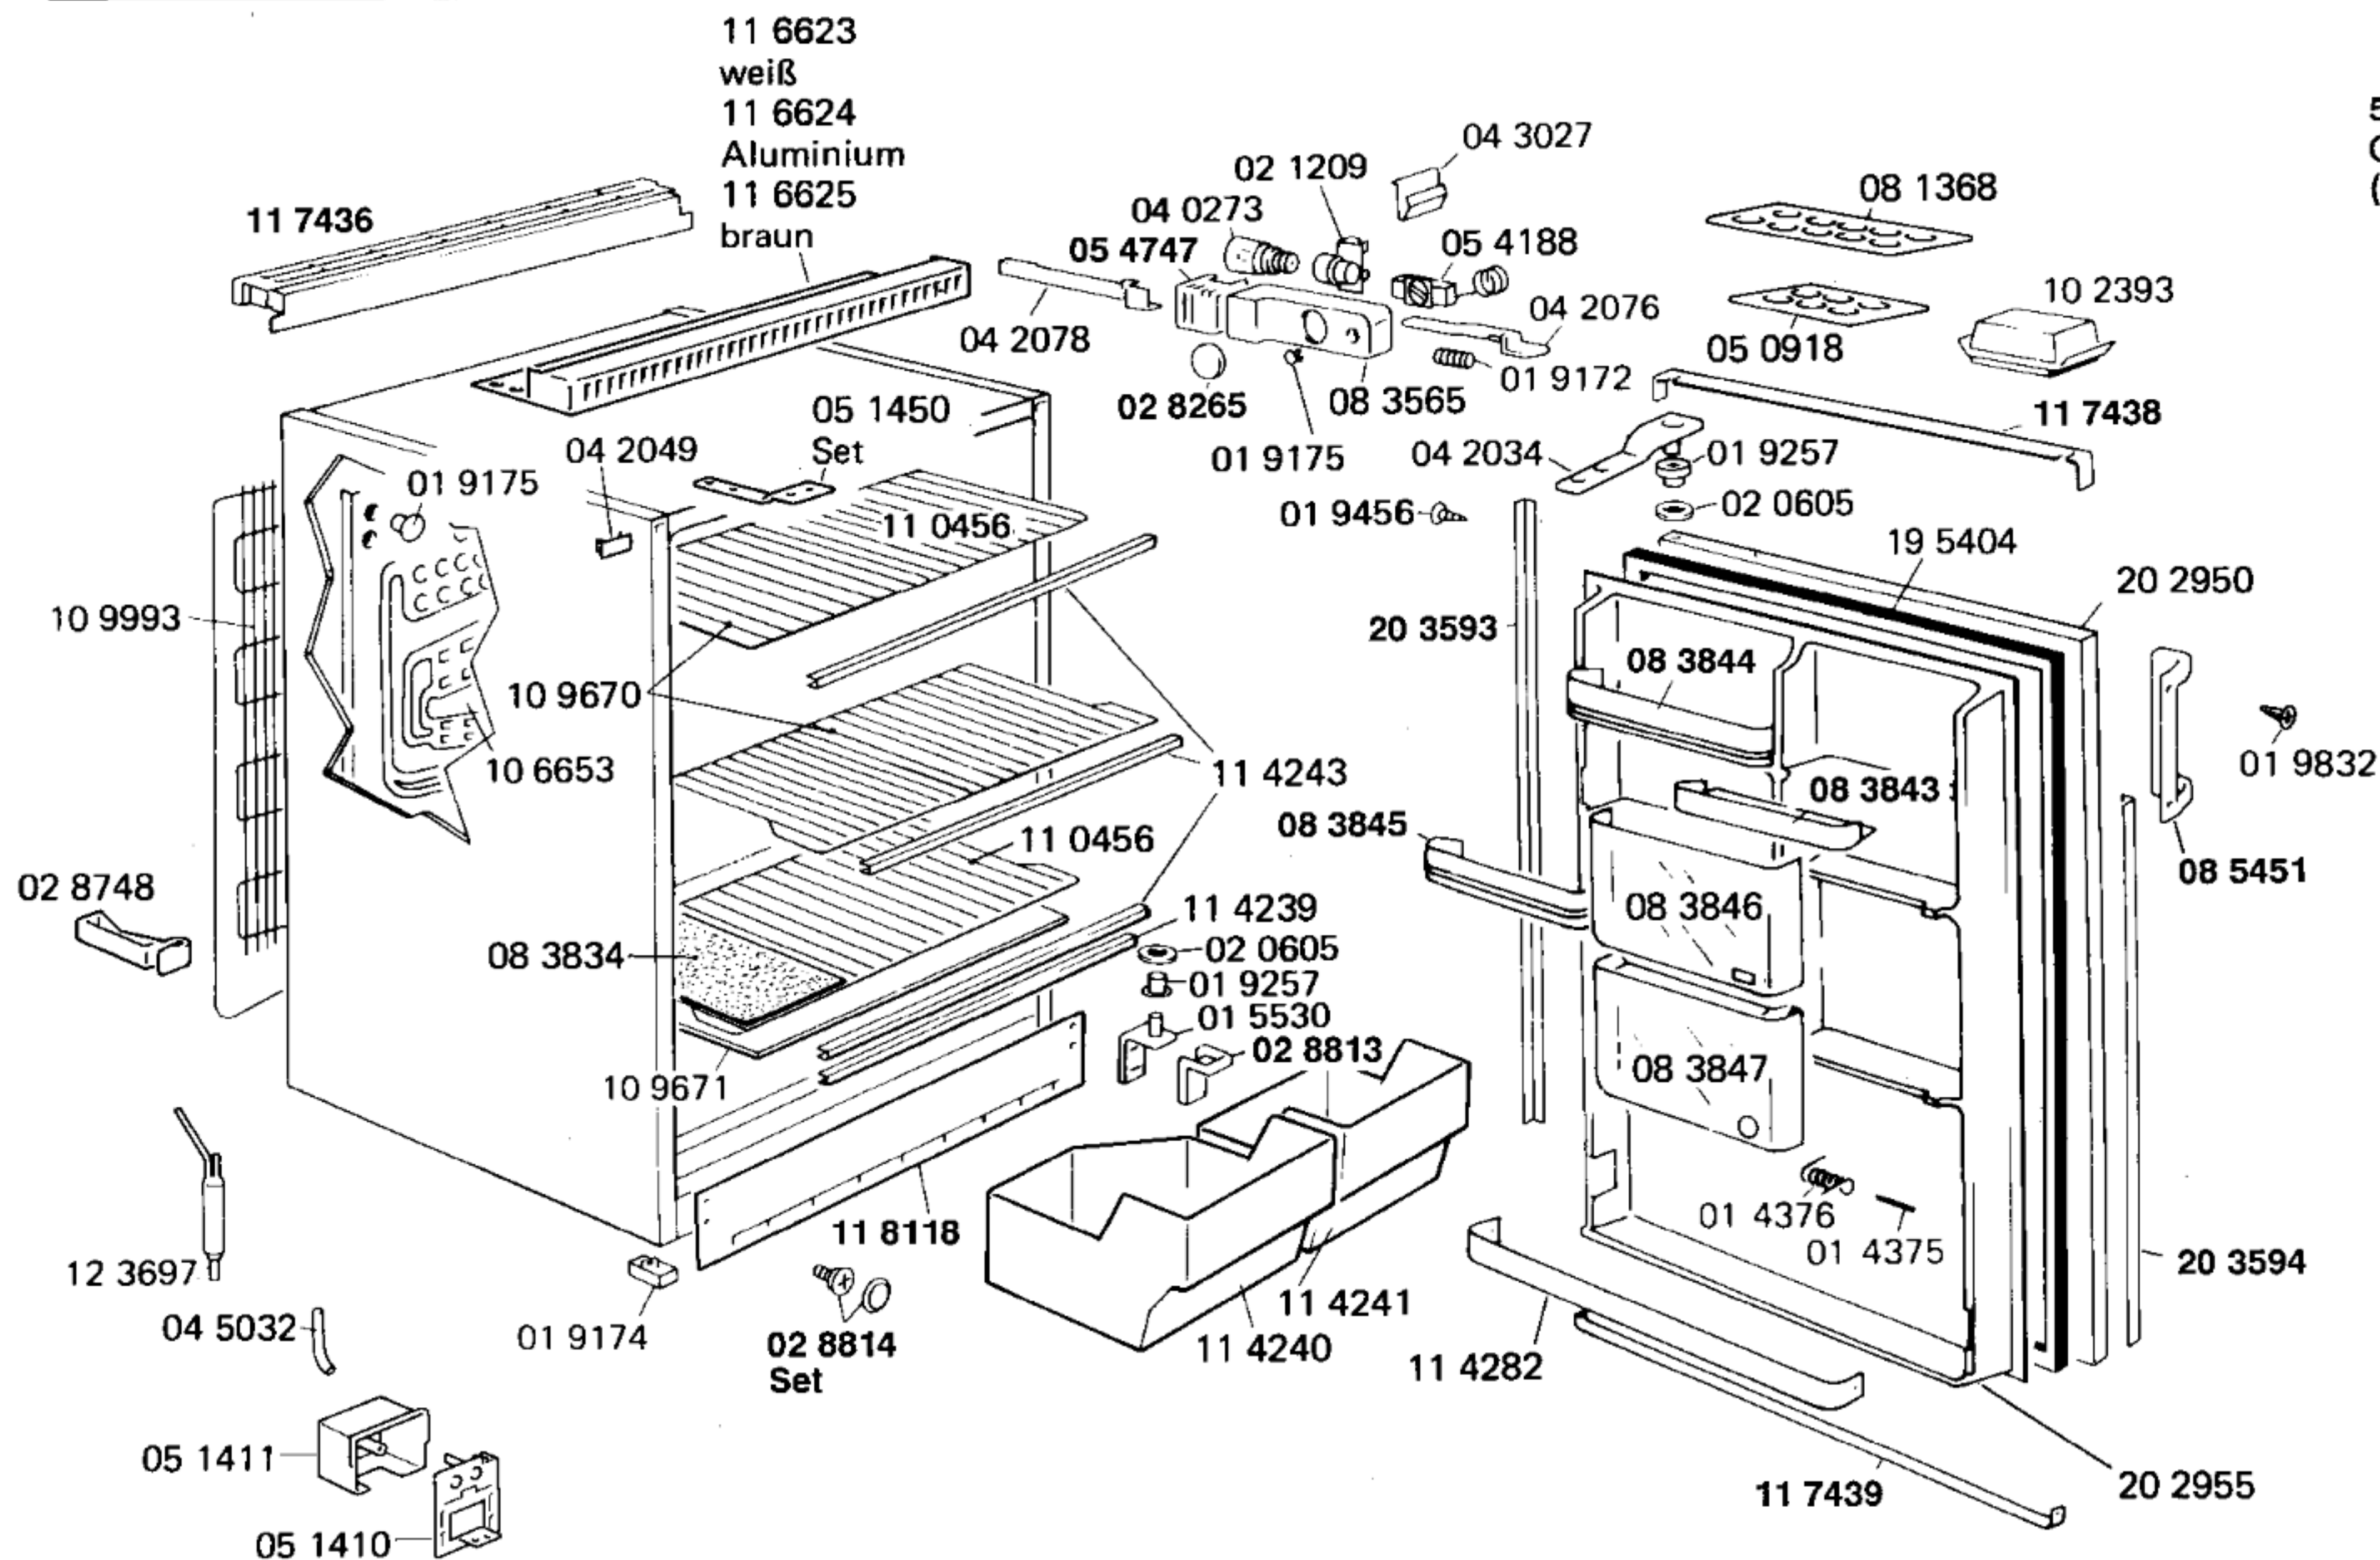

50 8788
Gebrauchsanweisung
(D,F,GB,NL,I,SF)

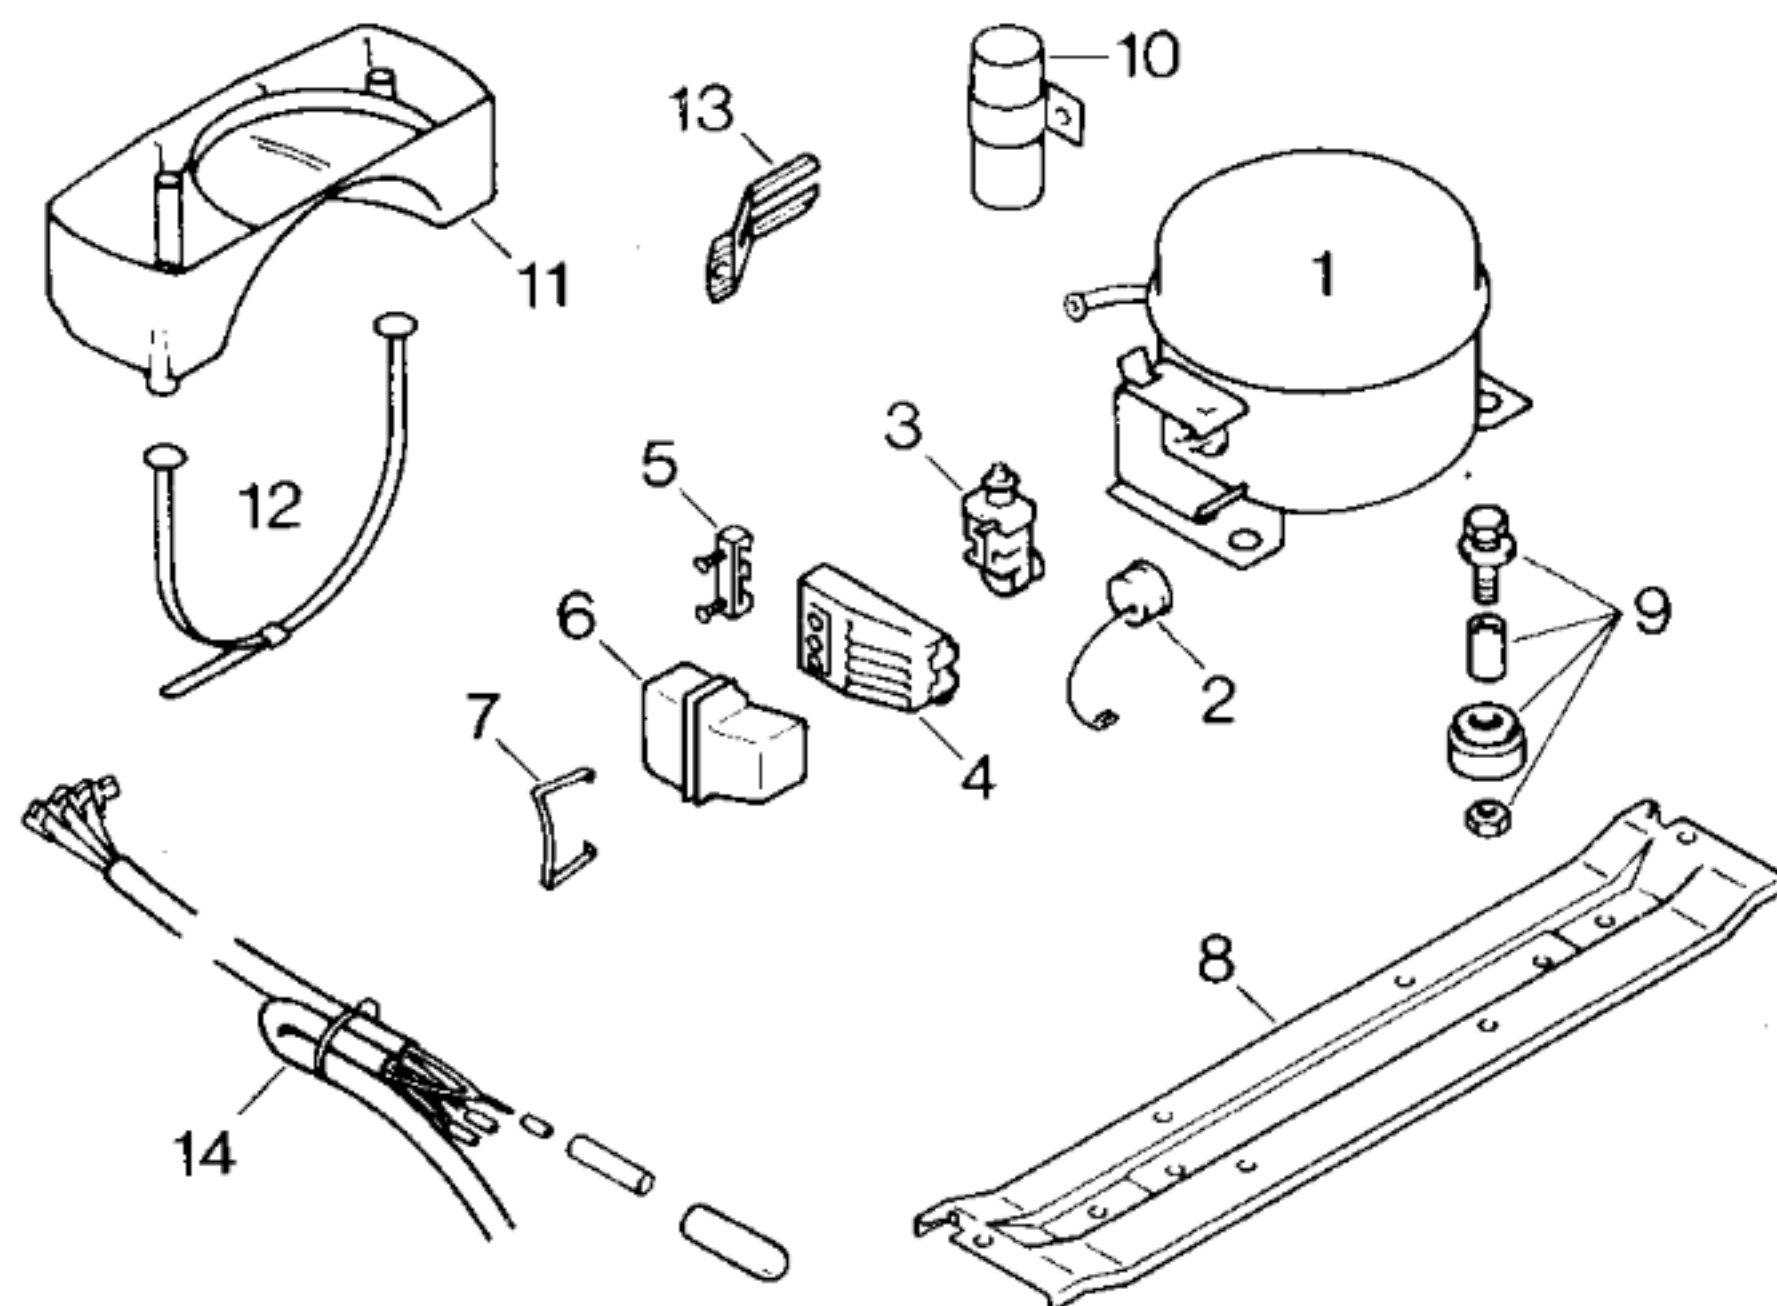

Pos.	NL1, NL3	NL1, NL2	NL4
	Aspera	Danfoss	Necchi-Mini
1	14 0393	14 0364	
2	02 8074		
3	02 7424	02 0108	
4			
5	02 7425	02 7310	
6	05 5145	05 1413	
7			
8	11 1567	11 0437	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12			
13	04 1568	04 1568	
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Danfoss		
Typ/Type		BP 1058 A	TL 3 A		
Förderleistung/Delivery/Débit		l/h	567	576	
Anlaufstrom/Starting current/Cour. de démarrage		A	6,4	7,2	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	31,0	31,7	
		Hi/aux Ω	29,0	17,0	
Temp.-Regler/Thermostat		M + J			
Typ/Type		TF 57			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/		„ein“	+ 4	+ 4	
Valeurs de commutation		„aus“	-26,5	-13	
(„abtauen“ od.)		„alarm“			
Füllmenge/Fill.quantity/Charge		R12	g	95	
Anschlußwert/Conn.load/Puiss. connectée		W	90		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			