


**BOSCH**

GIL 1031/01-EU1
GIL 10311/01-CH1
GIL 10315/01-F1

GIL 10318/01-E1

GEFRIERGERÄTE
Gefrierschränke, Einbau

Ident – Nummern – Konstante
3740

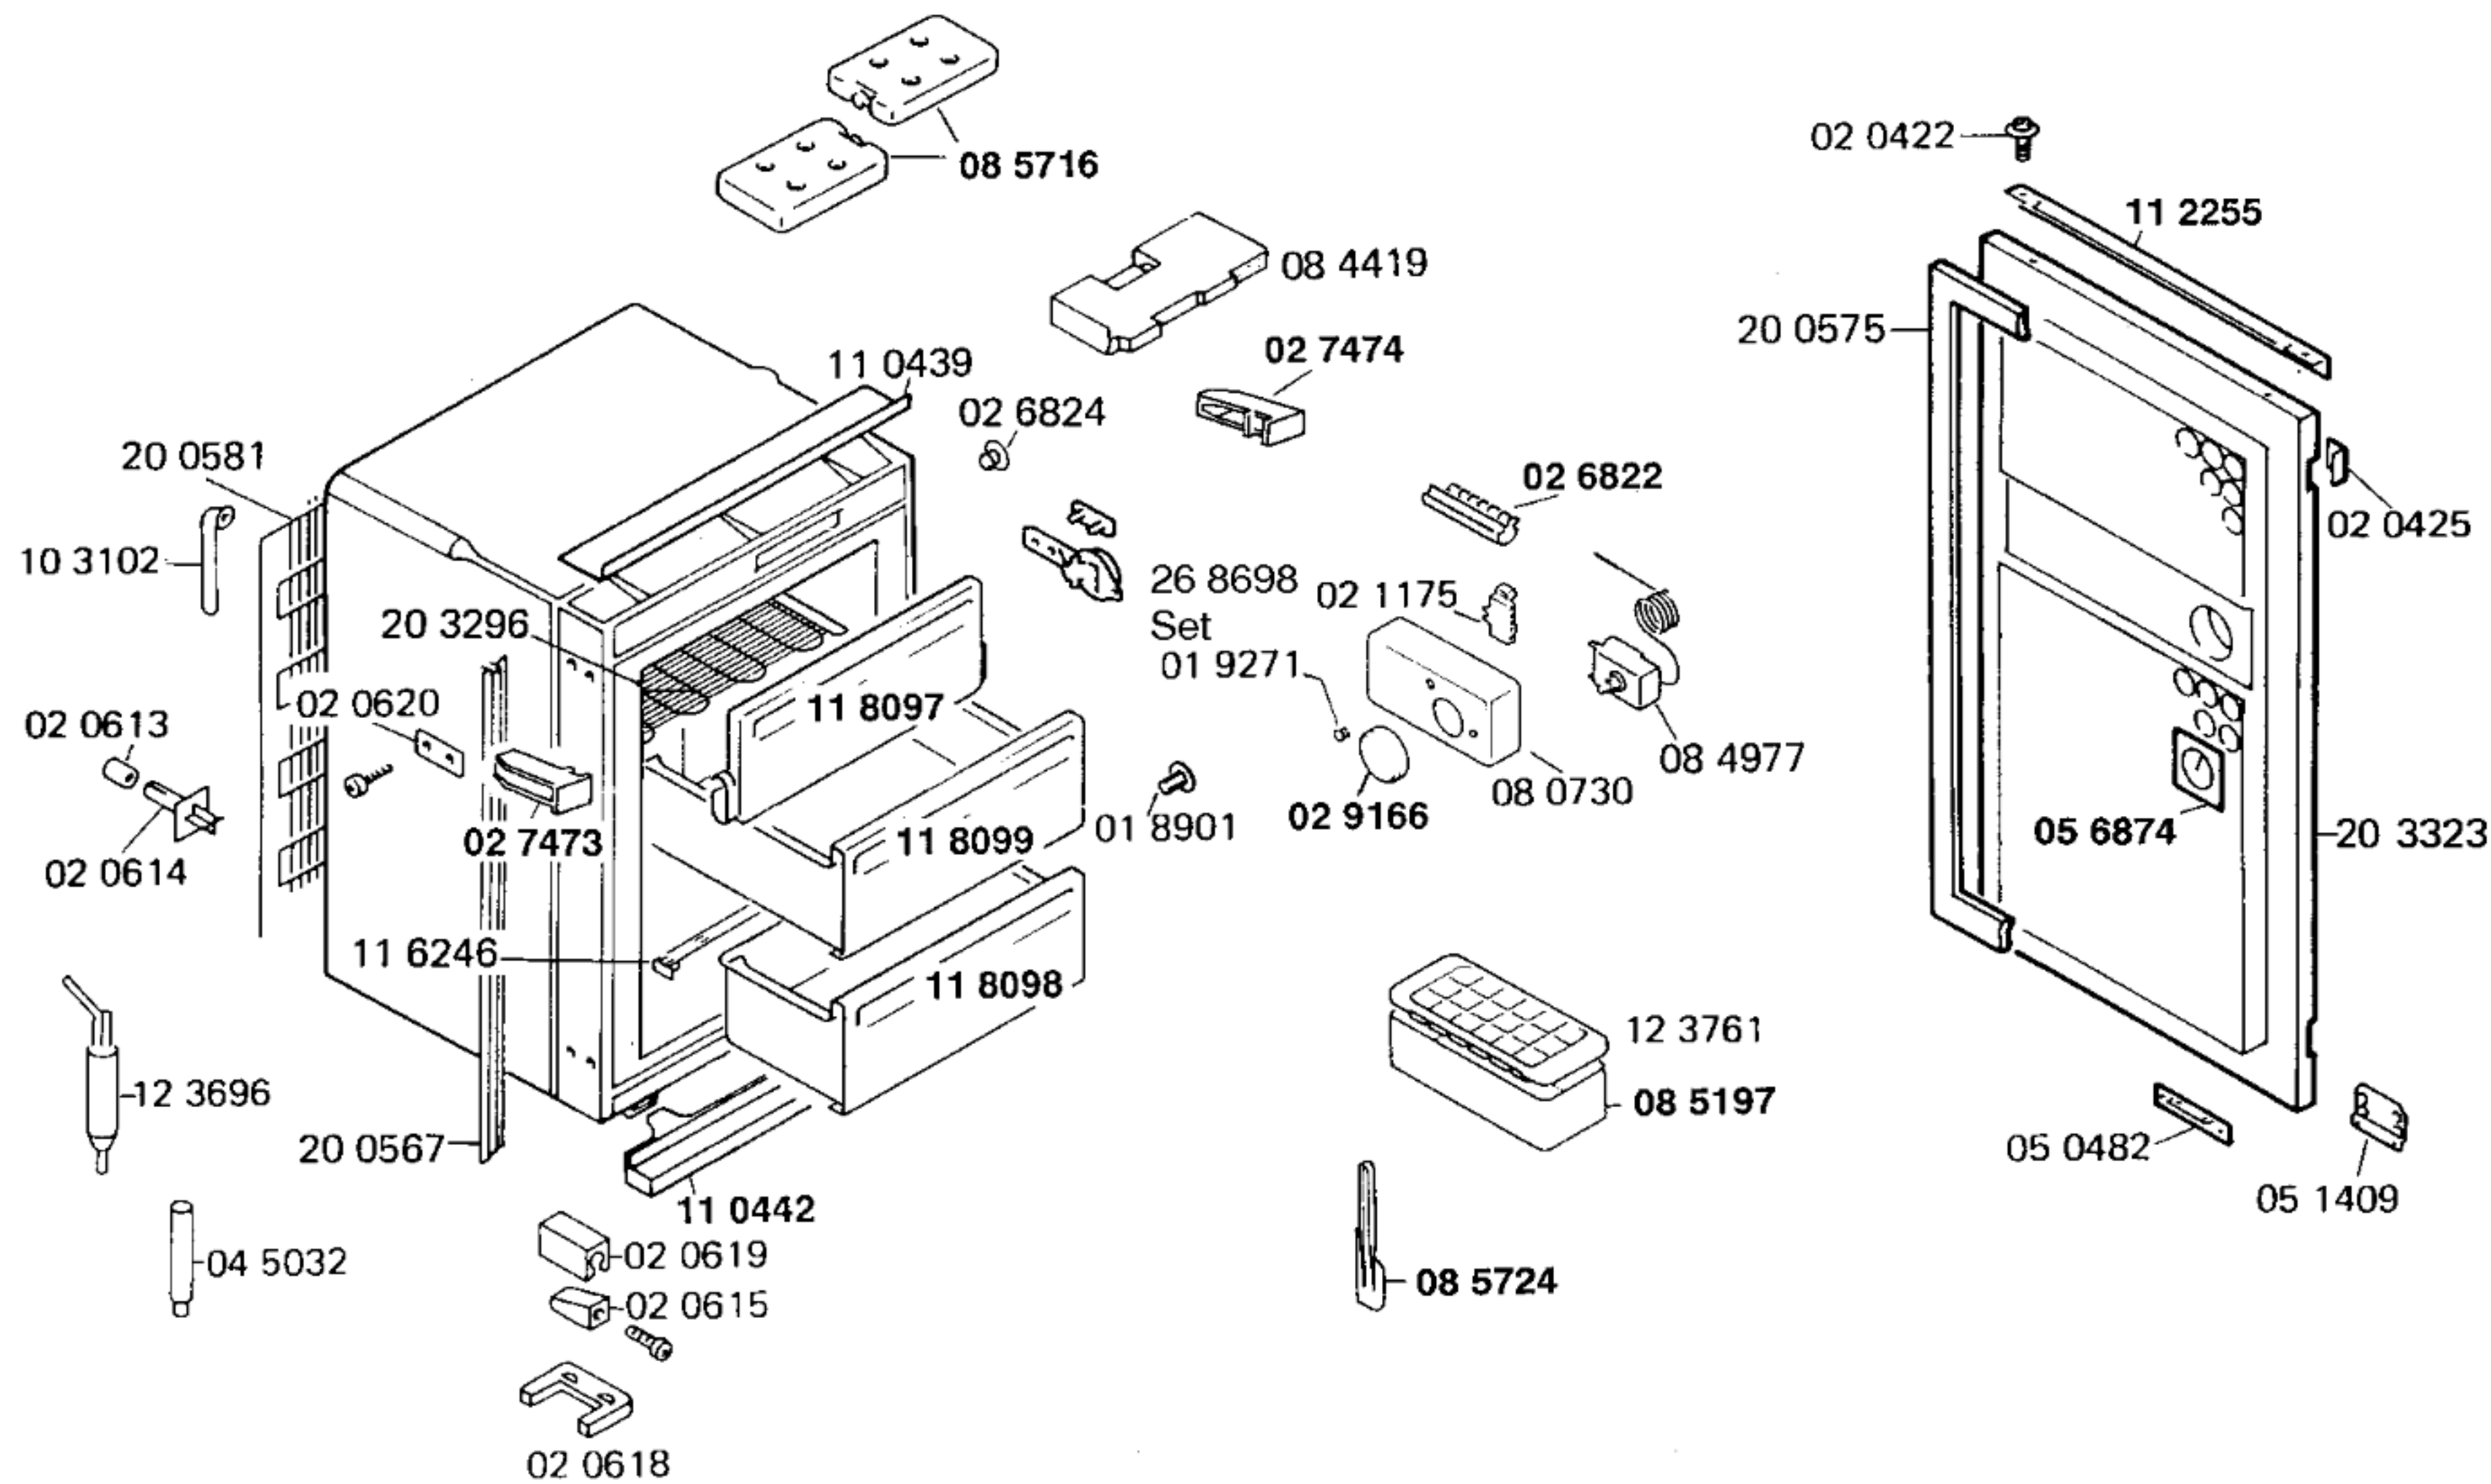


51 2674
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)

51 2737
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N)

**BOSCH**GIL 1031/01-EU1
GIL 10311/01-CH1
GIL 10315/01-F1

GIL 10318/01-E1

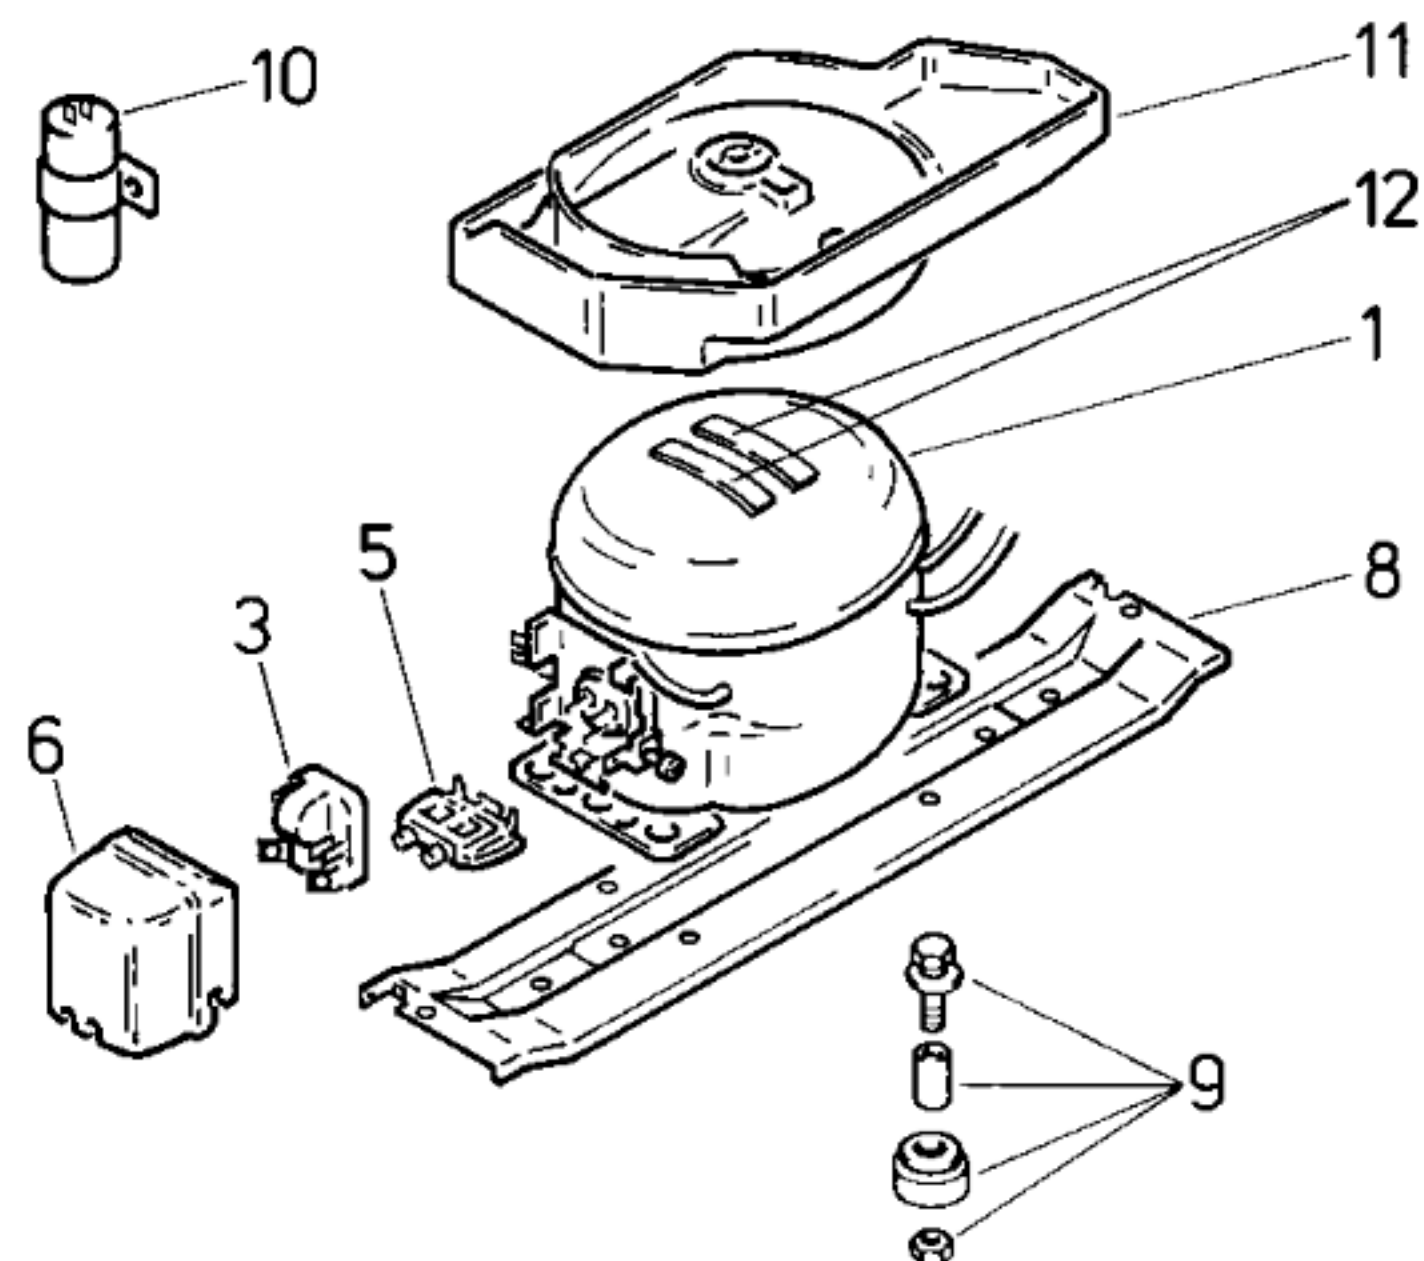GEFRIERGERÄTE
Gefrierschränke, EinbauIdent – Nummern – Konstante
3740

Pos.	EU1,CH1,F1	E1	
	Danfoss TL 4 A	Danfoss TL 5 A	
1	13 1064	14 0065	
2			
3	02 0108	02 0108	
4			
5	02 7310	02 7310	
6	05 1413	05 1413	
7			
8	11 0437	11 0437	
9	05 0166	05 0166	
10			
11			
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit	l/h	V 695		
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,4		
	Hi/aux Ω	15,5		
Temp.-Regler/Thermostat		M & J		
Typ/Type		TF 57 SF 2		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	- 24 - 16		
Valeurs de commutation	„aus“	- 34 - 24		
(„abtauen“ od.)	„alarm“	- 19 - 12		
Füllmenge/Fill.quantity/Charge	R12	g	150	
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			