 
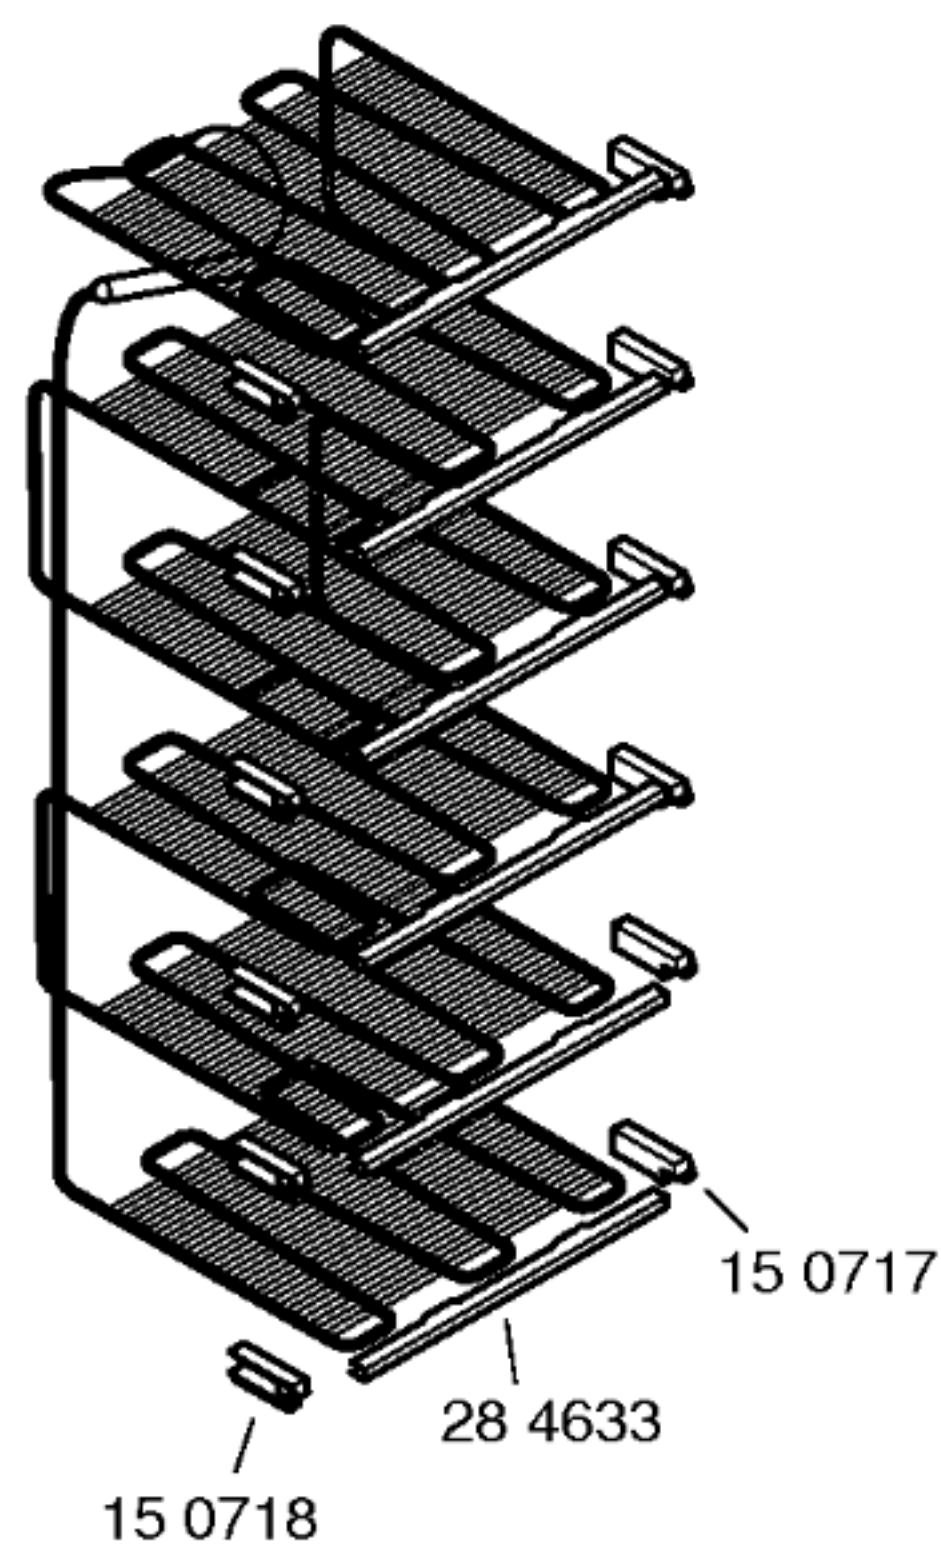 
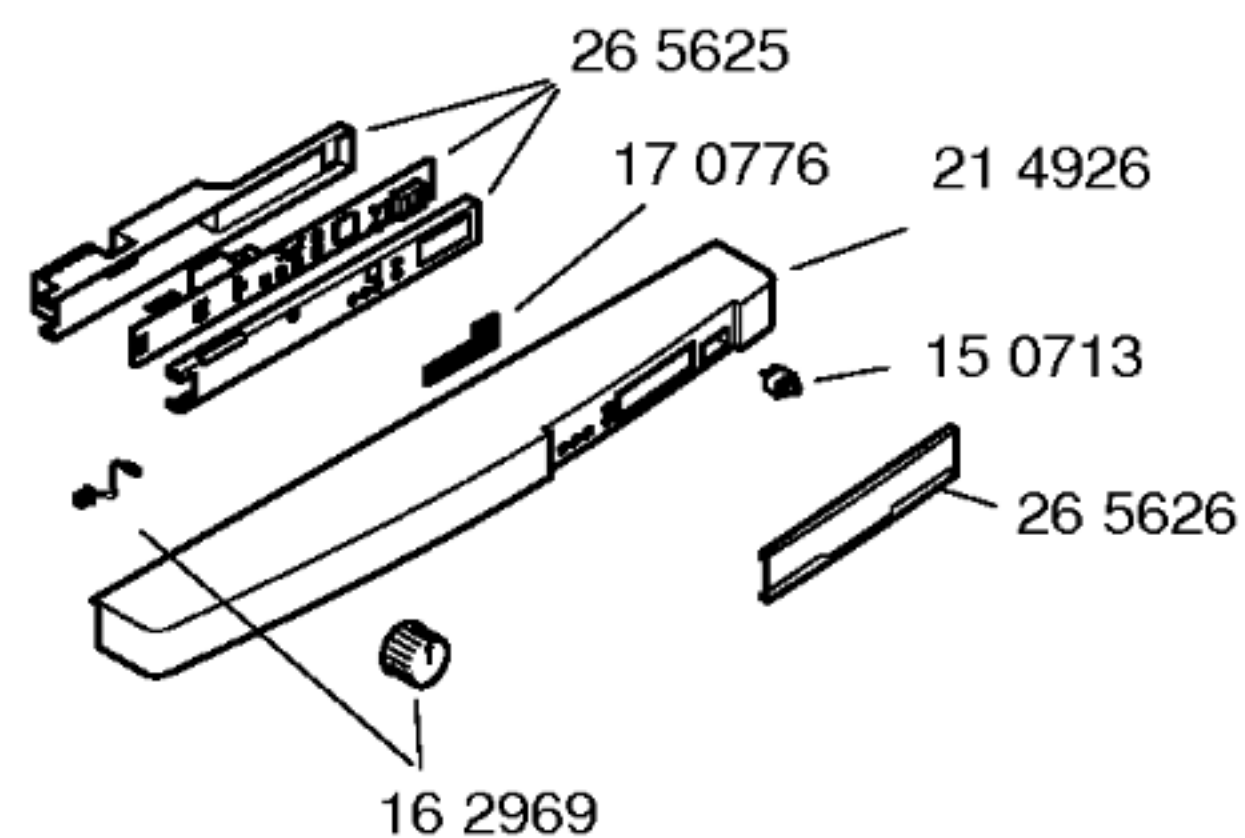 


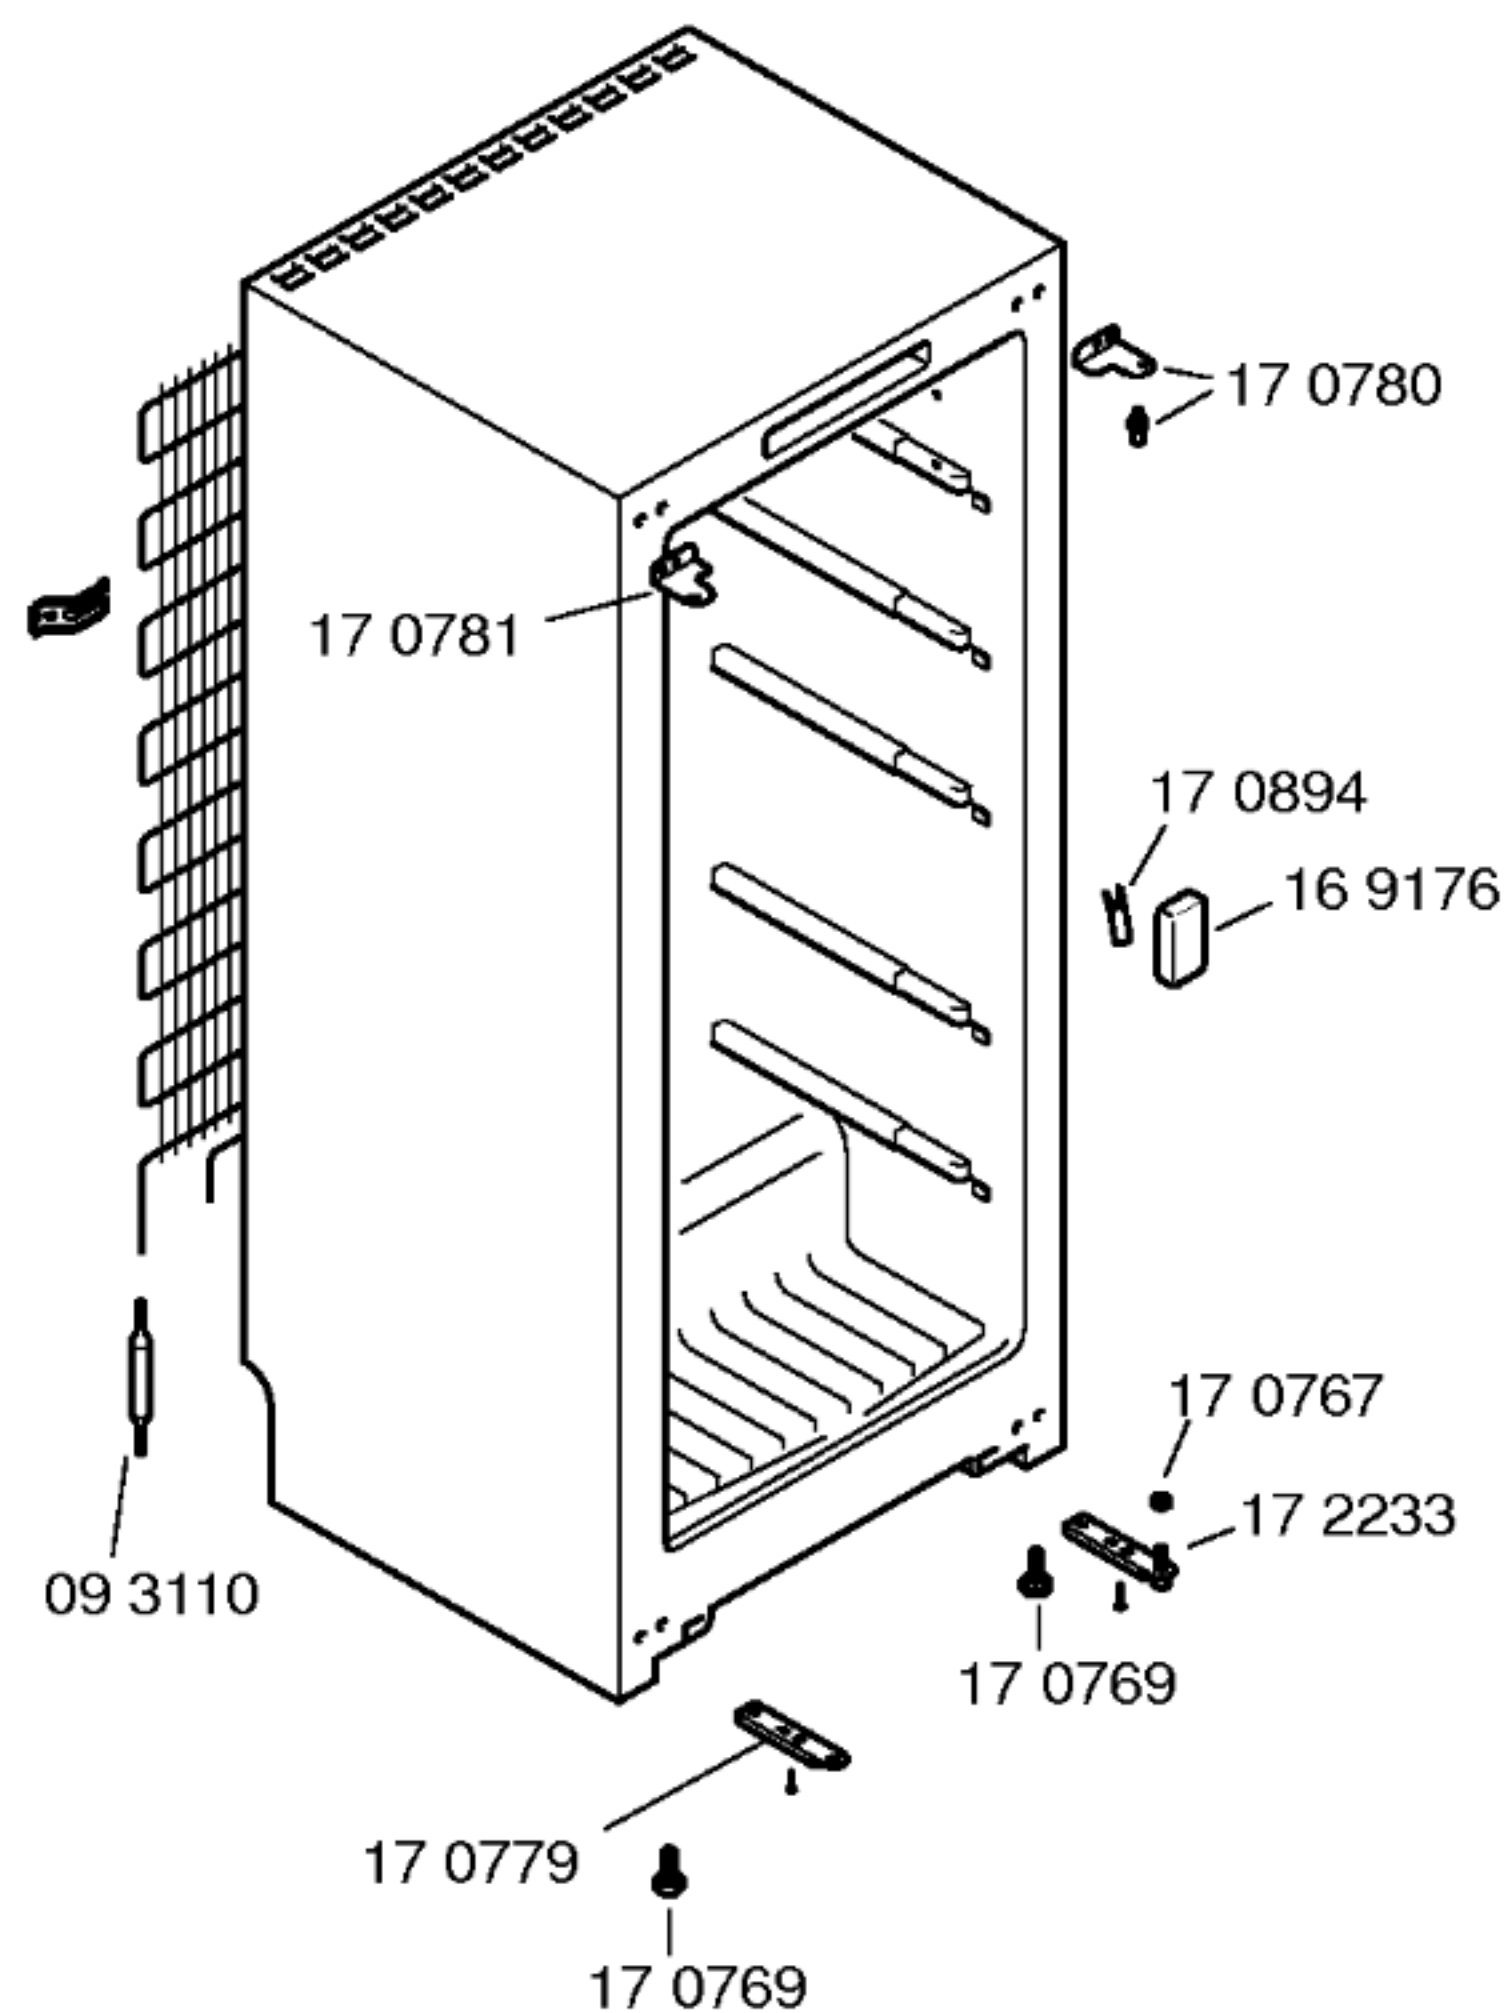


Mat. – Nr. – Konstante
 3740


Gebrauchsanweisung
 52 2790
 (D,GB,F,I,NL)

Montageanleitung
 52 2772
 (D,GB,F,I,NL,DK,N,SF,
 SE,TR)

Beistellsatz
 26 5629

  Side by Side
 Beistellsatz zu KSR/KSK
 48 1044

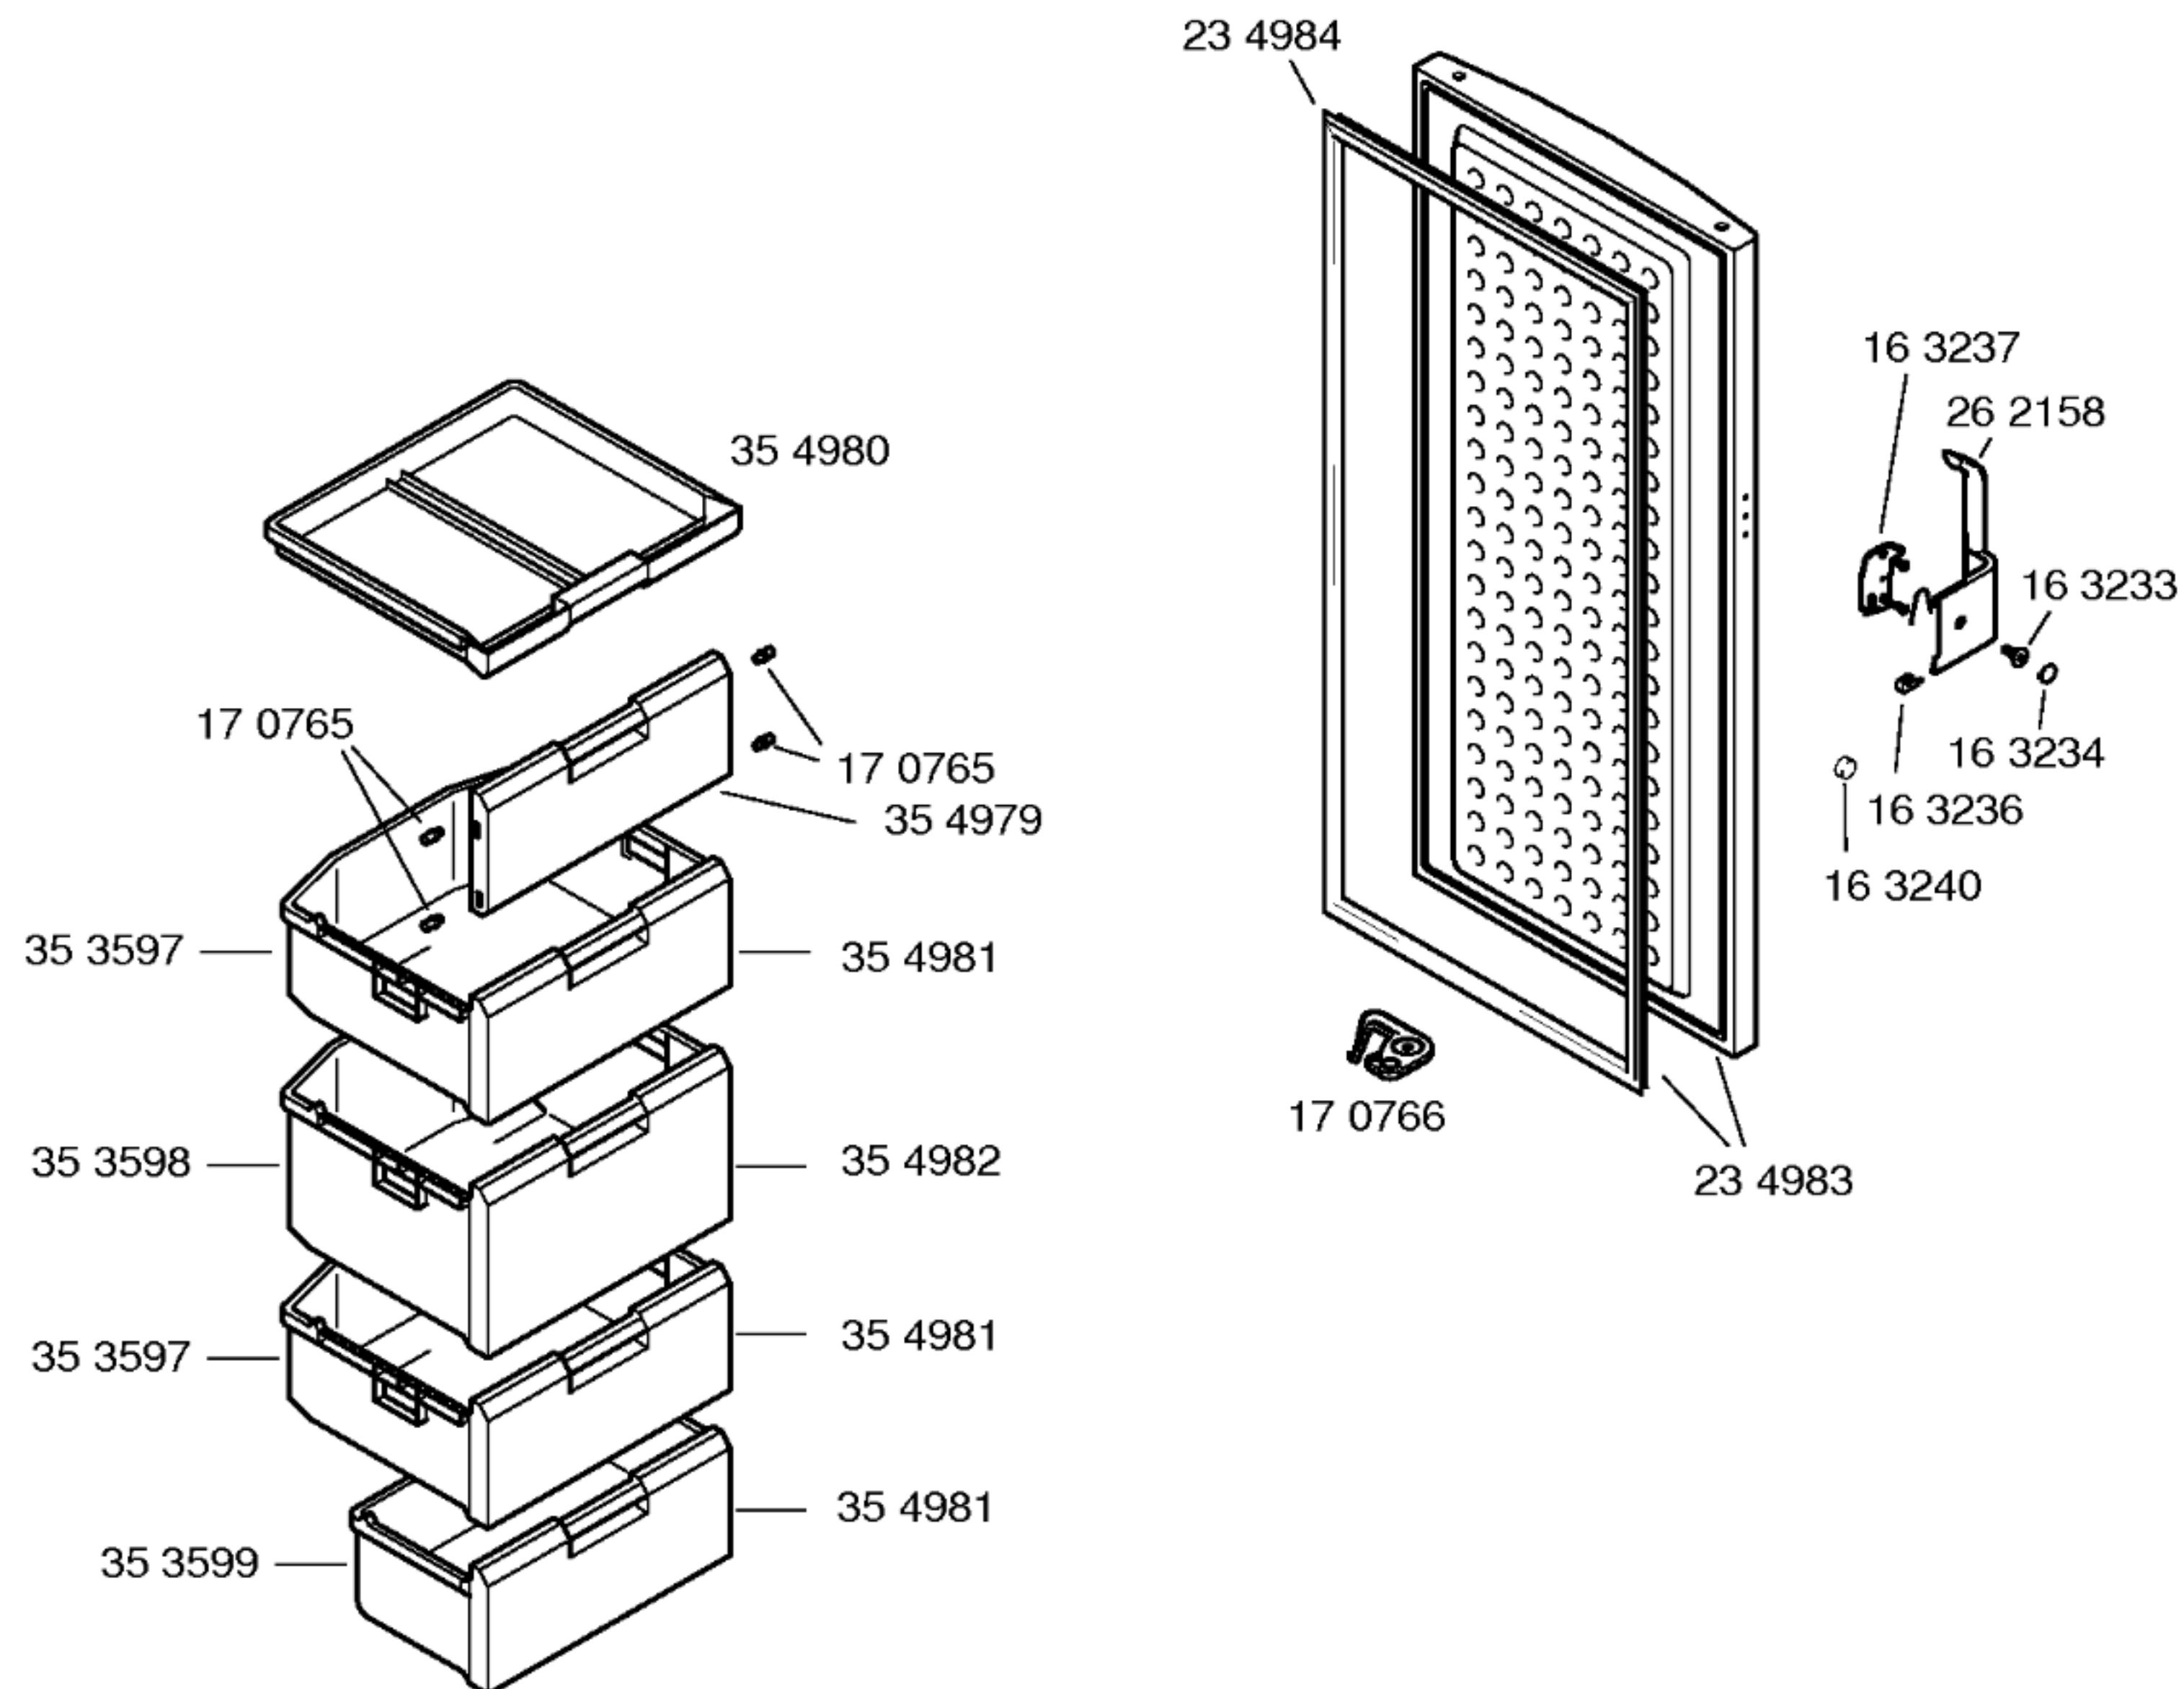

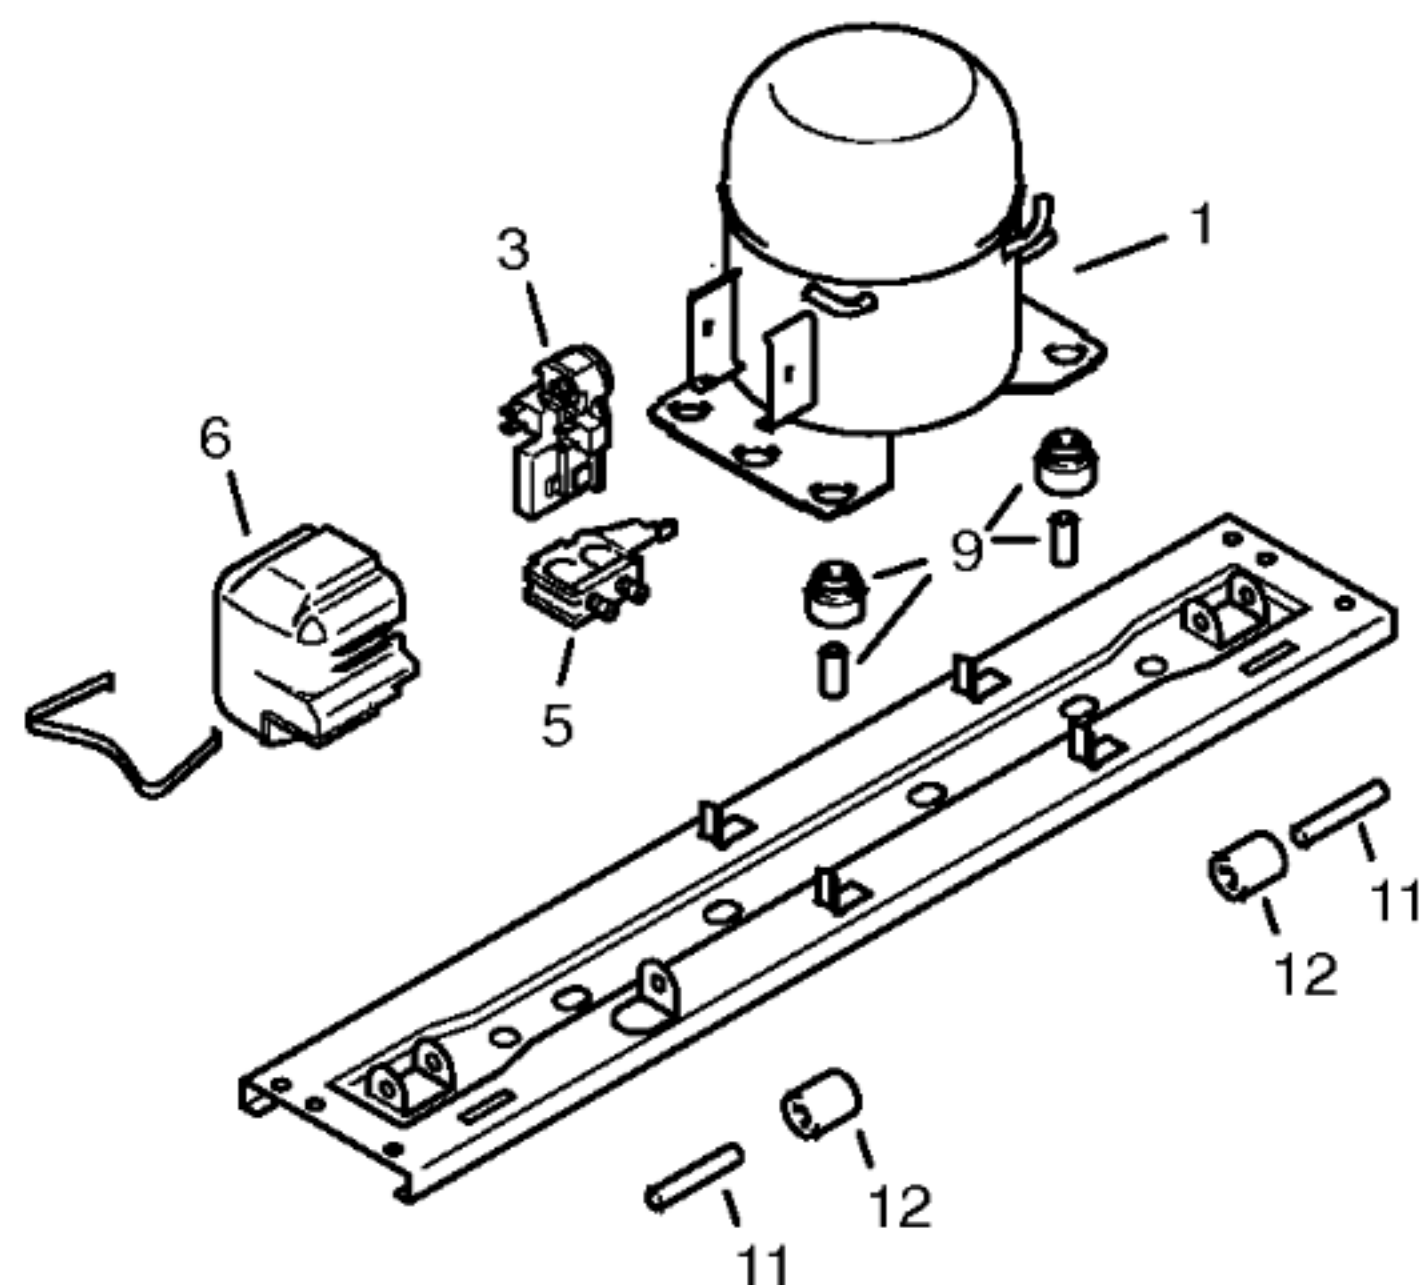

	V01	V02	
Pos.	Danfoss	Goldstar	
	TLES9K	ND88NAEG	
1	14 1660	14 2015	
2			
3	15 1055	17 4811	
4			
5	15 0760	17 0745	
6	15 1072		
7			
8	20 9294	20 9294	
9	050166		
10			
11	01 9017	01 9017	
12	01 9016	01 1916	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		Goldstar	
Typ/Type		TLES9K		ND88NAEG	
Förderleistung/Delivery/Débit	l/h	1589			
Anlaufstrom/Starting current/Cour de démarrage	A	8,8			
Widerstand/Resistance/Résistance Ha/main/prin	Ω	16,5			
Hi/aux	Ω	16,9			
Temp.-Regler/Thermostat					
Typ/Type					
Regelstellung/Position					
Schaltwerte/Switching values	"warm"				
Valeurs de commutation	"kalt"				
	"alarm"				
Füllmenge/Fill.quantity/Charge	R600a	100			
Anschlußwert/Conn.load/Puiss. connectée	W				
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
Leistung/Power/Puissance	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
NTC-Fühler / Sensor		°C	kΩ	°C	kΩ
		+10	9,95 ±0,18	-18	43,31 ±1,10
		+5	12,70 ±0,18	-22	54,66 ±1,59
		0	16,33 ±0,16	-26	69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				