



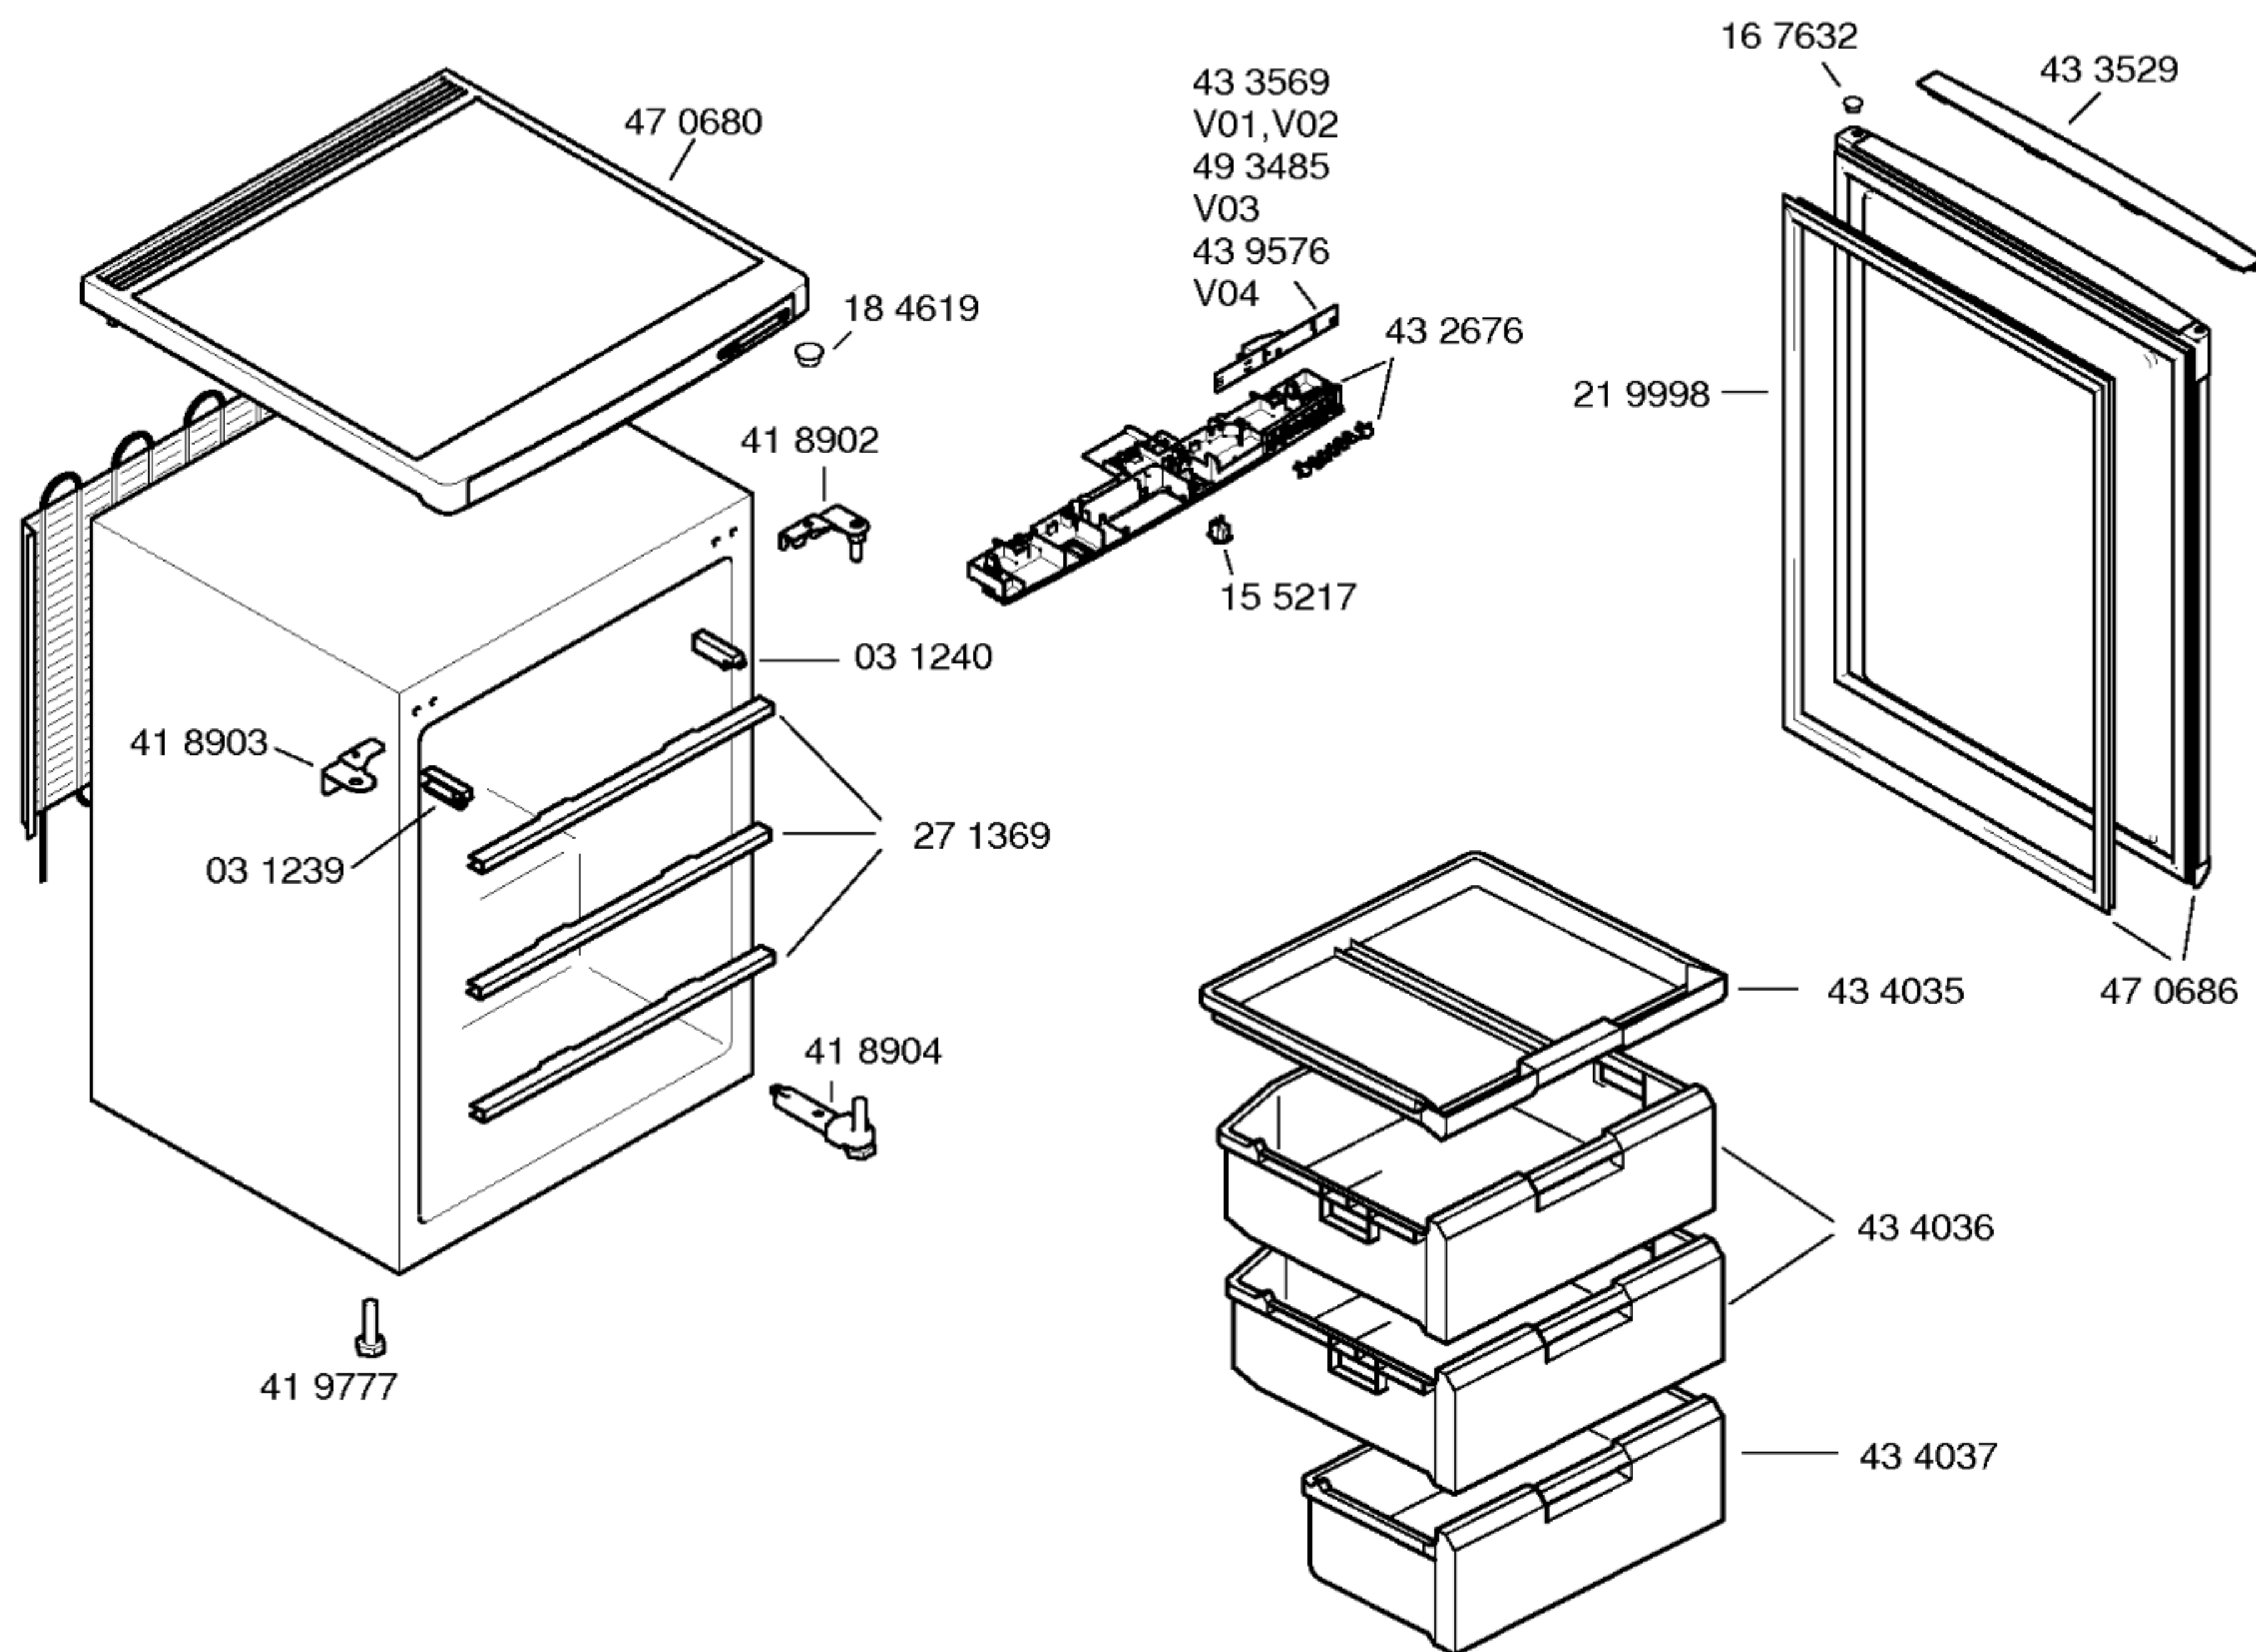

Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
58 6082
(de,en,fr,it,nl)

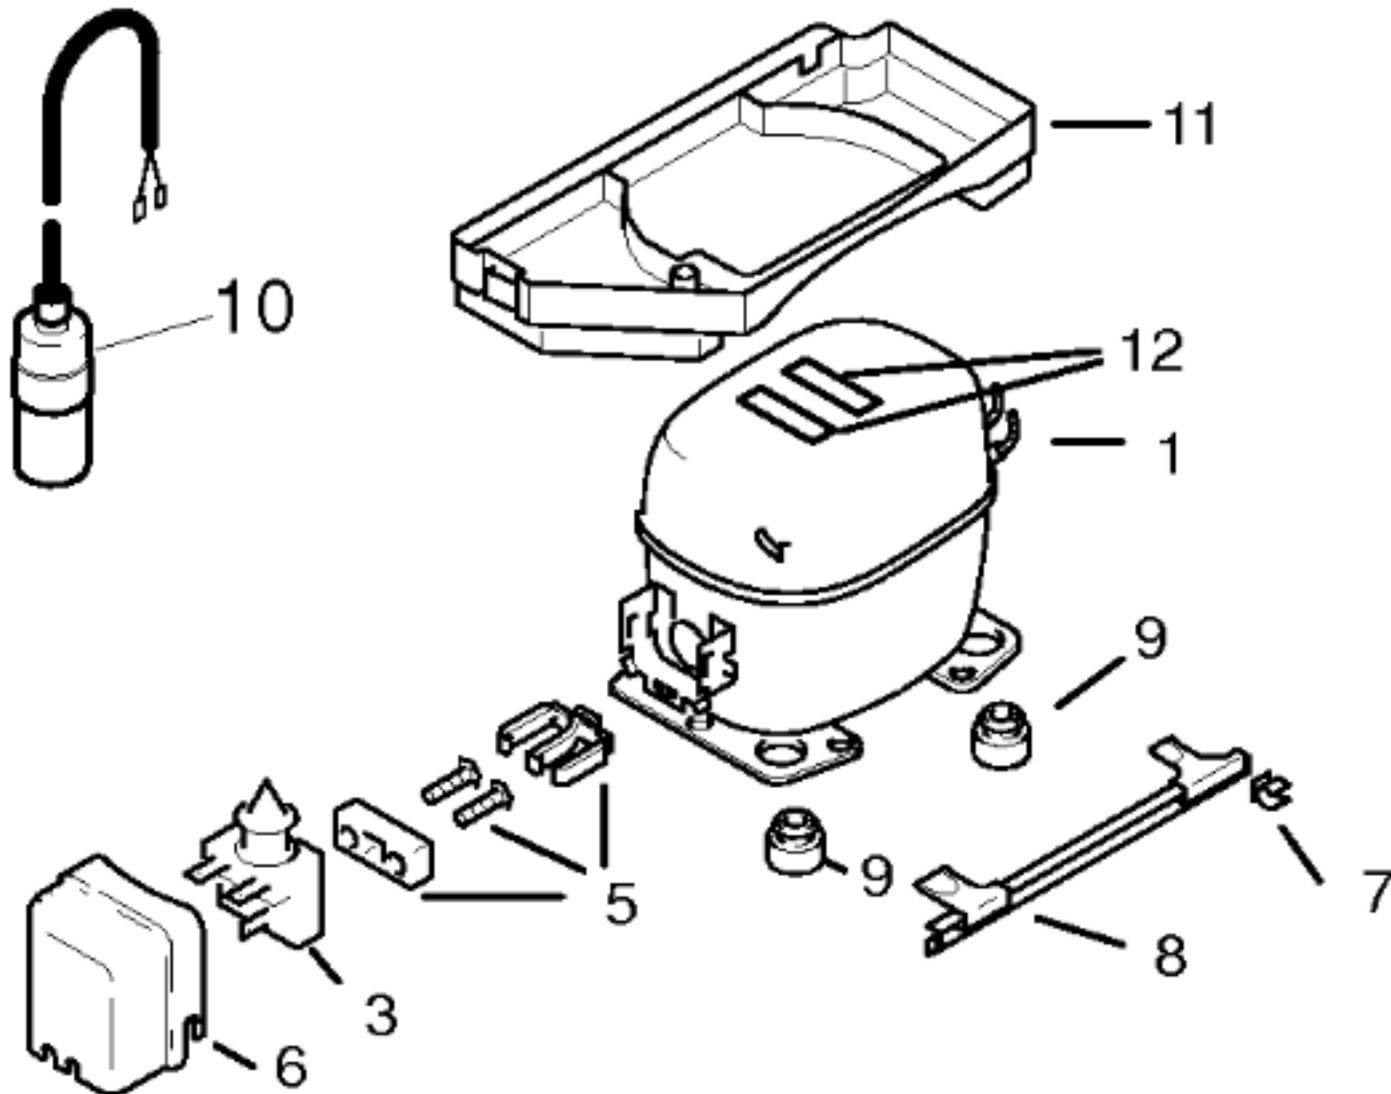

Pos.	V01	V02-V04	
	Goldstar NDA69NAEM	Danfoss TLY7KK2	
1	141999	14 2059	
2			
3	17 0743	15 1055	
5	17 0745	15 0760	
6	17 0744	15 1072	
7			
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852	16 5852	
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance	Goldstar NDA69NAEM 1242 l/h A Ha/main/prin. Hi/aux		
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)	„ein“ „aus“ „alarm“ °C		
Füllmenge/Fill.quantity/Charge	R600a g	*	
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V		

* siehe Typenschild