
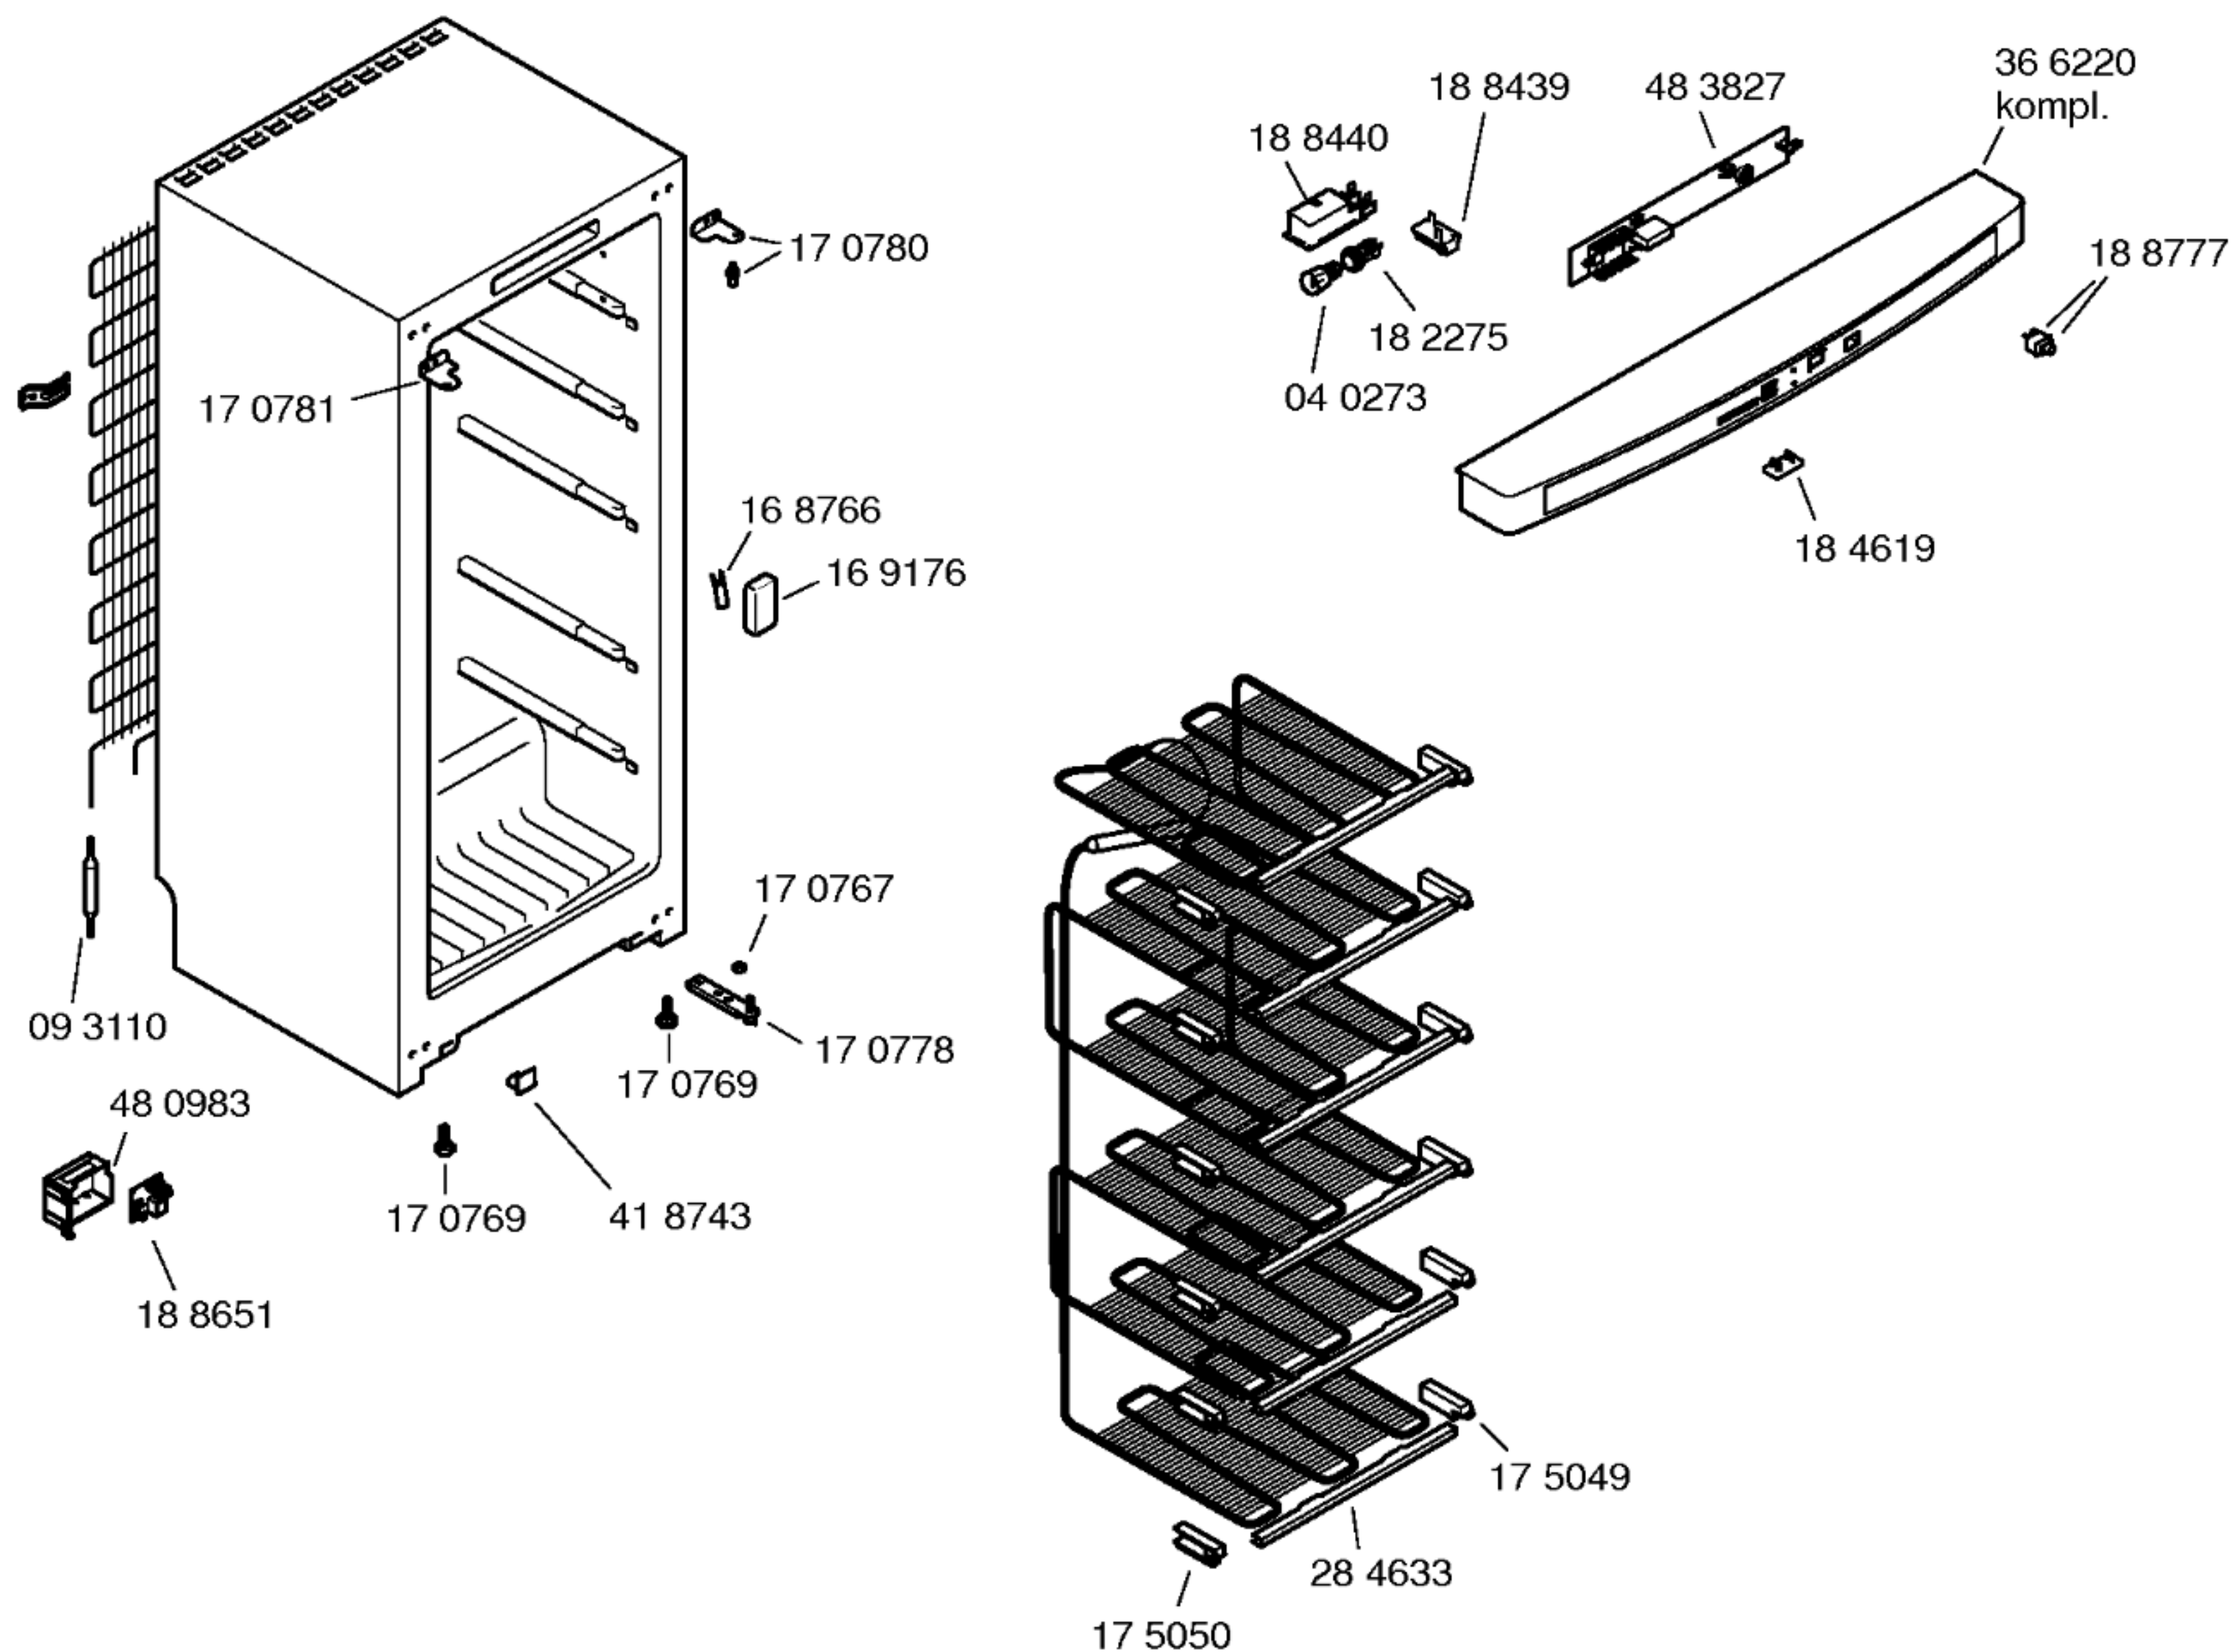


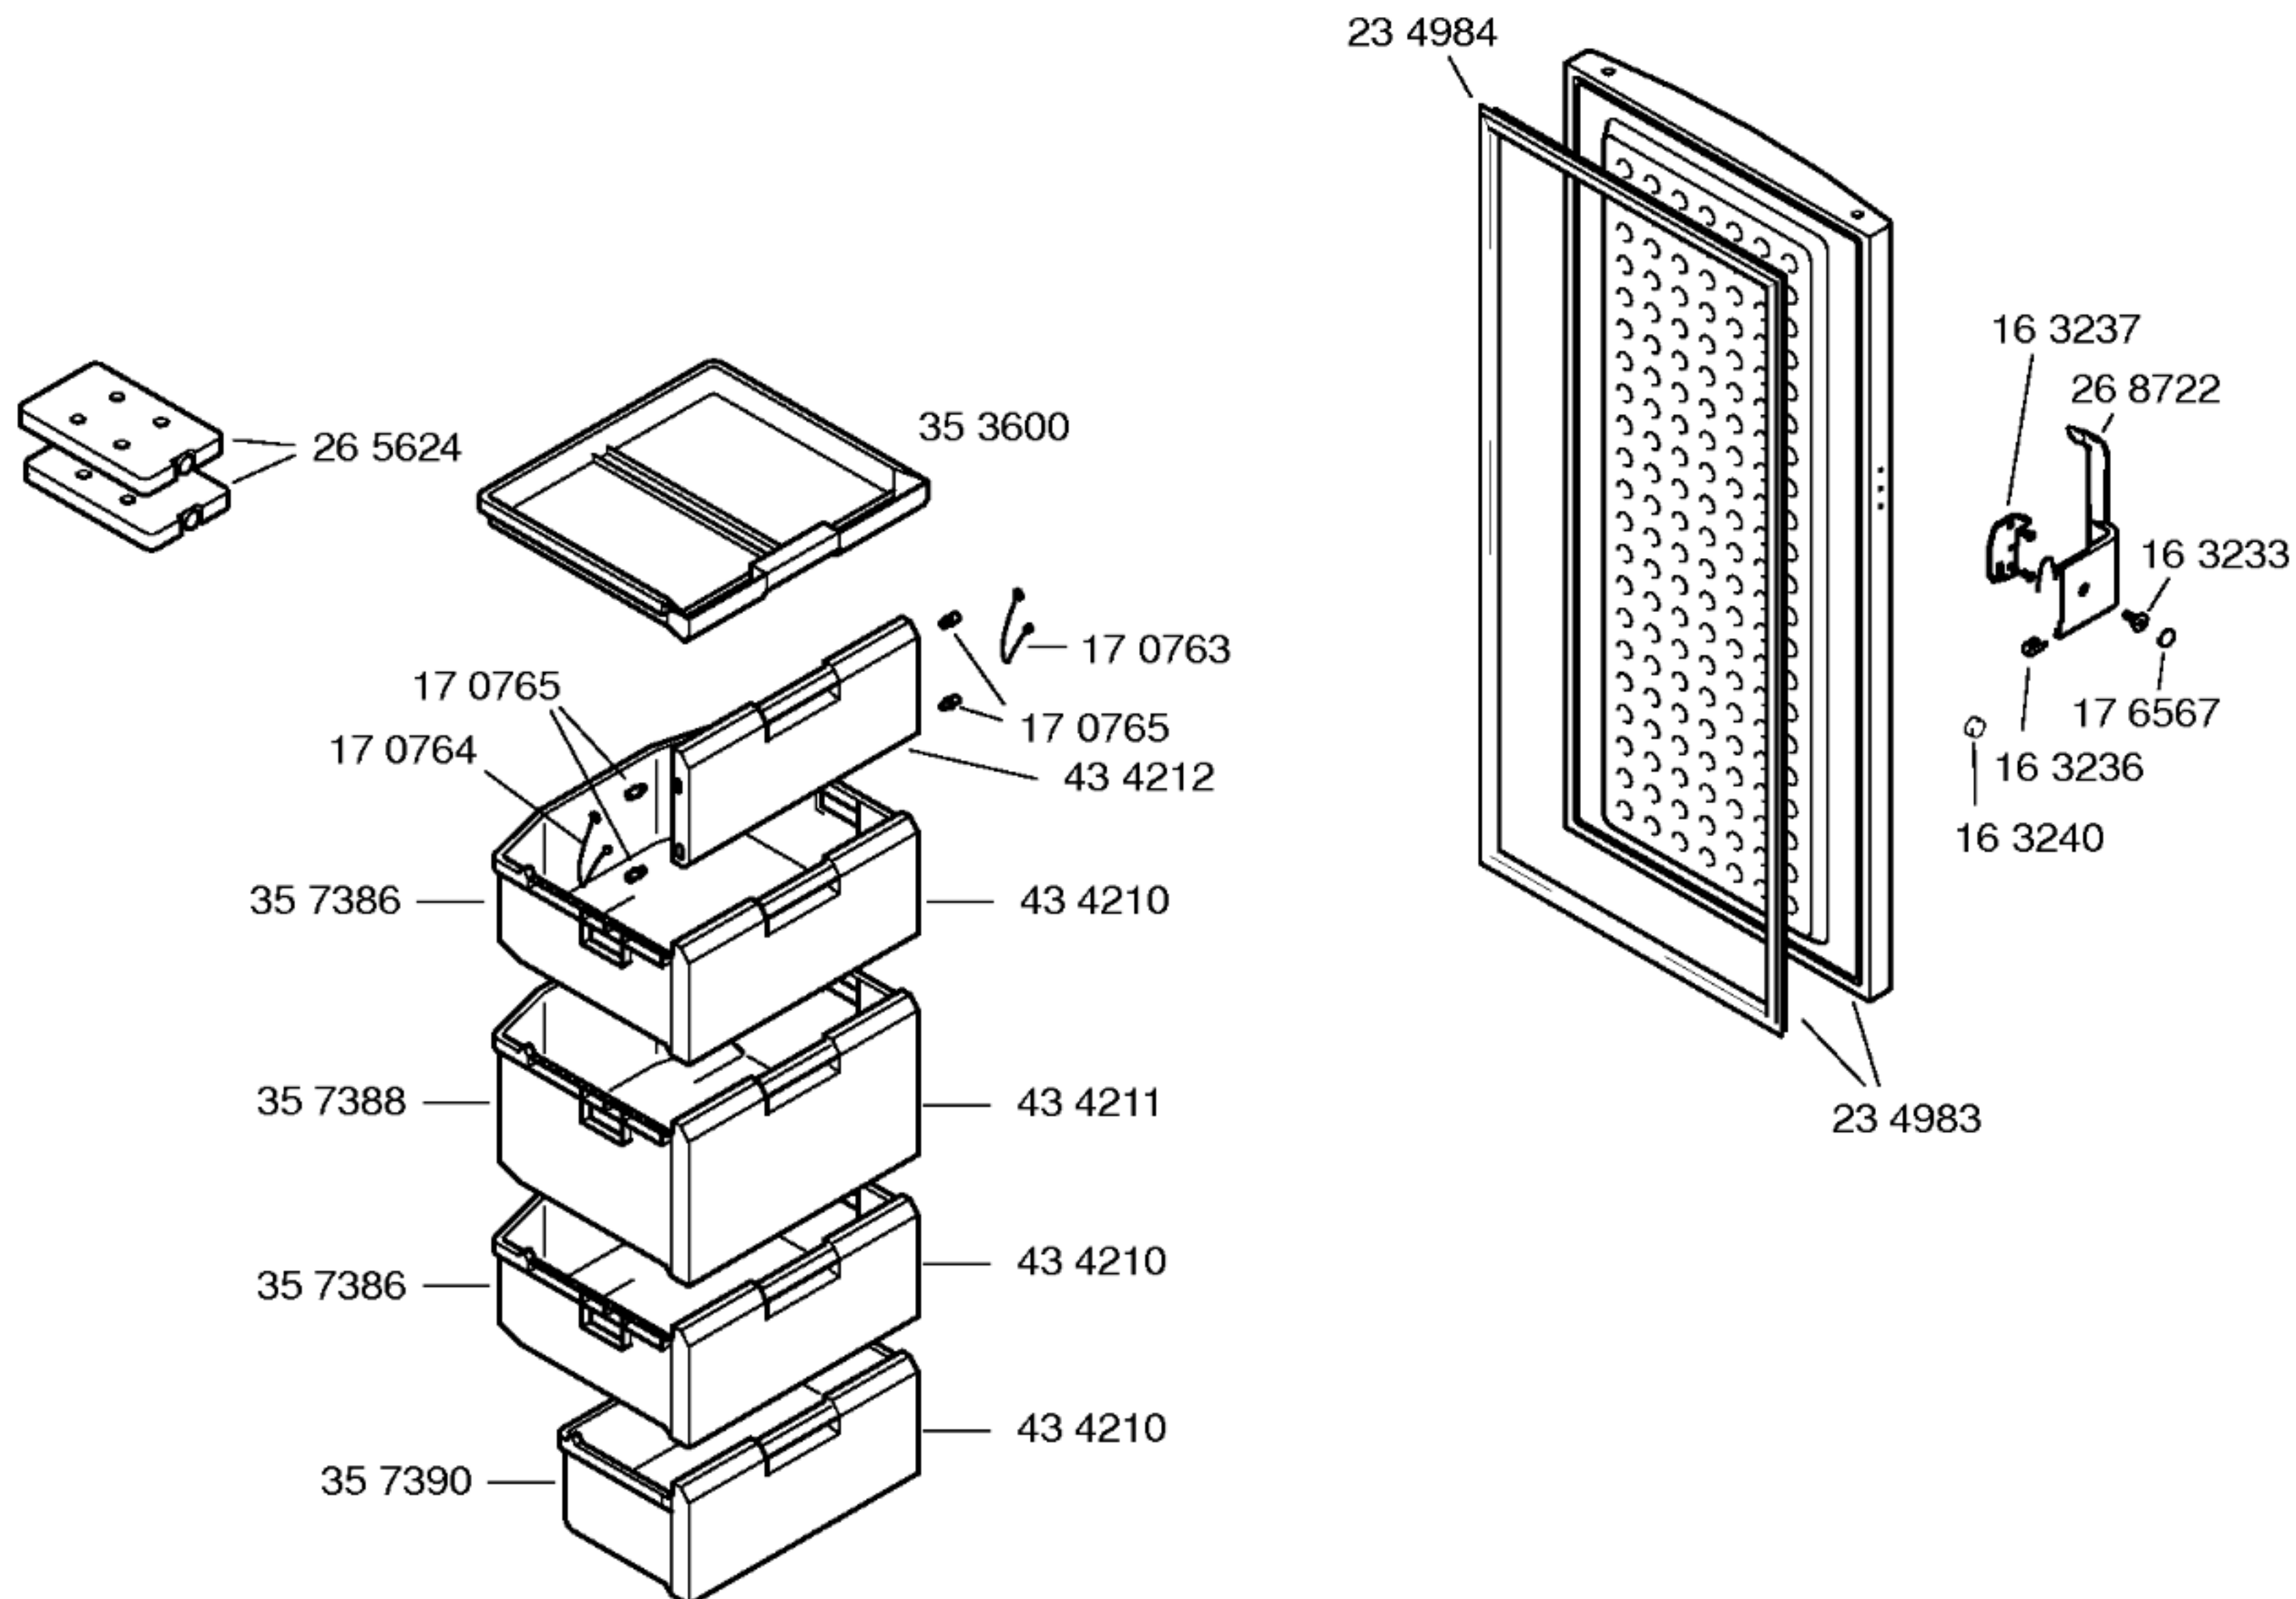


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 6299
(de,en,fr,it,nl)
58 0842
Montageanleitung
58 0241
Beistellsatz
26 5629

Side by Side
Beistellsatz KSR/KSK
48 1044

Mat. – Nr. – Konstante
3740

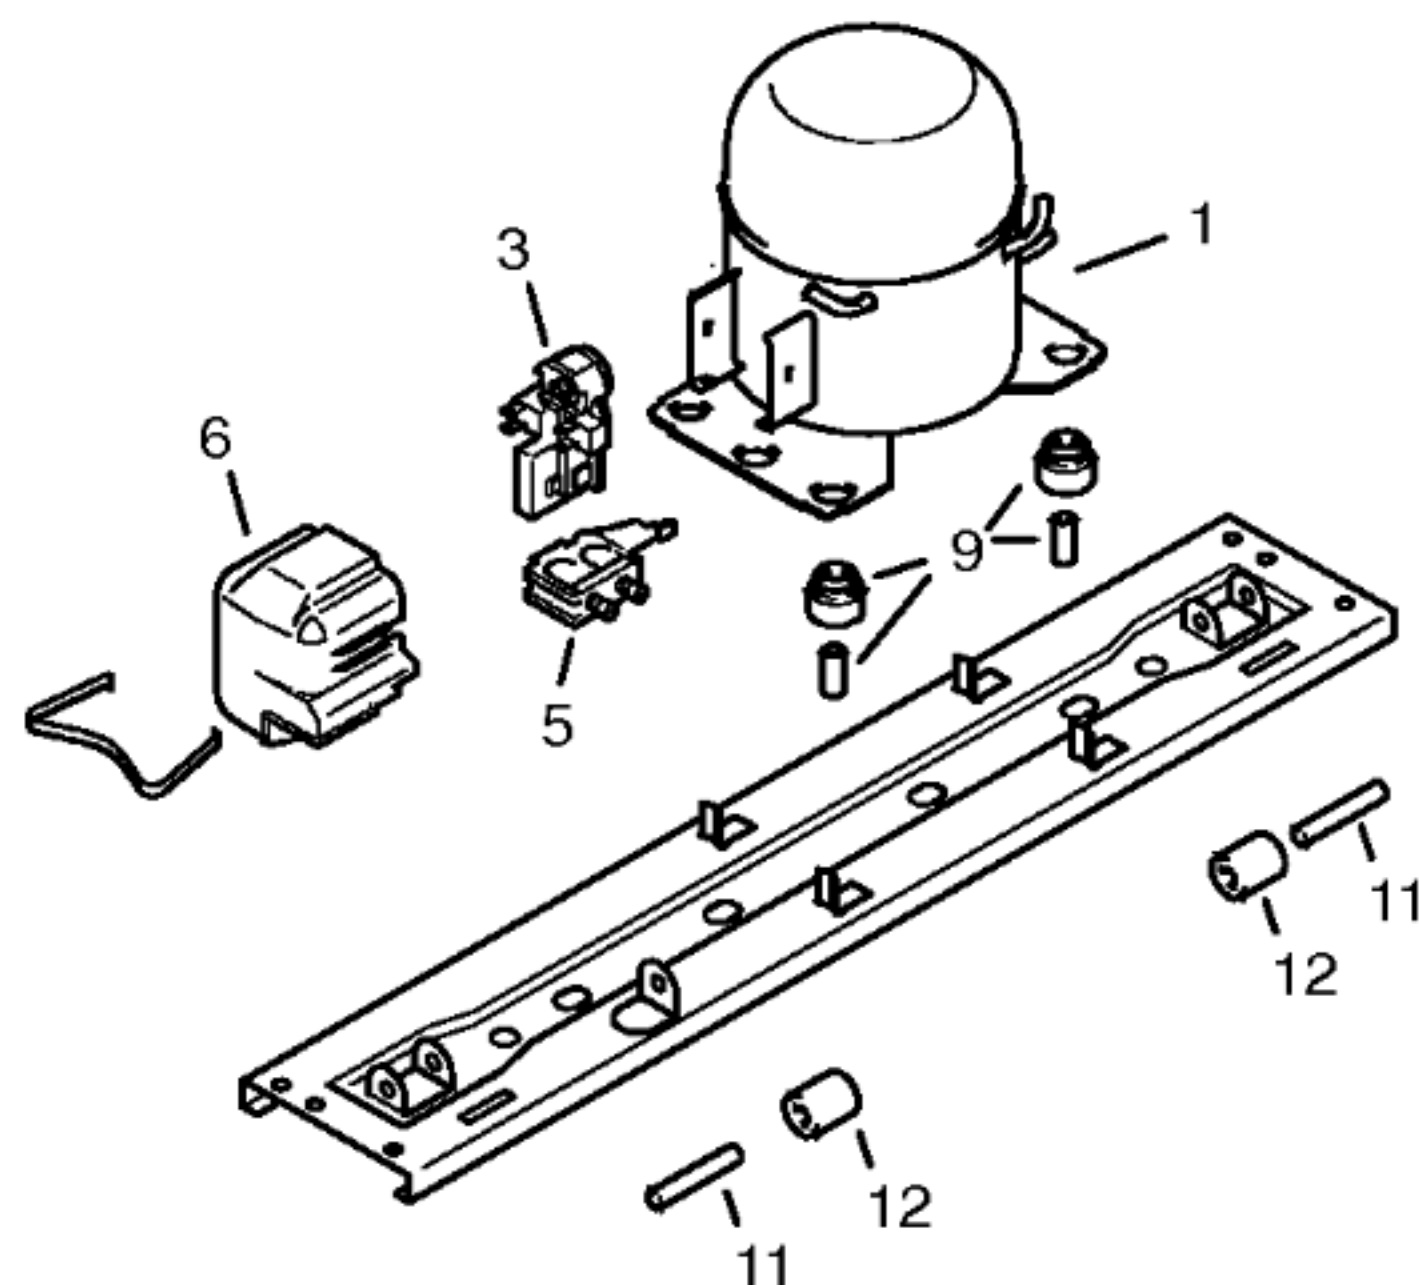

	V01		
	Danfoss		
Pos.	NLE11 KK2		
1	14 2163		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	20 9294		
9	050166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE11 KK2			
Förderleistung/Delivery/Débit	l/h	2007			
Anlaufstrom/Starting current/Cour de démarrage	A				
Widerstand/Resistance/Résistance	Ω				
Hi/aux	Ω				
Temp.–Regler/Thermostat					
Typ/Type					
Regelstellung/Position					
Schaltwerte/Switching values	"warm"				
Valeurs de commutation	"kalt"				
	"alarm"				
Füllmenge/Fill.quantity/Charge	R600a				
Anschlußwert/Conn.load/Puiss. connectée	W				
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
Leistung/Power/Puissance	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
NTC–Fühler / Sensor		°C	kΩ	°C	kΩ
		+10	9,95 ± 0,18	–18	43,31 ± 1,10
		+5	12,70 ± 0,18	–22	54,66 ± 1,59
		0	16,33 ± 0,16	–26	69,42 ± 2,29
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				