



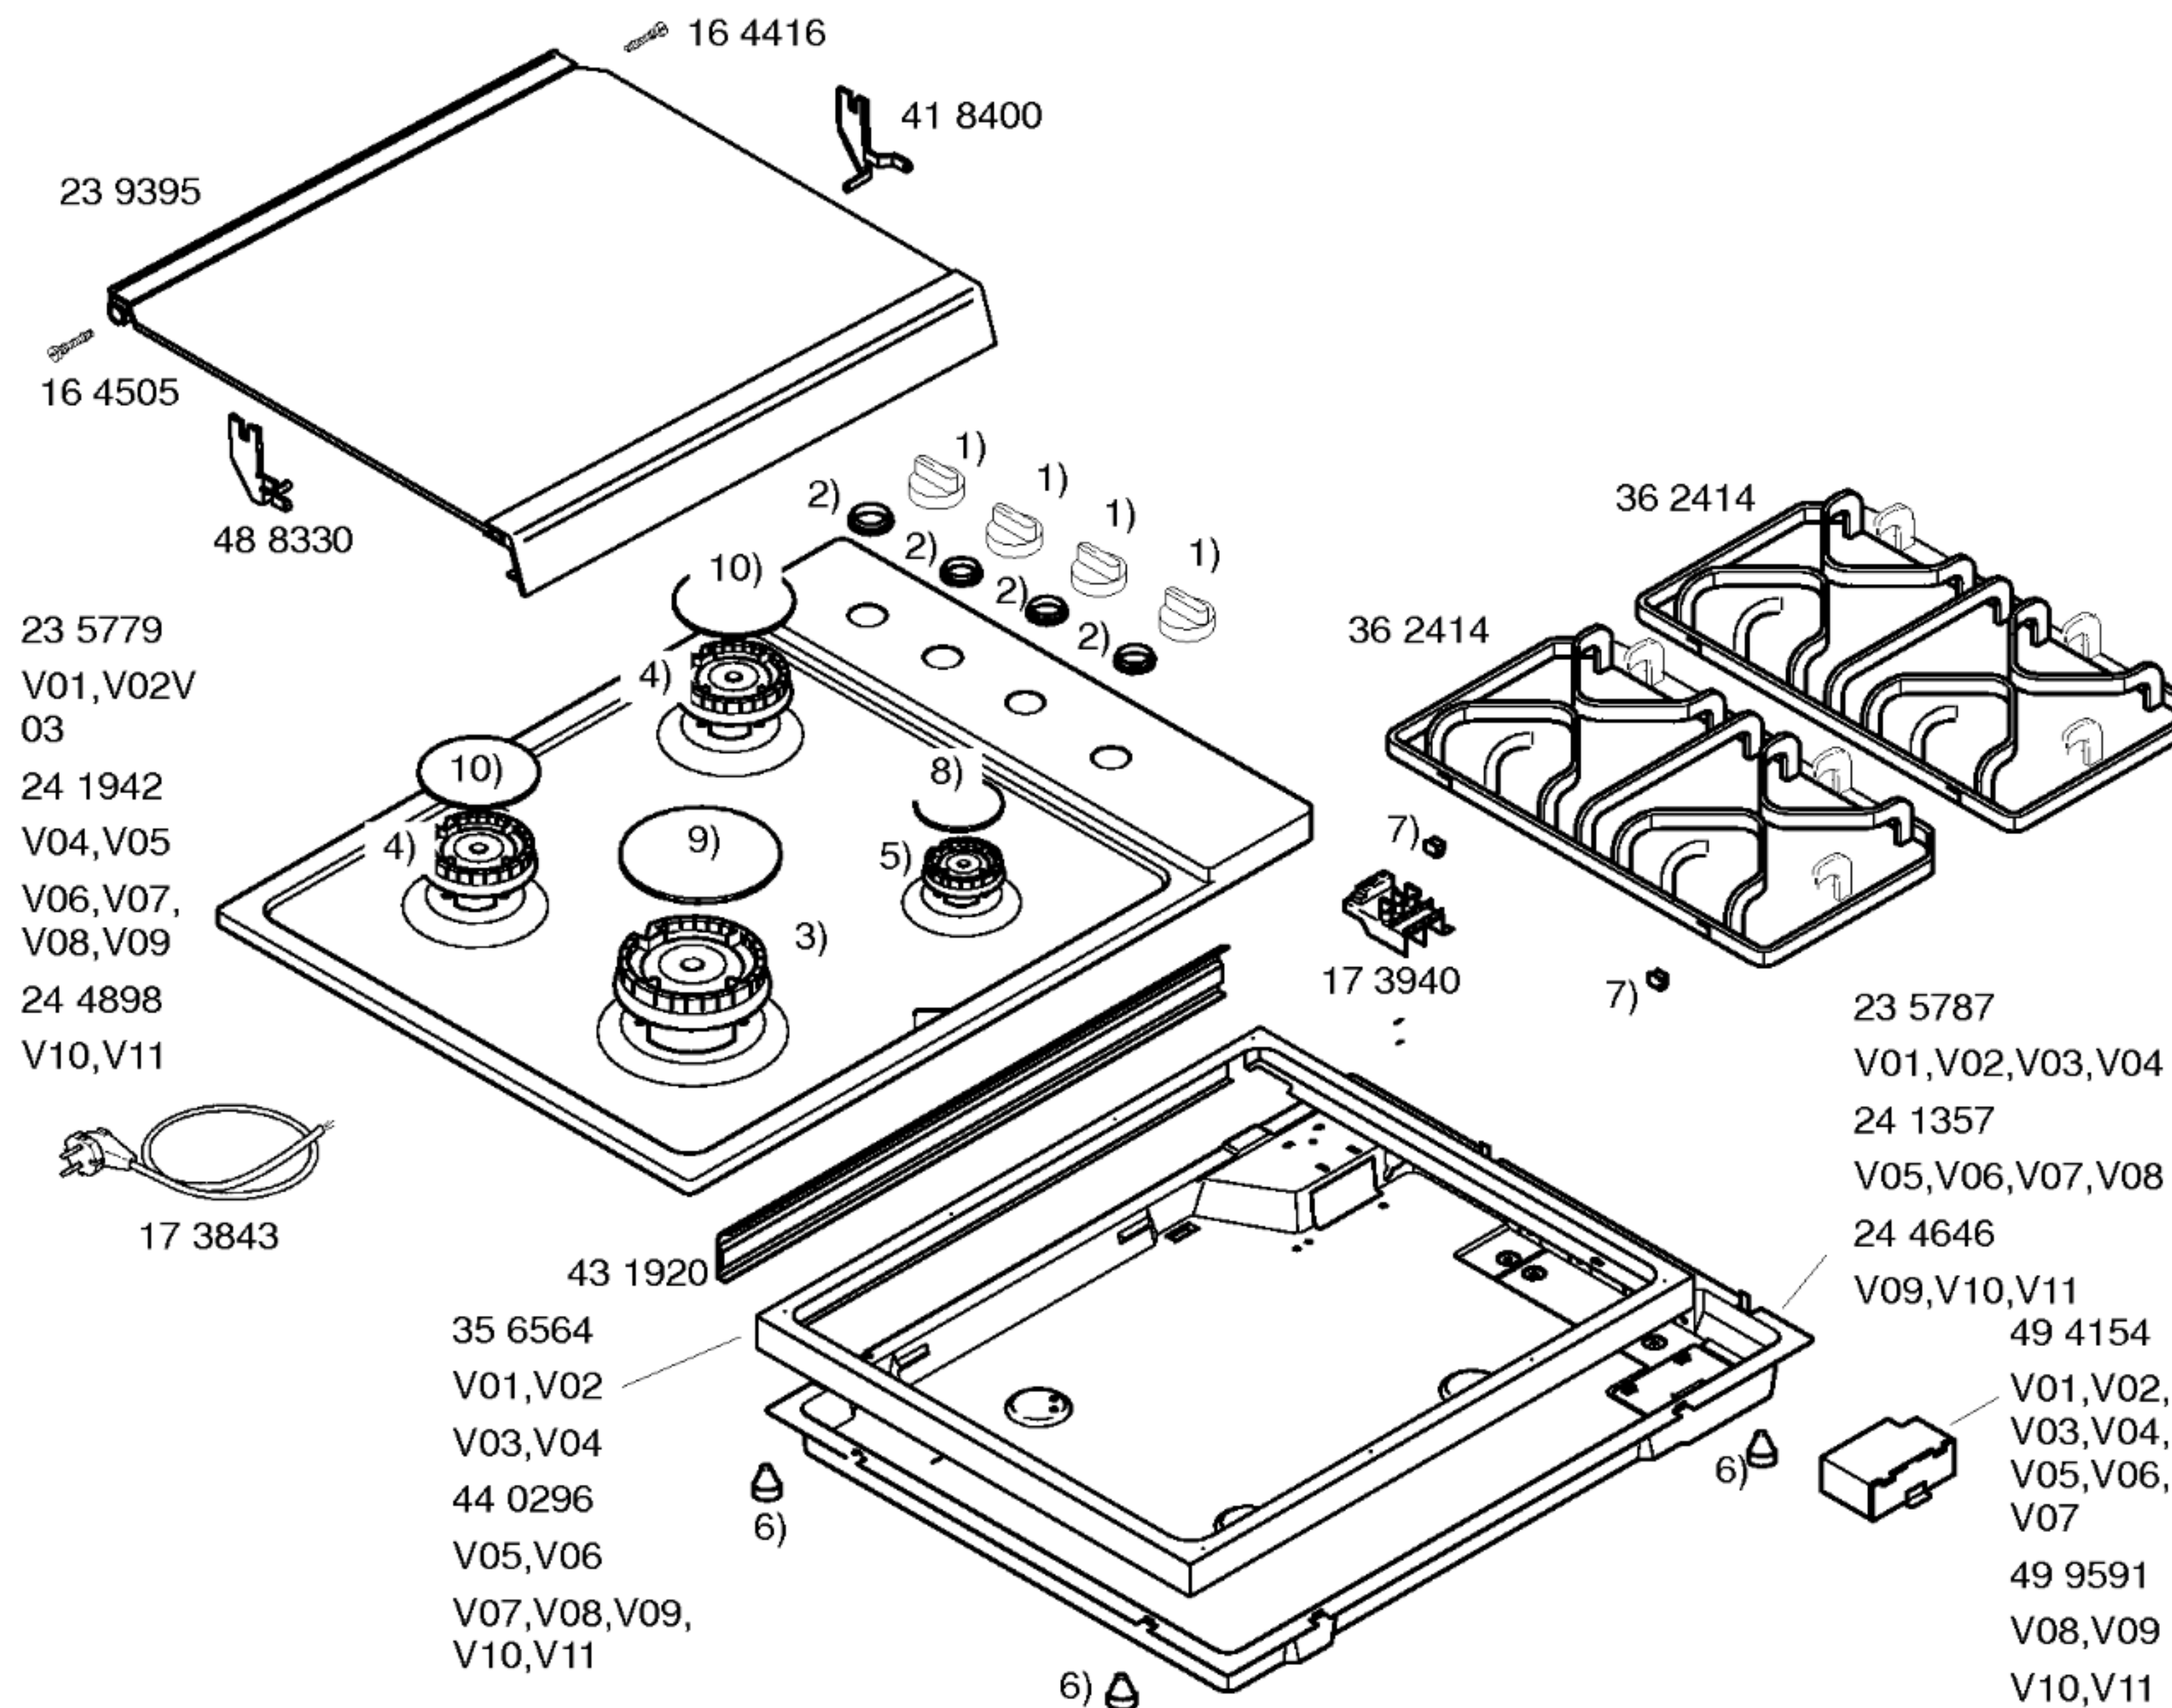

Ident – Nummern – Konstante
 3740
 Gebrauchsanweisung
 58 4257

- 1) 17 3891
 V01,V02
 42 4423
 V03,V04,V05,V06
 V07,V08,V09,V10
 V11
- 2) 41 8119
- 3) 26 7356
- 4) 26 7357
- 5) 26 7359
- 6) 18 8756
- 7) 18 3762
- 8) 17 3898
- 9) 17 3896
- 10) 17 3897

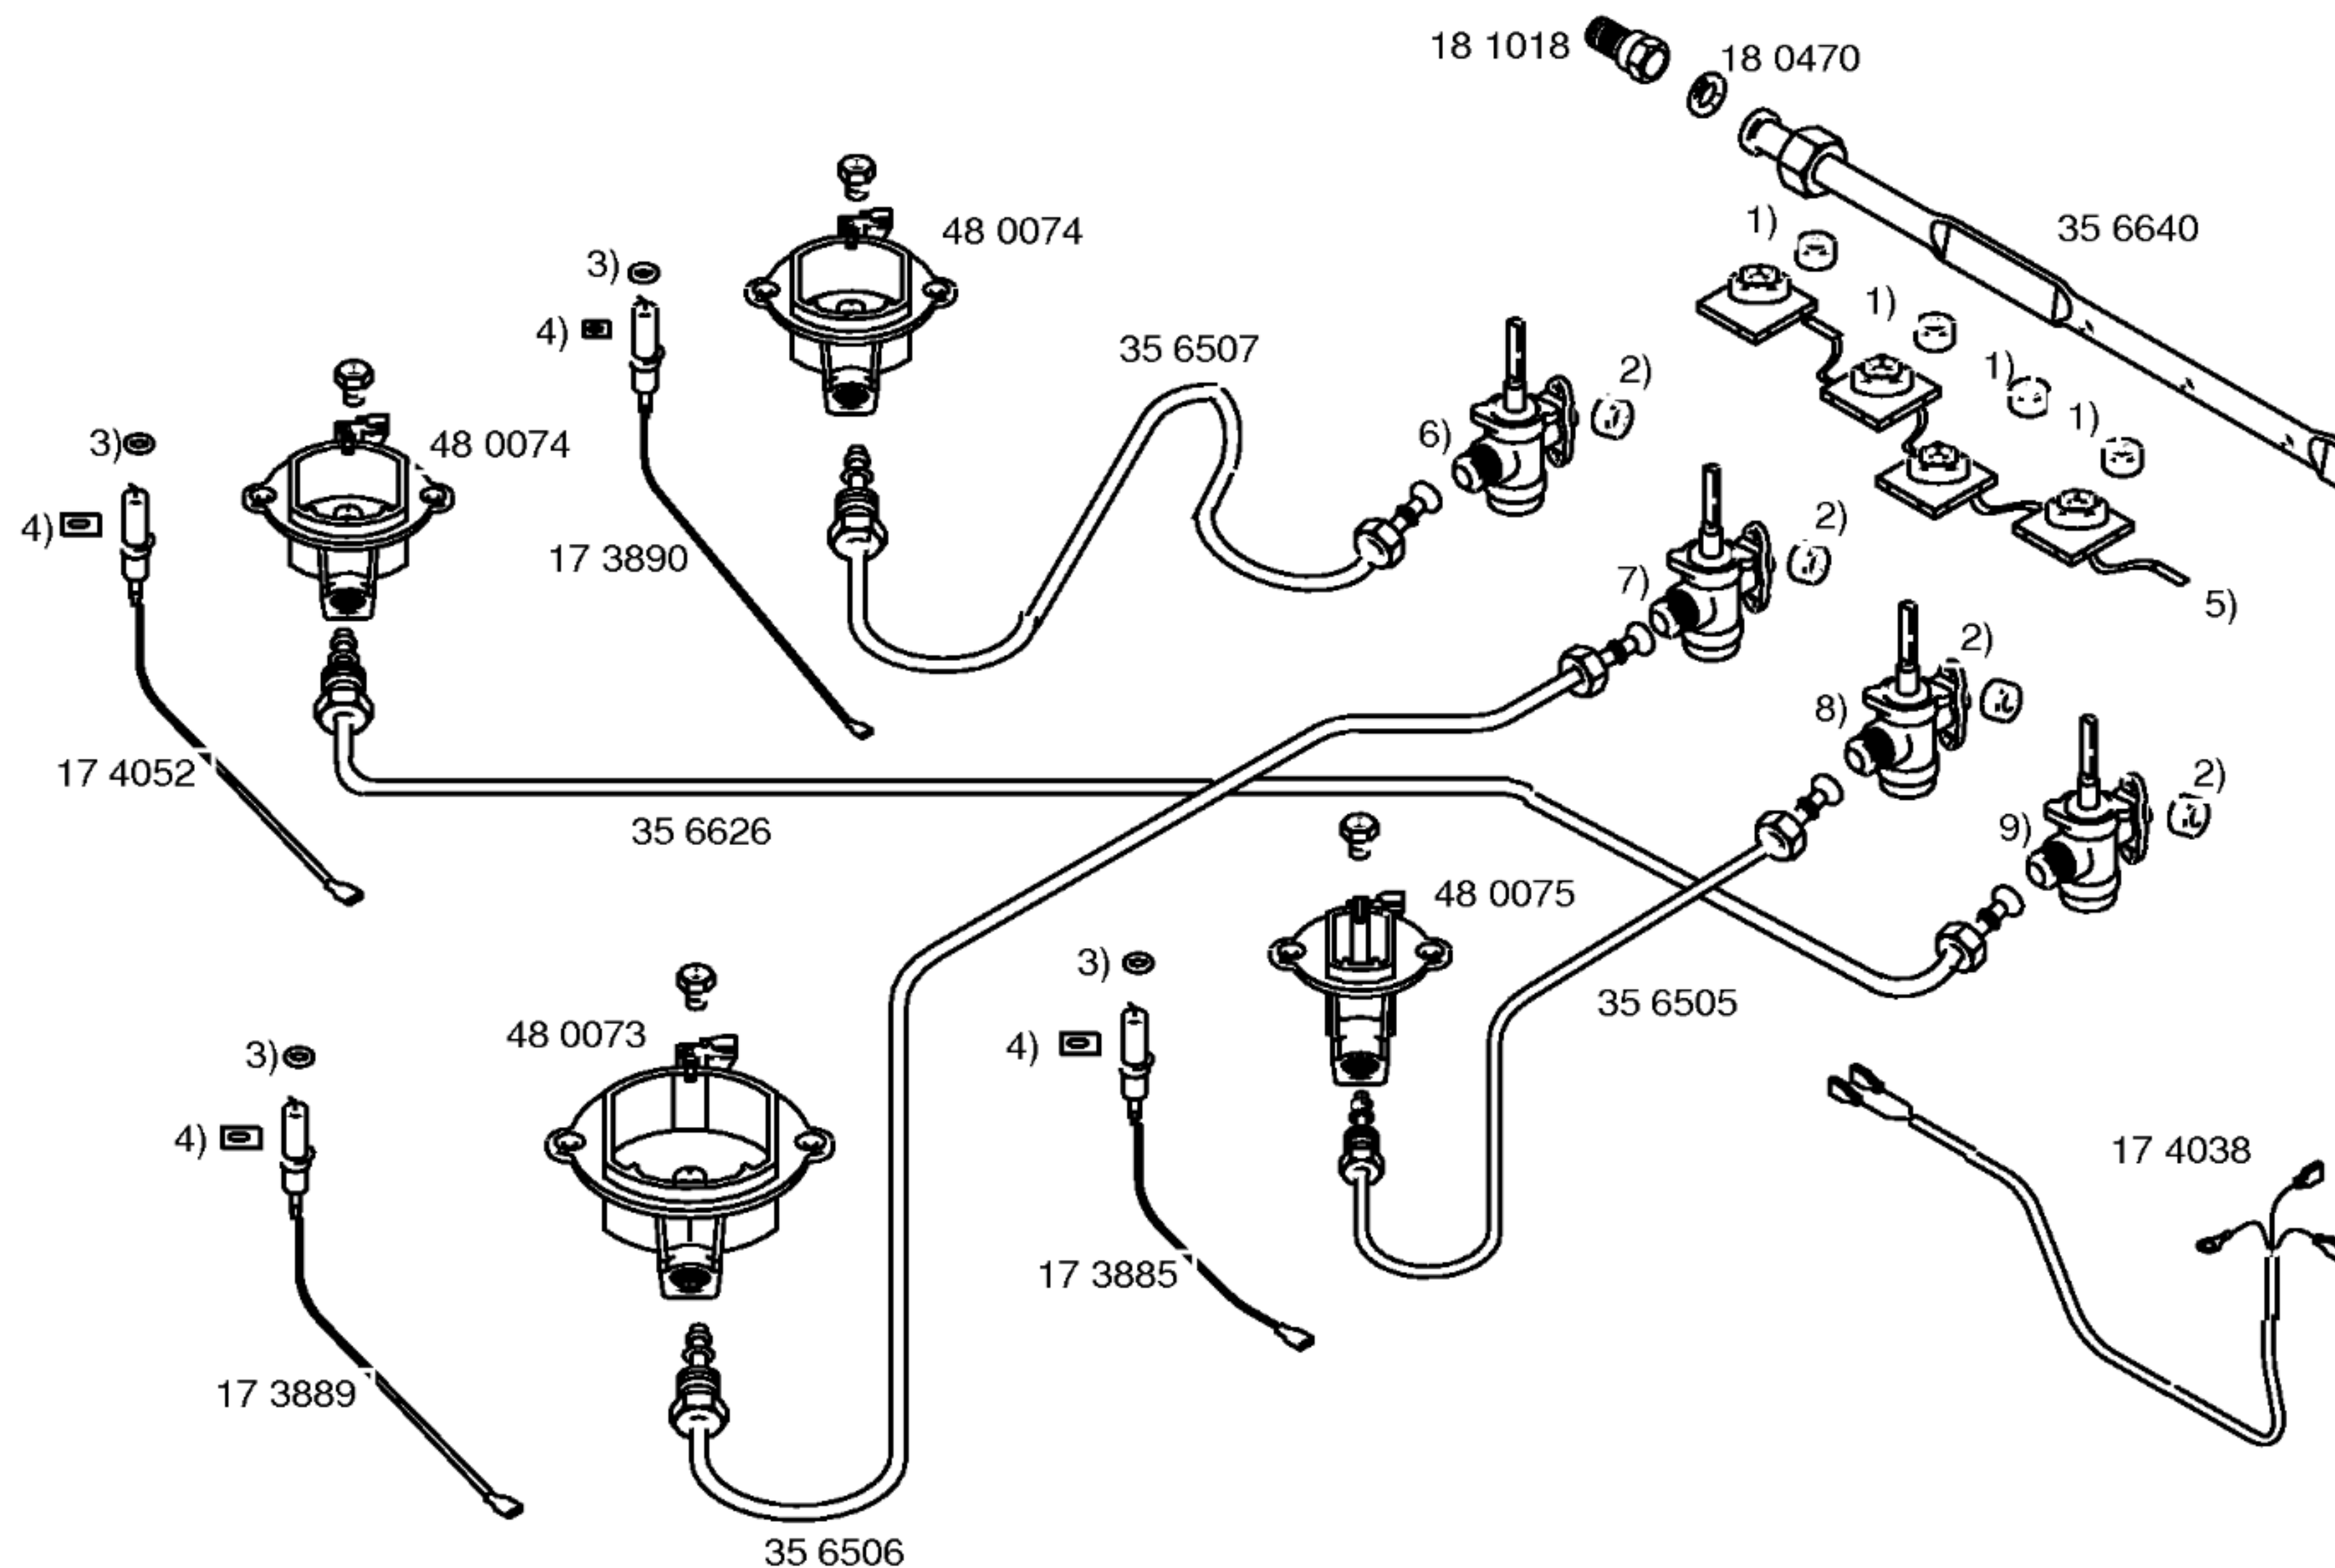

Ident - Nummern - Konstante
 3740

- 1) 18 3582
- 2) 16 9339
- 3) 17 3894
- 4) 17 3895
- 5) 48 9635
- V01
- 49 0728
- V02, V03
- 49 4151
- V04, V05, V06, V07
- V08, V09, V10, V11
- 6) 48 8987
- 7) 48 8988
- 8) 48 8986
- 9) 48 8987

Duesensatz Für:
 EG LL G25 25mbar
 17 5527

FG G30/31 30mbar
 17 4048

EG LL G25 25mbar
 (inkl.Bypassduesen)
 41 8134

FG G30/31 30mbar
 (inkl.Bypassduesen)
 41 7837