





Ident – Nummern – Konstante
3740

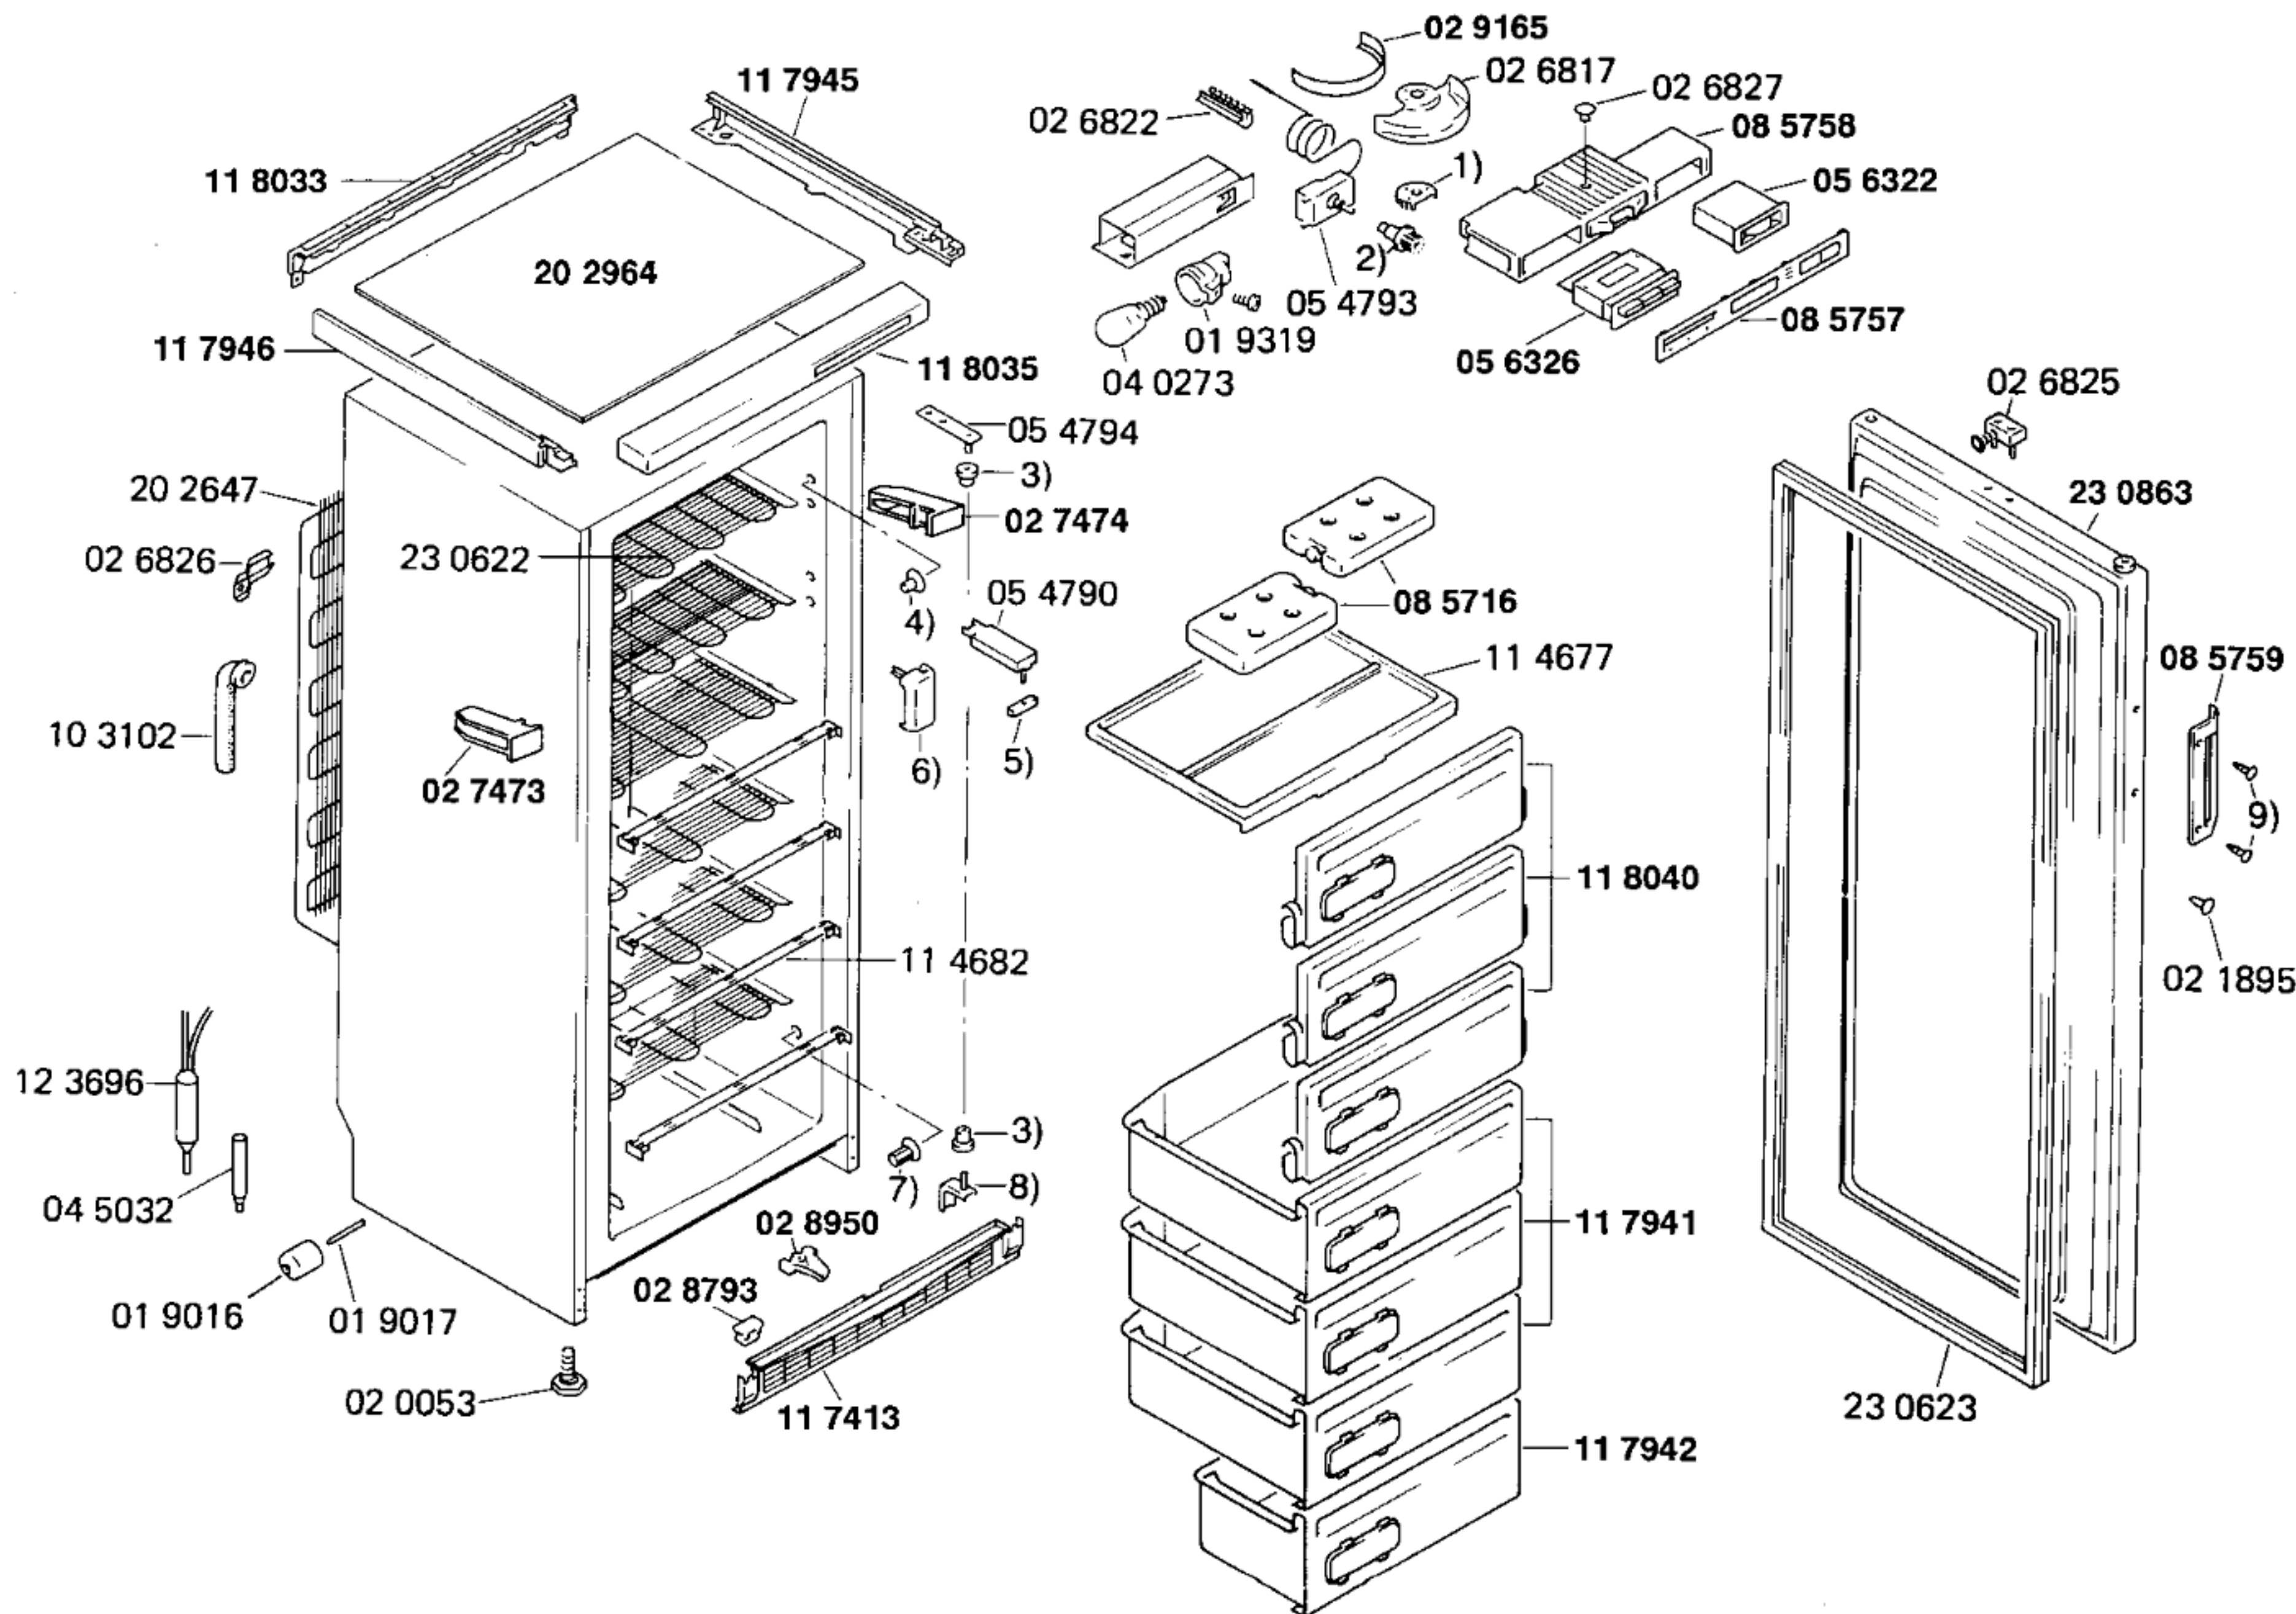

51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815
- 6) 02 6823
- 7) 01 8901
- 8) 05 4795
- 9) 01 9830

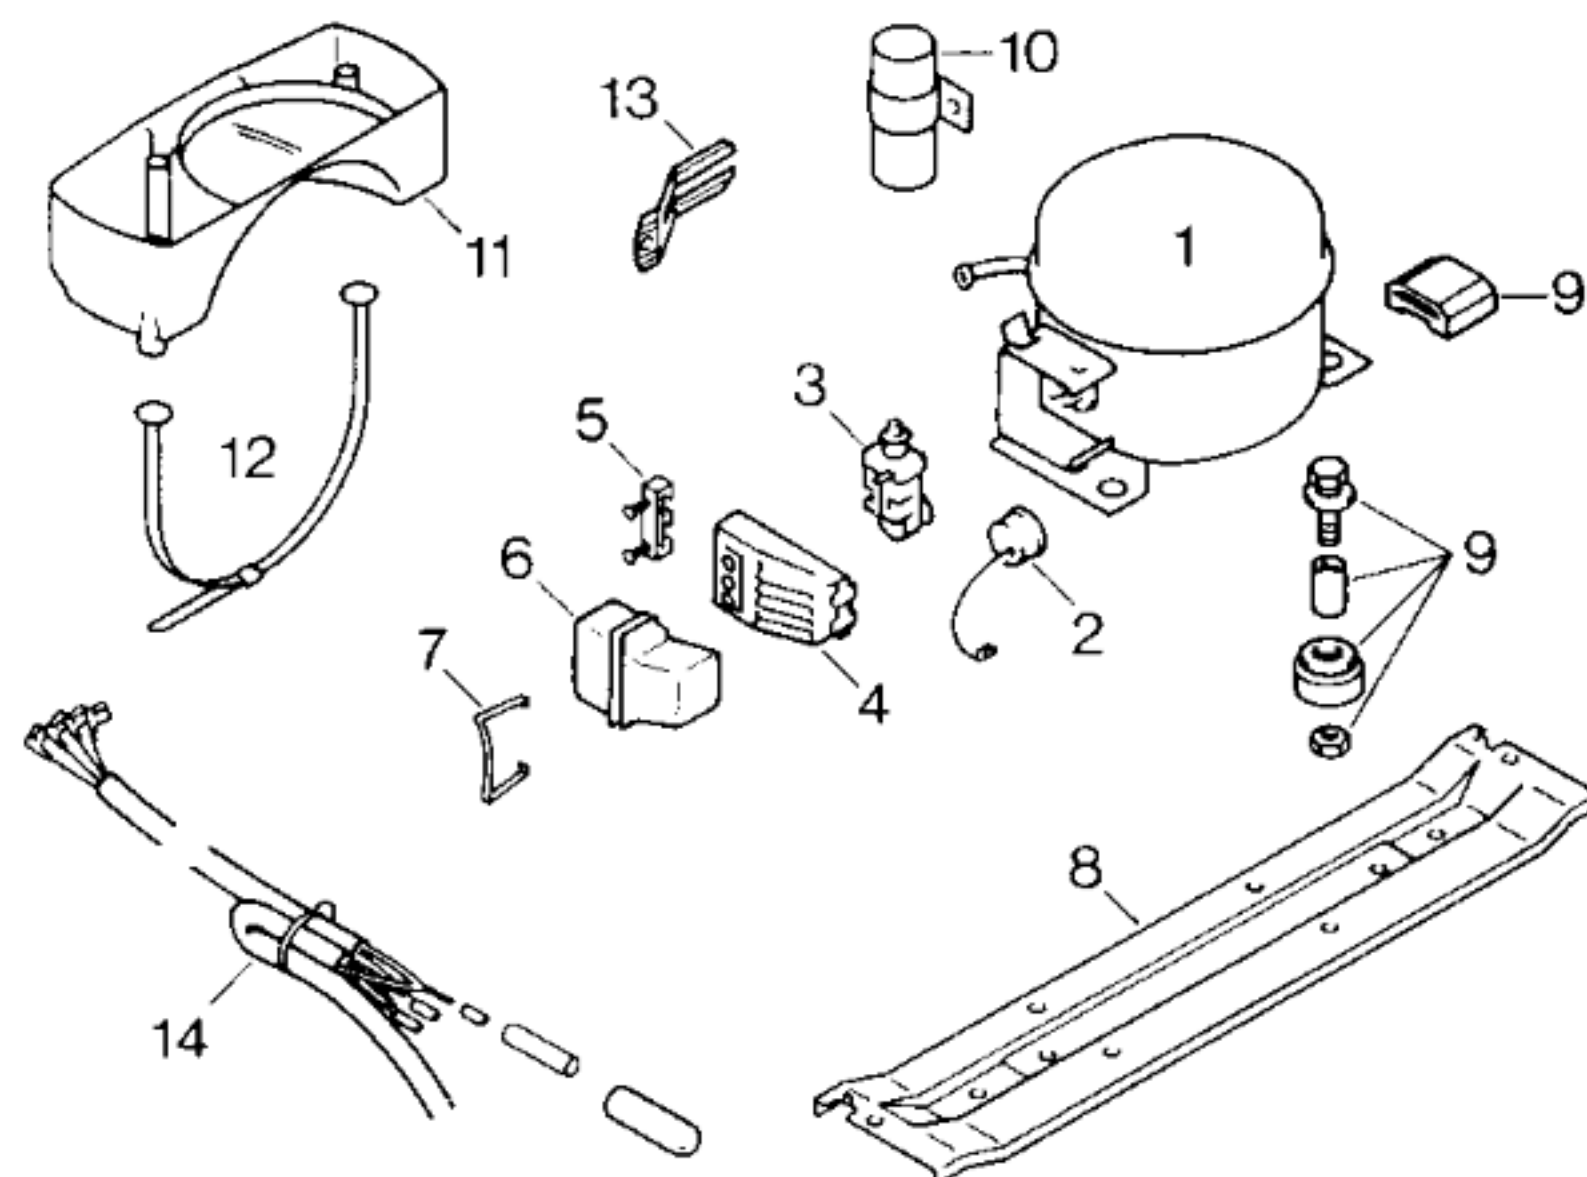Ident – Nummern – Konstante
3740

Pos.	EU1,F1	EU2,F2	
	Aspera	Danfoss	
1	14 0312	14 0157	
2	02 6559		
3	02 2342	02 0108	
4	05 1748		
5		02 1361	
6	05 1746	05 1413	
7	02 2339		
8			
9	05 0166		
10			
11			
12			
13			
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Danfoss		
Typ/Type		8Y 1116 A	FR 8,5 A		
Förderleistung/Delivery/Débit		l/h	1450	1430	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,9	10,3	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	11,7	12,2	
		Hi/aux Ω	37,7	13,7	
Temp.-Regler/Thermostat		Danfoss			
Typ/Type		077 B 2054			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	- 24 - 16		
Valeurs de commutation		„aus“	- 34 - 24		
		(„abtauen“ od.) „alarm“	- 19 - 12		
Füllmenge/Fill.quantity/Charge		R12 g	195		
Anschlußwert/Conn.load/Puiss. connectée		W	170		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			