 
 
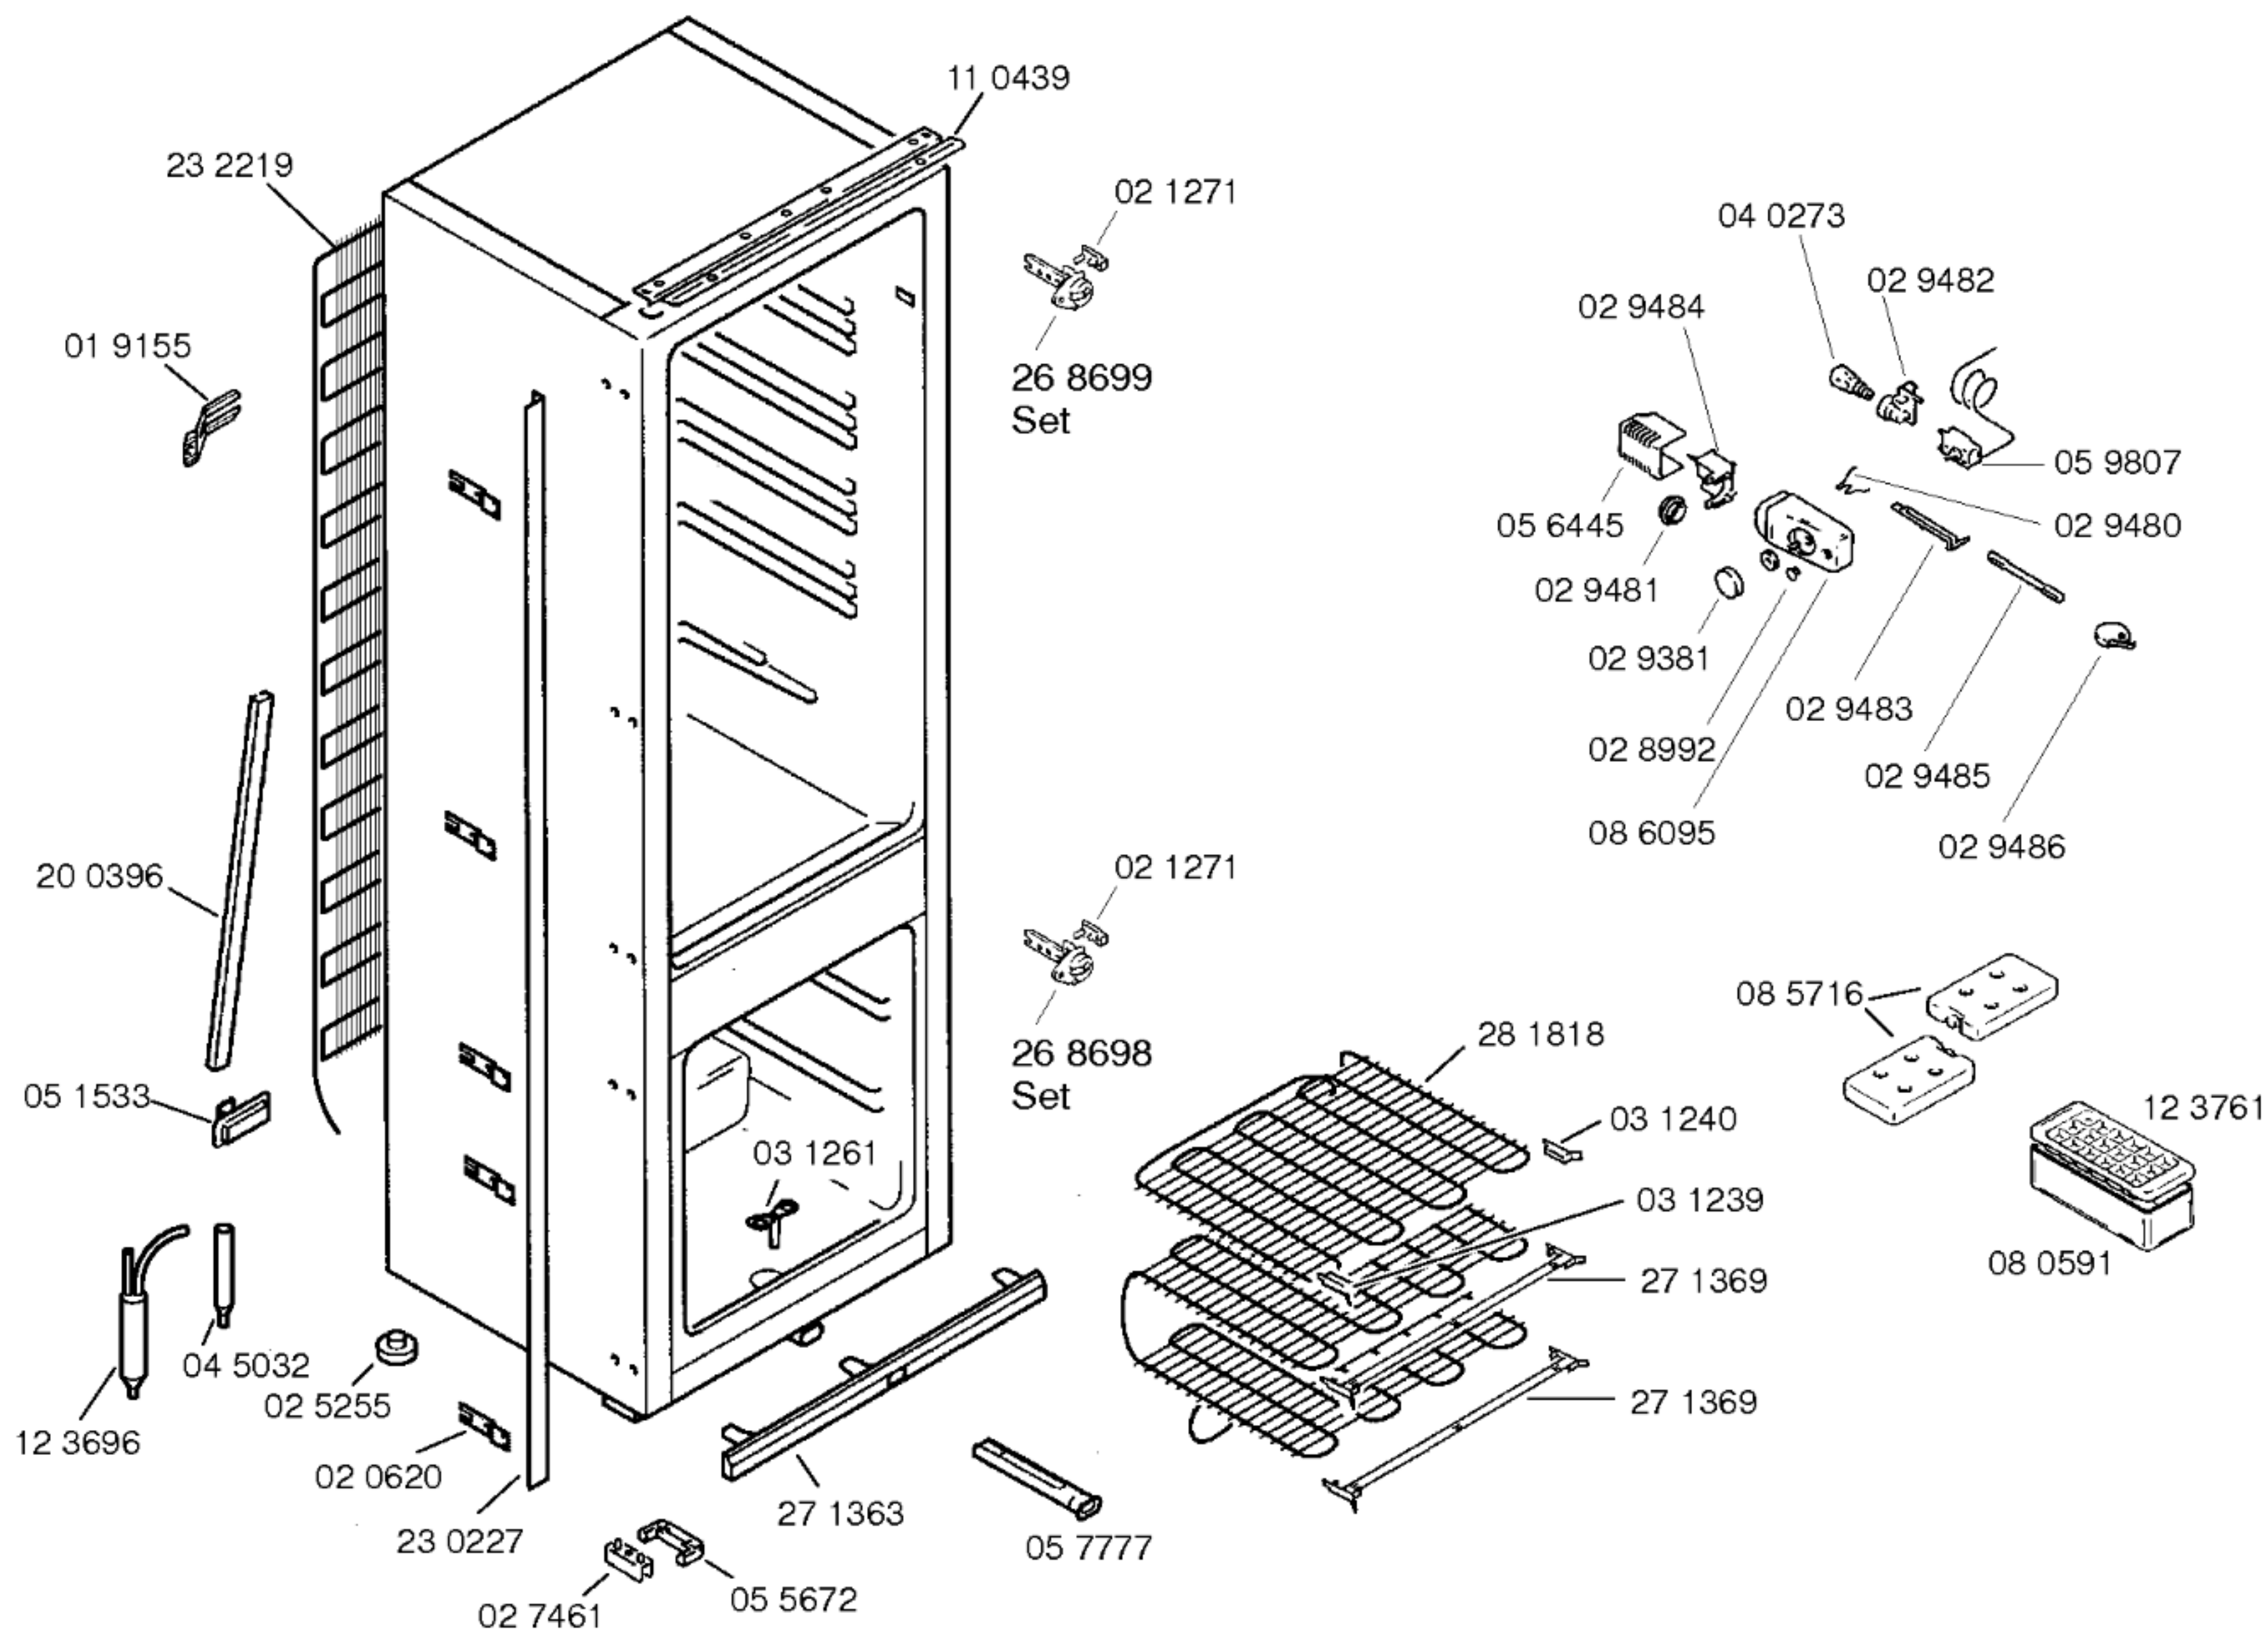 


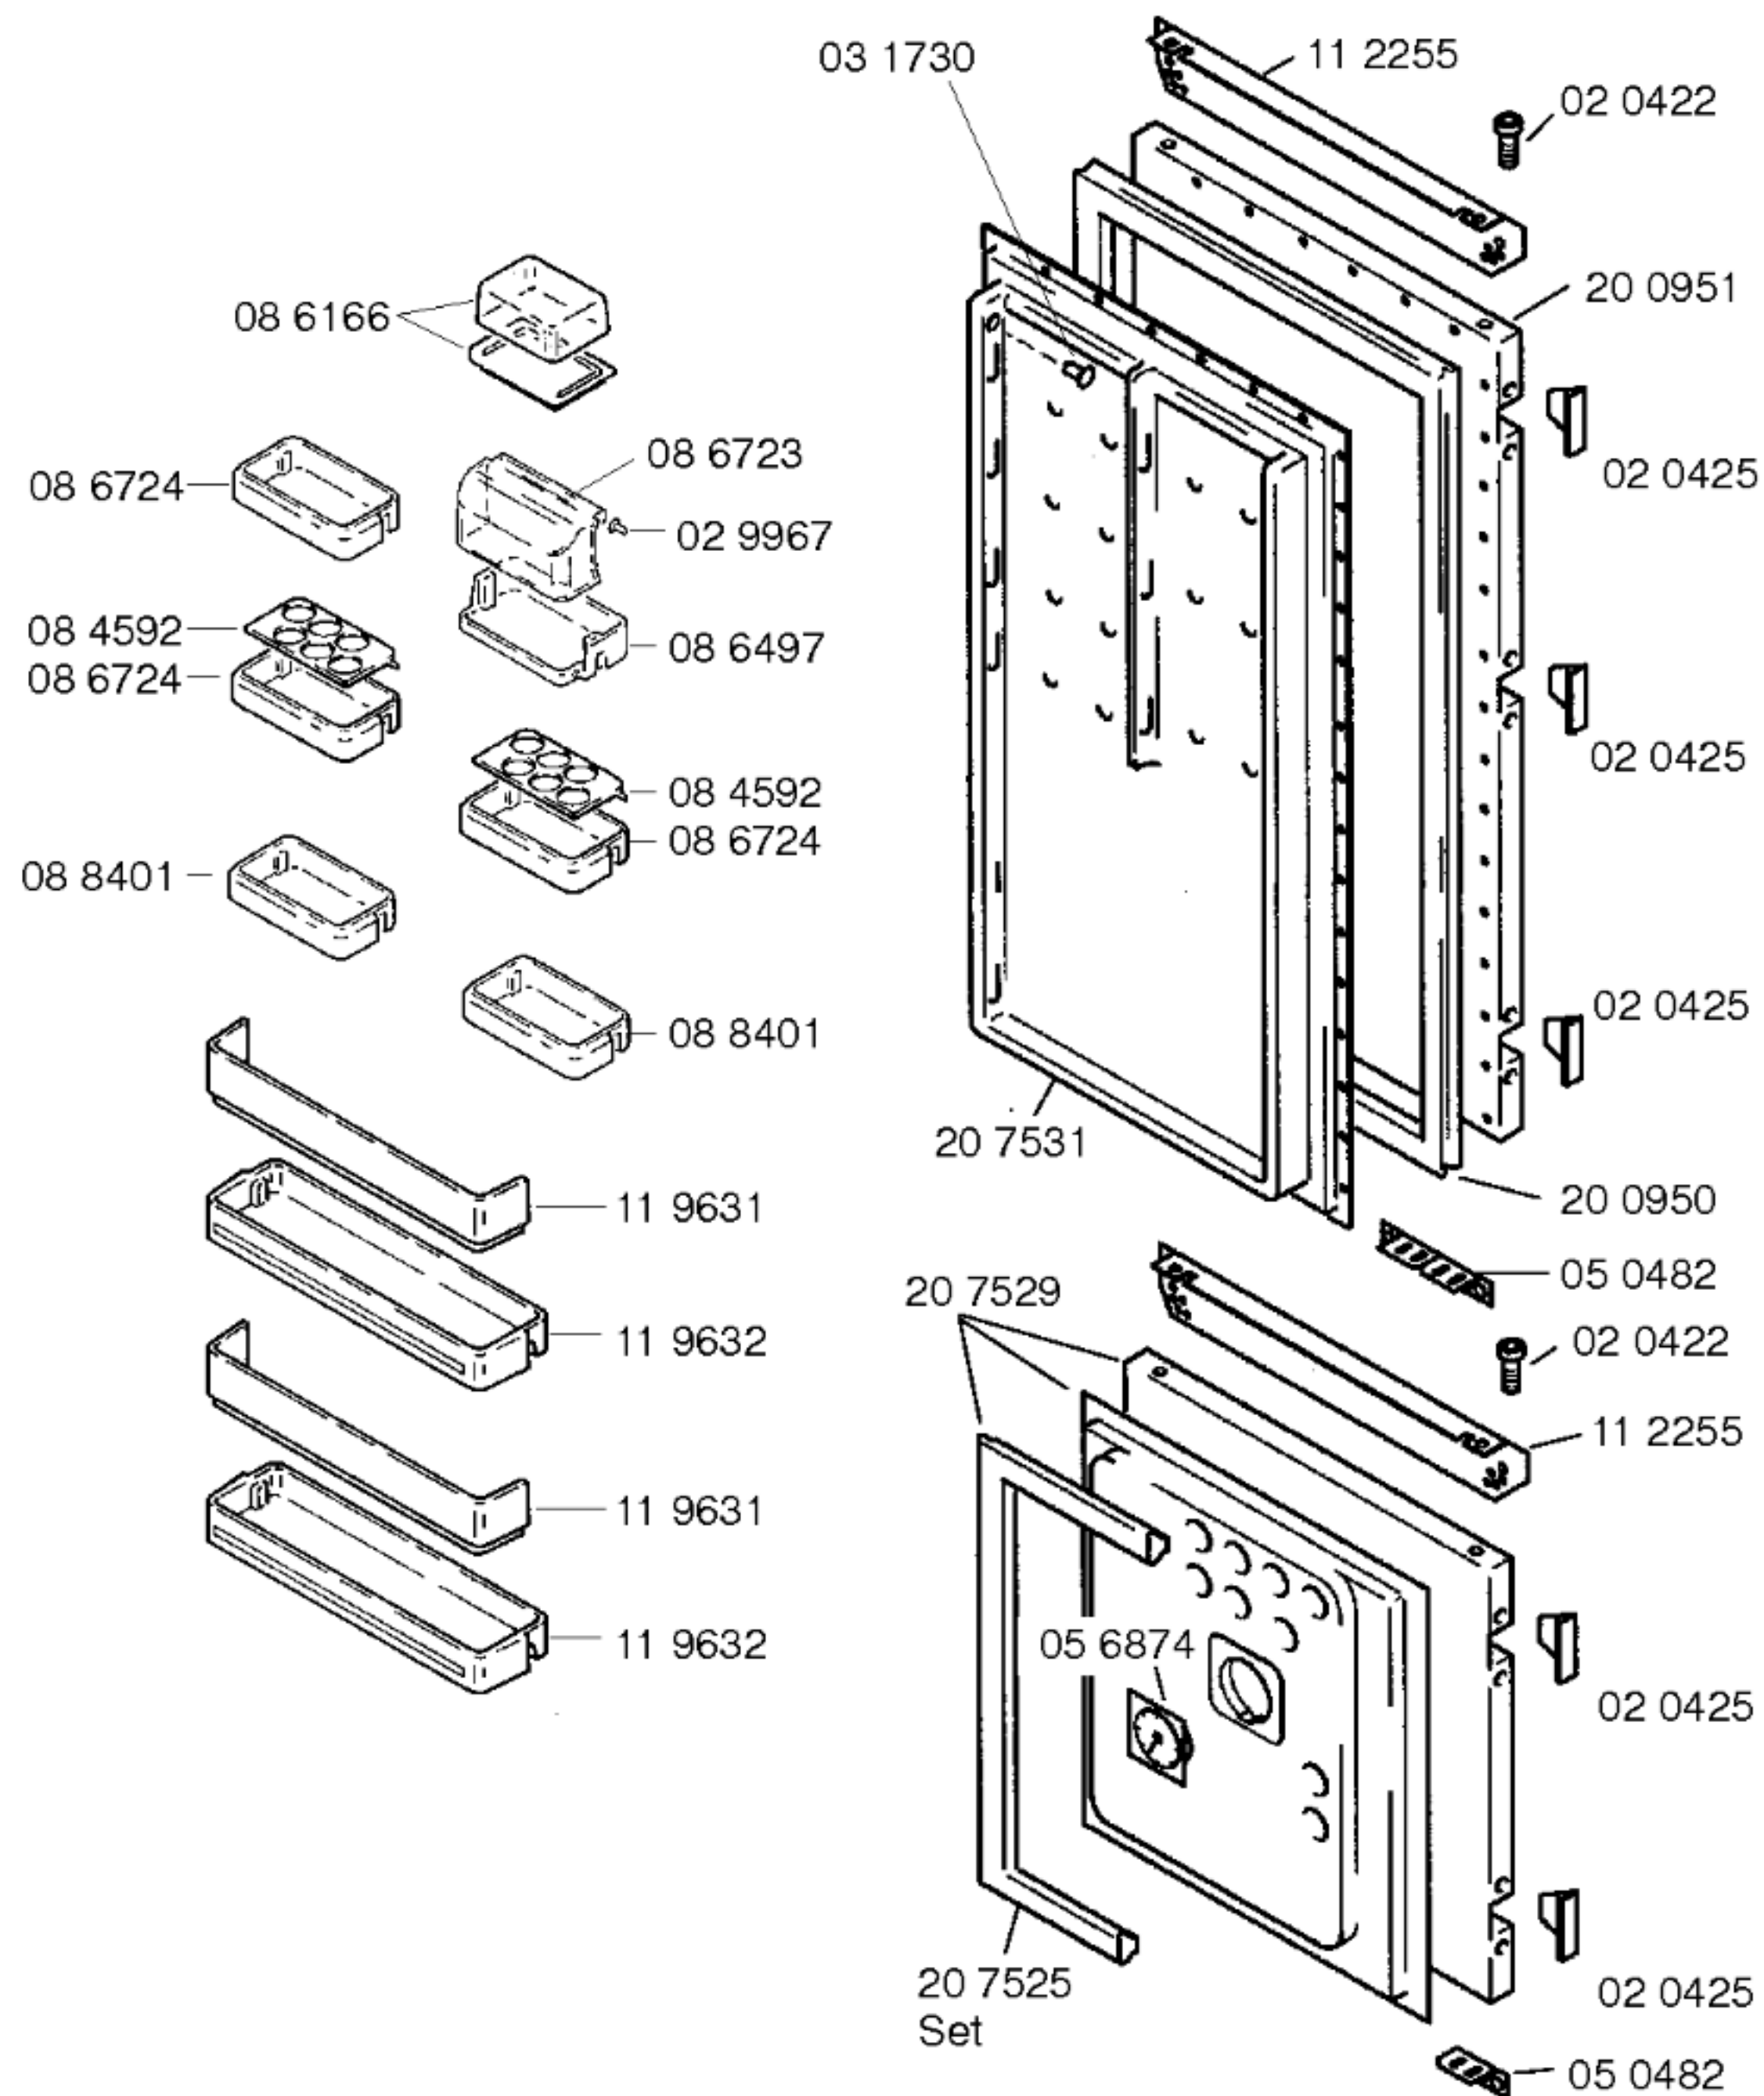 


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

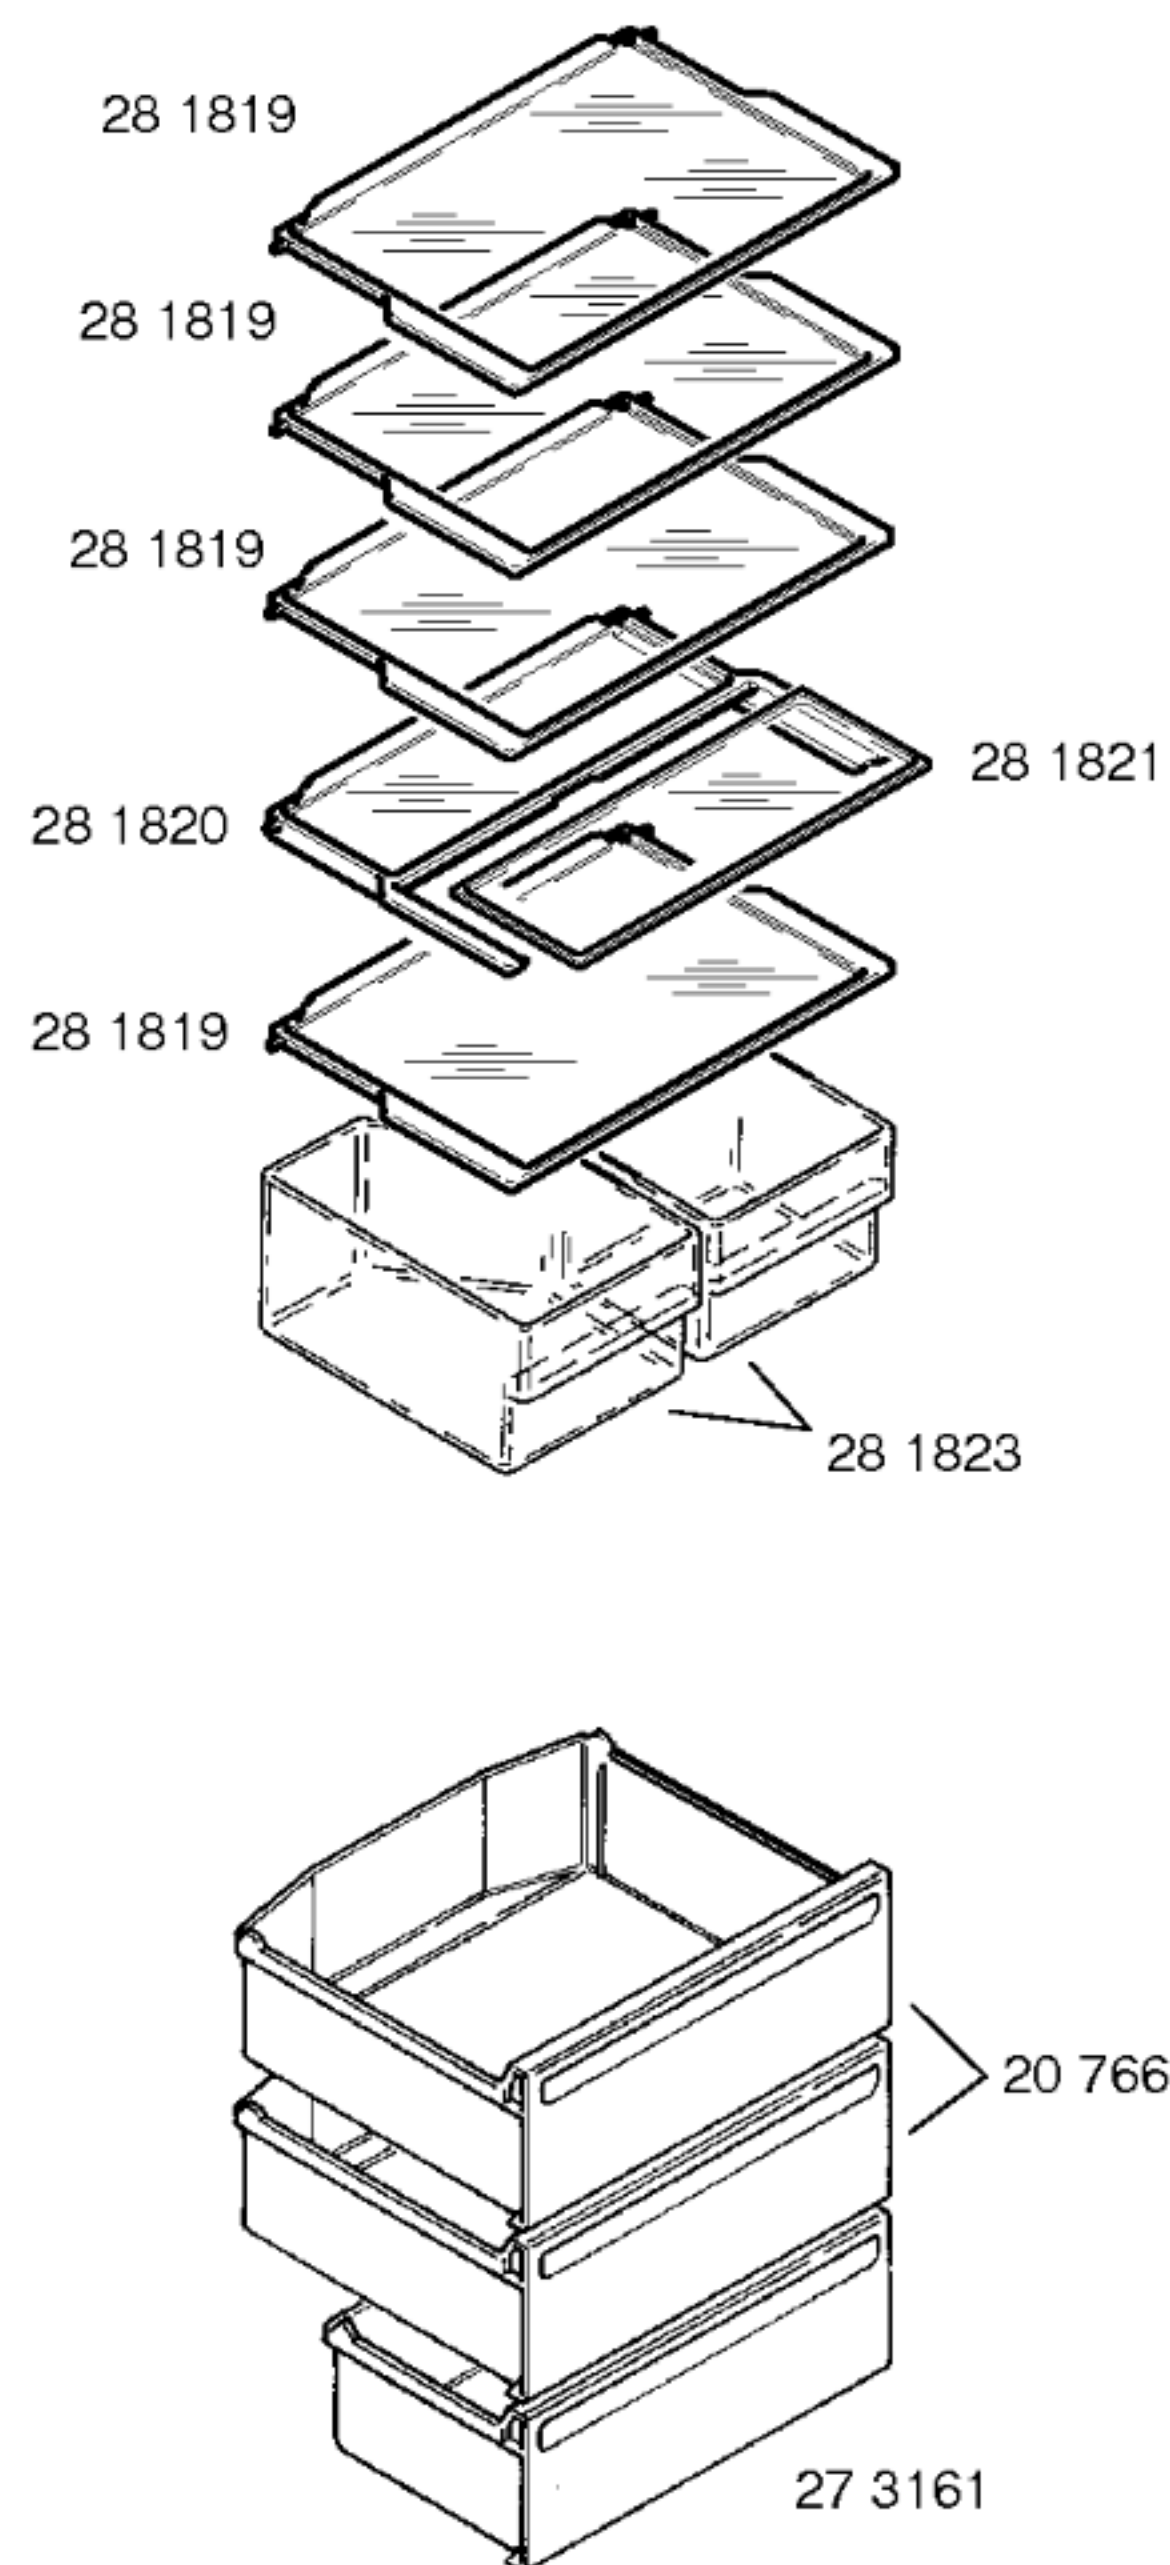

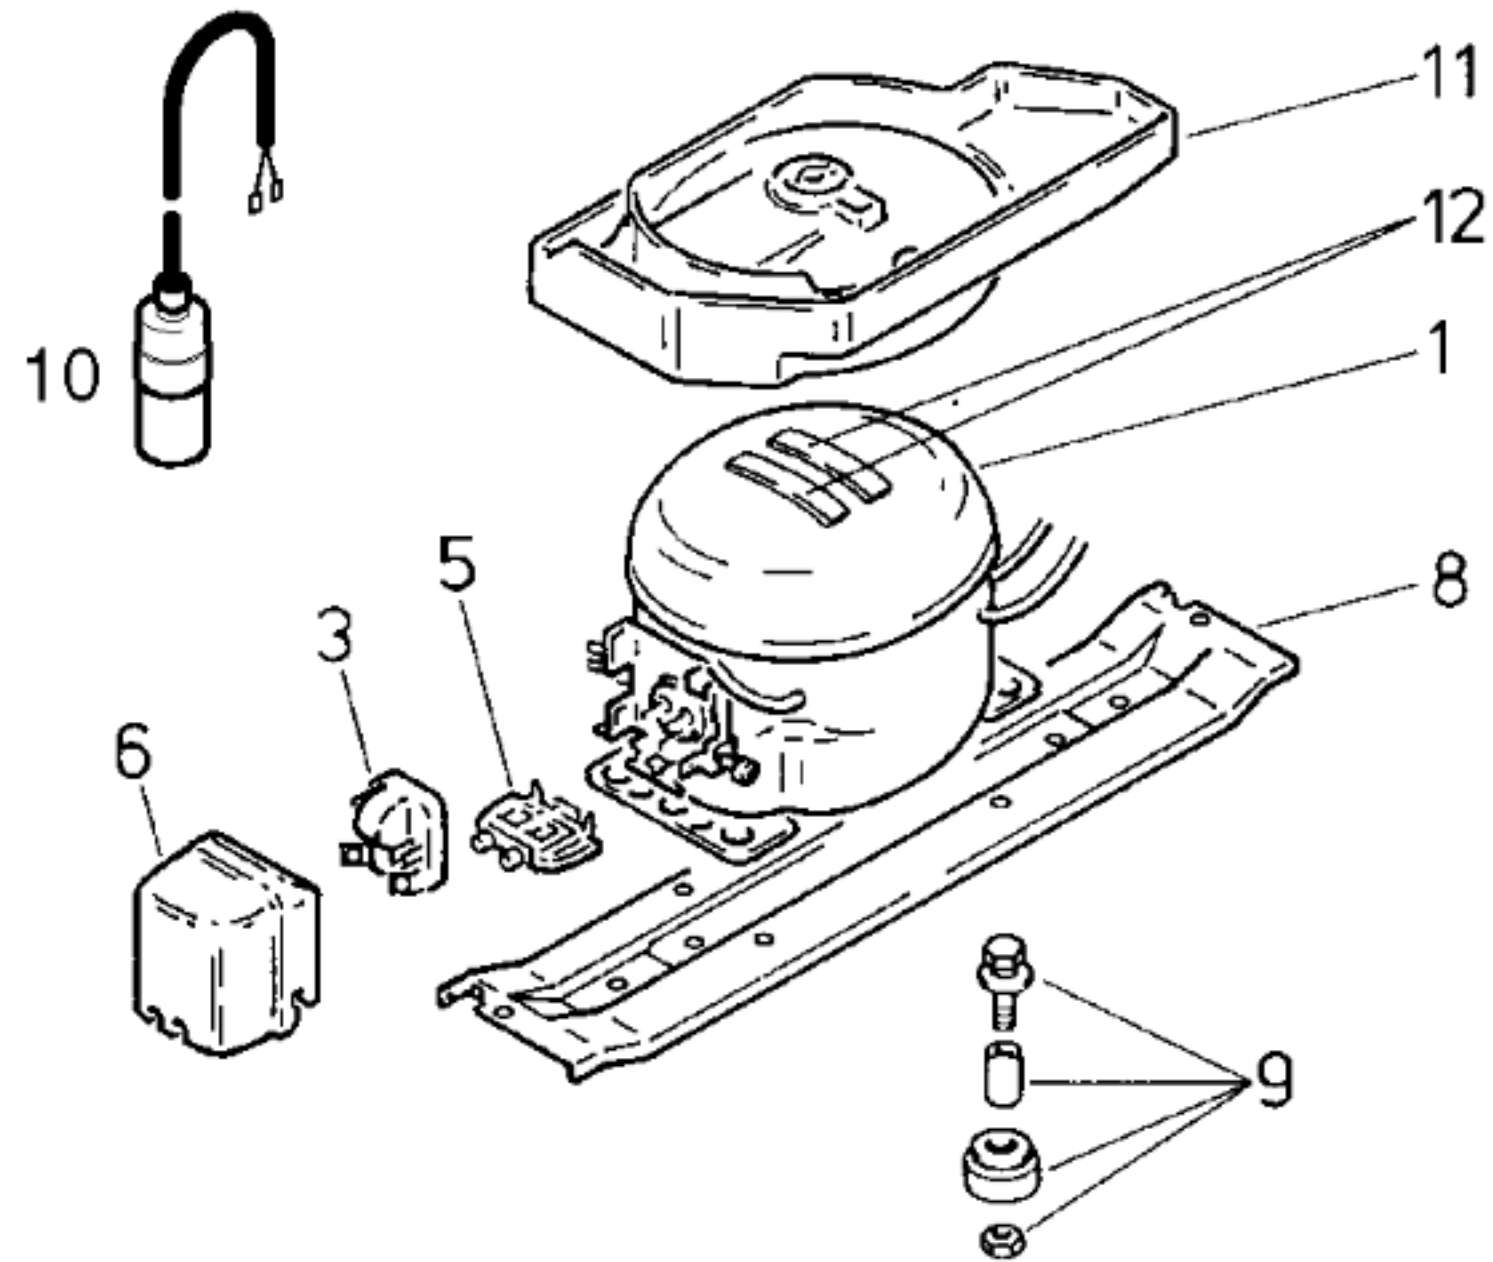

Pos.	Danfoss		
	NL7A		
1	14 0908		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 1828		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NL7A			
Förderleistung/Delivery/Débit		l/h	1314		
Anlaufstrom/Starting current/Cour. de démarrage		A	10,5		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	13,3	
		Hi/aux	Ω	16,3	
Temp.-Regler/Thermostat		WHF/TPC			
Typ/Type		TF57F1K			
Reglerstellung/Position		kalt		warm	
Schaltwerte/Switching values/		„ein“	°C	+5	+5
Valeurs de commutation		„aus“		-31	-20
		(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	175	EU2-185
Anschlußwert/Conn.load/Puiss. connectée			W	150	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		