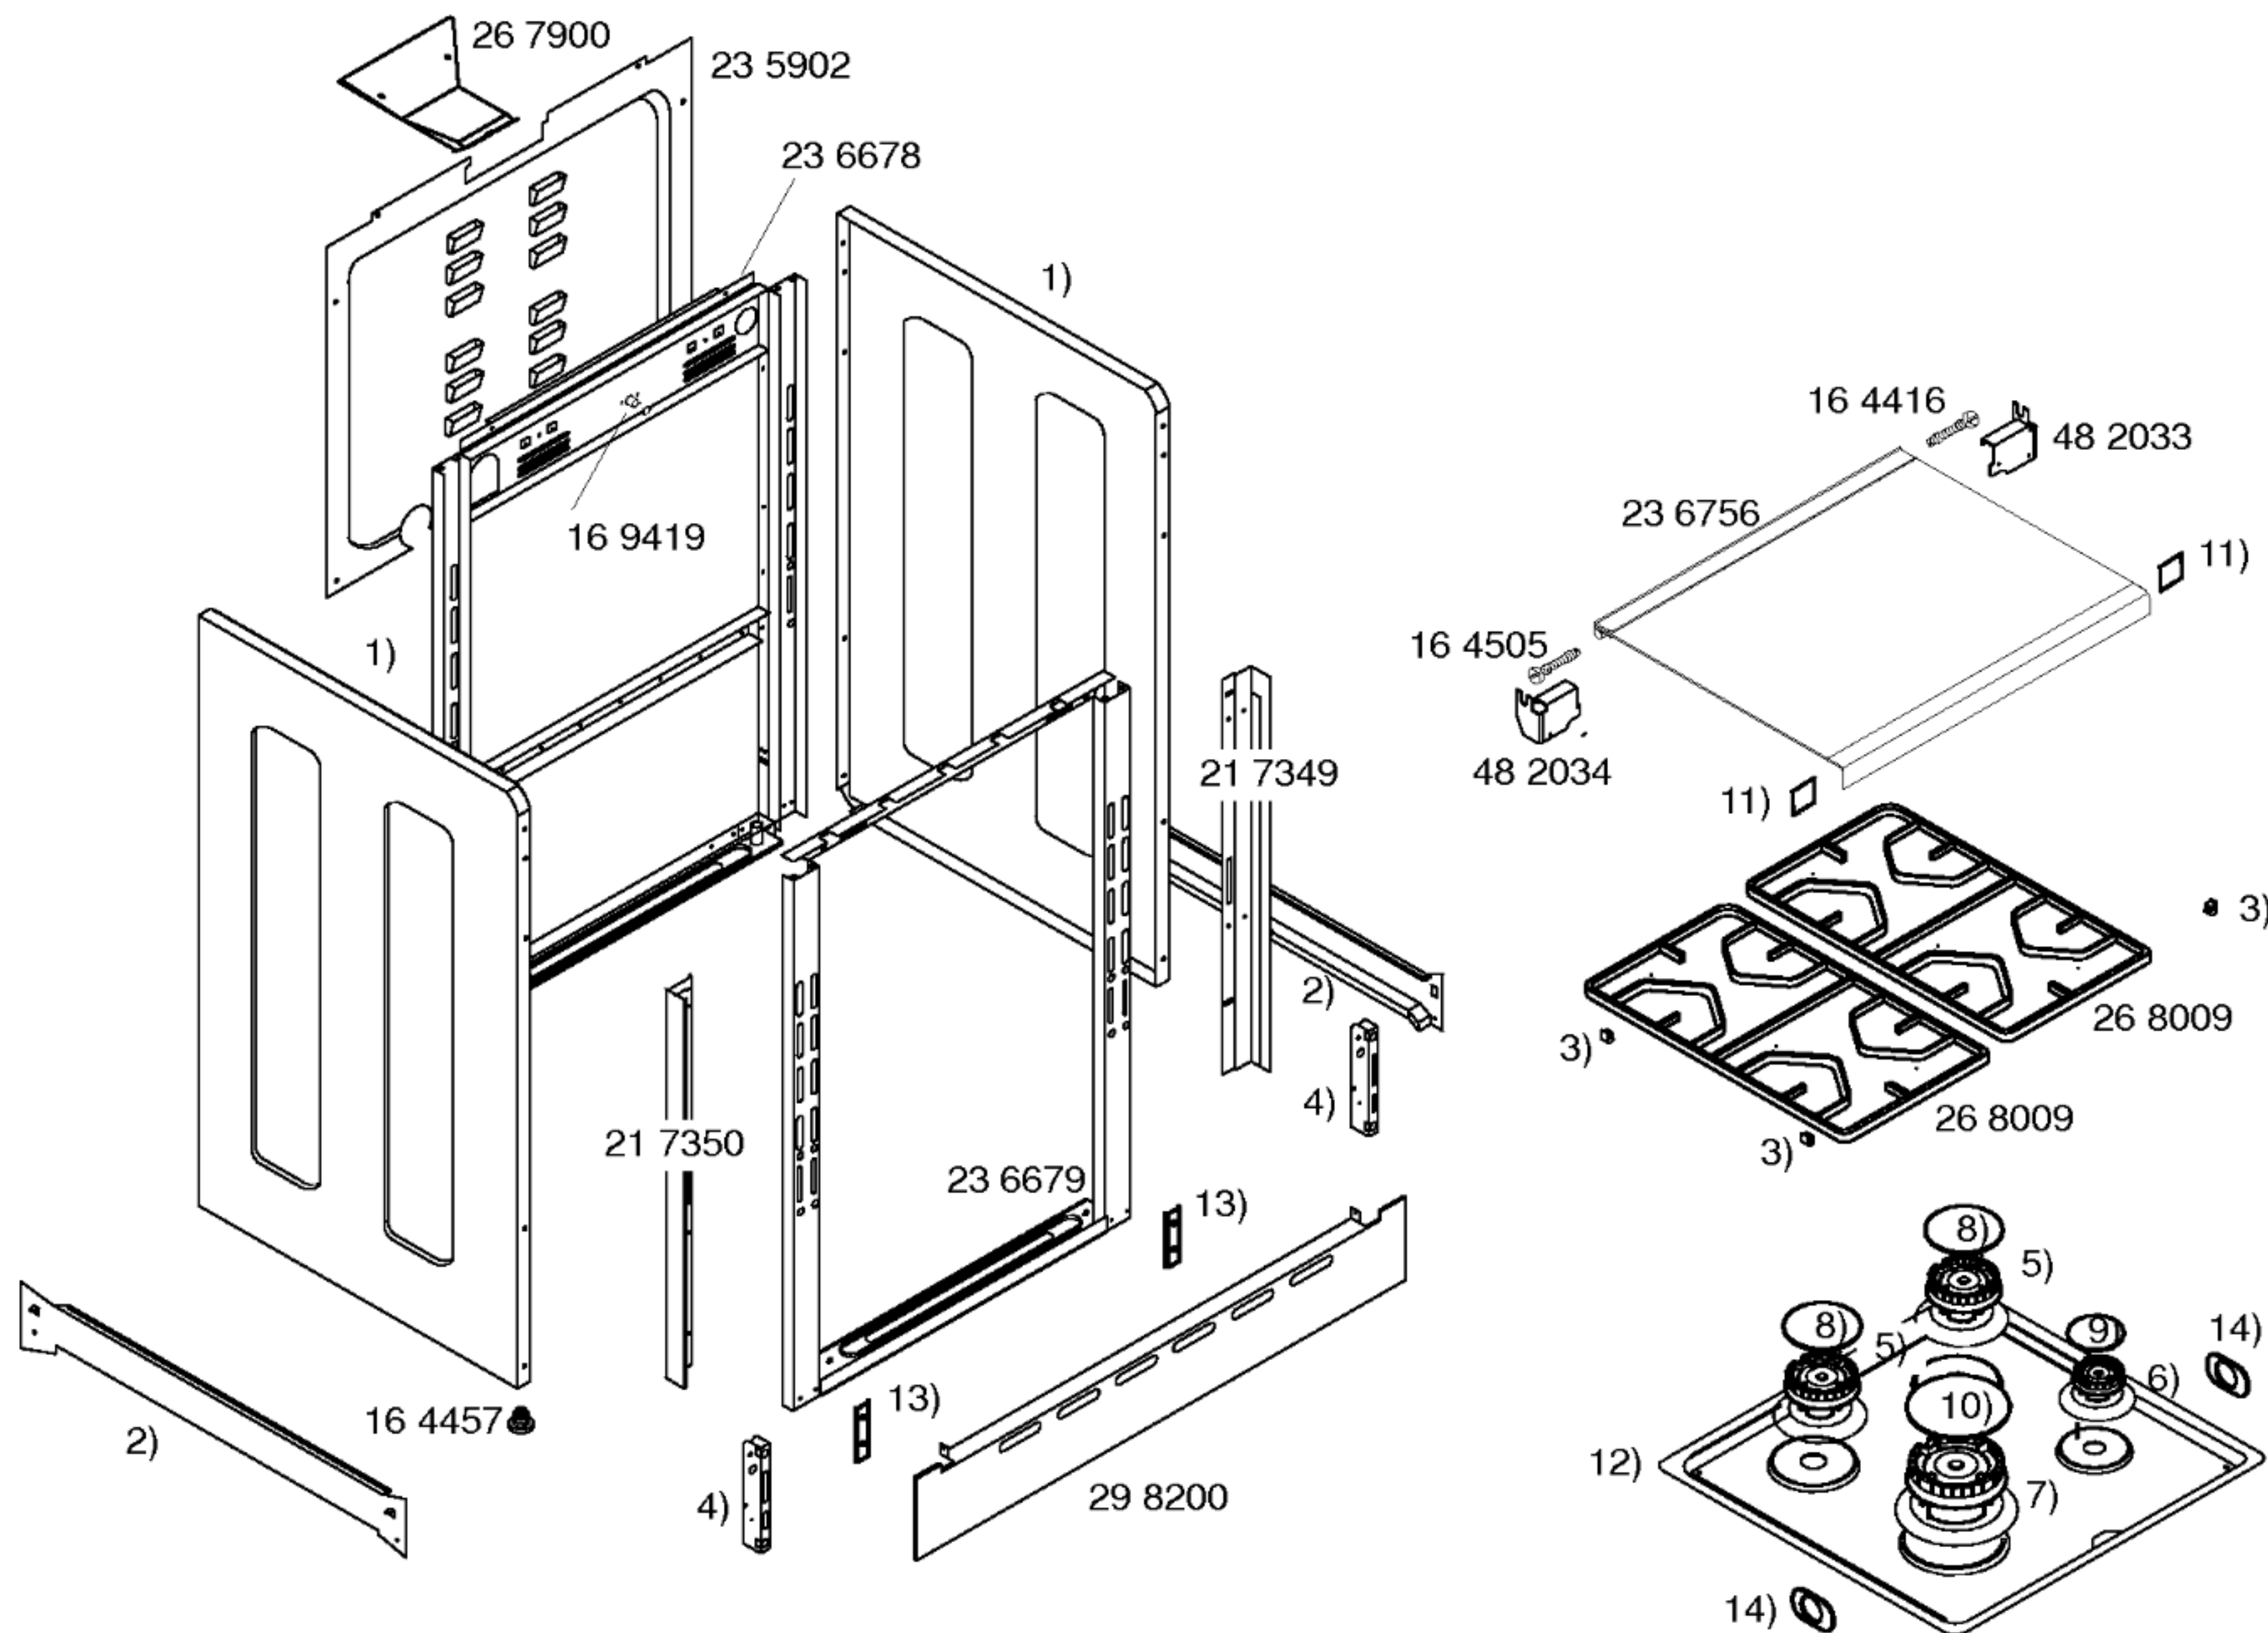


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 9437

- 1) 23 6654
- 2) 35 2493
- 3) 16 8053
- 4) 18 3902
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 18 3455

- 12) 23 5805


V01,V02,V03

21 8904

V04,V05


- 13) 18 7489


- 14)18 6972

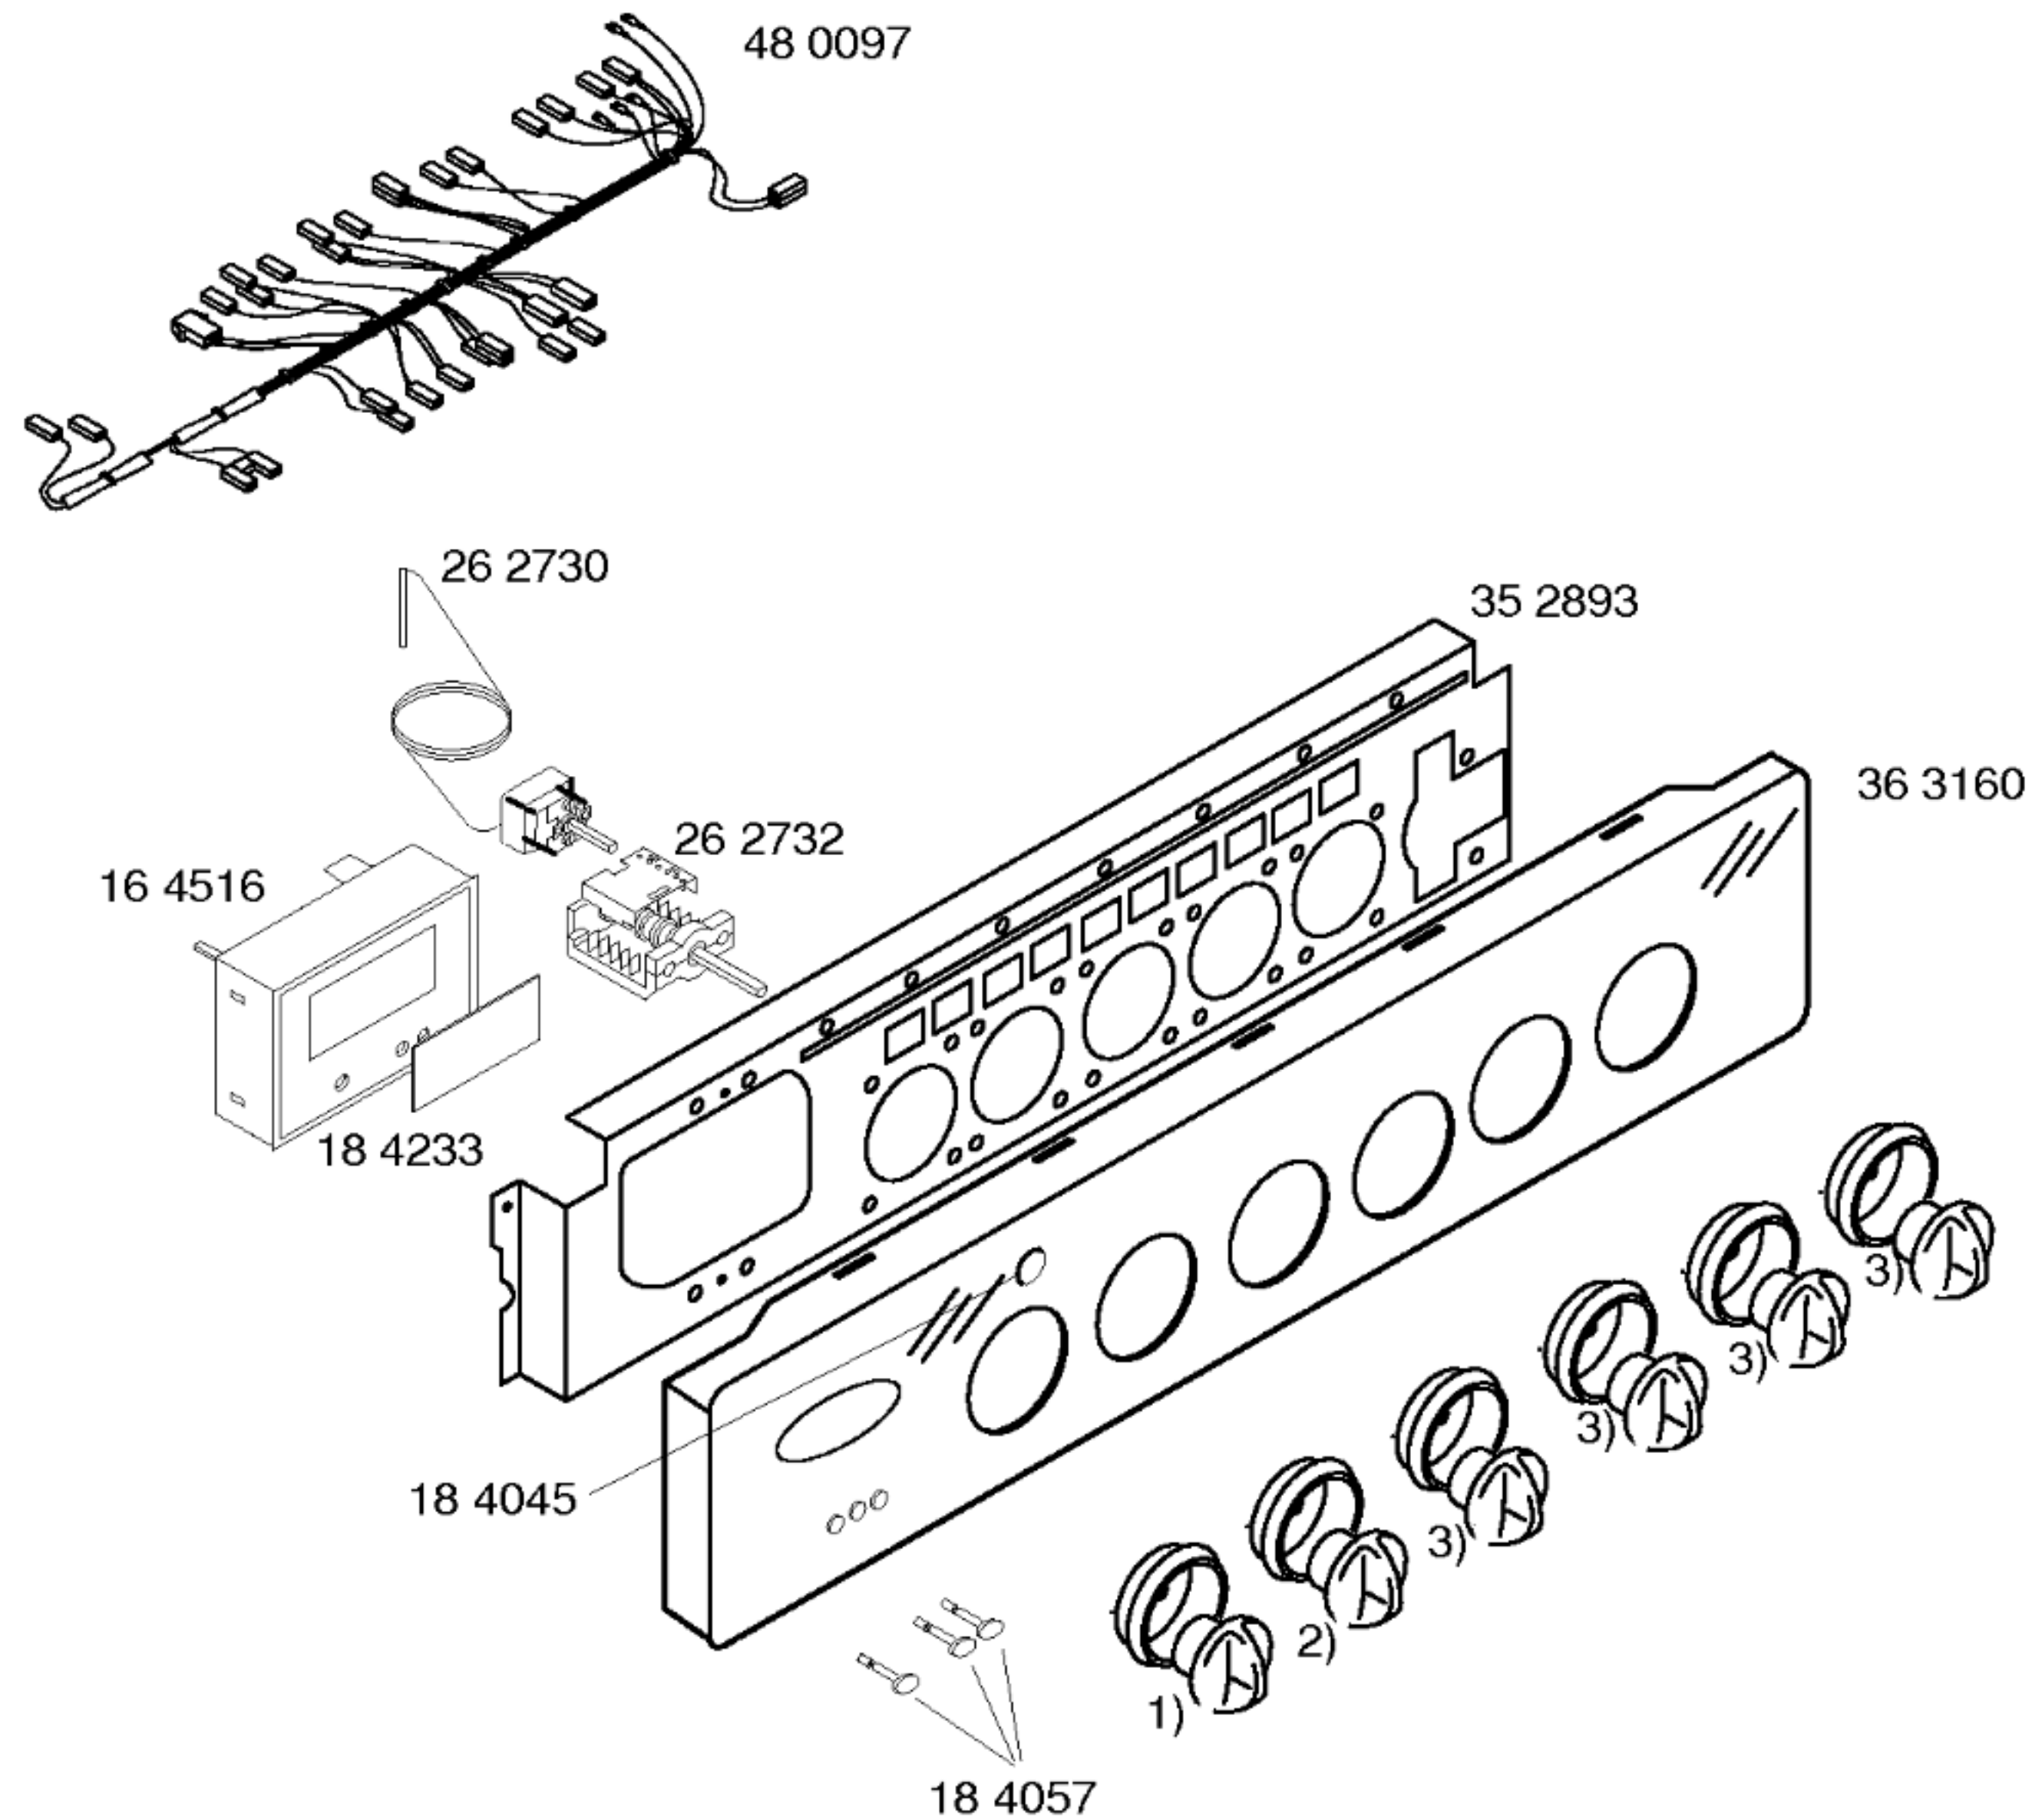

Mat. - Nr. - Konstante
 3740

- 1) 18 4060
 V01
 18 8165
 V02, V03, V04, V05
- 2) 18 4400
 V01
 18 8171
 V02, V03, V04, V05
- 3) 18 4058
 V01
 18 8160
 V02, V03, V04, V05

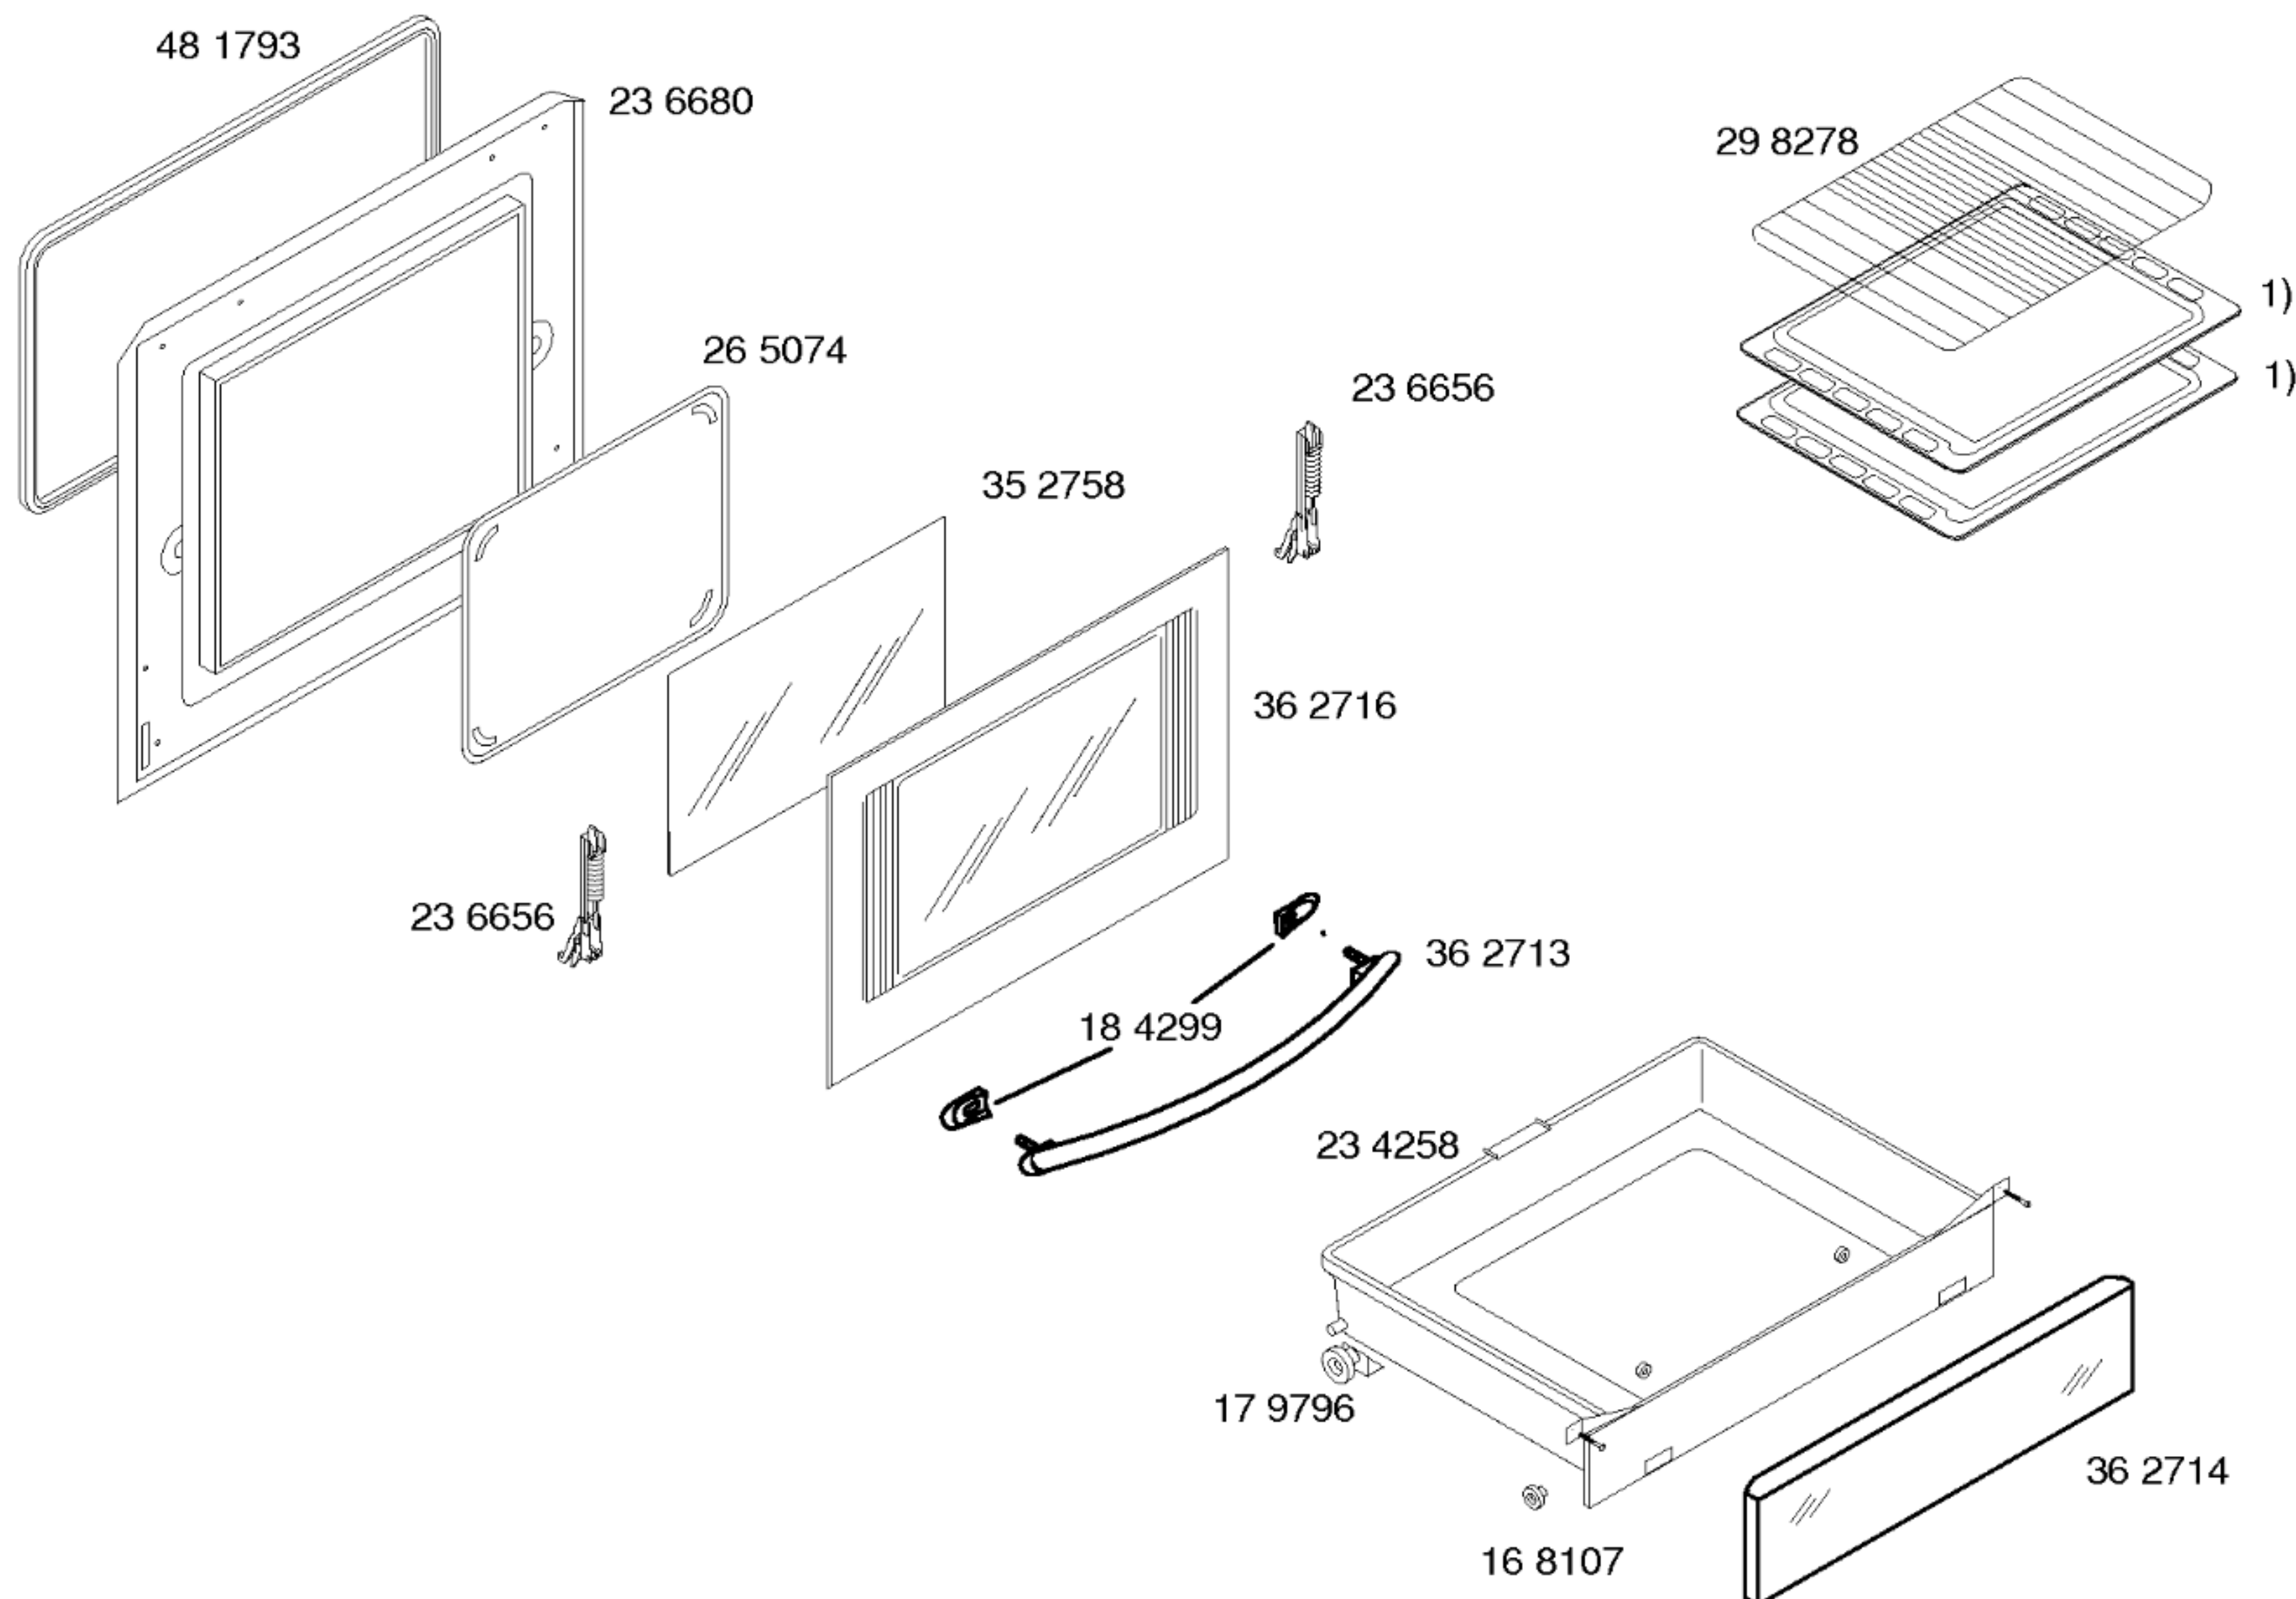

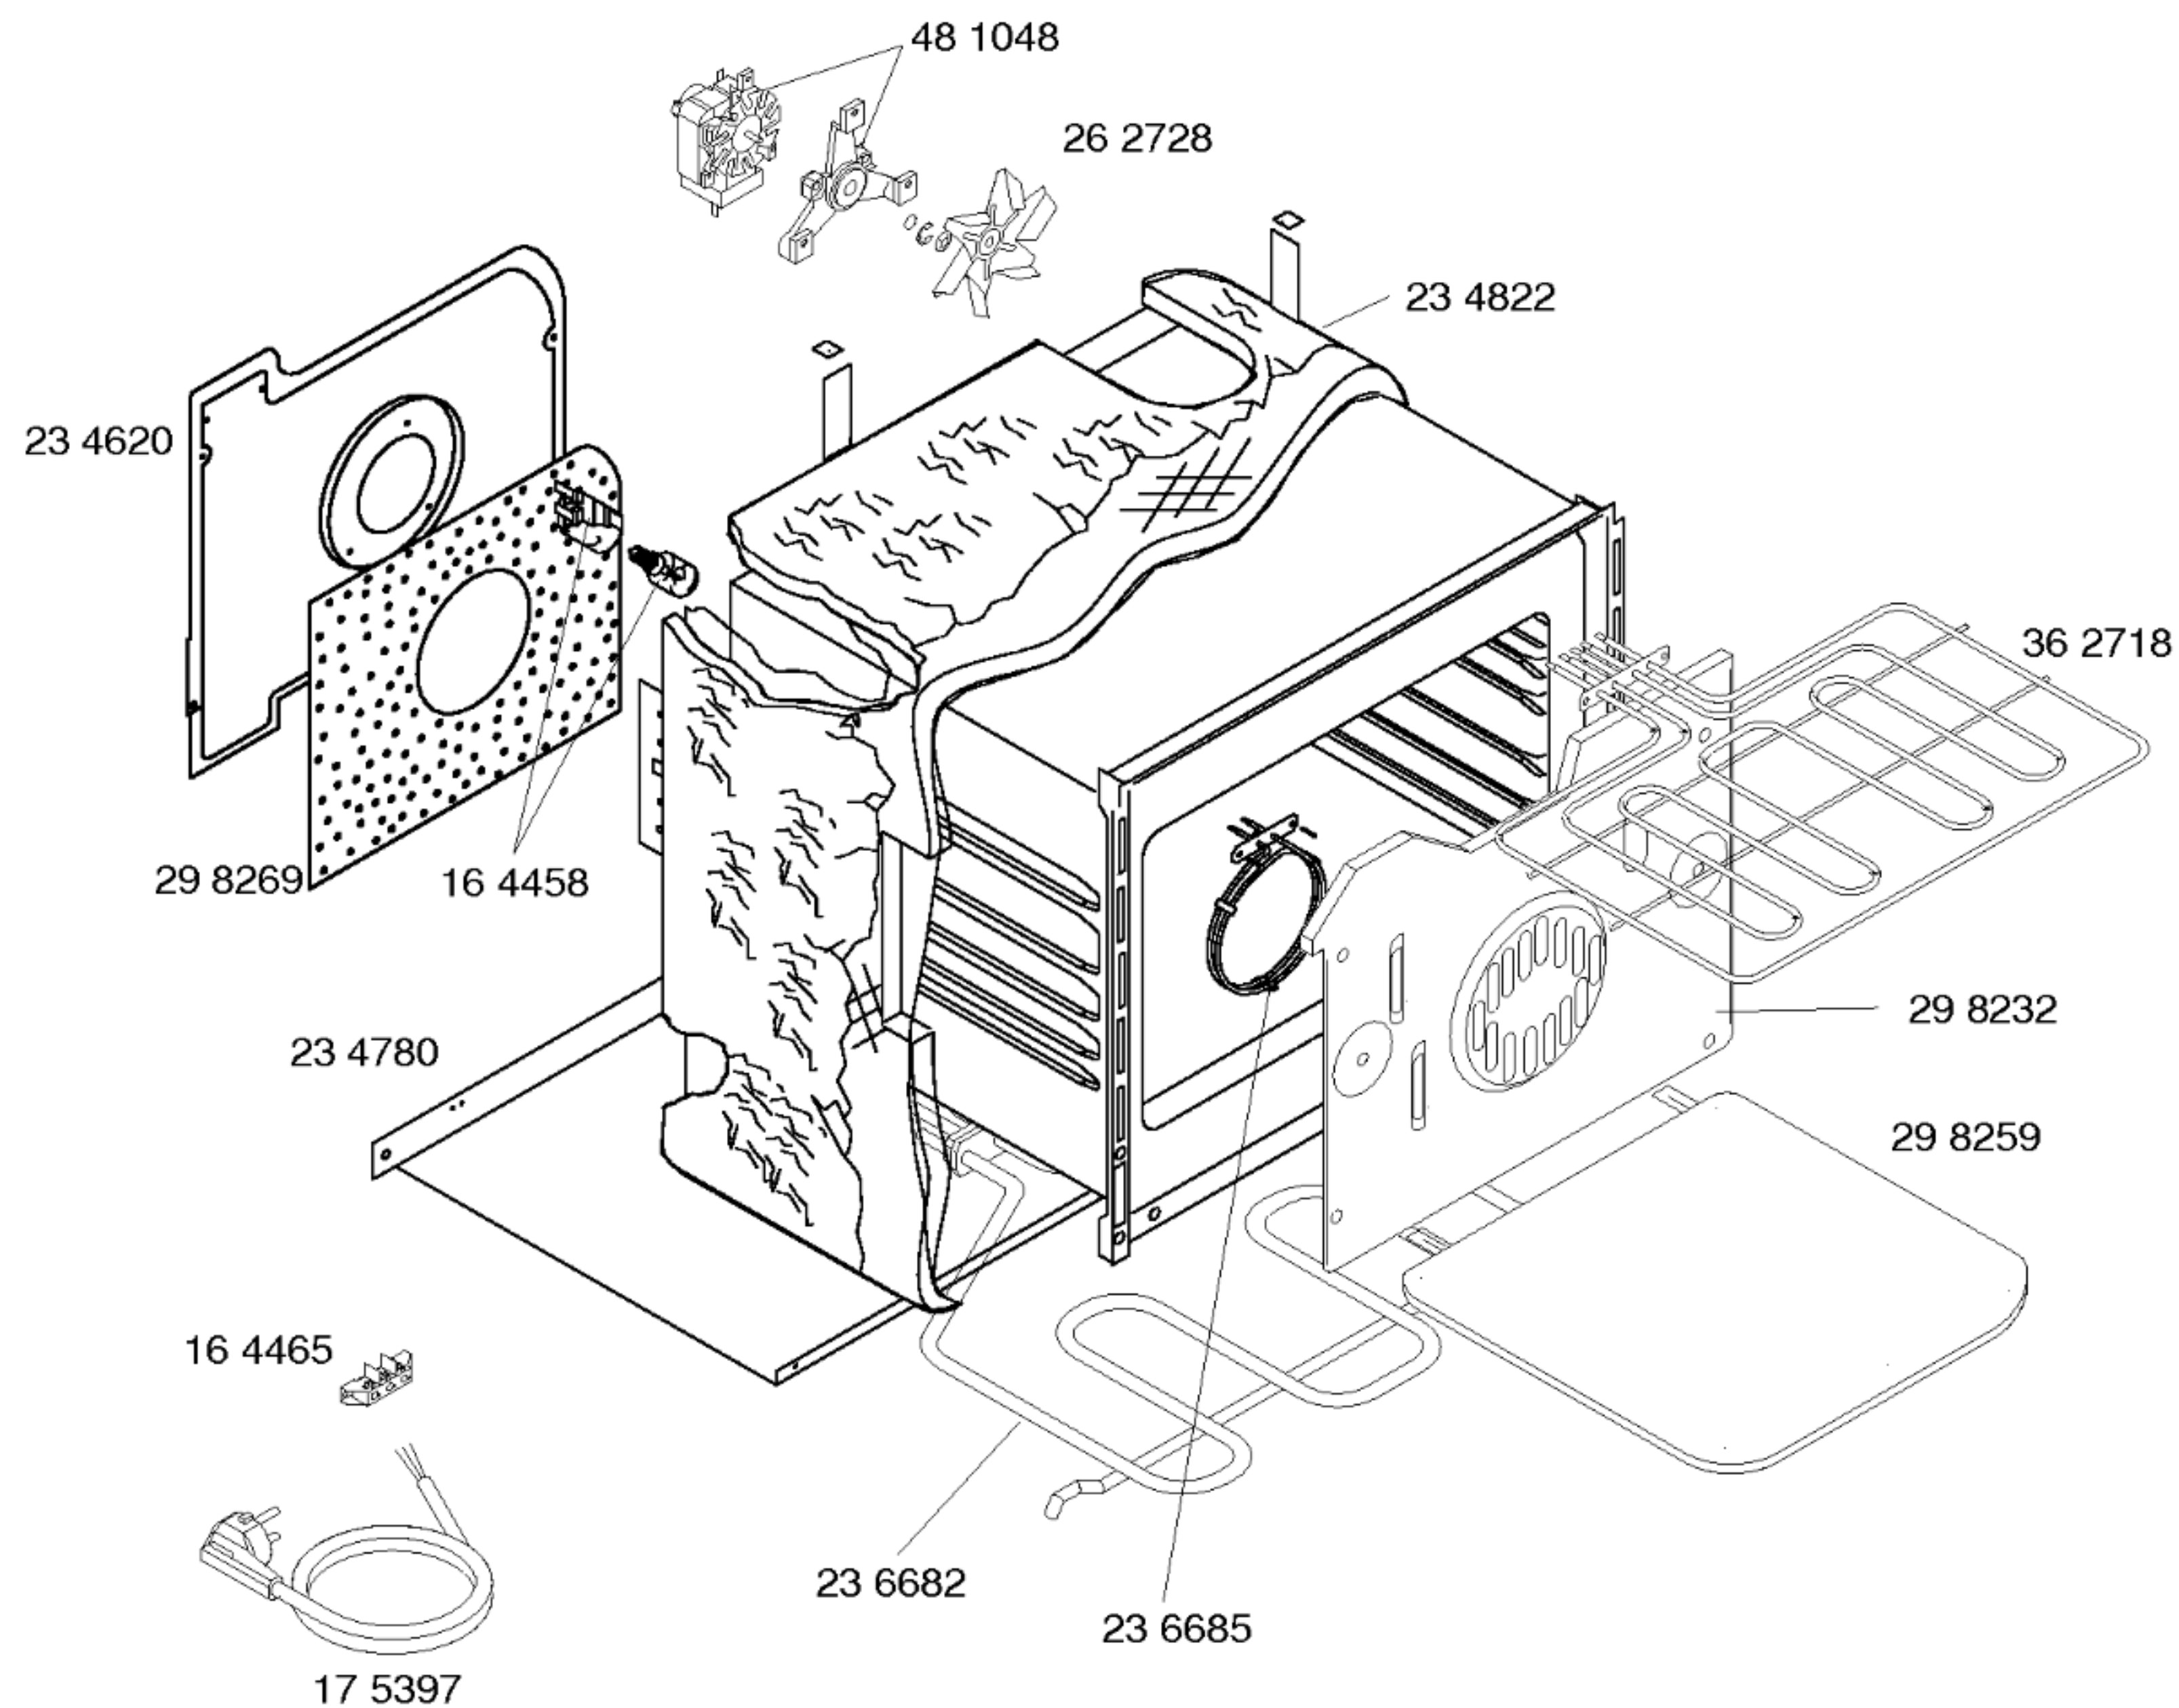

Mat. – Nr. – Konstante
3740

- 1) 16 9339
 - 2) 17 3894
 - 3) 17 3895
 - 4) 48 0074
 - 5) 48 0075
 - 6) 48 0073
 - 7) 35 7810
 - 8) 35 7811
 - 9) 35 7809
 - 10) 35 7808
 - 11) 17 4634
- Duesensatz Erdgas
17 5527
- Duesensatz
Fluessiggas
17 4048

