 
 


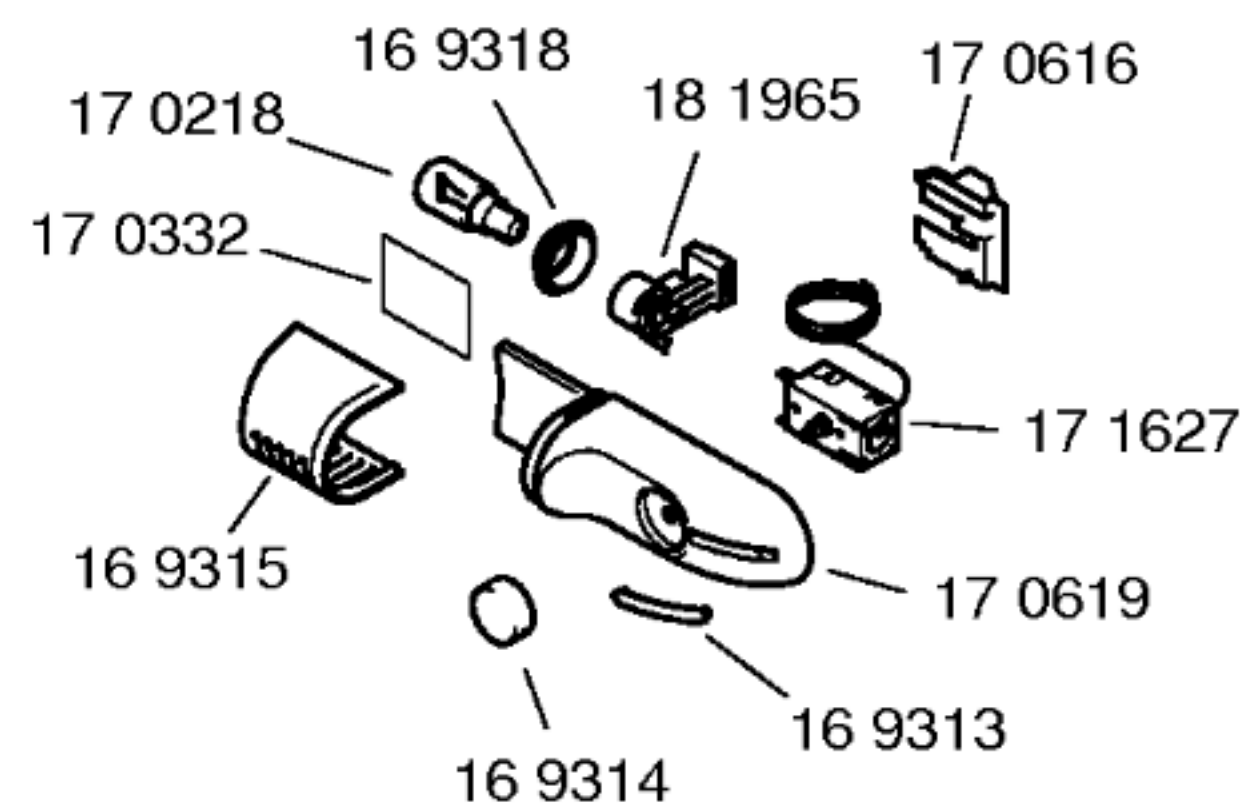

07 4445

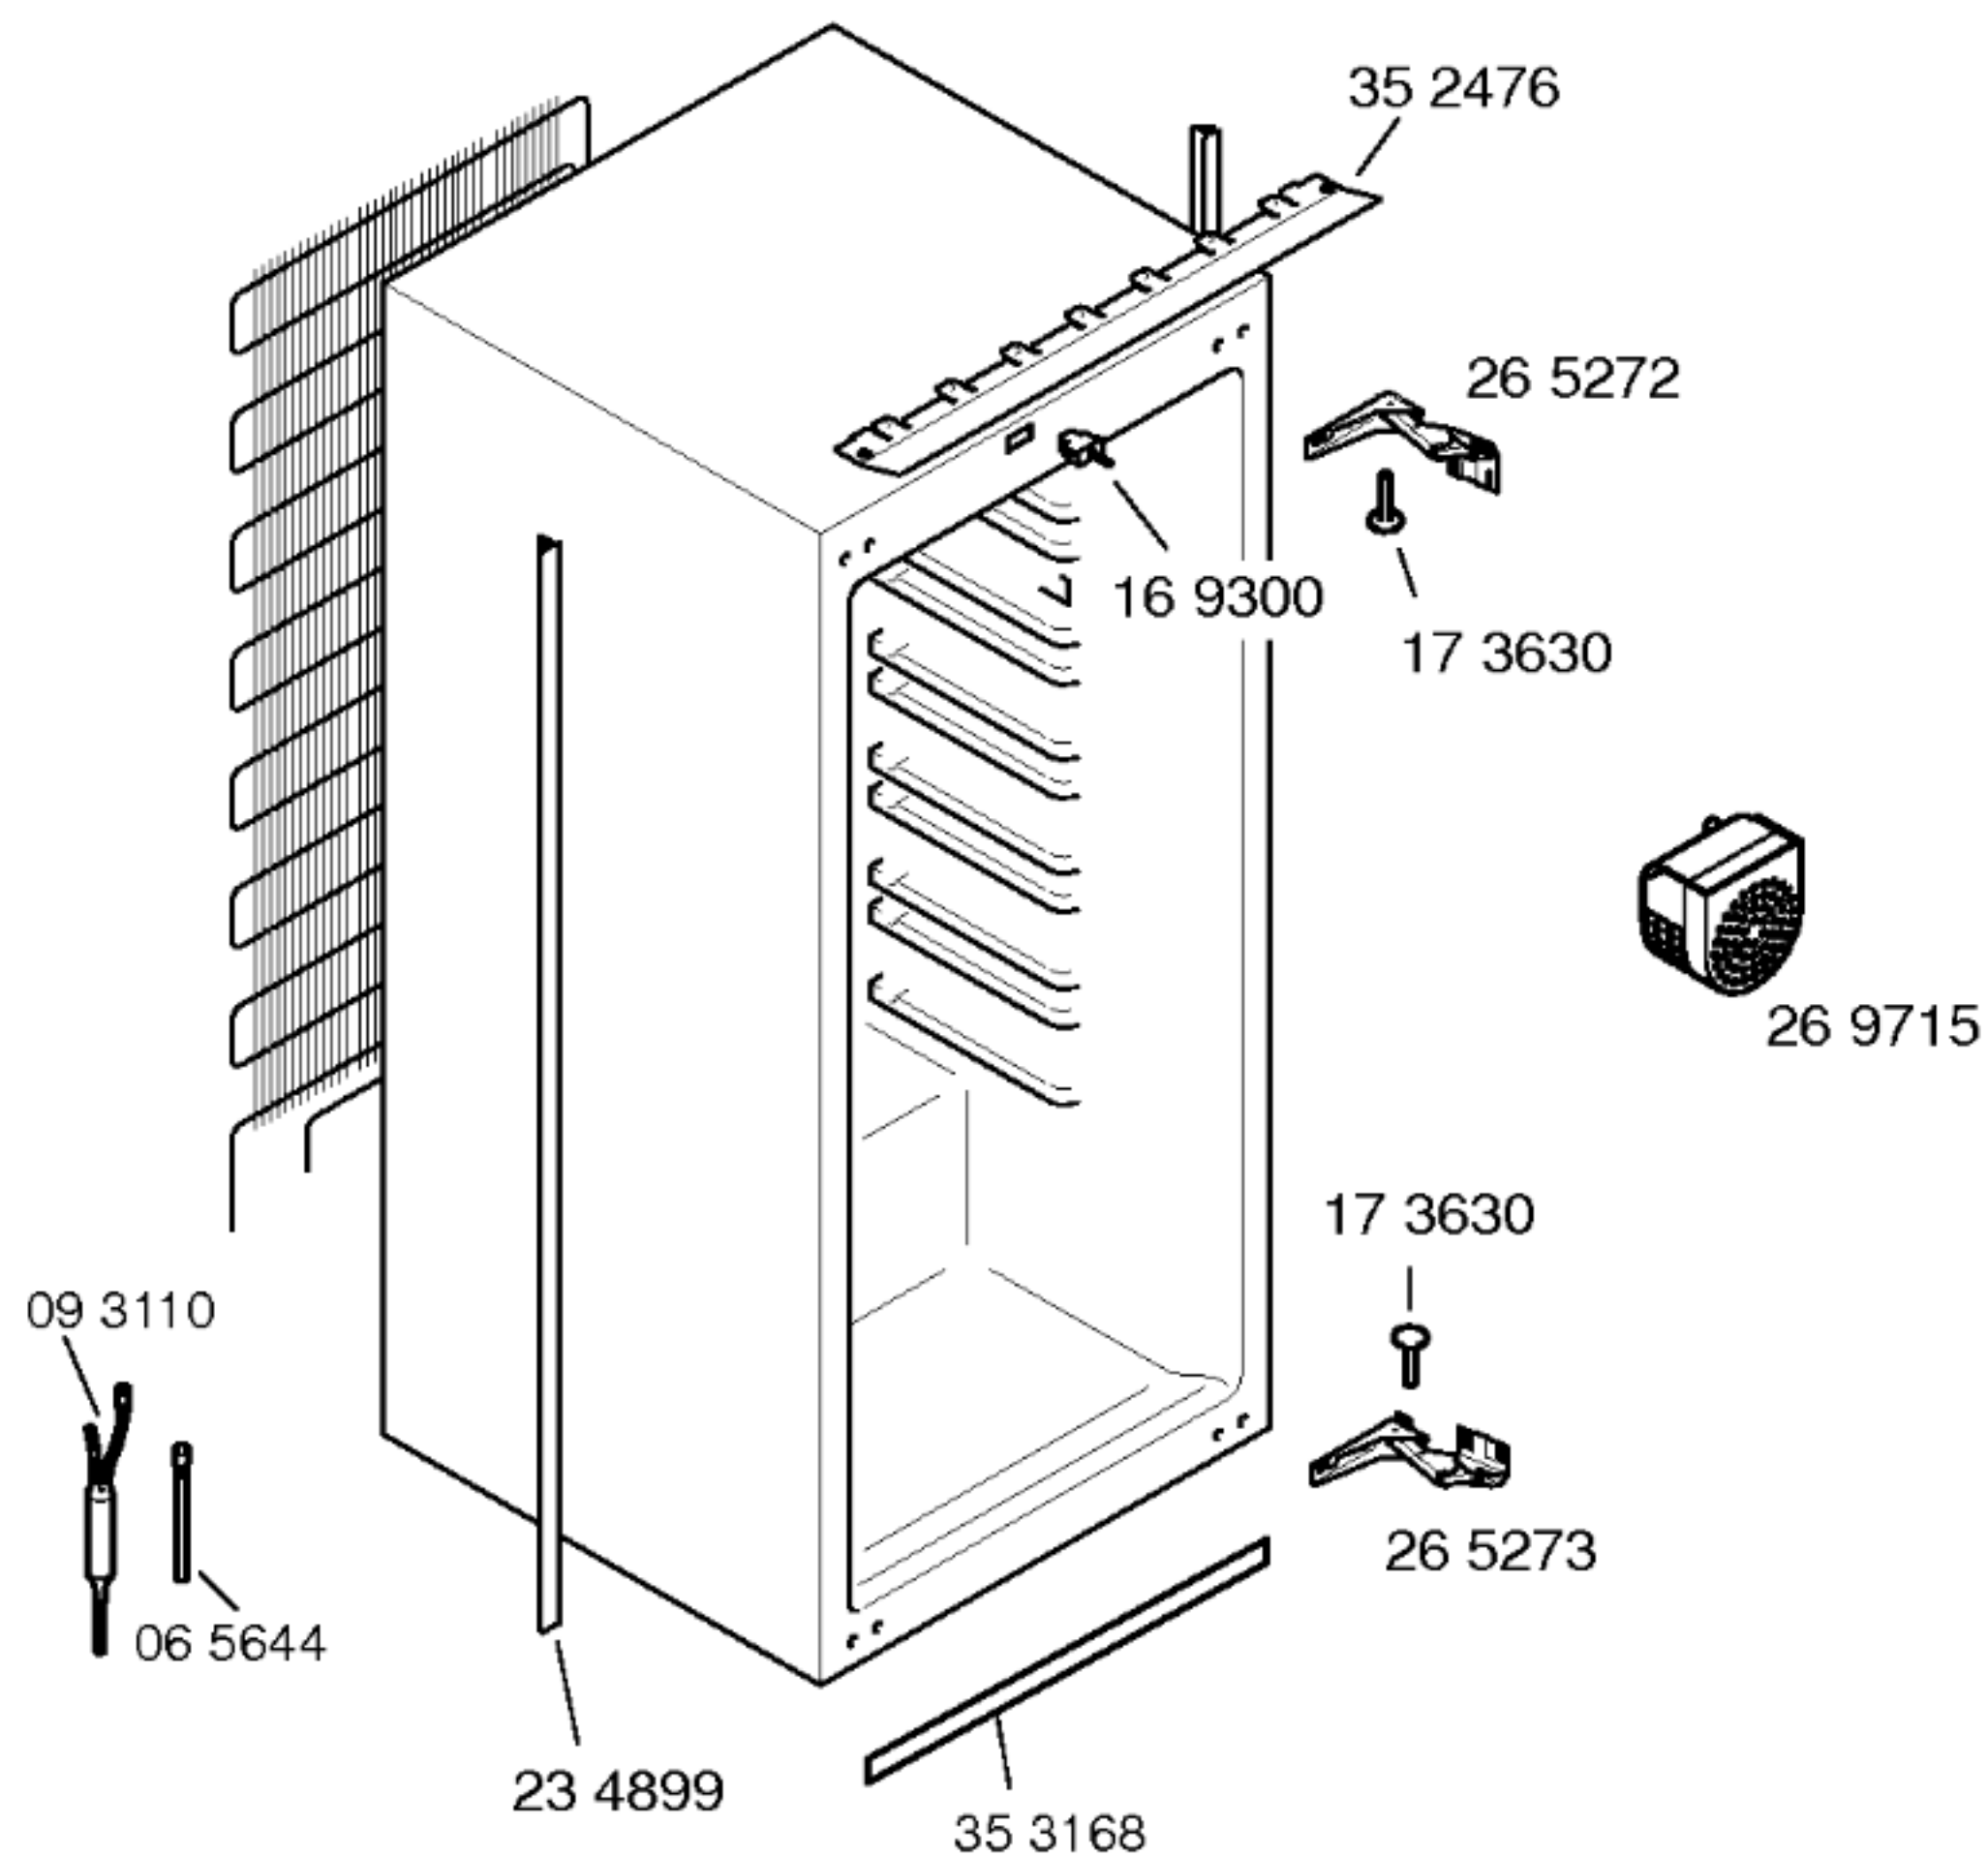 


Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
52 7968
(D,GB,F,I,NL,DK,N,SF,
S,E))

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR))

Beistellsatz
26 5163

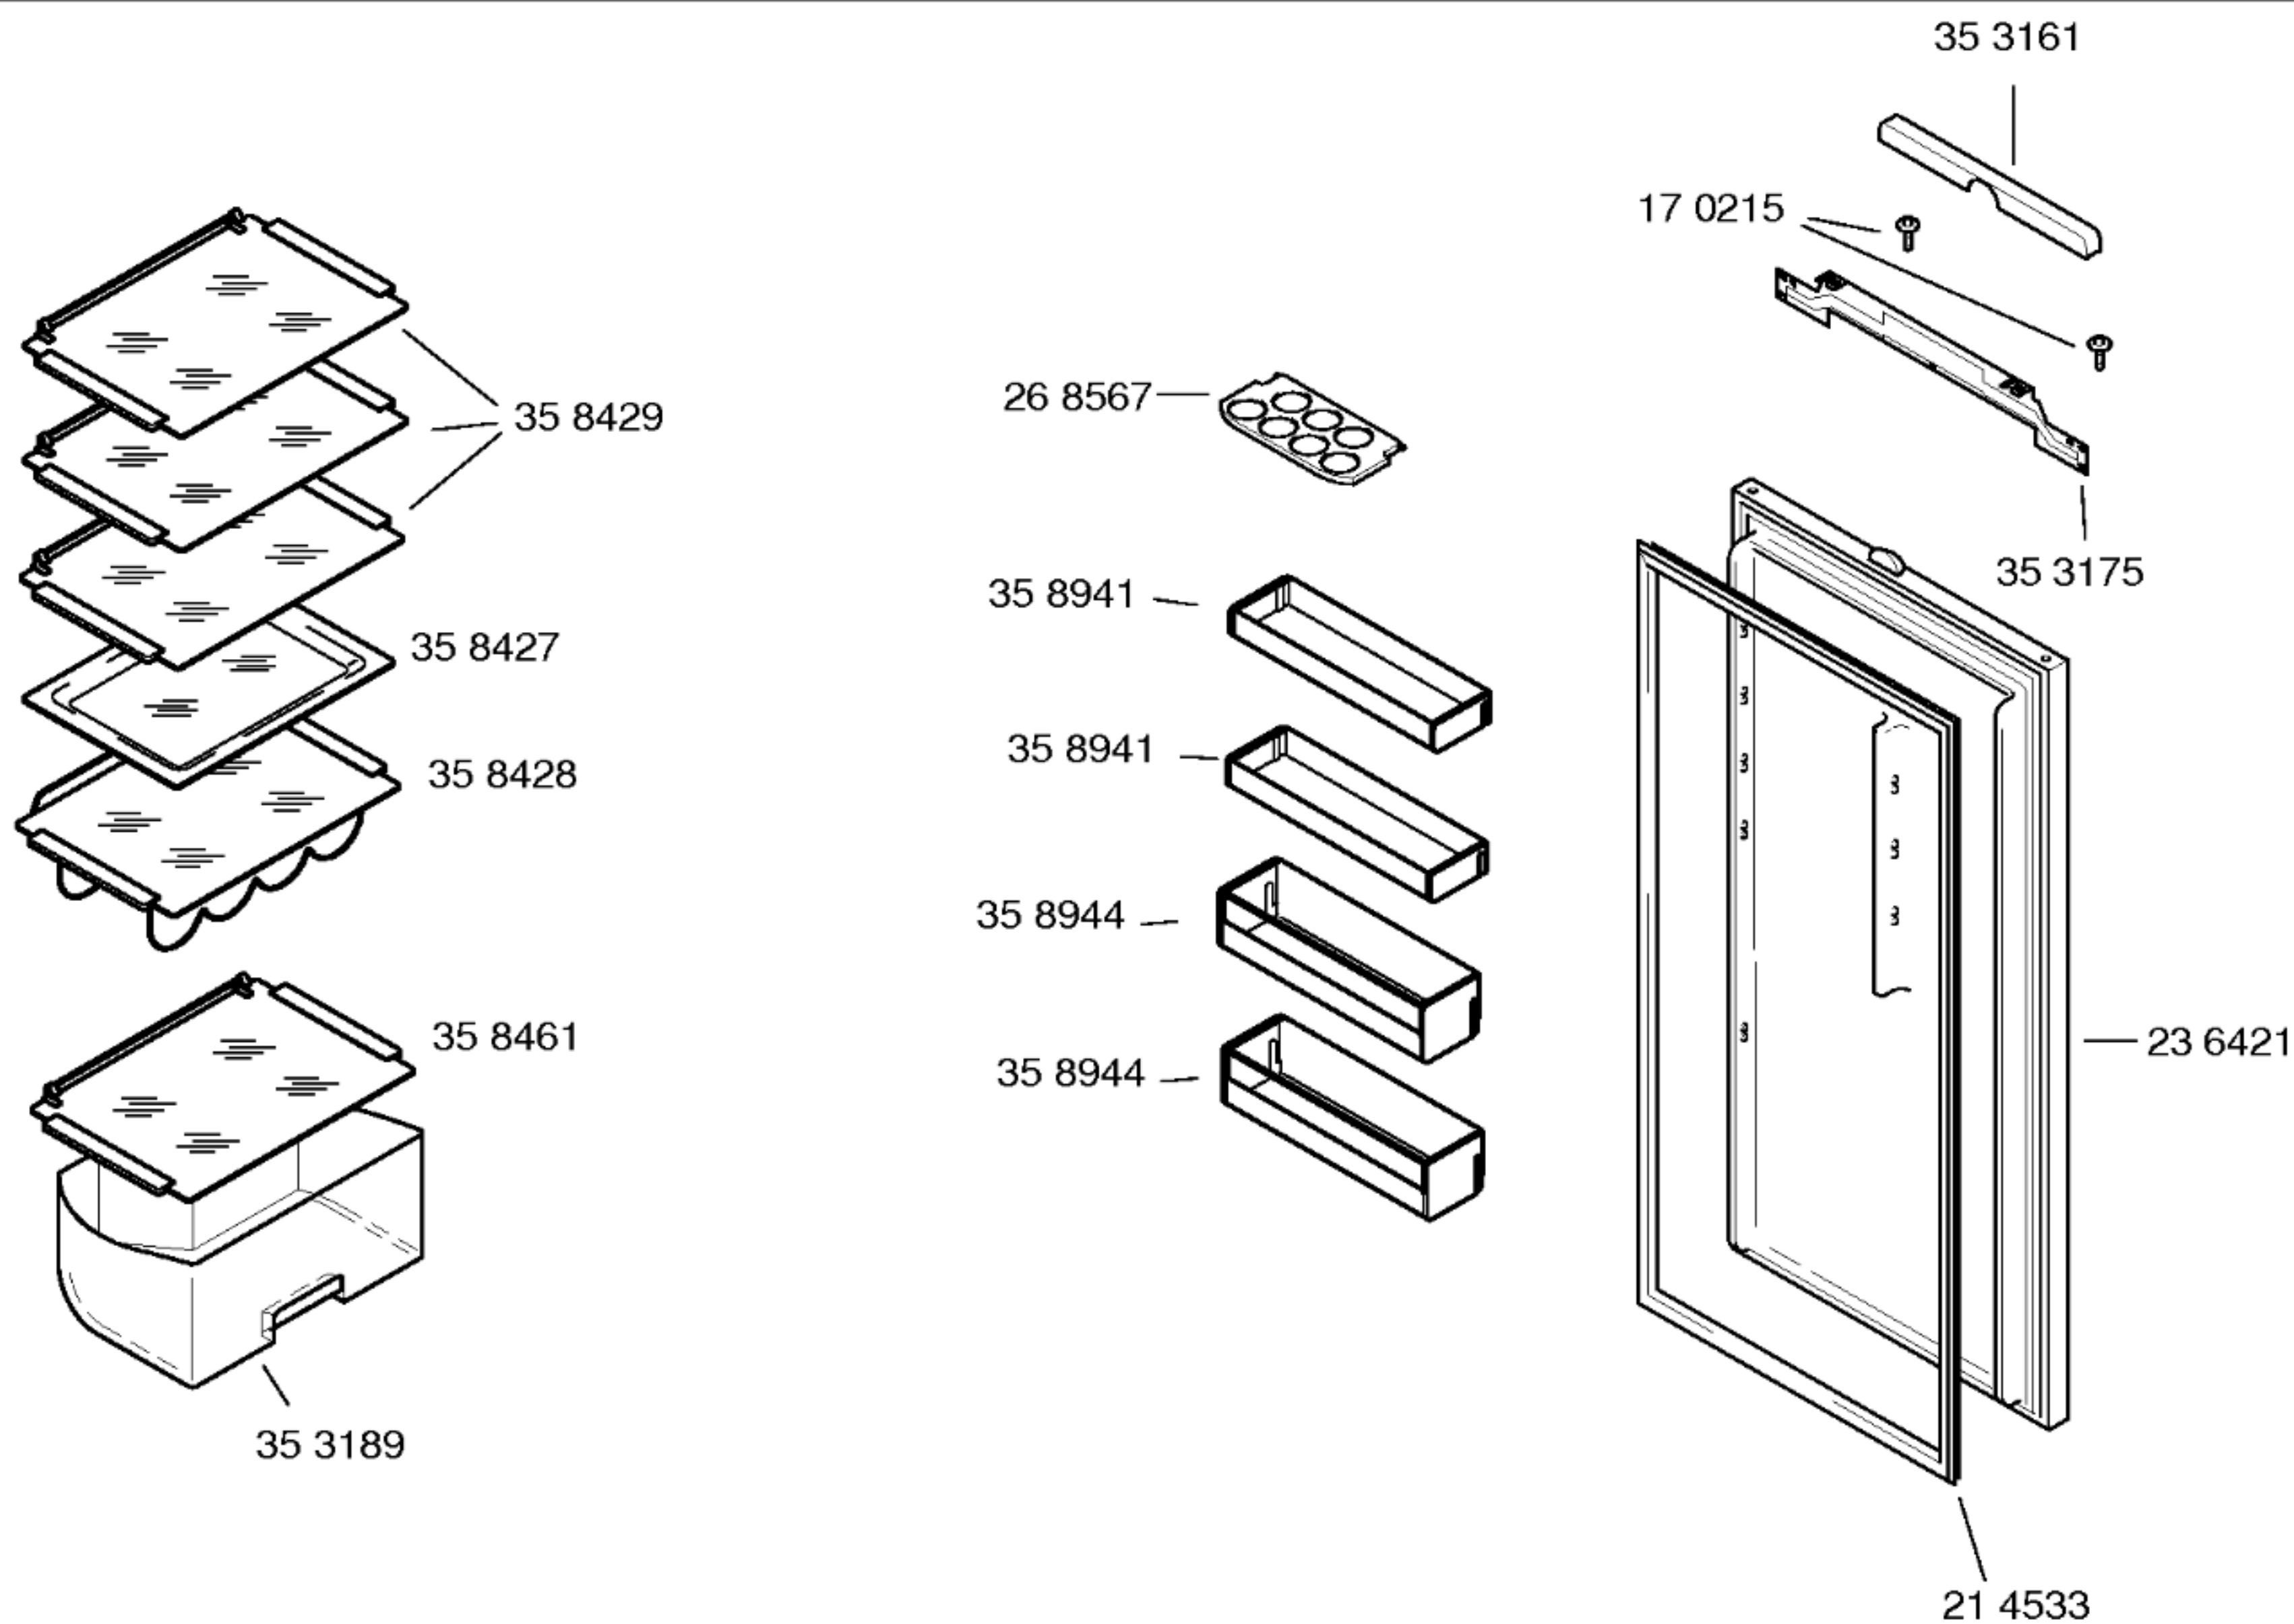

Mat. – Nr. – Konstante
3740

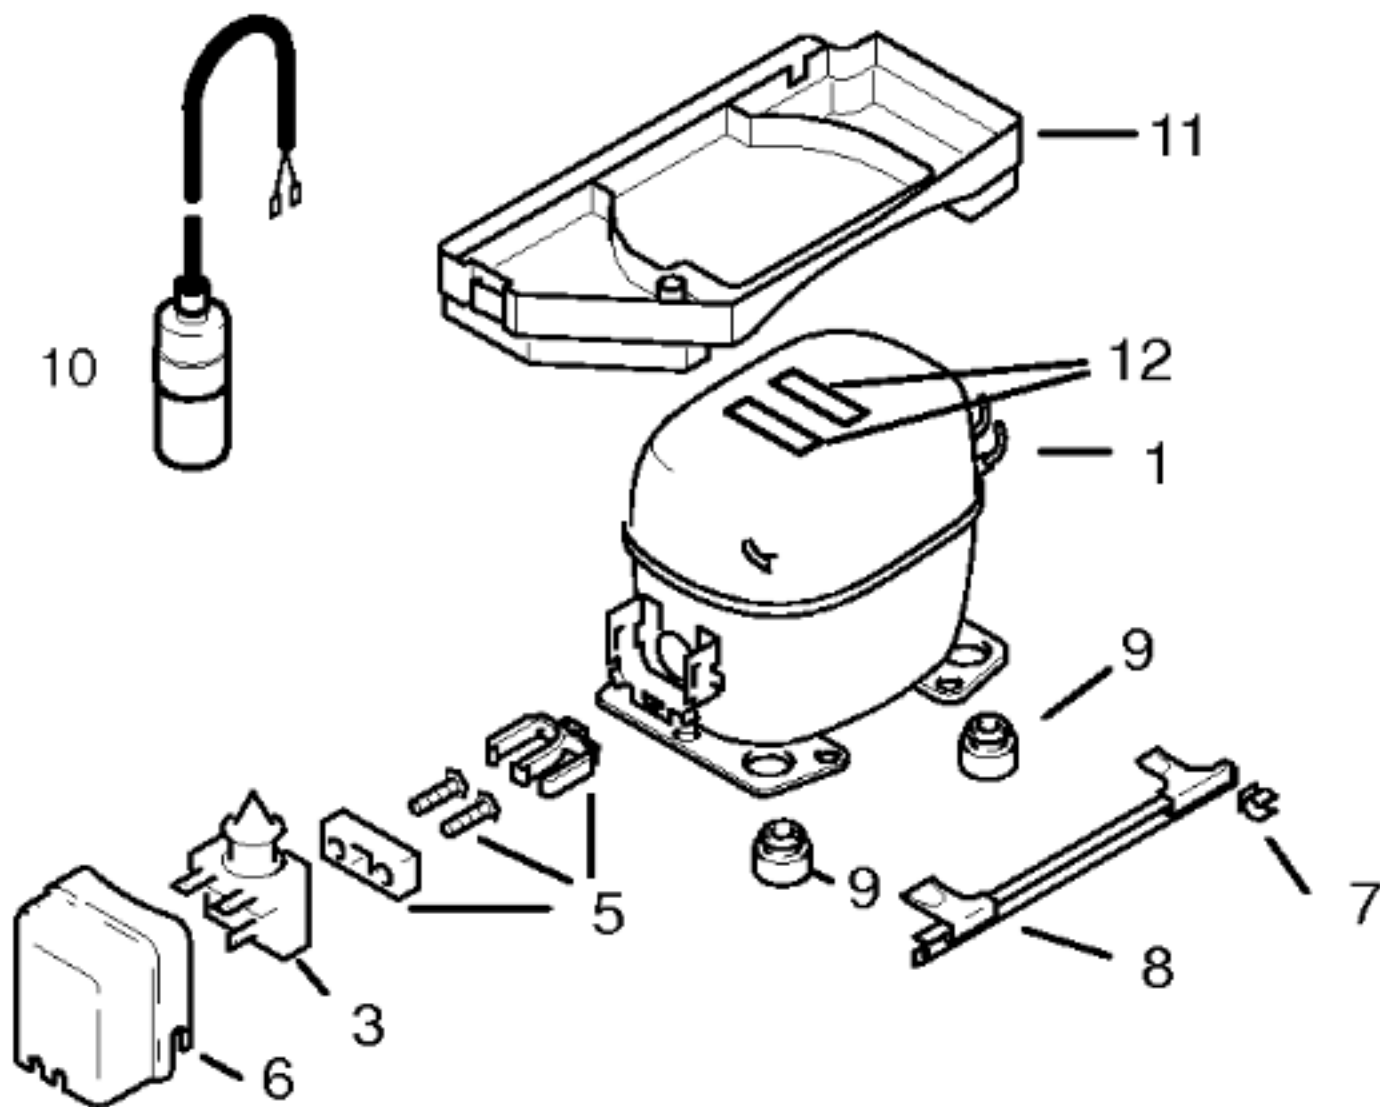 

Pos.	V01		
	Danfoss TLY4KK2		
1	14 2057		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	26 4879		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLY4KK2	
Förderleistung/Delivery/Débit	l/h	695	
Anlaufstrom/Starting current/Cour de démarrage	A	5,9	
Widerstand/Resistance/Résistance Ha/main/prin	Ω	49,0	
Hi/aux	Ω	15,0	
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K59	
Regelstellung/Position		kalt	warm
Schaltwerte/Switching values	"warm"	+5,0	+5,0
Valeurs de commutation	"kalt"	-25,0	-10,0
"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	+	
Anschlußwert/Conn.load/Puiss. connectée	W	44	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		