


**BOSCH**

V454-V45435/00-GB1
 V454-V45435/01-GB2
 V454-V45436/00-IRL1

V454-V45436/01-IRL2
 V454-V45436/04-IRL3

WASCHGERÄTE
 Waschvollautomaten

Ident-Nummern-Konstante
 3740

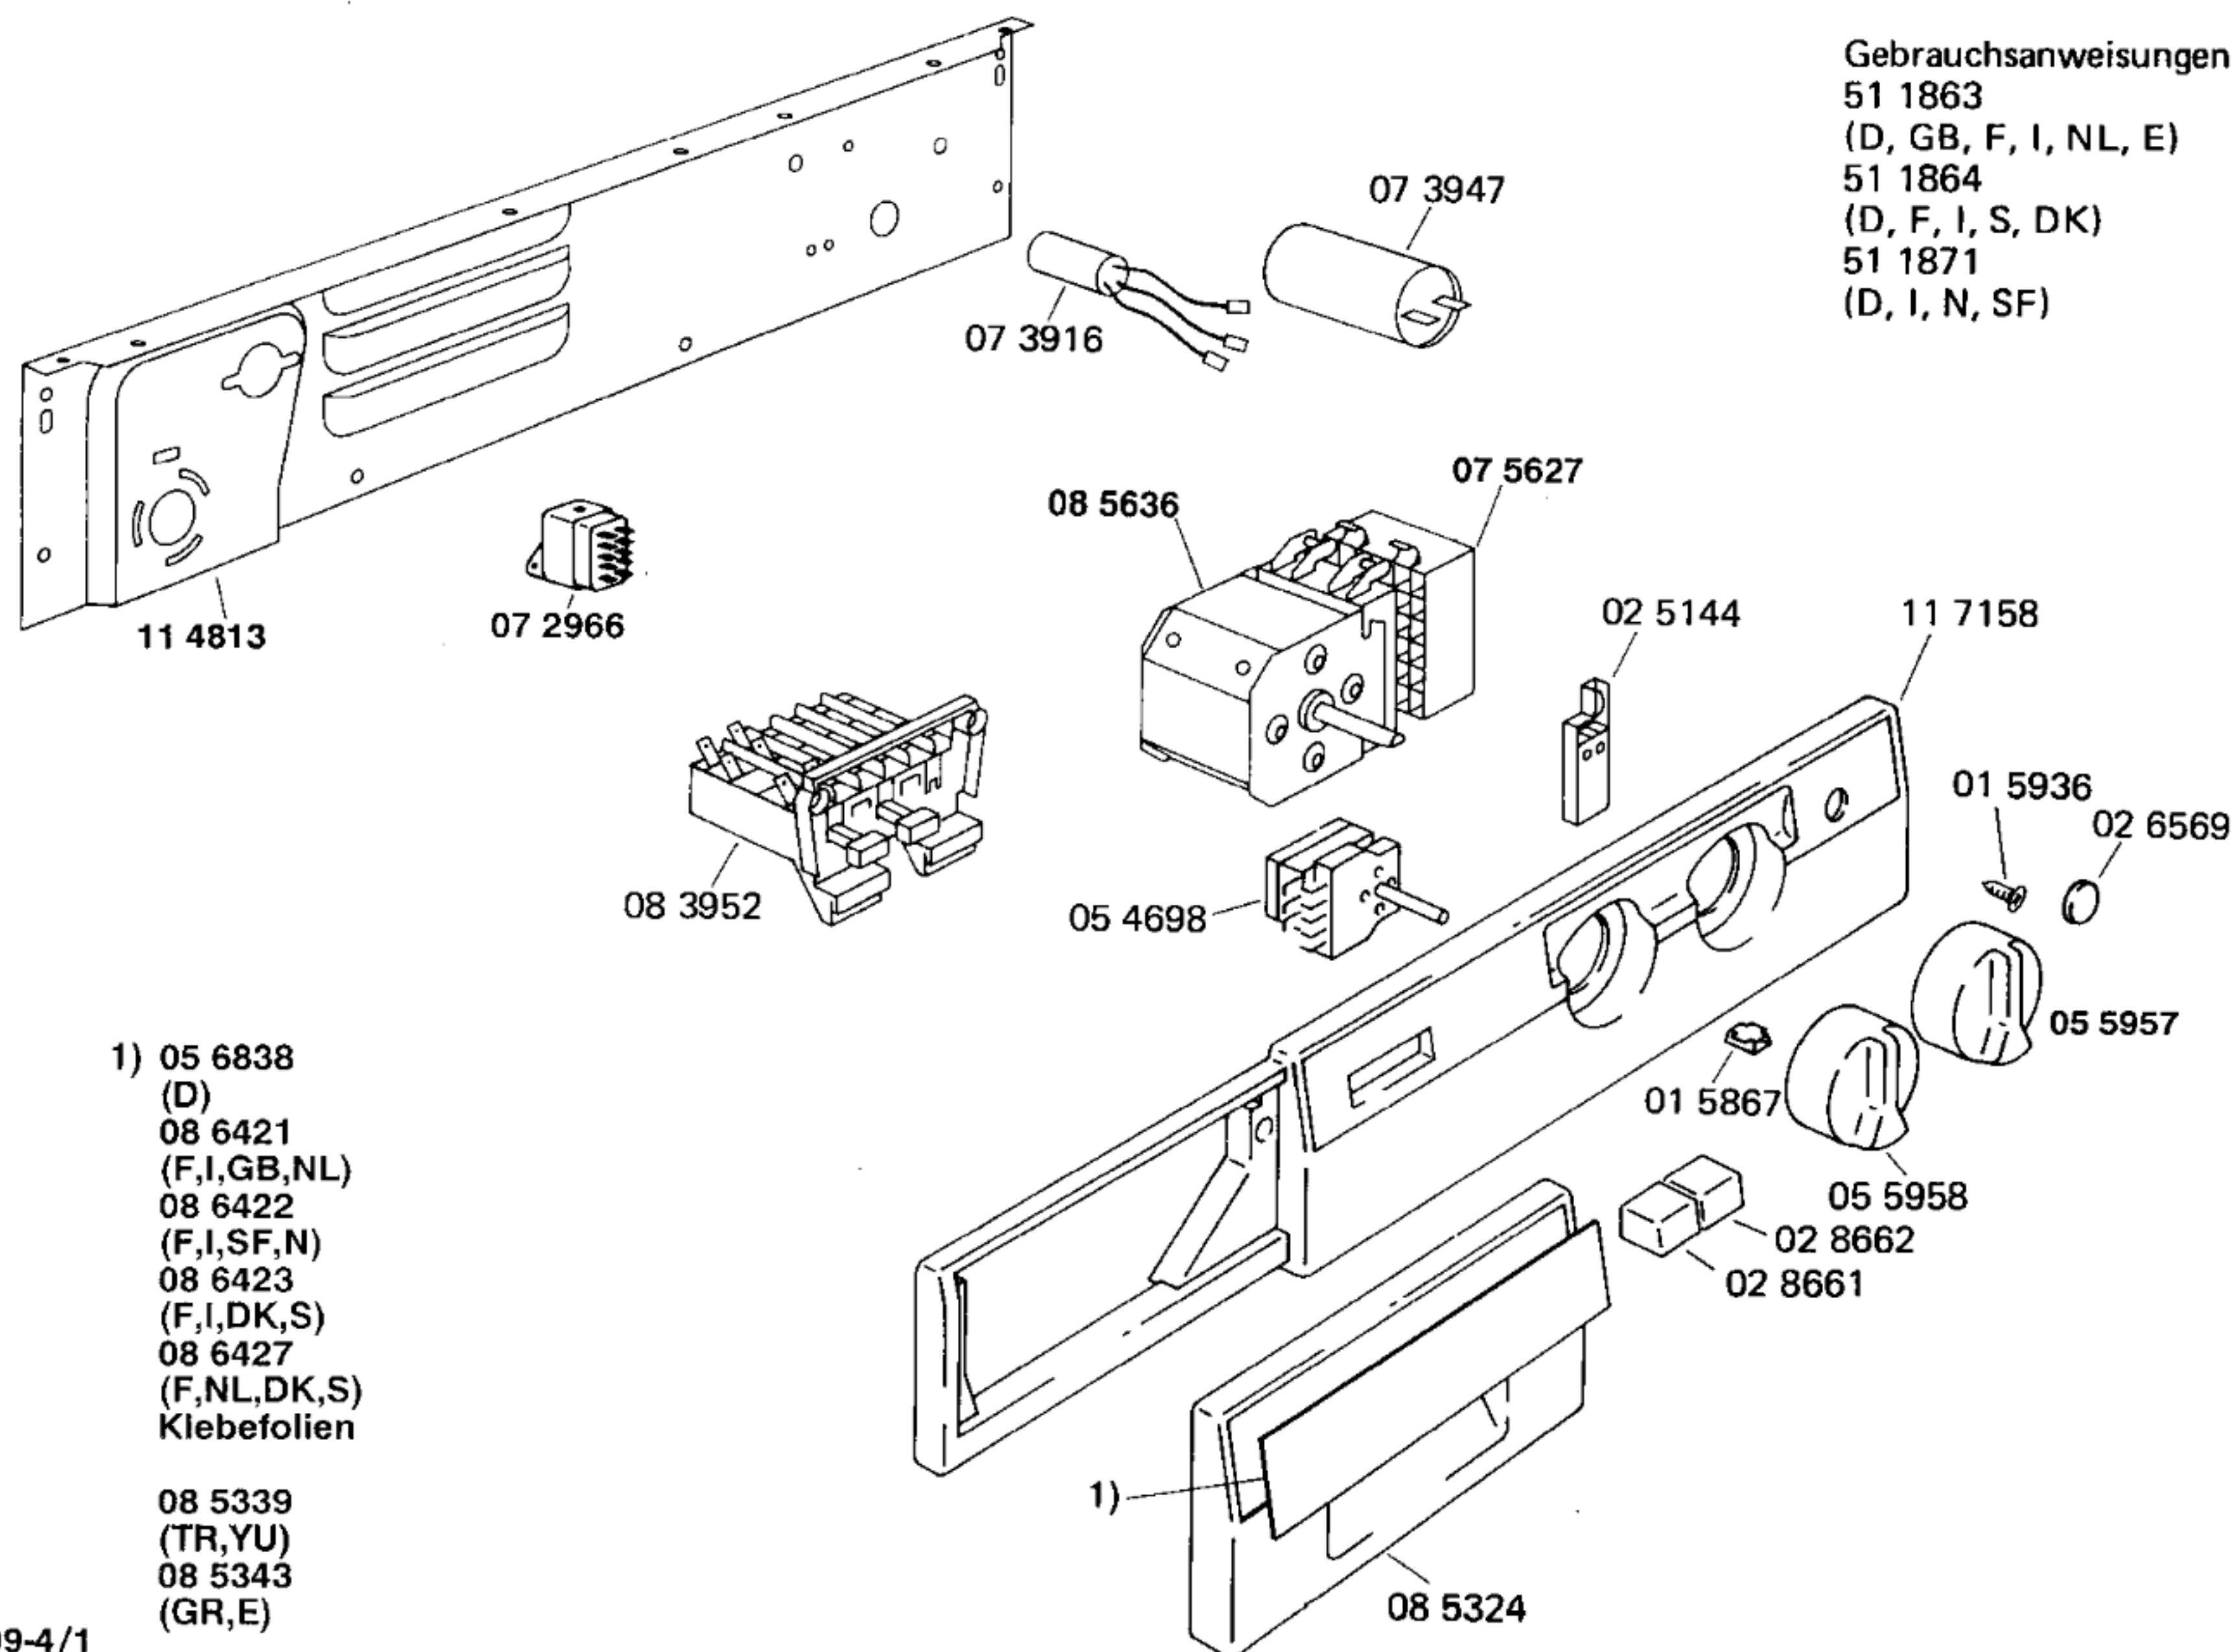

Gebrauchsanweisungen

51 1863
 (D, GB, F, I, NL, E)
 51 1864
 (D, F, I, S, DK)
 51 1871
 (D, I, N, SF)

Aufstellanweisungen

51 1820
 (D,GB,F,I,NL,E,P)
 51 2223
 (D,F,I,S,DK)
 51 1868
 (D,I,N,SF)
 51 1934
 (GB) GB ,IRL
 Programmtabellen
 51 2945
 (D,GB,F,I,NL,E)
 51 2946
 (D,I,N,SF)
 51 2947
 (D,F,I,S,DK)
 51 1935
 (GB) GB ,IRL

1) 05 6838
 (D)
 08 6421
 (F,I,GB,NL)
 08 6422
 (F,I,SF,N)
 08 6423
 (F,I,DK,S)
 08 6427
 (F,NL,DK,S)
 Klebefolien

08 5339
 (TR,YU)
 08 5343
 (GR,E)

1) bis FD 6711
 08 5330
 (D,Symbole)
 08 5325
 (F,I)
 08 5326
 (NL,GB)
 08 5327
 (SF,N)
 08 5328
 (S,DK)
 08 5329
 GB ,IRL

ab FD 6712
 05 6843
 Symbole
 (Einlage vollst.)

**BOSCH**

V454-V45435/00-GB1
V454-V45435/01-GB2
V454-V45436/00-IRL1

V454-V45436/01-IRL2
V454-V45436/04-IRL3

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

