



07 4445

21 0347
kompl.

02 9973

03 1246
1)

16 3106

05 8876

03 1243

15 3464

15 3460

03 1245

15 1885

15 3459

29 9782

27 1931

15 2784

03 1240

27 1334

05 6866

10 3102

09 3110

03 1239

06 5644

02 9968

16 2460

15 4365

15 4364
15 4366

35 0204

15 0719

21 3438

21 3415

05 6874

36 1210

36 1210


36 1211

Gebrauchsanweisung
51 7998
(D,GB,F,I,NL,SF)

Montageanweisung)
26 1542
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9829

Mat. – Nr. – Konstante
3740

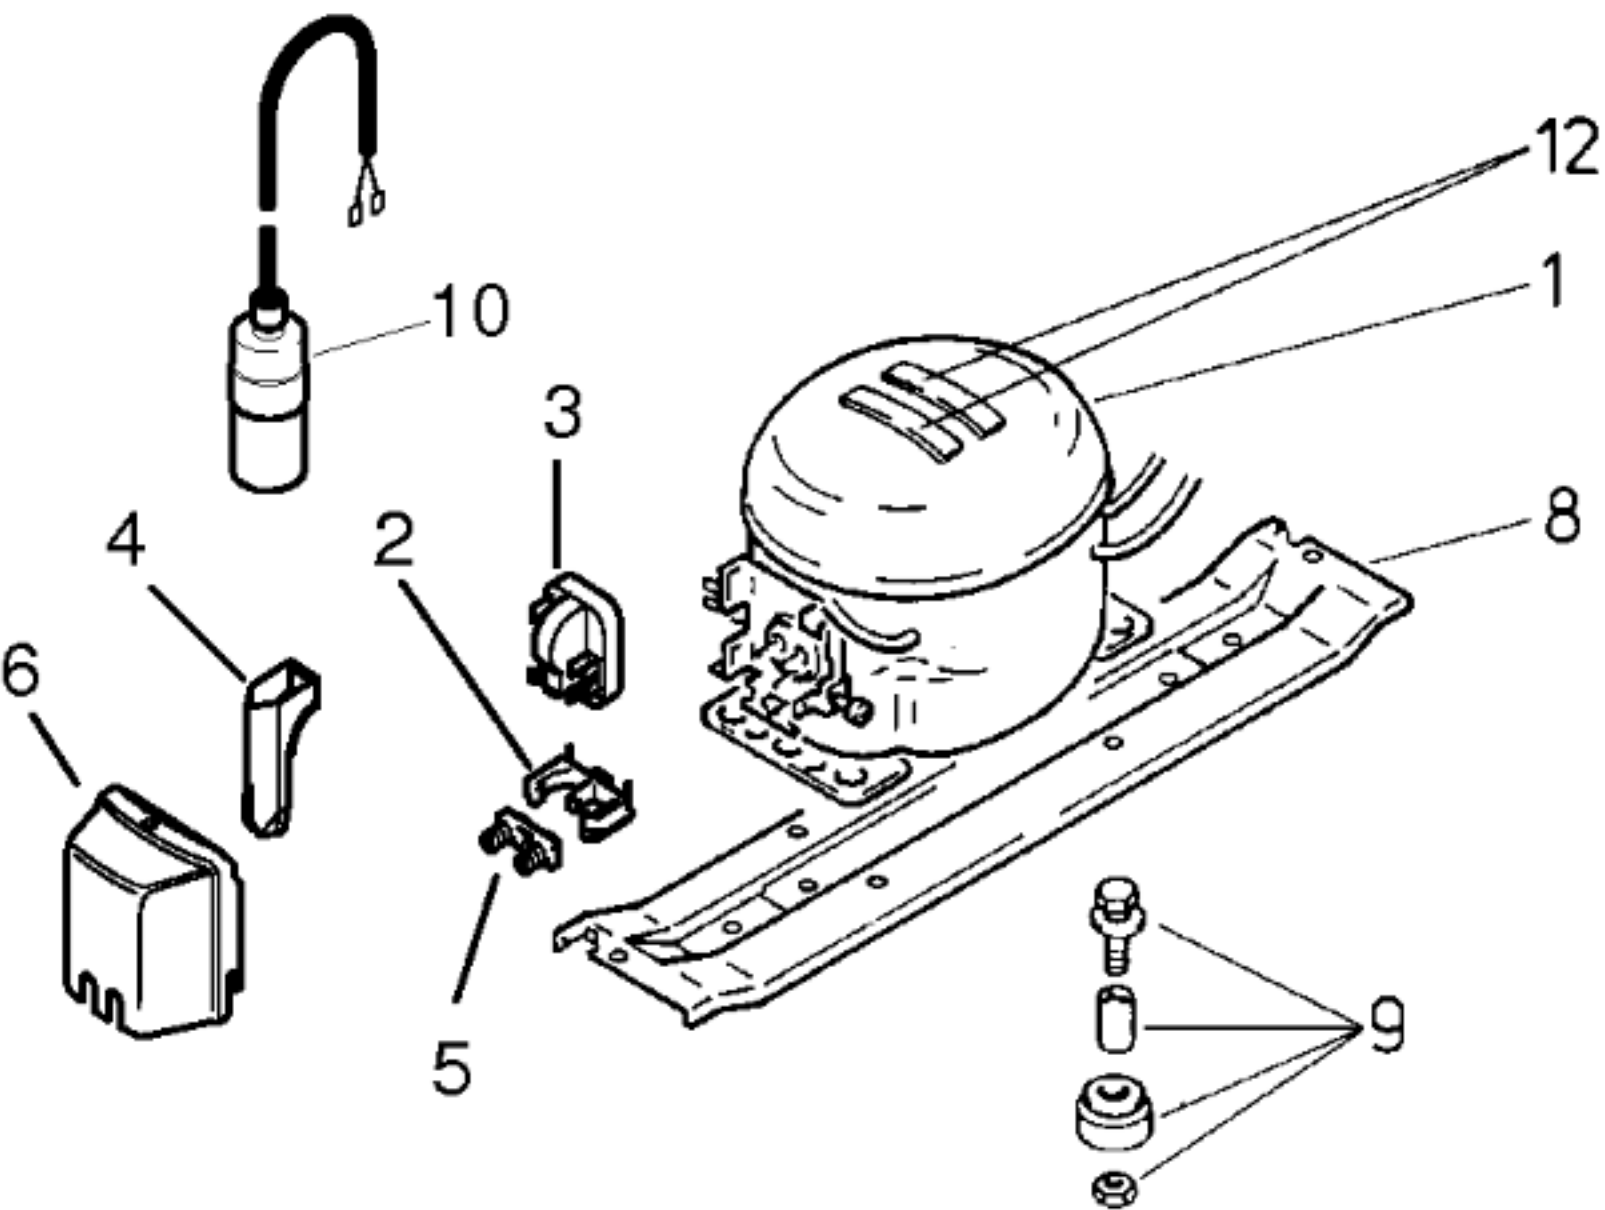

Pos.	V01	V02	
	Danfoss	Aspera	
	TLY 6 KK2	EMT 32 CLP	
1	14 2058	14 1838	
2			
3	15 1055	17 0880	
4	15 0760		
5	15 0760	17 0882	
6	15 1072	17 0881	
7			
8	27 1375	27 1375	
9	05 0166	05 0166	
10	05 9467		
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLY 6 KK2		
Förderleistung/Delivery/Débit		l/h	1026	Aspera
Anlaufstrom/Starting current/Cour de démarrage		A	4,4	EMT 32 CLP
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	34,0	1073
		Hi/aux Ω	41,0	3,5
				28,4
				24,7
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		WAR		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	-25	-17
Valeurs de commutation		„aus“	-33	-23
{„abtauen“ od.}		„alarm“	-19,5	-13
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	63	68
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild