


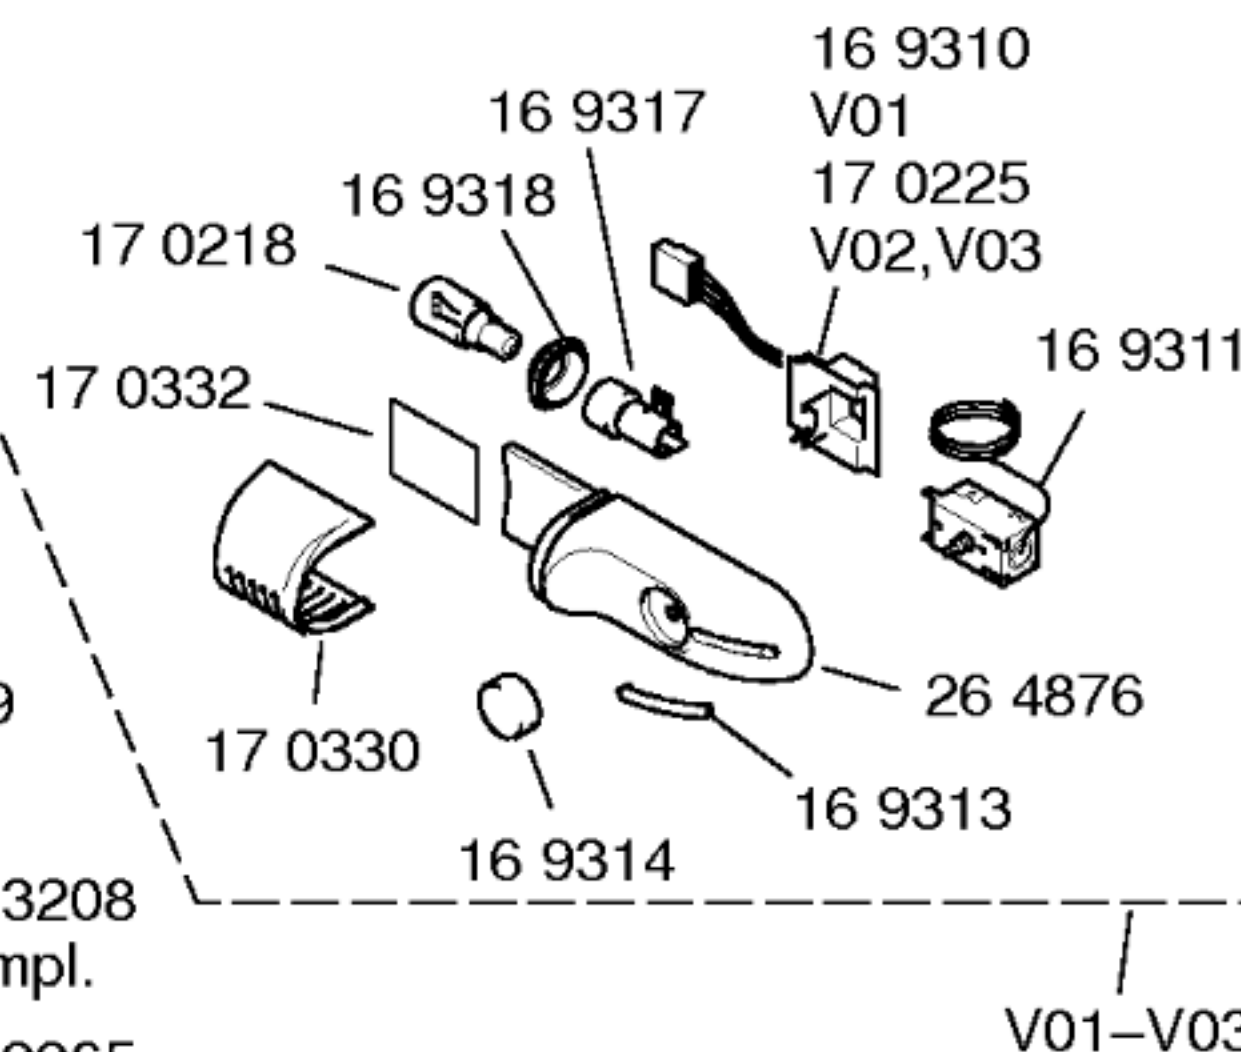


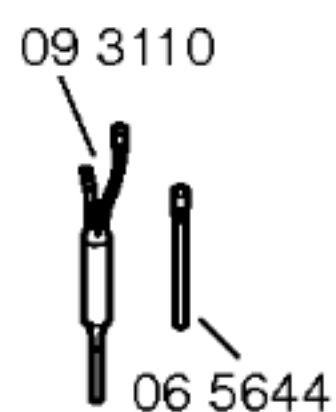

07 4445
V01,V02,V04,V06
09 6325
V03,V05

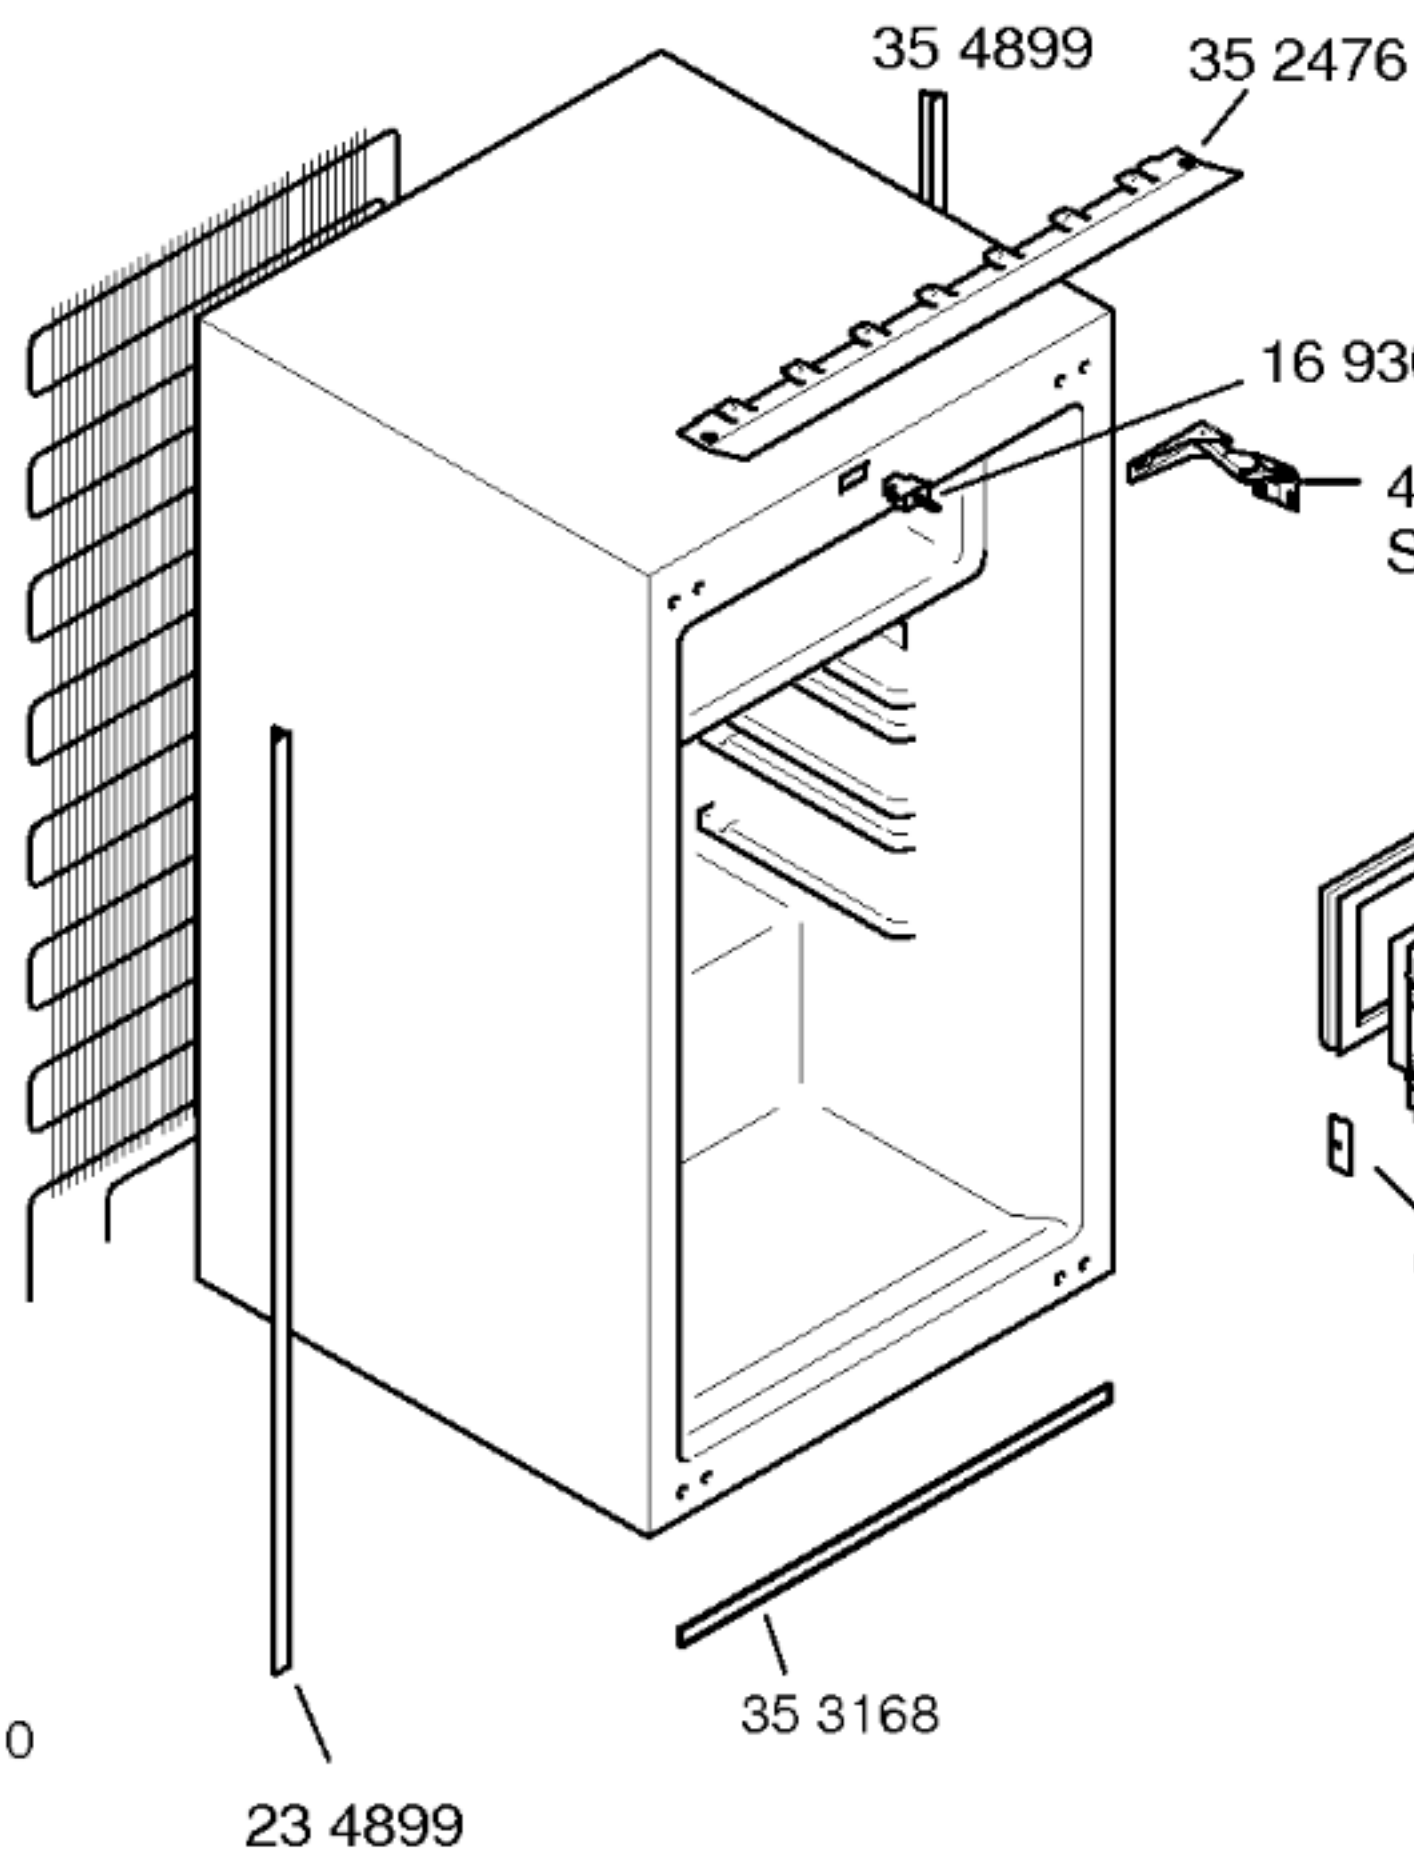


V04-V06

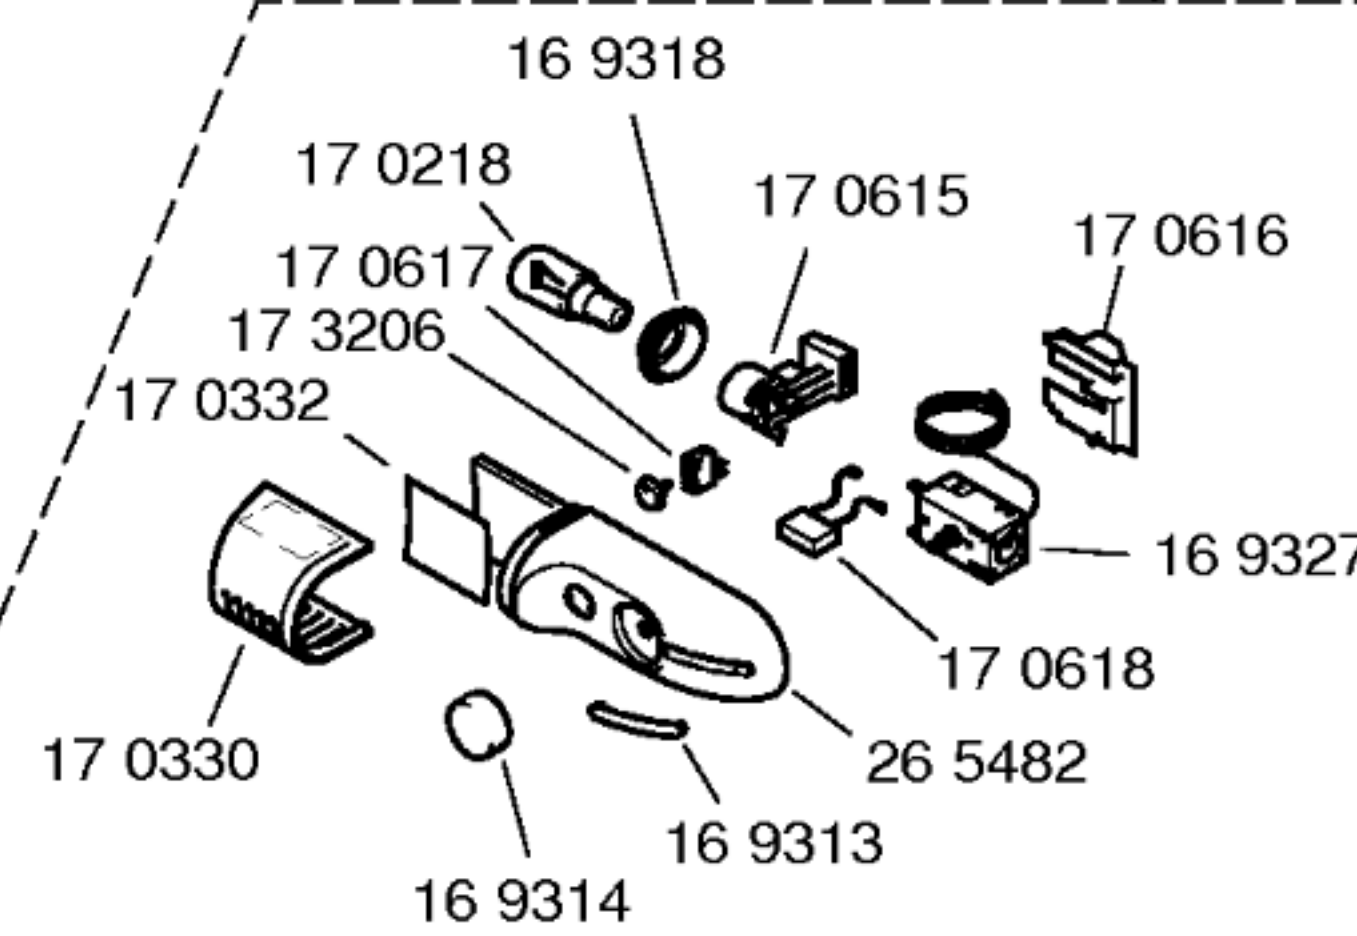


Gebrauchsanweisung
52 2548
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,SE,TR)

Beistellsatz
26 5162

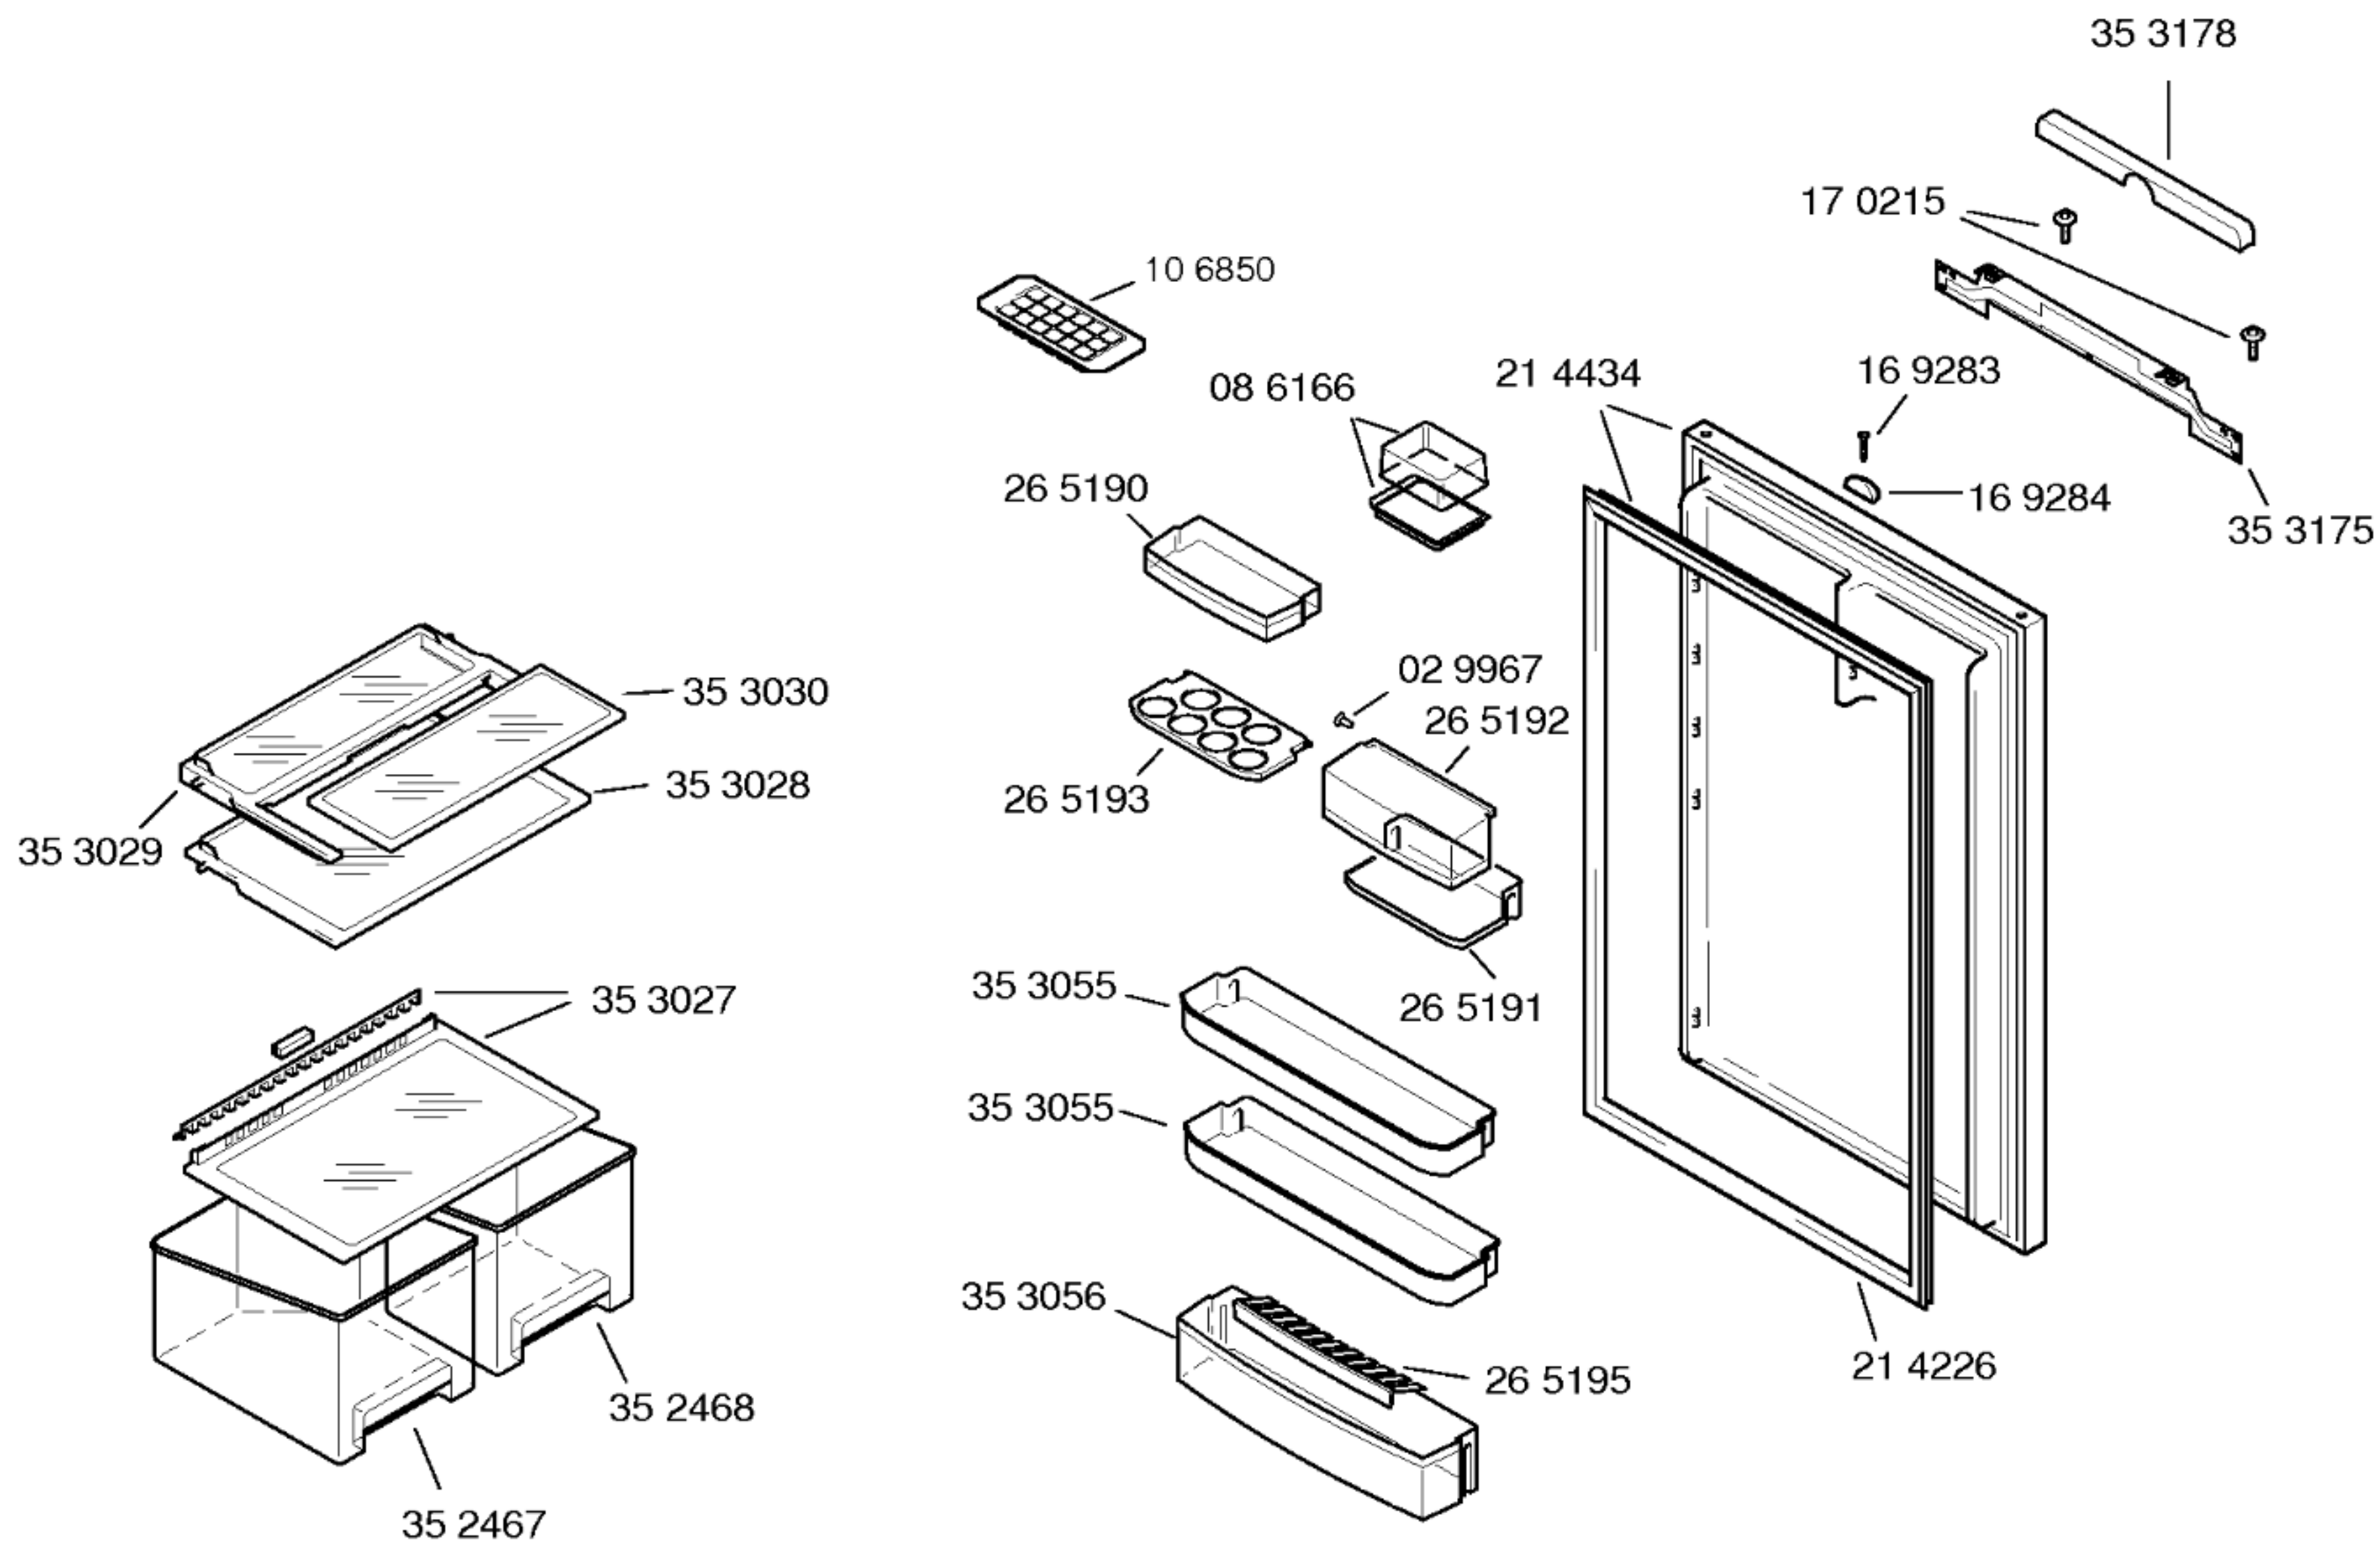

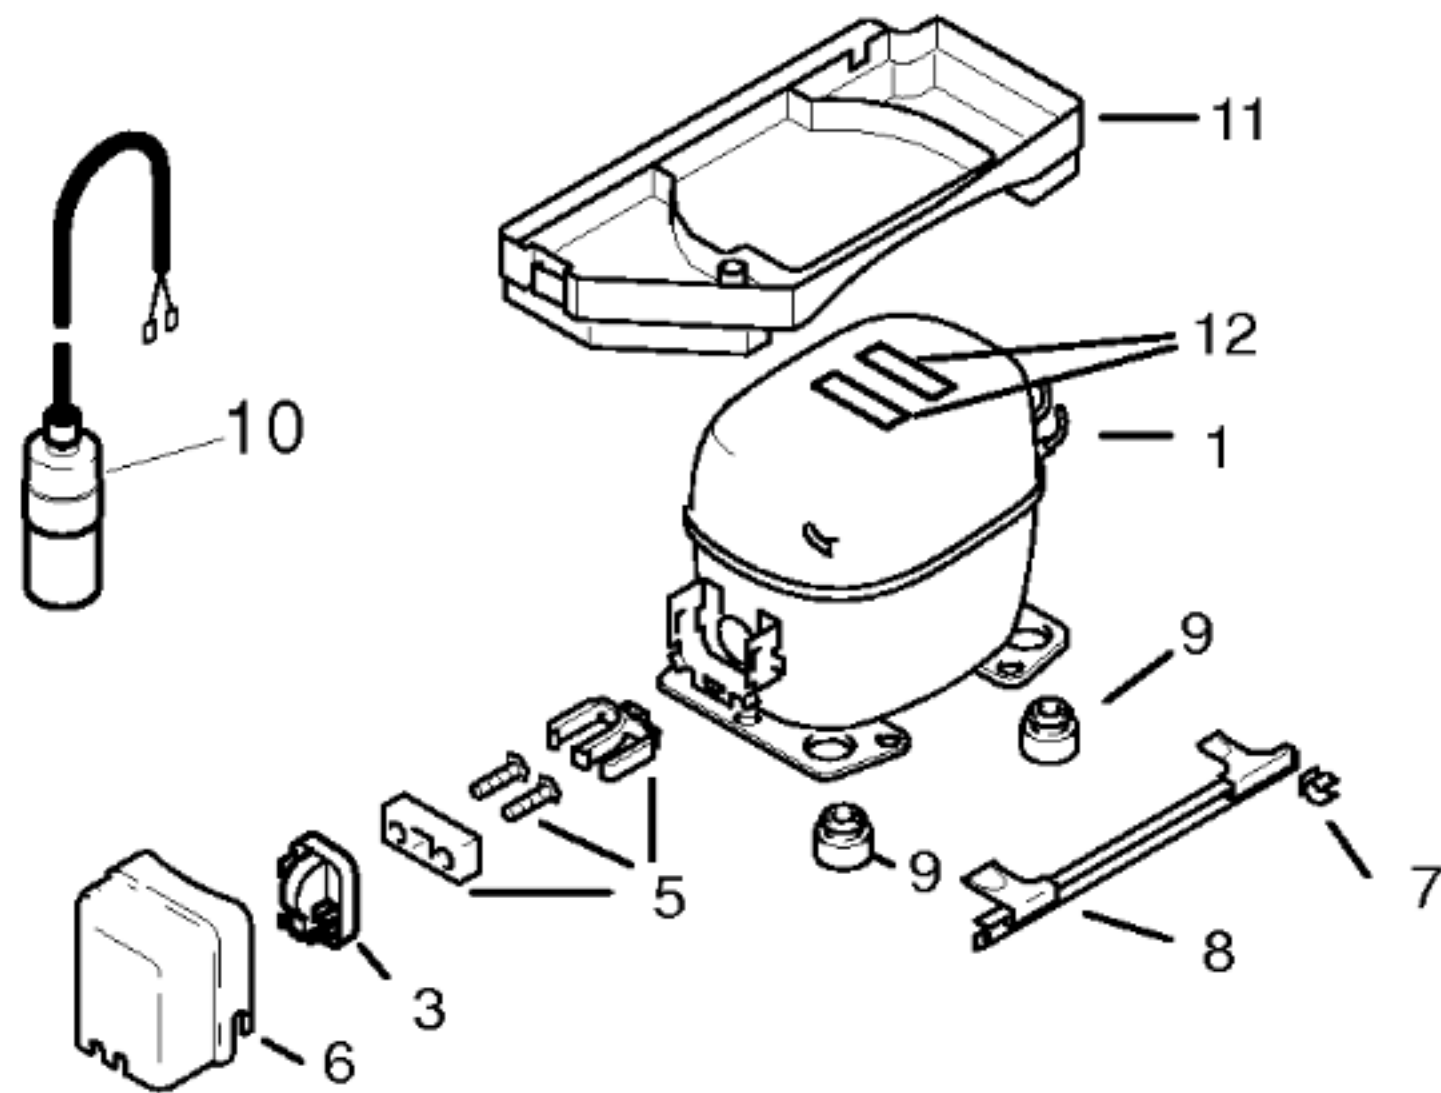

Pos.	Danfoss	Aspera	
	TLY6K	EMT 32 CLP	
1	14 1680	14 1838	
2			
3	15 1055	17 0880	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319		
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11	26 4878	26 4878	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Aspera
Typ/Type		TLY6K	EMT 32 CLP
Förderleistung/Delivery/Débit		l/h	1073
Anlaufstrom/Starting current/Cour de démarrage		A	3,5
Widerstand/Resistance/Résistance Ha/main/prin		W	28,4
Hi/aux		W	24,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		kalt	warm
Regelstellung/Position		+4,0	+4,0
Schaltwerte/Switching values		"warm"	
Valeurs de commutation		"kalt"	-32,0
		"alarm"	-12,0
Füllmenge/Fill.quantity/Charge		R600a	*
Anschlußwert/Conn.load/Puiss. connectée		W	67
			68
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		W	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		W	
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		W	
Spannung/Voltage/Tension		V	

* siehe Typenschild